M800-00

Part A General Servicing Procedures

This part of the manual is divided into the sections listed below. These sections provide some general and advisory information on servicing procedures, a brief history of T800 programming software, and a list of Technical Instructions pertaining to T830 Series equipment.

Section		Title	Page
1		General	1.1
	1.1	Caution: CMOS Devices	1.1
	1.2	Caution: Beryllium Oxide & Power Transistors	1.2
2		Mechanical	2.1
	2.1	Pozidriv Recess Head Screws	2.1
	2.2	Disassembly/Reassembly	2.1
3		Component Replacement	3.1
	3.1 3.1.1 3.1.2	Leaded Components Desoldering Iron Method Component Cutting Method	3.1 3.1 3.1
	3.2	Surface Mount Devices	3.2
4		To Remove Cased Mica Capacitors	4.1
5		Software History	5.1
	5.1	BASEPROG V1/PGM800 V2	5.1
	5.2	PGM800 V2.01	5.1
	5.3	PGM800 V2.21	5.2
	5.4	PGM800Win V1.00	5.2
6		Technical Instructions	6.1

Figure	Title	Page
1.1	Typical Anti-static Bench Set-up	1.1

Copyright TEL 31/08/96

All M800-00

31/08/96 Copyright TEL