




**MOTOROLA**  
intelligence everywhere™

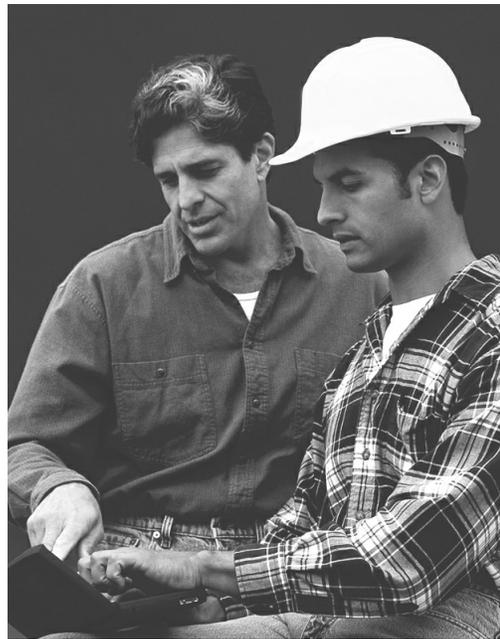

**NOVA**  
COMMUNICATIONS

 **MOTOROLA**  
Authorized Dealer & Service Center

 **MOTOSTAR**  
2000 Cdn. Service Award

 **MOTOROLA**  
Authorized Channel Partner  
Fixed Wireless Broadband Solutions

### Nova Communications

Canada's Premier Supplier  
of Wireless Communications,  
We Put Wireless to Work!  
1-877-721-7070

[www.novacommunications.com](http://www.novacommunications.com)

# PR400™

## Commercial Series Portable Radio Basic Service Manual

# NOVA COMMUNICATIONS



**MOTOROLA**

*Authorized Dealer & Service Center*



**MOTOSTAR**

*2008 Excellence Award*



**MOTOROLA**

*Authorized Channel Partner  
Fixed Wireless Broadband Solutions*

## Nova Communications

Canada's Premier Supplier  
of Wireless Communications  
We Put Wireless to Work!  
1-877-721-7070

[www.novacommunications.com](http://www.novacommunications.com)



**MOTOROLA**  
*intelligence everywhere™*

## **PR400 Portable Radio Basic Service Manual**

**VHF 136-162 MHz  
VHF 146-174 MHz  
UHF 403-440 MHz  
UHF 438-470 MHz  
UHF 465-495 MHz**

Motorola, Inc.  
1301 E. Algonquin Road  
Schaumburg, IL 60196

6881096C24-A

## Foreword

This manual is intended for use by service technicians familiar with similar types of equipment. It contains service information required for the equipment described and is current as of the printing date. Changes which occur after the printing date may be incorporated by a complete Manual revision or alternatively as additions.

**Note:** Before operating or testing these units, please read the Product Safety and RF Exposure Compliance section.

## Product Safety and RF Exposure Compliance



Caution

Before using this product, read the operating instructions for safe usage contained in the Product Safety and RF Exposure booklet enclosed with your radio.

### ATTENTION!

**This radio is restricted to occupational use only to satisfy FCC RF energy exposure requirements.**

Before using this product, read the RF energy awareness information and operating instructions in the Product Safety and RF Exposure booklet enclosed with your radio (Motorola Publication part number 68P81095C98) to ensure compliance with RF energy exposure limits.

For a list of Motorola-approved antennas, batteries, and other accessories, visit the following web site which lists approved accessories: <http://www.motorola.com/cgiss/index.shtml>.

## Computer Software Copyrights

The Motorola products described in this manual may include copyrighted Motorola computer programs stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs, including, but not limited to, the exclusive right to copy or reproduce in any form the copyrighted computer program. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this manual may not be copied, reproduced, modified, reverse-engineered, or distributed in any manner without the express written permission of Motorola. Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal non-exclusive license to use that arises by operation of law in the sale of a product.

## Document Copyrights

No duplication or distribution of this document or any portion thereof shall take place without the express written permission of Motorola. No part of this manual may be reproduced, distributed, or transmitted in any form or by any means, electronic or mechanical, for any purpose without the express written permission of Motorola.

## Disclaimer

The information in this document is carefully examined, and is believed to be entirely reliable. However, no responsibility is assumed for inaccuracies. Furthermore, Motorola reserves the right to make changes to any products herein to improve readability, function, or design. Motorola does not assume any liability arising out of the applications or use of any product or circuit described herein; nor does it cover any license under its patent rights nor the rights of others.

MOTOROLA and The Stylized M logo are trademarks of Motorola, Inc.  
All other product or service names are the property of their respective owners.  
© 2004 Motorola, Inc. All rights reserved. Printed in U.S.A.

---

# Table of Contents

Foreword.....	ii
Product Safety and RF Exposure Compliance .....	ii
Computer Software Copyrights.....	ii
Document Copyrights .....	ii
Disclaimer .....	ii
<b>List of Figures .....</b>	<b>vii</b>
<b>List of Tables .....</b>	<b>x</b>
<b>Related Publications .....</b>	<b>x</b>
<b>Chapter 1 Model Charts and Test Specifications .....</b>	<b>1-1</b>
1.1 Radio Model Information.....	1-1
1.2 Model Chart for VHF1 136-174 MHz .....	1-2
1.3 Model Chart for VHF2 146-174 MHz .....	1-3
1.4 VHF Specifications .....	1-4
1.5 Model Chart for UHF1 403-440 MHz .....	1-5
1.6 Model Chart for UHF2 438-470 MHz .....	1-6
1.7 Model Chart for UHF3 465-495 MHz .....	1-7
1.8 UHF Specifications .....	1-8
1.9 MIL Standards .....	1-9
<b>Chapter 2 Theory Of Operation .....</b>	<b>2-1</b>
2.1 Introduction .....	2-1
2.2 Major Assemblies .....	2-1
2.2.1 Receiver.....	2-1
2.2.2 Transmitter.....	2-2
<b>Chapter 3 Test Equipment, Service Aids, and Service Tools.....</b>	<b>3-1</b>
3.1 Test Equipment.....	3-1
3.2 Service Aids.....	3-2
<b>Chapter 4 Performance Checks .....</b>	<b>4-1</b>
4.1 General.....	4-1
4.2 Power-Up Self Test.....	4-1
4.3 RF Test Mode .....	4-2
<b>Chapter 5 Radio Alignment Procedures.....</b>	<b>5-1</b>
5.1 Introduction .....	5-1
5.2 CPS Programming Setup .....	5-1

5.3	Radio Tuning Setup .....	5-2
5.3.1	Initial Test Equipment Control Settings .....	5-3
5.4	Transmitter Alignment Options .....	5-3
5.4.1	Reference Oscillator Warp .....	5-3
5.4.2	Modulation Balance Attenuation .....	5-4
5.4.3	Transmit Power Tuning .....	5-5
5.4.3.1	To Perform Transmit High Power Tuning, do the following: .....	5-7
5.4.3.2	To Perform Transmit Low Power Tuning, do the following: - .....	5-7
5.4.4	VCO Attenuation .....	5-8
5.4.4.1	VCO Attenuation 25 kHz .....	5-8
5.4.4.2	VCO Attenuation 12.5 kHz .....	5-9
5.4.4.3	VCO Attenuation 20 kHz .....	5-9
5.4.5	DTMF Deviation Tuning .....	5-10
5.4.6	MDC1200 Deviation Tuning (MDC radios only) .....	5-11
5.5	Receiver Tuning .....	5-11
5.5.1	Rated Volume Tuning .....	5-12
5.5.2	Squelch Tuning .....	5-13
5.5.2.1	Manual Squelch Tuning .....	5-13
5.5.2.2	Auto Tune .....	5-14
5.5.3	RSSI System Level Tuning .....	5-14
5.5.4	RSSI Display Tuning .....	5-15
5.6	Utilities .....	5-15
5.6.1	Program Serial No. ....	5-15
5.6.2	Temp Comp Data Read .....	5-15
5.6.3	Temp Comp Data Write .....	5-15
5.7	Radio-to-Radio Cloning .....	5-15

## **Chapter 6 Full Keypad Model Disassembly and Re-assembly ..... 6-1**

6.1	Introduction .....	6-1
6.2	Preventive Maintenance .....	6-1
6.2.1	Inspection .....	6-1
6.2.2	Cleaning Procedures .....	6-1
6.3	Safe Handling of CMOS and LDMOS Devices .....	6-2
6.4	Disassembling and Re-assembling the Radio — General .....	6-3
6.4.1	Radio Disassembly — Detailed .....	6-3
6.4.1.1	Front Cover From Chassis Disassembly .....	6-3
6.4.1.2	Dust Cover Disassembly .....	6-6
6.4.1.3	Speaker and Microphone Disassembly .....	6-6
6.4.1.4	Keyboard Removal .....	6-7
6.4.1.5	PTT Disassembly .....	6-7
6.4.1.6	Chassis Disassembly .....	6-8
6.4.2	Radio Re-assembly - Detailed .....	6-9
6.4.2.1	Dust Cover Re-assembly .....	6-9
6.4.2.2	Microphone and Speaker Re-assembly .....	6-9
6.4.2.3	Keypad and LCD/Keyboard Re-assembly .....	6-11
6.4.2.4	Keyboard Retainer Re-assembly .....	6-12
6.4.2.5	Chassis Assembly/Re-assembly .....	6-12
6.4.2.6	Chassis and Front Cover Re-assembly .....	6-13
6.4.2.7	PTT Re-assembly .....	6-15
6.5	Mechanical View and Parts List .....	6-16
6.5.1	PR400 Full-Keypad Exploded View and Parts List .....	6-16

## **Chapter 7 Limited Keypad Model Disassembly and Re-assembly ..... 7-1**

7.1	Introduction .....	7-1
7.2	Preventive Maintenance .....	7-1
7.2.1	Inspection .....	7-1
7.2.2	Cleaning Procedures .....	7-1
7.3	Safe Handling of CMOS and LDMOS Devices .....	7-2
7.4	Disassembling and Re-assembling the Radio — General .....	7-3
7.4.1	Radio Disassembly — Detailed .....	7-3
7.4.1.1	Front Cover from Chassis Disassembly .....	7-3
7.4.1.2	Dust Cover Disassembly .....	7-6
7.4.1.3	Speaker and Microphone Disassembly .....	7-6
7.4.1.4	Keyboard Removal .....	7-7
7.4.1.5	PTT Disassembly .....	7-8
7.4.2	Chassis Disassembly .....	7-8
7.4.3	Radio Re-assembly - Detailed .....	7-9
7.4.3.1	Dust Cover Re-assembly .....	7-9
7.4.3.2	Microphone and Speaker Re-assembly .....	7-9
7.4.3.3	Keypad and LCD/Keyboard Re-assembly .....	7-11
7.4.3.4	Keyboard Retainer Re-assembly .....	7-12
7.4.3.5	Chassis Assembly/Re-assembly .....	7-12
7.4.3.6	Chassis and Front Cover Re-assembly .....	7-13
7.4.3.7	PTT Re-assembly .....	7-15
7.5	Mechanical View and Parts List .....	7-16
7.5.1	PR400 Limited-Keypad Exploded View and Parts List .....	7-16

## **Chapter 8 Non-Keypad Model Disassembly and Re-assembly ..... 8-1**

8.1	Introduction .....	8-1
8.2	Preventive Maintenance .....	8-1
8.2.1	Inspection .....	8-1
8.2.2	Cleaning Procedures .....	8-1
8.3	Safe Handling of CMOS and LDMOS Devices .....	8-2
8.4	Disassembling and Re-assembling the Radio — General .....	8-3
8.4.1	Radio Disassembly — Detailed .....	8-3
8.4.1.1	Front Cover From Chassis Disassembly .....	8-3
8.4.1.2	Dust Cover Disassembly .....	8-5
8.4.1.3	Speaker and Microphone Disassembly .....	8-6
8.4.1.4	PTT Disassembly .....	8-6
8.4.2	Chassis Disassembly .....	8-7
8.4.3	Radio Re-assembly - Detailed .....	8-8
8.4.3.1	Dust Cover Re-assembly .....	8-8
8.4.3.2	Microphone and Speaker Re-assembly .....	8-8
8.4.3.3	Chassis Assembly/Re-assembly .....	8-9
8.4.3.4	Chassis and Front Cover Re-assembly .....	8-10
8.4.3.5	PTT Re-assembly .....	8-12
8.5	Mechanical View and Parts List .....	8-13
8.5.1	PR400 Non-Keypad Exploded View and Parts List .....	8-13

---

<b>Chapter 9</b>	<b>Troubleshooting Tables .....</b>	<b>9-1</b>
9.1	Power-Up Error Codes.....	9-1
9.2	Operational Error Codes.....	9-1
9.3	Troubleshooting Table for Receiver.....	9-2
9.4	Troubleshooting Table for Transmitter.....	9-3
<b>Appendix A</b>	<b>Accessories .....</b>	<b>A-1</b>
<b>Appendix B</b>	<b>Warranty, Service Support, and Replacement Parts .....</b>	<b>B-1</b>
1.1	Scope of Manual .....	1-1
1.2	Warranty .....	1-1
1.2.1	Warranty Period and Return Instructions .....	1-1
1.2.2	After Warranty Period .....	1-1
1.3	Replacement Parts Ordering .....	1-1
1.3.1	Basic Ordering Information .....	1-1
1.3.2	Motorola Online.....	1-2
1.3.3	Mail Orders .....	1-2
1.3.4	Telephone Orders .....	1-2
1.3.5	Fax Orders .....	1-2
1.3.6	Parts Identification .....	1-2
1.3.7	Product Customer Service .....	1-3
1.4	Technical Support.....	1-3
<b>Glossary</b> .....		<b>G-1</b>

## List of Figures

Figure 2-1.	Major Assemblies Block Diagram.....	2-1
Figure 2-2.	Transceiver Block Diagram .....	2-2
Figure 3-1.	Programming/Test Cable .....	3-4
Figure 3-2.	Wiring of the Connectors.....	3-4
Figure 4-1.	Radio Performance Checks Setup.....	4-1
Figure 4-2.	Side Button Locations .....	4-2
Figure 5-1.	CPS Programming Setup .....	5-1
Figure 5-2.	Radio Tuning Setup.....	5-2
Figure 5-3.	Reference Oscillator Warp Window .....	5-3
Figure 5-4.	Modulation Balance Window .....	5-5
Figure 5-5.	Transmit Power Window (High Power) .....	5-6
Figure 5-6.	VCO Attenuation Window (12.5 kHz).....	5-8
Figure 5-7.	DTMF Deviation Tuning Window.....	5-10
Figure 5-8.	MDC1200 Deviation Tuning Window .....	5-11
Figure 5-9.	Rated Volume Tuning Window.....	5-12
Figure 5-10.	Squelch Tuning Window.....	5-13
Figure 5-11.	RSSI Tuning .....	5-14
Figure 5-12.	Side Button Locations .....	5-16
Figure 6-1.	Battery Removal.....	6-3
Figure 6-2.	Antenna and Knob Removal .....	6-4
Figure 6-3.	Chassis Removal .....	6-4
Figure 6-4.	Keyboard Flex Connection .....	6-5
Figure 6-5.	Microphone and Speaker Connections .....	6-5
Figure 6-6.	Dust Cover Disassembly .....	6-6
Figure 6-7.	Removal Speaker-Microphone Assembly .....	6-6
Figure 6-8.	Keypad Removal.....	6-7
Figure 6-10.	Removal of Main Board from Chassis.....	6-8
Figure 6-9.	PTT Removal .....	6-8
Figure 6-11.	Dust Cap Re-assembly .....	6-9
Figure 6-13.	Speaker Re-assembly.....	6-10
Figure 6-12.	Microphone Re-assembly.....	6-10
Figure 6-14.	Keypad Re-assembly .....	6-11
Figure 6-15.	LCD/Keypad Board Re-assembly .....	6-11
Figure 6-16.	Keyboard Retainer Re-assembly .....	6-12
Figure 6-17.	Main Board onto Chassis Re-assembly .....	6-13
Figure 6-19.	Keyboard Flex Cable Connection.....	6-14
Figure 6-18.	Microphone and Speaker Wires Re-assembly .....	6-14
Figure 6-20.	Fastening the Chassis.....	6-15
Figure 6-21.	PTT Re-assembly.....	6-15
Figure 6-22.	PR400 Full Keypad Radio Exploded View .....	6-16
Figure 7-1.	Battery Removal.....	7-3
Figure 7-2.	Antenna and Knob Removal .....	7-4
Figure 7-3.	Chassis Removal .....	7-4
Figure 7-4.	Keyboard Flex Connector.....	7-5
Figure 7-5.	Microphone and Speaker Connections .....	7-5
Figure 7-6.	Dust Cover Disassembly .....	7-6
Figure 7-7.	Removal Speaker-Microphone Assembly .....	7-6
Figure 7-8.	Keypad Removal.....	7-7
Figure 7-9.	PTT Removal .....	7-8
Figure 7-10.	Removal of Main Board from Chassis.....	7-9

---

Figure 7-11.	Dust Cap Re-assembly.....	7-9
Figure 7-12.	Microphone Re-assembly.....	7-10
Figure 7-13.	Speaker Re-assembly .....	7-10
Figure 7-14.	Keypad Re-assembly .....	7-11
Figure 7-15.	LCD/Keypad Board Re-assembly.....	7-11
Figure 7-16.	Keyboard Retainer Re-assembly.....	7-12
Figure 7-17.	Installation of Main Board onto Chassis .....	7-13
Figure 7-18.	Microphone and Speaker Wires .....	7-14
Figure 7-19.	Keyboard Flex Cable Connection.....	7-14
Figure 7-20.	Fastening the Chassis .....	7-15
Figure 7-21.	PTT Re-assembly.....	7-15
Figure 7-22.	PR400 Limited Keypad Radio Exploded View.....	7-16
Figure 8-1.	Battery Removal.....	8-3
Figure 8-2.	Antenna and Knob Removal.....	8-4
Figure 8-3.	Chassis Removal.....	8-4
Figure 8-4.	Microphone and Speaker Connections .....	8-5
Figure 8-5.	Dust Cover Disassembly .....	8-5
Figure 8-6.	Removal Speaker-Microphone Assembly .....	8-6
Figure 8-8.	Removal of Main Board from Chassis .....	8-7
Figure 8-7.	PTT Removal.....	8-7
Figure 8-9.	Dust Cap Re-assembly.....	8-8
Figure 8-10.	Microphone Re-assembly.....	8-8
Figure 8-11.	Speaker Re-assembly .....	8-9
Figure 8-12.	Installation of Main Board onto Chassis .....	8-10
Figure 8-13.	Microphone and Speaker Wires Re-assembly .....	8-11
Figure 8-14.	Fastening the Chassis .....	8-11
Figure 8-15.	PTT Re-assembly.....	8-12
Figure 8-16.	PR400 Non-Keypad Radio Exploded View .....	8-13

## List of Tables

Table 1-1.	Radio Model Number (Example: AAH65KDC9AA2AN) .....	1-1
Table 1-2.	MIL STDS 810 C, D, E, and F: Applicable to UHF and VHF Specifications (8.2 and 8.4) .....	1-9
Table 3-1.	Recommended Test Equipment .....	3-1
Table 3-2.	Service Aids .....	3-2
Table 3-3.	Recommended Service Tools .....	3-2
Table 4-1.	Initial Equipment Control Settings .....	4-2
Table 4-2.	Test Environments .....	4-3
Table 4-3.	Test Channel Spacing .....	4-3
Table 4-5.	Receiver Performance Checks .....	4-4
Table 4-4.	Test Frequencies .....	4-4
Table 4-6.	Transmitter Performance Checks .....	4-5
Table 5-1.	Initial Equipment Control Settings .....	5-3
Table 5-2.	Reference Oscillator Specifications .....	5-4
Table 5-3.	Transmit High/Low Power Level .....	5-7
Table 5-4.	Deviation Specifications .....	5-10
Table 5-5.	Squelch Deviation Values .....	5-13
Table 9-1.	Power-Up Error Code Display .....	9-1
Table 9-2.	Operational Error Code Display .....	9-1
Table 9-3.	Receiver Troubleshooting Table .....	9-2
Table 9-4.	Transmitter Troubleshooting Table .....	9-3

## Related Publications

PR400 Detailed Service Manual .....	681096C25
PR400 Full-Keypad Model User Guide .....	681096C23
PR400 Limited-Keypad Model User Guide .....	681096C26
PR400 Non-Display Model User Guide .....	681096C27
PR400 User Guide CDROM .....	HKLN4219

**This Page Intentionally Left Blank**

# Chapter 1 Model Charts and Test Specifications

## 1.1 Radio Model Information

The model number and serial number are located on a label attached to the back of your radio. You can determine the RF output power, frequency band, protocols, and physical packages. The example below shows one portable radio model number and its specific characteristics.

Table 1-1. Radio Model Number (Example: AAH65KDC9AA2AN)

	Type of Unit	Model Series	Freq. Band	Power Level	Physical Packages	Channel Spacing	Protocol	Feature Level	Model Revision	Model Package
<b>AA</b> ↑ AA = Motorola Internal Use	<b>H</b> ↑ H = Portable	<b>65</b>	<b>J</b> VHF (136-162 MHz)	<b>D</b> 4 W or 5 W	<b>C</b> Non Display	<b>9</b> Pro- gramma- ble	<b>AA</b> Conven- tional	<b>1</b>	<b>A</b>	<b>N</b>
			<b>K</b> VHF (146-174 MHz)		<b>F</b> Limited Keypad					
			<b>Q</b> (403-440 MHz)		<b>H</b> Full Keypad					
			<b>R</b> UHF (438-470 MHz)							
			<b>S</b> UHF (465-495 MHz)							

## 1.2 Model Chart for VHF1 136-174 MHz

<b>PR400, VHF1, 136-162 MHz</b>				
<b>Model</b>		<b>Description</b>		
AAH65JDC9AA2AN		PR400, 136-162 MHz, 5 W, 16 Ch. Non-Display Model		
AAH65JDF9AA3AN		PR400, 136-162 MHz, 5 W, 32 Ch. Limited Keypad Model		
AAH65JDH9AA4AN		PR400, 136-162 MHz, 5 W, 64 Ch. Full Keypad Model		
		<b>Item</b>	<b>Description</b>	
X		PMUD2051_	PR400, 136-162 MHz, 5 W, 16 Ch. Non-Display Model	
	X	PMUD2052_	PR400, 136-162 MHz, 5 W, 32 Ch. Limited Keypad Model	
		X	PMUD2053_	PR400, 136-162 MHz, 5 W, 64 Ch. Full Keypad Model
X		PMLD4276_	Non-Display, Back Cover Kit. 16 Ch.	
	X	PMLD4277_	Limited Keypad, Back Cover Kit, 32 Ch.	
		X	PMLN4278_	Full Keypad, Back Cover Kit, 64 Ch. 136-162 MHz
X		PMLN4601_	Non-Display, Front Housing Kit, 16 Ch.	
	X	PMLN4602_	Limited Keypad, Front Housing Kit, 32 Ch.	
		X	PMLN4603_	Full Keypad, Front Housing Kit, 64 Ch.
X	X	X	NNTN4496_R	NiCd Battery, 1100 mAH
X	X	X	NNTN4497_R	Li-Ion Battery, 1800 mAH
X	X	X	NNTN4851_	NiMh Battery, 1400 mAH
X	X	X	NNTN4852_	NiMh Battery, 1300 mAH FM
X	X	X	NNTN4970	Slim Li-Ion Battery, 1600 mAH
X	X	X	WPLN4138_R	Rapid 90-Min. Desktop Charger w/US Plug
X	X	X	HLN8255	3" Belt Clip
X	X	X	NAD6502_R	Antenna, 146-174 MHz, 14cm
X			6881096C27	PR400, Non-Display User Guide
	X		6881096C26	PR400, Limited Keypad User Guide
		X	6881096C23	PR400, Full Keypad User Guide
X	X	X	HKLN4219	PR400, User Guide CDROM

X = Indicates compatibility with model(s)

### 1.3 Model Chart for VHF2 146-174 MHz

<b>PR400, VHF2, 146-174 MHz</b>			
<b>Model</b>		<b>Description</b>	
AAH65KDC9AA2AN		PR400, 146-174 MHz, 5 W, 16 Ch. Non-Display Model	
AAH65KDF9AA3AN		PR400, 146-174 MHz, 5 W, 32 Ch. Limited Keypad Model	
AAH65KDH9AA4AN		PR400, 146-174 MHz, 5 W, 64 Ch. Full Keypad Model	
		<b>Item</b>	<b>Description</b>
X		PMUD2054_	PR400, 146-174 MHz, 5 W, 16 Ch. Non-Display Model
	X	PMUD2055_	PR400, 146-174 MHz, 5 W, 32 Ch. Limited Keypad Model
		X PMUD2056_	PR400, 146-174 MHz, 5 W, 64 Ch. Full Keypad Model
X		PMLD4279_	Non-Display, Back Cover Kit, 16 Ch,
	X	PMLD4280_	Limited Keypad, Back Cover Kit, 32 Ch,
		X PMLN4281_	Full Keypad, Back Cover Kit, 64 Ch,
X		PMLN4601_	Non-Display, Front Housing Kit, 16 Ch.
	X	PMLN4602_	Limited Keypad, Front Housing Kit, 32 Ch.
		X PMLN4603_	Full Keypad, Front Housing Kit, 64 Ch.
X	X	X NNTN4496_R	NiCd Battery, 1100 mAH
X	X	X NNTN4497_R	Li-Ion Battery, 1800 mAH
X	X	X NNTN4851_	NiMh Battery, 1400 mAH
X	X	X NNTN4852_	NiMh Battery, 1300 mAH FM
X	X	X NNTN4970	Slim Li-Ion Battery, 1600 mAH
X	X	X WPLN4138_R	Rapid 90-Min. Desktop Charger w/US Plug
X	X	X HLN8255	3" Belt Clip
X	X	X NAD6502_R	Antenna, 146-174 MHz, 14cm
X		6881096C27	PR400, Non-Display User Guide
	X	6881096C26	PR400, Limited Keypad User Guide
		X 6881096C23	PR400, Full Keypad User Guide
X	X	X HKLN4219	PR400, User Guide CDROM

X = Indicates compatibility with model(s)

# 1.4 VHF Specifications

## General

	VHF		
Frequency:	136-162 MHz 146-174 MHz		
Channel Capacity:	16, 32, or 64 Channels		
Power Supply:	7.5 Volts ±20%		
Dimensions: with High Capacity NiCd, High Capacity Li-Ion, NiMH FM, NiMH Std, and Slim Li-Ion Batteries:	130.5mm H x 62mm W x 45mm D (5.12" H x 2.4" W x 1.75" D)		
Weight: for 16 Channel Model Batteries:			
High Capacity NiCd	430g (15.17 oz.)		
High Capacity Li-Ion	376g (13.26 oz.)		
NiMH FM	449g (15.83 oz.)		
NiMH Std	446g (15.73 oz.)		
Slim Li-Ion	337g (13.30 oz.)		
Weight: for 32 & 64 Channel Model Batteries:			
High Capacity NiCd	451g (15.91 oz.)		
High Capacity Li-Ion	396g (13.97 oz.)		
NiMH FM	469g (16.54 oz.)		
NiMH Std	467g (16.47 oz.)		
Slim Li-Ion	397g (14.0 oz.)		
Average Battery Life @ (5-5-90 Duty Cycle):	Capacity (mAh)	5 W	1 W
High Capacity NiCd	1100	8 Hrs.	9 Hrs.
High Capacity Li-Ion	1800	14 Hrs.	19 Hrs.
NiMH FM	1300	9 Hrs.	11 Hrs.
NiMH Std	1400	10 Hrs.	13 Hrs.
Slim Li-Ion	1600	12 Hrs.	17 Hrs.

## Transmitter

	VHF	
RF Output NiMH @ 7.5 V:	Low 1 W	High 5 W
Frequency:	136-162 MHz 146-174 MHz	
Channel Spacing:	12.5/20/25 kHz	
Freq. Stability: (-30°C to +60°C)	0.00025%	
Spurs/Harmonics:	-36 dBm < 1 GHz -30 dBm > 1 GHz	
Audio Response: (from 6 dB/oct. Pre-emphasis, 300 to 3000 Hz)	+1, -3 dB	
Audio Distortion: @ 1000 Hz, 60% Rated Max. Dev.	<3%	
FM Noise:	-40 dB (12.5 kHz) -45 dB (25 kHz)	

## Receiver

	VHF 12.5 kHz	VHF 20/25kHz
Frequency:	136-162 MHz 146-174 MHz	
Sensitivity 12 dB EIA SINAD:	0.25 µV (typical)	
Adjacent Channel Selectivity:	-65 dB	-70 dB
Intermodulation:	- 70 dB	
Freq. Stability (-30°C to +60°C):	0.00025%	
Spur Rejection:	-75 dB	
Image and 1/2 I-F Rejection:	-70 dB	
Audio Output @ <5% Distortion:	500 mW	

All specifications are subject to change without notice.

### 1.5 Model Chart for UHF1 403-440 MHz

<b>PR400, UHF1, 403-440 MHz</b>			
<b>Model</b>		<b>Description</b>	
AAH65QDC9AA2AN		PR400, 403-440 MHz, 4 W, 16 Ch. Non-Display Model	
AAH65QDF9AA3AN		PR400, 403-440 MHz, 4 W, 32 Ch. Limited Keypad Model	
AAH65QDH9AA4AN		PR400, 403-440 MHz, 4 W, 64 Ch. Full Keypad Model	
		<b>Item</b>	<b>Description</b>
X		PMUE2361_	PR400, 403-440 MHz, 4 W, 16 Ch. Non-Display Model
	X	PMUE2362_	PR400, 403-440 MHz, 4 W, 32 Ch. Limited Keypad Model
		X PMUE2363_	PR400, 403-440 MHz, 4 W, 64 Ch. Full Keypad Model
X		PMLE4338_	Non-Display, Back Cover Kit, 16 Ch,
	X	PMLE4377_	Limited Keypad, Back Cover Kit, 32 Ch,
		X PMLE4334_	Full Keypad, Back Cover Kit. 64 Ch,
X		PMLN4601_	Non-Display, Front Housing Kit, 16 Ch.
	X	PMLN4602_	Limited Keypad, Front Housing Kit, 32 Ch.
		X PMLN4603_	Full Keypad, Front Housing Kit, 64 Ch.
X	X	X NNTN4496_R	NiCd Battery, 1100 mAH
X	X	X NNTN4497_R	Li-Ion Battery, 1800 mAH
X	X	X NNTN4851_	NiMh Battery, 1400 mAH
X	X	X NNTN4852_	NiMh Battery, 1300 mAH FM
X	X	X NNTN4970	Slim Li-Ion Battery, 1600 mAH
X	X	X WPLN4138_R	Rapid 90-Min. Desktop Charger w/US Plug
X	X	X HLN8255	3" Belt Clip
X	X	X NAE6483_R	Antenna, Flexible Whip, 403-520 MHz
X		6881096C27	PR400, Non-Display User Guide
	X	6881096C26	PR400, Limited Keypad User Guide
		X 6881096C23	PR400, Full Keypad User Guide
X	X	X HKLN4219	PR400, User Guide CDROM

X = Indicates compatibility with model(s)

## 1.6 Model Chart for UHF2 438-470 MHz

<b>PR400, UHF2, 438-470 MHz</b>				
<b>Model</b>		<b>Description</b>		
AAH65RDC9AA2AN		PR400, 438-470 MHz, 4 W, 16 Ch. Non-Display Model		
AAH65RDF9AA3AN		PR400, 438-470 MHz, 4 W, 32 Ch. Limited Keypad Model		
AAH65RDH9AA4AN		PR400, 438-470 MHz, 4 W, 64 Ch. Full Keypad Model		
		<b>Item</b>	<b>Description</b>	
X		PMUE2364_	PR400, 438-470 MHz, 4 W, 16 Ch. Non-Display Model	
	X	PMUE2365_	PR400, 438-470 MHz, 4 W, 32 Ch. Limited Keypad Model	
		X	PMUE2366_	PR400, 438-470 MHz, 4 W, 64 Ch. Full Keypad Model
X			PMLE4340_	Non-Display, Back Cover Kit. 16 Ch.
	X		PMLE4378_	Limited Keypad, Back Cover Kit, 32 Ch.
		X	PMLE4335_	Full Keypad, Back Cover Kit, 64 Ch.
X			PMLN4601_	Non-Display, Front Housing Kit, 16 Ch.
	X		PMLN4602_	Limited Keypad, Front Housing Kit, 32 Ch.
		X	PMLN4603_	Full Keypad, Front Housing Kit, 64 Ch.
X	X	X	NNTN4496_R	NiCd Battery, 1100 mAH
X	X	X	NNTN4497_R	Li-Ion Battery, 1800 mAH
X	X	X	NNTN4851_	NiMh Battery, 1400 mAH
X	X	X	NNTN4852_	NiMh Battery, 1300 mAH FM
X	X	X	NNTN4970	Slim Li-Ion Battery, 1600 mAH
X	X	X	WPLN4138_R	Rapid 90-Min. Desktop Charger w/US Plug
X	X	X	HLN8255	3" Belt Clip
X	X	X	NAE6483_R	Antenna, Flexible Whip, 403-520 MHz
X			6881096C27	PR400, Non-Display User Guide
	X		6881096C26	PR400, Limited Keypad User Guide
		X	6881096C23	PR400, Full Keypad User Guide
X	X	X	HKLN4219	PR400, User Guide CDROM

X = Indicates compatibility with model(s)

### 1.7 Model Chart for UHF3 465-495 MHz

<b>PR400, UHF3, 465-495 MHz</b>				
<b>Model</b>		<b>Description</b>		
AAH65SDC9AA2AN		PR400, 465-495 MHz, 4 W, 16 Ch. Non-Display Model		
AAH65SDF9AA3AN		PR400, 465-495 MHz, 4 W, 32 Ch. Limited Keypad Model		
AAH65SDH9AA4AN		PR400, 465-495 MHz, 4 W, 64 Ch. Full Keypad Model		
		<b>Item</b>	<b>Description</b>	
X		PMUE2367_	PR400, 465-495 MHz, 4 W, 16 Ch. Non-Display Model	
	X	PMUE2368_	PR400, 465-495 MHz, 4 W, 32 Ch. Limited Keypad Model	
		X	PMUE2369_	PR400, 465-495 MHz, 4 W, 64 Ch. Full Keypad Model
X		PMLE4379_	Non-Display, Back Cover Kit. 16 Ch.	
	X	PMLE4380_	Limited Keypad, Back Cover Kit, 32 Ch.	
		X	PMLE4336_	Full Keypad, Back Cover Kit, 64 Ch,
X		PMLN4601_	Non-Display, Front Housing Kit, 16 Ch.	
	X	PMLN4602_	Limited Keypad, Front Housing Kit, 32 Ch.	
		X	PMLN4603_	Full Keypad, Front Housing Kit, 64 Ch.
X	X	X	NNTN4496_R	NiCd Battery, 1100 mAH
X	X	X	NNTN4497_R	Li-Ion Battery, 1800 mAH
X	X	X	NNTN4851_	NiMh Battery, 1400 mAH
X	X	X	NNTN4852_	NiMh Battery, 1300 mAH FM
X	X	X	NNTN4970	Slim Li-Ion Battery, 1600 mAH
X	X	X	WPLN4138_R	Rapid 90-Min. Desktop Charger w/US Plug
X	X	X	HLN8255	3" Belt Clip
X	X	X	NAE6483_R	Antenna, Flexible Whip, 403-520 MHz
X			6881096C27	PR400, Non-Display User Guide
	X		6881096C26	PR400, Limited Keypad User Guide
		X	6881096C23	PR400, Full Keypad User Guide
X	X	X	HKLN4219	PR400, User Guide CDROM

X = Indicates compatibility with model(s)

## 1.8 UHF Specifications

### General

	UHF		
Frequency:	403-440 MHz 438-470 MHz 465-496 MHz		
Channel Capacity:	16, 32, or 64 Channels		
Power Supply:	7.5 Volts ±20%		
Dimensions: with High Capacity NiCd, High Capacity Li-Ion, NiMH FM, NiMH Std, and Slim Li-Ion Batteries:	130.5mm H x 62mm W x 45mm D (5.12" H x 2.4" W x 1.75" D)		
Weight: for 16 Channel Model Batteries:			
High Capacity NiCd	430g (15.17 oz.)		
High Capacity Li-Ion	376g (13.26 oz.)		
NiMH FM	449g (15.83 oz.)		
NiMH Std	446g (15.73 oz.)		
Slim Li-Ion	337g (13.30 oz.)		
Weight: for 32 & 64 Channel Model Batteries:			
High Capacity NiCd	451g (15.91 oz.)		
High Capacity Li-Ion	396g (13.97 oz.)		
NiMH FM,	469g (16.54 oz.)		
NiMH Std,	467g (16.47 oz.)		
Slim Li-Ion	397g (14.0 oz.)		
Average Battery Life @ (5-5-90 Duty Cycle):	Capacity (mAh)	4 W	1 W
High Capacity NiCd	1100	8 Hrs.	9 Hrs.
High Capacity Li-Ion	1800	14 Hrs.	19 Hrs.
NiMH FM	1300	9 Hrs.	11 Hrs.
NiMH Std	1400	10 Hrs.	13 Hrs.
Slim Li-Ion	1600	12 Hrs.	17 Hrs.

### Transmitter

	UHF	
RF Output NiMH @ 7.5 V:	Low 1 W	High 4 W
Frequency:	403-440 MHz 438-470 MHz 465-496 MHz	
Channel Spacing:	12.5/20/25 kHz	
Freq. Stability: (-30°C to +60°C)	0.00025%	
Spurs/Harmonics:	-36 dBm < 1 GHz -30 dBm > 1 GHz	
Audio Response: (from 6 dB/oct. Pre- emphasis, 300 to 3000 Hz)	+1, -3 dB	
Audio Distortion: @ 1000 Hz, 60% Rated Max. Dev.	<3%	
FM Noise:	-40 dB (12.5 kHz) -45 dB (25 kHz)	

### Receiver

	UHF 12.5 kHz	UHF 20/25kHz
Frequency:	403-440 MHz 438-470 MHz 465-496 MHz	
Sensitivity 12 dB EIA SINAD:	0.25 µV (typical)	
Adjacent Channel Selectivity:	-60 dB	-70 dB
Intermodulation:	-70 dB	
Freq. Stability (-30°C to +60°C):	0.00025%	
Spur Rejection:	-75 dB	
Image and 1/2 I-F Rejection:	-70 dB	
Audio Output @ <5% Distortion:	500 mW	

All specifications are subject to change without notice.

## 1.9 MIL Standards

Table 1-2. MIL STDS 810 C, D, E, and F: Applicable to UHF and VHF Specifications (8.2 and 8.4)

Military Standards 810 C, D, E, & F: Parameters/Methods/Procedures								
Applicable MIL-STD	810C		810D		810E		810F	
	Methods	Procedures	Methods	Procedures	Methods	Procedures	Methods	Procedures
Low Pressure	500.1	1	500.2	2	500.3	2	500.4	1
High Temperature	501.1	1,2	501.2	1,2	501.3	1,2	501.4	1,2
Low Temperature	502.1	1	502.2	1,2	502.3	1,2	501.4	1,2
Temperature Shock	503.1	1	503.2	1	503.3	1	503.4	1
Solar Radiation	505.1	1	505.2	1	505.3	1	505.4	1
Rain	506.1	1,2	506.2	1,2	506.3	1,2	506.4	1
Humidity	507.1	2	507.2	2,3	507.3	2,3	507.4	3
Salt Fog	509.1	1	509.2	1	509.3	1	509.4	1
Dust	510.1	1	510.2	1	510.3	1	510.4	1
Vibration	514.2	8,10	514.3	1	514.4	1	514.5	1
Shock	516.2	1,2,5	516.3	1,4	516.4	1,4	516.5	1

**This Page Intentionally Left Blank**

---

# Chapter 2 Theory Of Operation

## 2.1 Introduction

This chapter provides a basic theory of operation for the radio components.

## 2.2 Major Assemblies

- Transceiver Board – contains all transmit, receive, and audio circuitry.
- Display (Limited and Full Keypad models only) – 8 characters (14 segments star burst) and 10 icons with backlighting, liquid-crystal display (LCD).

Keypad Board (Limited and Full Keypad models only) –

Limited Keypad: a 2-button menu keypad with 2-way navigation button,

Full Keypad: a 2-button menu keypad with 2-way navigation button, and a 3 x 4 alphanumeric keypad. Transceiver Board (Figure 2-1).

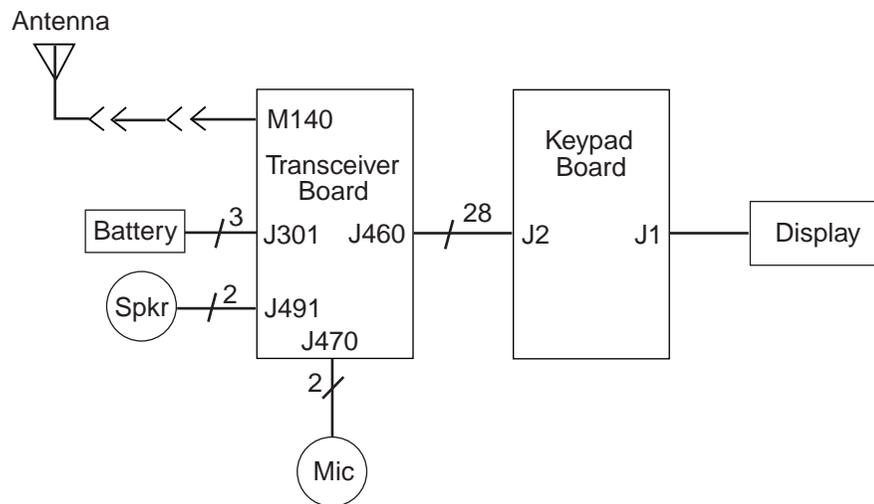


Figure 2-1. Major Assemblies Block Diagram

### 2.2.1 Receiver

Incoming RF signals from the antenna are first routed through the harmonic filter and antenna switch, part of the transmitter circuitry, before being applied to the receiver front end. The receiver front end consists of a preselector filter, RF amplifier, interstage filter, and a double-balanced first mixer (Figure 2-2).

The mixer output is applied to a diplexer network which matches the 44.85 MHz IF signal to the crystal filter, and terminates the mixer into 50 ohms at all other frequencies.

The receiver back-end is a dual conversion design. High IF selectivity is provided by a 4-pole fundamental mode 44.85 MHz crystal filter. The output is matched to an IF amplifier stage. The output of the IF amplifier is applied to the input of the receiver IFIC.

---

The IFIC is a low-voltage monolithic FM IF system incorporating a mixer/oscillator, two limiting IF amplifiers, quadrature detector, logarithmic received signal strength indicator (RSSI), voltage regulator and audio, and RSSI Op Amps. The second LO frequency, 44.395 MHz, is determined by a crystal oscillator. The second mixer converts the 44.85 MHz high IF frequency to 455 kHz.

Additional IF selectivity is provided by two ceramic filters. The first ceramic filter is a 4-pole filter used between the second mixer and IF amp. The second ceramic filter is a 6-pole filter and is used between the IF amp and the limiter input. For the second ceramic filter, a wider filter is used for 20/25 kHz channel spacing, and a narrower filter is used for 12.5 kHz channels.

A ceramic resonator provides phases vs. frequency characteristic required by the quadrature detector, with 90 degree phase shift occurring at 455 kHz. The output of the IFIC is the recovered audio signal which is fed to the audio IC for amplification and signal conditioning. The output of the audio IC is injecting into the audio PA which drives the 24 Ohm speaker.

### 2.2.2 Transmitter

- When the radio is transmitting, microphone audio is passed through the audio IC, where pre-emphasis and low-pass (splatter) filtering are done. The output of the audio IC is used to modulate the TX VCO, which creates the modulated carrier. The modulated carrier is then amplified by the pre-driver and power amplifier circuit, which transmits the signal under dynamic power control

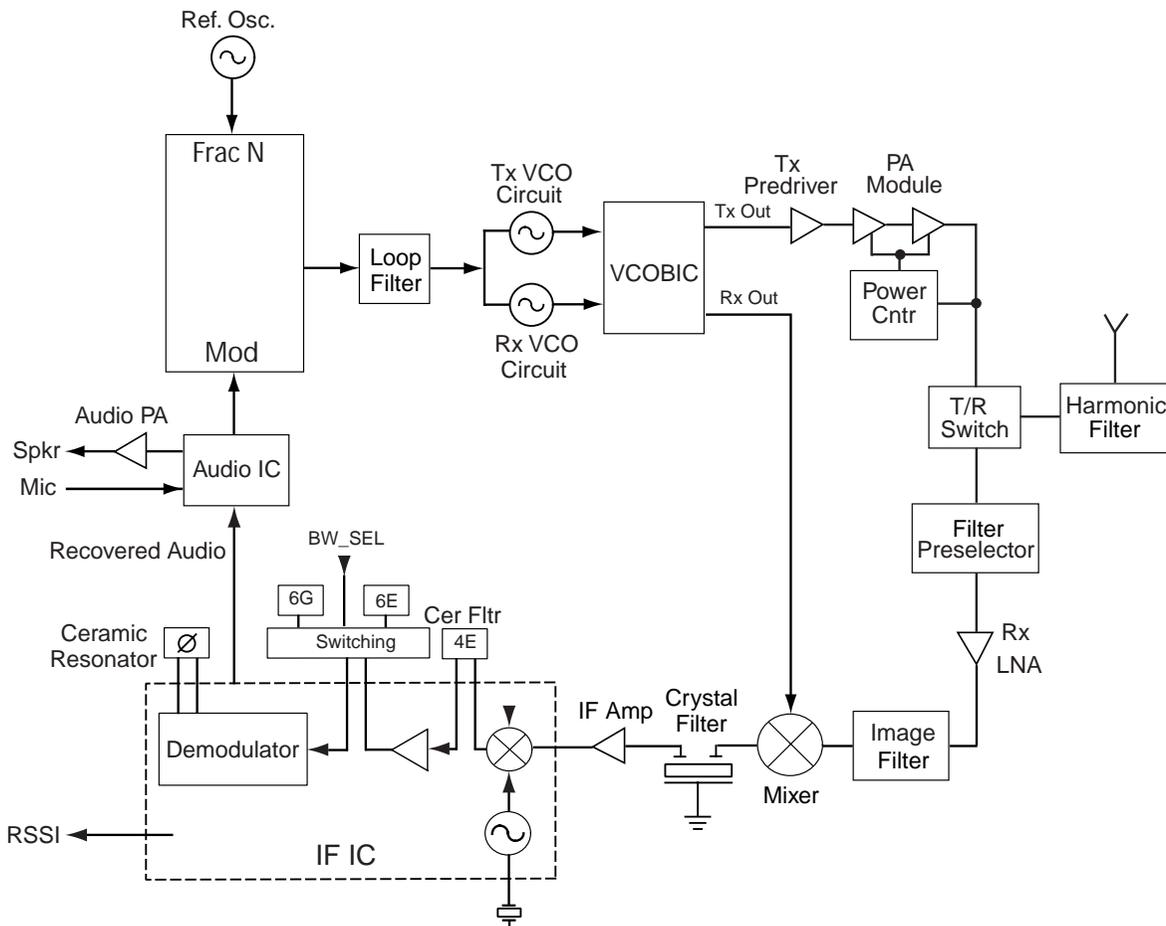


Figure 2-2. Transceiver Block Diagram

# Chapter 3 Test Equipment, Service Aids, and Service Tools

## 3.1 Test Equipment

Table 3-1 lists test equipment required to service the PR400 Radios.

Table 3-1. Recommended Test Equipment

Motorola Part No.	Description	Characteristics	Application
R2600 series	System analyzer	This item will substitute for items with an asterisk (*)	Frequency/deviation meter and signal generator for wide-range troubleshooting and alignment
*R1074A	Fluke 87 digital multi-meter	True RMS metering, 200 kHz frequency counter, 32-segment bar graph with backlit display	Digital voltmeter is recommended for AC/DC voltage and current measurements
	Fluke 85 RF probe	500 MHz, 30 VAC max	Use with Fluke 87 digital multi-meter for RF voltage measurements.
*R1377A	AC voltmeter	1 mV to 300 mV, 10 mega-ohm input impedance	Audio voltage measurements
R1611A	Dual channel 100 MHz oscilloscope (Agilent)	Two-channel, 100 MHz bandwidth, 200 M sample rate/sec, 2 MB memory/channel	Waveform measurements
S1339A	RF millivolt meter	100 $\mu$ V to 3V RF, 10 kHz to 1 GHz frequency range	RF level measurements
*R1013B or *R1370A	SINAD meter or SINAD meter with RMS	Without RMS audio voltmeter or With RMS audio voltmeter	Receiver sensitivity measurements

## 3.2 Service Aids

Table 3-2 lists service aids recommended for working on the PR400 Radios. While all of these items are available from Motorola, most are standard shop equipment items, and any equivalent item capable of the same performance may be substituted for the item listed.

Table 3-2. Service Aids

Motorola Part No.	Description	Application
RLN4460	Portable Test Set	Enables connection to the audio/accessory jack. Allows switching for radio testing.
RLN4510	Battery Interface	Regulates DC current and voltage between radio and power supply.
RVN4191	Customer Programming Software and Global Tuner Software on CD Rom	Program customer option and channel data.
AAPMKN4004	Programming Test Cable	Connects radio to RIB (PLN4008).
AAPMKN4003	Radio to Radio Cloning Cable	Allows a radio to be duplicated from a master radio by transferring programmed data from the master radio to the other.
RLN4008	Radio Interface Box	Enables communications between the radio and the computer's serial communications adapter.
5886564Z01	RF Adaptor	Adapts radio's antenna port to BNC cabling of test equipment.
0180305K08	Shop Battery Eliminator	Interconnects radio to power supply.
HSN9412	Wall-Mounted Power Supply	Used to supply power to the RIB (120 VAC).
3080369B71 or 3080369B72	Computer Interface Cable	Use B72 for the IBM PC AT or newer (9-pin serial port). Use B71 for older models (25-pin serial port). Connects the computer's serial communications adapter to the RIB (PLN4008).
6686533Z01	Knob Remover/Chassis Opener	Used to remove the front cover assembly.
HKN9216	IBM Computer Interface Cable	Connection from computer to RIB.
8180384N65	Housing Eliminator	Allows testing of the radio outside of the housing.

Table 3-3. Recommended Service Tools

Motorola Part No.	Description	Application
RSX4043A	TORX screwdriver	Tighten and remove chassis screws
6680387A70	T6 TORX bit	Removable TORX screwdriver bit
R1453A	Digital readout solder station	Digitally controlled soldering iron
RLN4062A	Hot air workstation, 120 V	Tool for hot air soldering/desoldering of surface mounted integrated circuits

Table 3-3. Recommended Service Tools (Continued)

Motorola Part No.	Description	Application
0180386A78	Illuminated magnifying glass with lens attachment	Illumination and magnification of components
0180302E51	Master lens system	
0180386A82	Anti-static grounding kit	Used during all radio assembly and disassembly procedures
6684253C72	Straight prober	
6680384A98	Brush	
1010041A86	Solder (RMA type), 63/67, 0.5mm diameter, 1 lb. spool	
0180303E45	SMD tool kit (included with R1319A)	
R1319A	ChipMaster (110 V)	Surface mount removal and assembly of surface mounted integrated circuits and/or rework station shields. Includes 5 nozzles.
R1321A	ChipMaster (220 V)	
ChipMaster Nozzles:		
6680332E83	PLCC-28* nozzle	Soldering and Un-soldering IC's
6680332E82	PLCC-44* nozzle	
6680332E94	PLCC-52 nozzle	
6680332E96	PLCC-84 nozzle	
6680334E67	QFP-160 nozzle	
6680333E46	SOL-18 nozzle	
6680332E84	SOIC-20 nozzle	
6680332E87	SOL-20J nozzle	
6680333E45	SOL-24 nozzle	
6680333E55	TSOP-64 nozzle	

\* Included with ChipMaster packages

# Programming/Test Cable

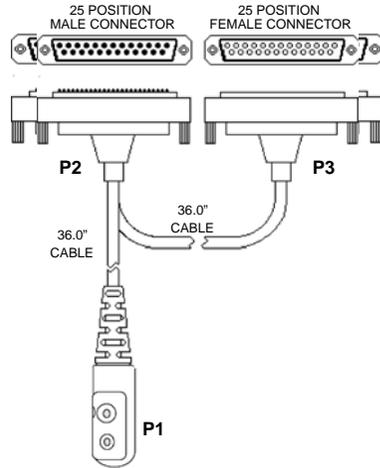


Figure 3-1. Programming/Test Cable

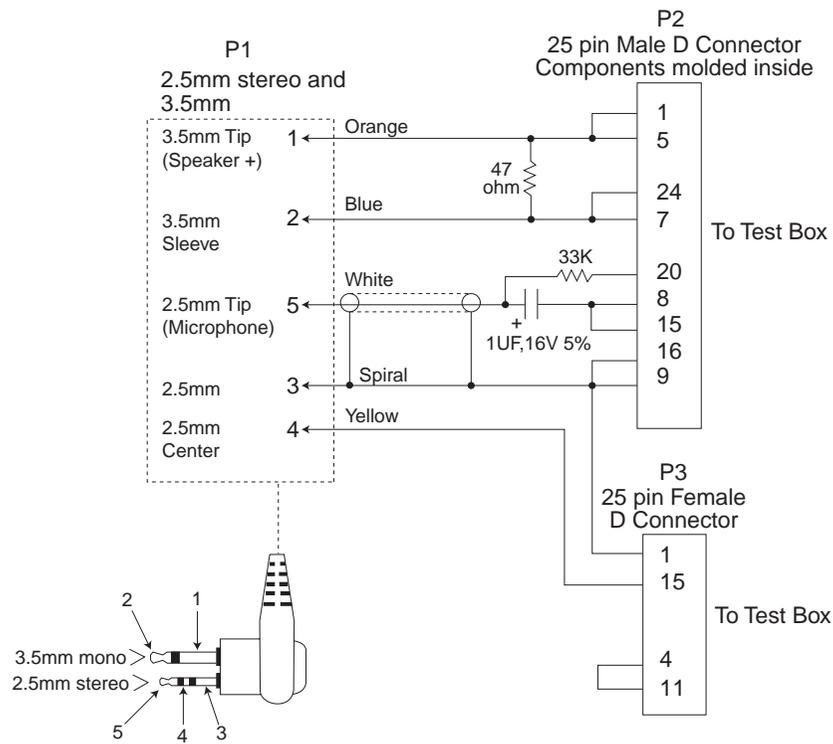


Figure 3-2. Wiring of the Connectors

---

## Chapter 4 Performance Checks

### 4.1 General

These radios meet published specifications through their manufacturing process by utilizing high-accuracy laboratory-quality test equipment. The recommended field service equipment is as accurate as the manufacturing equipment with few exceptions. This accuracy must be maintained in compliance with the manufacturer's recommended calibration schedule.

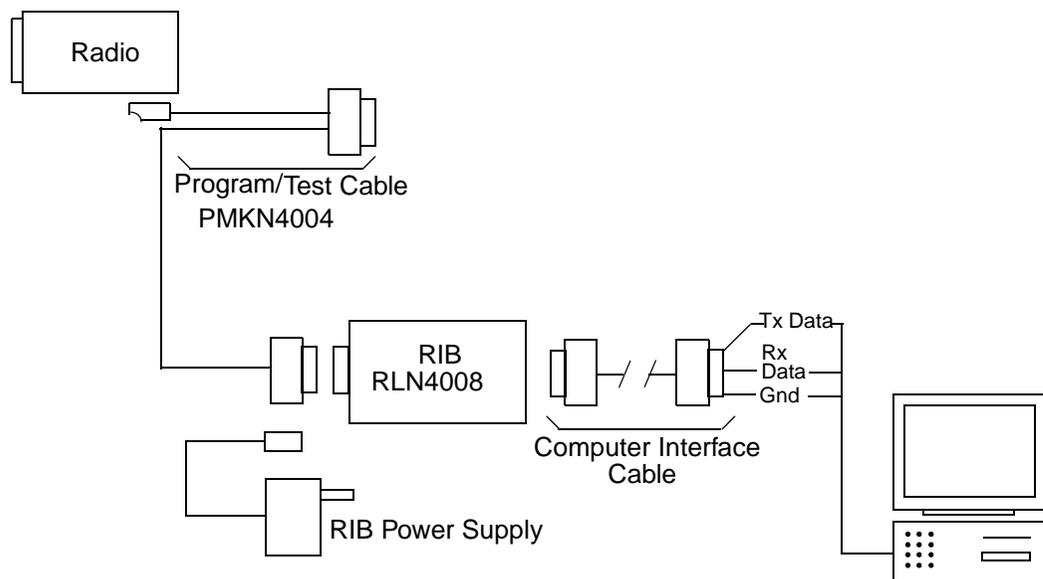


Figure 4-1. Radio Performance Checks Setup

### 4.2 Power-Up Self Test

Applying power to the radio by using the on/off volume control, starts a self-test routine which checks the RAM, EEPROM hardware and EEPROM checksum. Pressing and holding SB1 while turning on the radio causes the self-test routine to check for the ROM checksum as well. If these checks are successfully completed, the radio will generate the Self-Test Pass Tone. If the self-test is not successful, a Self-Test Fail Tone is heard.

---

Supply voltage can be connected from the battery eliminator. The equipment required for alignment procedures is connected as shown in the Radio Performance Checks Setup diagram (Figure 4-1).

Initial equipment control settings should be as indicated in Table 4-1 and should be the same for all performance checks and tuner alignment procedures.

Table 4-1. Initial Equipment Control Settings

Service Monitor	Test Set	Power Supply
Monitor Mode: Power Monitor	Spkr set: A	Voltage: 7.5 Vdc
RF Attenuation: -70	Spkr/load: Speaker	DC on/standby: Standby
AM, CW, FM: FM	PTT: OFF	Volt Range: 10 V
Oscilloscope Source: Mod Oscilloscope Horiz: 1 0 mSec/Div Oscilloscope Vert: 2.5kHz/Div Oscilloscope Trig: Auto Monitor Image: Hi Monitor BW: Nar Monitor Squelch: mid CW Monitor Vol: 1/4 CW		Current: 2.5 A

### 4.3 RF Test Mode

When the PR400 radio is operating in its normal environment, the radio's microcomputer controls the RF channel selection, transmitter key-up, and receiver muting, according to the customer codeplug configuration. However, when the unit is on the bench for testing, alignment, or repair, it must be removed from its normal environment using a special routine, called RF TEST MODE. This mode allows bench testing of the radio at various test frequencies across the entire band, at both high and low transmit power (if applicable), at various channel spacings, and with different coded or carrier squelch types. Any customer specific programming in the radio will not be changed or affected by use of the RF Test Mode..

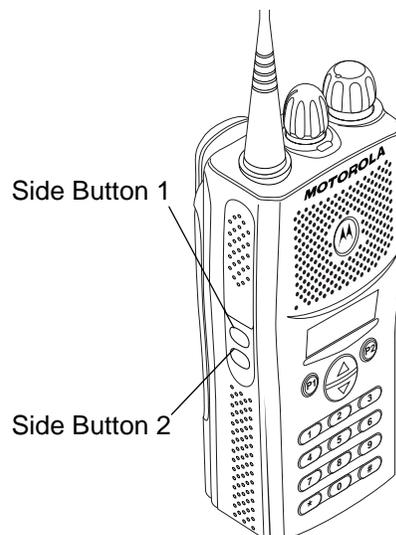


Figure 4-2. Side Button Locations

To enter test mode:

1. Turn the radio on.

Within ten seconds after the self test is complete (self test tone is heard), press SB2 (Side Button 2 in [Figure 4-2](#)) five times in succession. If the self test complete tone is not heard, see Error Codes information in Chapter 9. Entry into the test mode is indicated by a positive indicator tone followed by a good key chirp (GKC) upon entering test mode, the radio is in the carrier squelch mode.

2. Press SB1 (Side Button 1) and scroll through and access test environments as shown in [Table 4-2](#).
3. Press SB2 and scroll through the channel spacing available as shown in [Table 4-3](#).
4. Turn the channel selector knob to change the test channel for that environment as shown in [Table 4-4](#).
5. Press the PTT on a test channel to cause the radio to transmit at the test frequency for the channel.

*Table 4-2. Test Environments*

No. of Beeps	Description	Function
1 GKC*	Carrier Squelch	RX: unsquelch if carrier detected TX: mic audio
1 BKC*	Tone Private-Line	RX: unsquelch if carrier and tone (192.8 Hz) detected TX: mic audio + tone (192.8 Hz)
2 BKC	Digital Private-Line	RX: unsquelch if carrier and digital code (131) detected TX: mic audio + digital code (131)
3 BKC	Dual-Tone Multiple Frequency	RX: unsquelch if carrier detected TX: selected DTMF tone pair
5 BKC	Unsquelch Open	RX: constant unsquelch TX: mic audio
9 BKC	High-Speed Signaling	RX: unsquelch if carrier detected TX: 1500 Hz tone
11 BCK	Companding	RX: unsquelch if carrier detected TX: mic audio

\* "BKC" means Bad Key Chirp (low-pitched tone), "GKC" means Good Key Chirp (high-pitched tone).

*Table 4-3. Test Channel Spacing*

No. of BKC	Channel Spacing
1	25 kHz
2	12.5 kHz
3	20 kHz

Table 4-4. Test Frequencies

Channel Selector Switch Position	Test Channel	VHF 1 (136-162 MHz)	VHF 2 (146-174 MHz)	UHF 1 (403-440 MHz)	UHF 2 (438-470 MHz)	UHF 3 (465-495 MHz)
1 Low Power 8 High Power	TX#1 or #8 RX#1 or #8	136.625	146.625	403.625	438.625	465.625
2 Low Power 9 High Power	TX#2 or #9 RX#2 or #9	140.325	150.775	409.775	443.775	470.775
3 Low Power 10 High Power	TX#3 or #10 RX#3 or #10	144.525	155.275	415.275	448.275	475.275
4 Low Power 11 High Power	TX#4 or #11 RX#4 or #11	148.875	160.125	421.125	454.125	480.125
5 Low Power 12 High Power	TX#5 or #12 RX#5 or #12	153.325	164.475	427.475	459.475	485.475
6 Low Power 13 High Power	TX#6 or #13 RX#6 or #13	157.875	169.475	433.475	464.475	490.475
7 Low Power 14 High Power	TX#7 or #14 RX#7 or #14	161.975	173.875	439.875	469.875	494.875

Table 4-5. Receiver Performance Checks

Test Name	Communications Analyzer	Radio	Test Set	Comments
Reference Frequency	Mode: PWR MON 4th channel test frequency* Monitor: Frequency error Input at RF In/Out	TEST MODE, Test Channel 4 carrier squelch output at antenna	PTT to continu- ous (during the performance check)	Frequency error to be $\pm 186$ Hz VHF1 $\pm 200$ Hz VHF2 $\pm 525$ Hz UHF1 $\pm 568$ Hz UHF2 $\pm 600$ Hz UHF3
Rated Audio	Mode: GEN Output level: 1.0m V RF 4th channel test frequency* Mod: 1 kHz tone at 3 kHz deviation Monitor: DVM: AC Volts	TEST MODE Test Channel 4 carrier squelch	PTT to OFF (center), meter selector to Audio PA	Set volume control to 3.46 Vrms
Distortion	As above, except to distortion	As above	As above	Distortion <3.0%
Sensitivity (SINAD)	As above, except SINAD, lower the RF level for 12 dB SINAD.	As above	PTT to OFF (center)	RF input to be <0.30 $\mu$ V (0.25 $\mu$ V typical).
Noise Squelch Threshold (only radios with conventional system need to be tested)	RF level set to 1 mV RF	As above	PTT to OFF (center), meter selection to Audio PA, spkr/ load to speaker	Set volume control to 3.46 Vrms
	As above, except change frequency to a conventional system. Raise RF level from zero until radio unsquelches.	out of TEST MODE; select a conventional system	As above	Unsquelch to occur at <0.25 $\mu$ V. Preferred SINAD = 6-9 dB

\* See Table 4-4

Table 4-6. Transmitter Performance Checks

Test Name	Communications Analyzer	Radio	Test Set	Comments
Reference Frequency	Mode: PWR MON 4th channel test frequency* Monitor: Frequency error Input at RF In/Out	TEST MODE, Test Channel 4 carrier squelch Output at antenna	PTT to continuous (during the performance check)	Frequency error to be ±186 Hz VHF1 ±200 Hz VHF2 ±525 Hz UHF1 ±568 Hz UHF2 ±600 Hz UHF3
Power RF	As above	As above	As above	Refer to Maintenance Specifications
Voice Modulation	Mode: PWR MON 4th channel test frequency* atten to -70, input to RF In/Out Monitor: DVM, AC Volts Set 1 kHz Mod Out level for 0.025 Vrms at test set, 80m Vrms at AC/DC test set jack	As above	As above, meter selector to mic	Deviation: VHF, UHF ≥ 4.0 kHz but ≤ 5.0 kHz (25 kHz Ch Sp).
Voice Modulation (internal)	Mode: PWR MON 4th channel test frequency* atten to -70, input to RF In/Out	TEST MODE, Test Channel 4 carrier squelch Output at antenna	Remove modulation input	Press PTT switch on radio. Say "four" loudly into the radio mic. Measure deviation: VHF, UHF ≥ 4.0 kHz but ≤ 5.0 kHz (25 kHz Ch Sp)
DTMF Modulation	As above, 4th channel test frequency*	TEST MODE, Test Channel 4 DTMF Output at antenna	As above	Deviation: VHF, UHF ≥ 3.05 kHz but ≤ 3.45 kHz (25 kHz Ch Sp)
PL/DPL Modulation	As above 4th channel test frequency* BW to narrow	TEST MODE, Test Channel 4 TPL DPL	As above	Deviation: VHF, UHF ≥ 500 Hz but ≤ 1000 Hz (25 kHz Ch Sp).

\* See Table 4-4

**This Page Intentionally Left Blank**

---

## Chapter 5 Radio Alignment Procedures

### 5.1 Introduction

This chapter provides an overview of the Commercial Series Customer Programming Software (CPS) and the Global Tuner as designed for use in a Windows® 98/NT4/2000/ME/XP environment. Both cover all the functions of the traditional Radio Service Software (RSS) package.

They are both available in the CPS and Global Tuner (CD ROM) Kit (RVN4191).

### 5.2 CPS Programming Setup

Refer to online help files for the CPS Programming procedures. (See [Figure 5-1](#) for CPS Programming Setup).

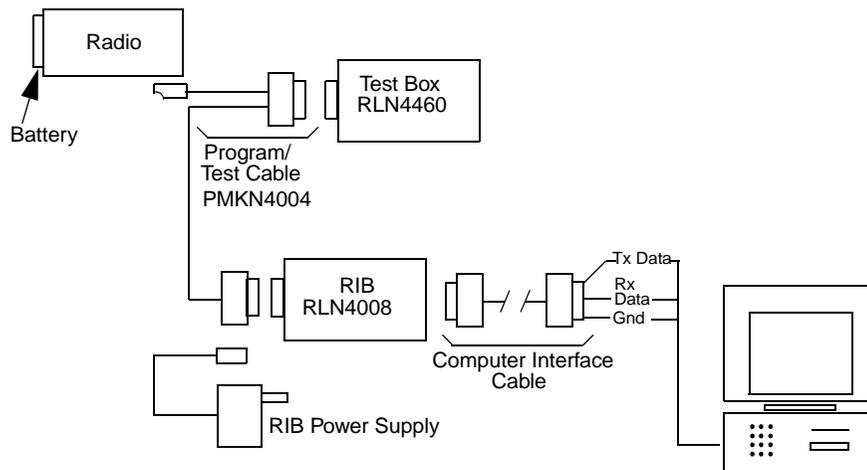


Figure 5-1. CPS Programming Setup

---

### 5.3 Radio Tuning Setup

A Windows 98/NT4/2000/ME/XP PC (personal computer) and Global Tuner are required to tune the radio. To perform the tuning procedures, the radio must be connected to the PC, RIB (Radio Interface Box) and Universal Test Set as shown in Figure 5-2 below. Refer to online help files for the tuning procedures.

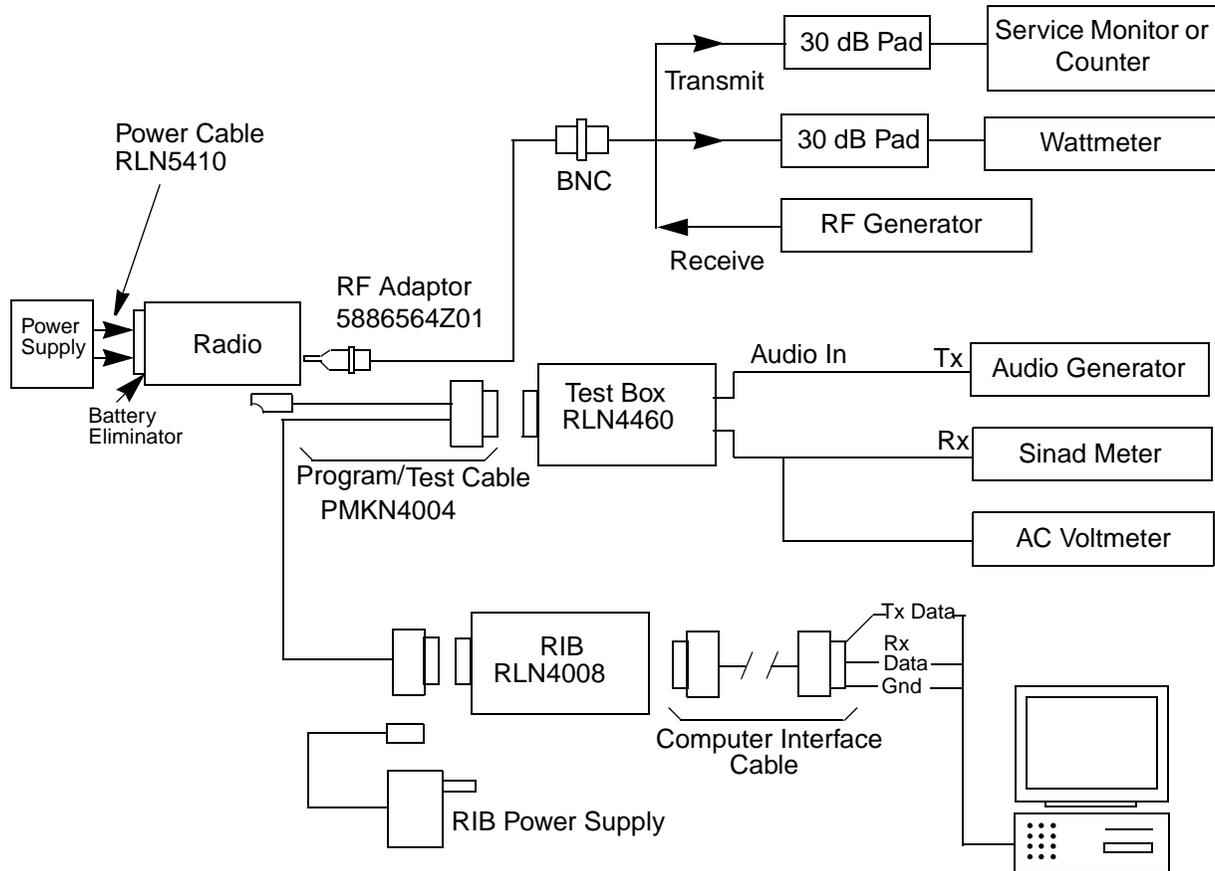


Figure 5-2. Radio Tuning Setup

### 5.3.1 Initial Test Equipment Control Settings

The initial test equipment control settings are listed in [Table 5-1](#).

Table 5-1. Initial Equipment Control Settings

Service Monitor	Test Set	Power Supply
Monitor Mode: Power Monitor	Speaker set: A	Voltage: 13.2 Vdc
RF Attenuation: -70	Speaker/load: Speaker	DC on/standby: Standby
AM, CW, FM: FM	PTT: OFF	Volt Range: 20 V
Oscilloscope Source: Mod Oscilloscope Horizontal: 10 mSec/Div Oscilloscope Vertical: 2.5 kHz/Div Oscilloscope Trigger: Auto Monitor Image: Hi Monitor BW: Nar Monitor Squelch: mid CW Monitor Volume: 1/4 CW		Current: 20 A

## 5.4 Transmitter Alignment Options

**Note:** When checking the RF power output of the radio with a test set, always use a pad of at least 30 dB attached to the radio end of the RF cable. This will avoid an RF mismatch and ensure a stable RF reading that will not change with varying lengths of connecting cable.

### 5.4.1 Reference Oscillator Warp

This is an important operation which affects all deviation values such as **DTMF, MDC1200 Signaling** etc. The frequency will drift if not warped properly. Perform this operation prior to all other transmit tuning operations in order to **minimize heating** and because of the **impact of warp on signaling operations**.

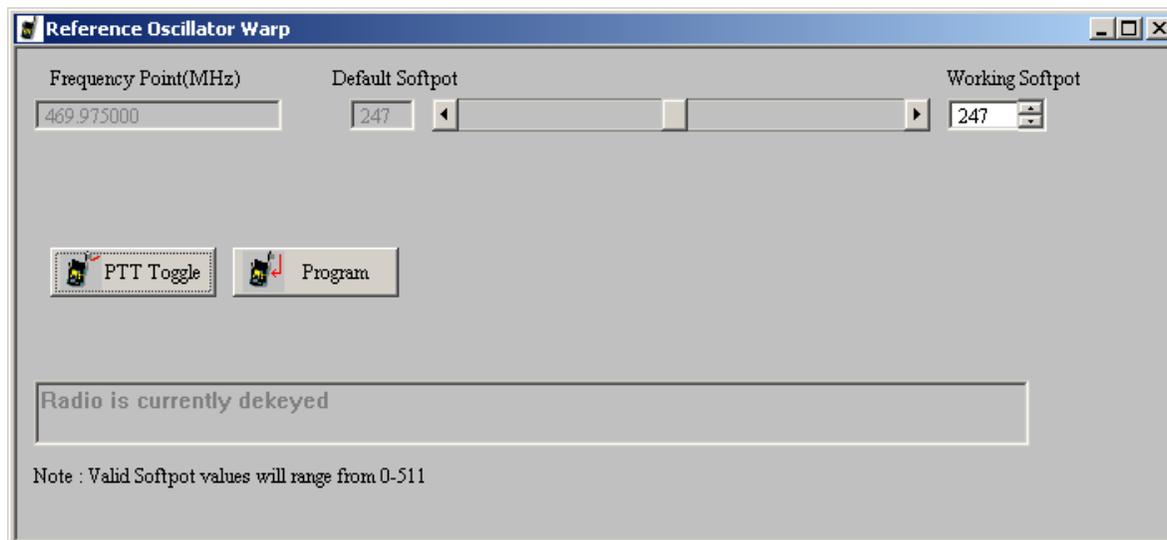


Figure 5-3. Reference Oscillator Warp Window

1. Under **Tx Align** menu, select **Reference Oscillator Warp** (Figure 5-3).
2. There is only 1 frequency point shown which is always the last non-0 transmit frequency point, which will normally be F7.
3. Click on the slider thumb and press **PTT Toggle** to key up the radio at the corresponding frequency point.
4. Monitor the transmit frequency.
5. Adjust the slider, spin or edit control (press **ENTER** to confirm selection/send a softpot value) until the frequency is as close as possible to the indicated transmit frequency. (Refer to Table 5-2).
6. Dekey the radio by pressing **PTT Toggle**.
7. Program the warp value into the radio by pressing the **Program** button.
8. Exit the Reference Oscillator Warp function.

Table 5-2. Reference Oscillator Specifications

RF Band	Target
VHF Band 1 (136-162 MHz)	±162 Hz
VHF Band 2 (146-174 MHz)	±174 Hz
UHF Band 1 (403-440 MHz)	±436 Hz
UHF Band 2 (438-470 MHz)	±470 Hz
UHF Band 3 (465-495 MHz)	±495 Hz

## 5.4.2 Modulation Balance Attenuation

**Note:** When using test box RLN4460:

- Inject the signal into the radio via the **METER IN** terminal and
- Set the **METER IN** selector switch to "VOL".
- Inject the signal into the radio via the **AUDIO IN** terminal.
- Set the **METER OUT** toggle switch to the "MIC PORT" position
- Set the **METER OUT** selector switch to "MIC".

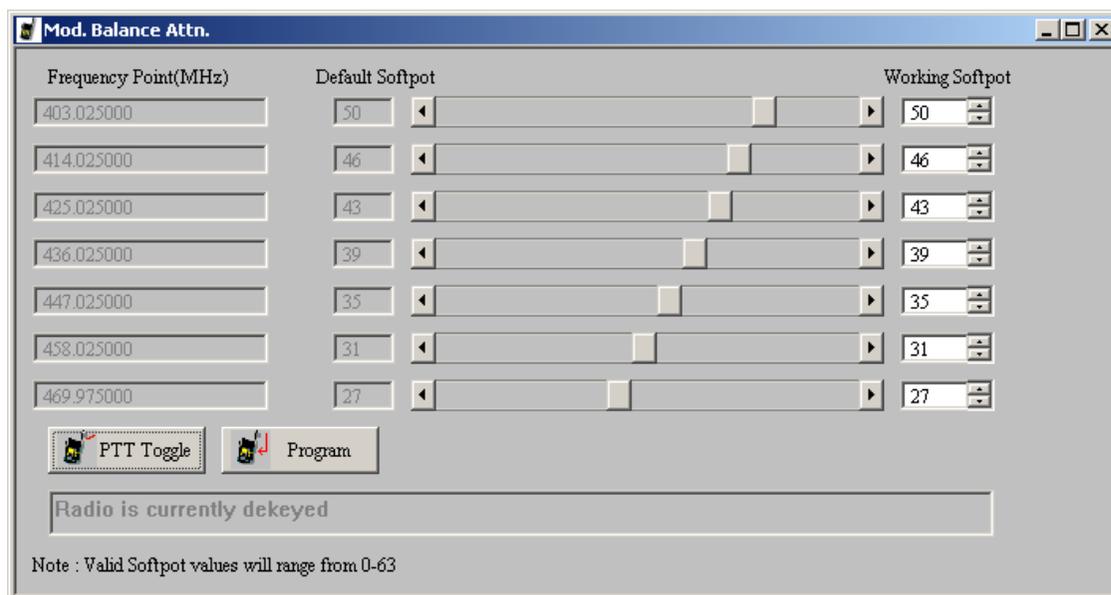


Figure 5-4. Modulation Balance Window

Compensation alignment balances the **modulation sensitivity** of the **VCO** and reference modulation (synthesizer low frequency port) lines. The compensation algorithm is critical to the operation of signaling schemes that have very low frequency components (Digital Private-Line) and could result in distorted waveforms if improperly adjusted. To perform Modulation Balance tuning, follow the following steps.

1. Under the **Tx Align** menu, select **Mod Balance Attn** (Figure 5-4).
2. Begin with the lowest frequency (i.e. the first frequency point from the top). Pressing **PTT Toggle** without selecting any slider control at the corresponding frequency point will key the radio up at the first frequency point.
3. Inject **80 Hz** at an amplitude of **1.78 V**.
4. Record the deviation obtained. Typical values should range from **[(1.70-2.30 kHz. Modulation is only tuned in the 25 kHz channel spacing mode)]**.
5. Inject **3 kHz**. Set the amplitude to **1.5 V**.
6. Change the modulation balance attenuation setting until the **Tx** deviation is as recorded in step 4.
7. Inject **80 Hz** at an amplitude of **1.78 V**.
8. Check the deviation again. If the **Tx** deviation changes, record the reading and repeat steps 5-8 until the **Tx** deviation remains the same.
9. Press **PTT Toggle** to dekey the radio. Choose the next frequency, key up and repeat steps 3 to 8 until all seven tuning points are done.
10. Program the softpot value by pressing the **Program** button.
11. Exit the Modulation Balance Function.

### 5.4.3 Transmit Power Tuning

**Note:** The maximum available power level given in the table below must not be exceeded. There are separate alignment procedures for High and Low power.

**Note:** When checking the RF power output of the radio with a test set, always use a pad of at least 30 dB attached to the radio end of the RF cable. This will avoid an RF mismatch and ensure a stable RF reading that will not change with varying lengths of connecting cable

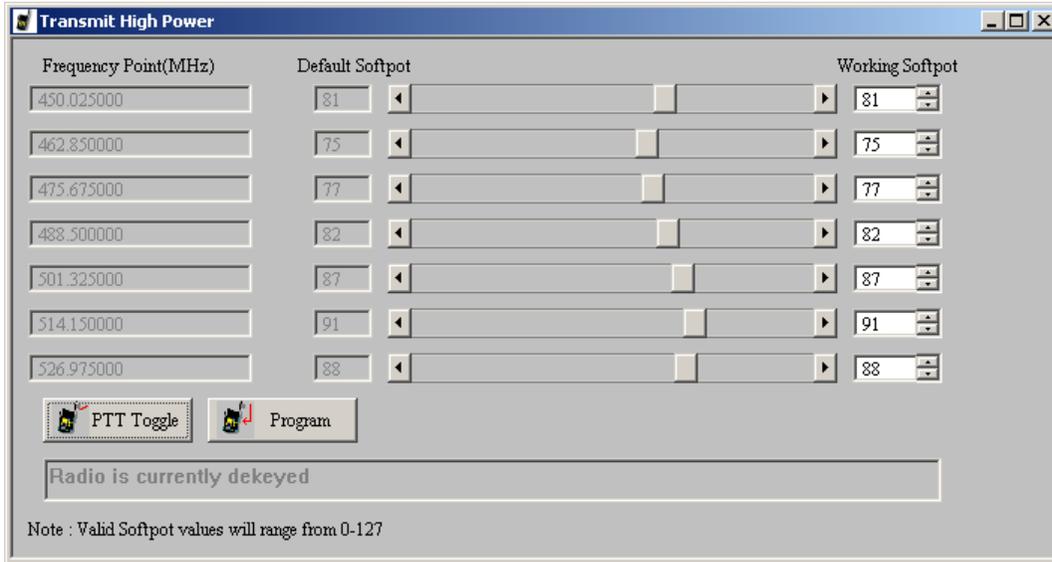


Figure 5-5. Transmit Power Window (High Power)

Table 5-3. Transmit High/Low Power Level

RF Band (MHz)	Model Number	High Power(W)	Low Power (W)
16 Channel VHF 136-162 MHz	AAH65JDC9AA2AN	5.2-5.5	1.1-1.3
32 Channel VHF 136-162 MHz	AAH65JDF9AA3AN	5.2-5.5	1.1-1.3
64 Channel VHF 136-162 MHz	AAH65JDH9AA4AN	5.2-5.5	1.1-1.3
16 Channel VHF 146-174 MHz	H65KDC9AA2AN	5.2-5.5	1.1-1.3
32 Channel VHF 146-174 MHz	H65KDF9AA3AN	5.2-5.5	1.1-1.3
64 Channel VHF 146-174 MHz	H65KDH9AA4AN	5.2-5.5	1.1-1.3
16 Channel UHF 1 403-440 MHz	H65QDC9AA1AN	4.2-4.5	1.1-1.3
32 Channel UHF 1 403-440 MHz	H65QDF9AA1AN	4.2-4.5	1.1-1.3
64 Channel UHF 1 403-440 MHz	H65QDH9AA1AN	4.2-4.5	1.1-1.3
16 Channel UHF 2 438-470 MHz	H65RDC9AA1AN	4.2-4.5	1.1-1.3
32 Channel UHF 2 438-470 MHz	H65RDF9AA1AN	4.2-4.5	1.1-1.3
64 Channel UHF 2 438-470 MHz	H65RDH9AA1AN	4.2-4.5	1.1-1.3
16 Channel UHF 3 465-495 MHz	H65SDC9AA1AN	4.2-4.5	1.1-1.3
32 Channel UHF 3 465-495 MHz	H65SDF9AA1AN	4.2-4.5	1.1-1.3
64 Channel UHF 3 465-495 MHz	H65SDH9AA1AN	4.2-4.5	1.1-1.3

#### 5.4.3.1 To Perform Transmit High Power Tuning, do the following:

1. Under the **Tx Align** menu, select **Transmit Power**, then select **High** (Figure 5-5).
2. Press **PTT Toggle**. This will key the radio up at 1st test frequency (F1).
3. Adjust the high power level to be as defined by Table 5-3. Move the slider/spin control or keying in values in the edit control (press **ENTER** to confirm your selection after typing in the softpot value).
4. Press **PTT Toggle** to dekey the radio, go to the next frequency point by selecting the slider, typing in the edit control box (press **ENTER** to confirm selection after typing in the softpot value) or toggling the softpot value using the spin control.
5. Press **PTT Toggle** again to key up the radio at the selected frequency point.
6. Repeat steps 3-5 for the remaining test frequencies (F2-7)
7. Press **Program** to store the softpot values into the radio's codeplug.
8. Exit the Transmit High Power function.
9. If the radio uses only high power channels, proceed to adjust modulation. If low power channels are used, perform Transmit Low Power Tuning as defined.

#### 5.4.3.2 To Perform Transmit Low Power Tuning, do the following: -

1. Under the **Tx Align** menu, select **Transmit Power**, and then select **Low**.
2. Press **PTT Toggle**. This will key the radio up at 1st test frequency (F1).

3. Adjust the power level to be as defined by **country power level specifications** by moving the slider/spin control or keying in values in the edit control (press **ENTER** to confirm your selection after typing in the softpot value).
4. Press **PTT Toggle** to dekey the radio, go to the next frequency point by selecting the slider, typing in the edit control box (press **ENTER** to confirm your selection) or toggling the softpot value using the spin control.
5. Press **PTT Toggle** again to key up the radio at the selected frequency point.
6. Repeat steps 3-5 for the remaining test frequencies (F2-F7).
7. Press **Program** to store the softpot values into the radio's codeplug.
8. Exit the Transmit Low Power function.

#### 5.4.4 VCO Attenuation

**Note:** Modulation Balance Tuning must be done first. The Transmit Deviation Limit softpot sets the maximum deviation of the carrier. Tuning is performed for all (12.5 kHz, 20 kHz and 25 kHz) channel bandwidths. Tuning for 25 kHz channels must be done first for all frequency points. Tuning for 12.5 and 20 kHz channels determines only the offset to the previously tuned deviation for 25 kHz tuning channel spacing. For 12.5, and 20kHz channels, only the last non-0 transmit frequency point (normally F7) is used for tuning. The 30 kHz channel bandwidths that use 5.0 kHz maximum system deviation are covered by the 25 kHz tuning.

**When using test box RLN4460:**

- Set the METER OUT toggle switch to the "MIC PORT" position
- Set the METER OUT selector switch to "MIC".
- Inject a 1 kHz tone with the levels given below for each radio model to AUDIO IN.
- Measure the level at the radio input at the AC/DC meter.

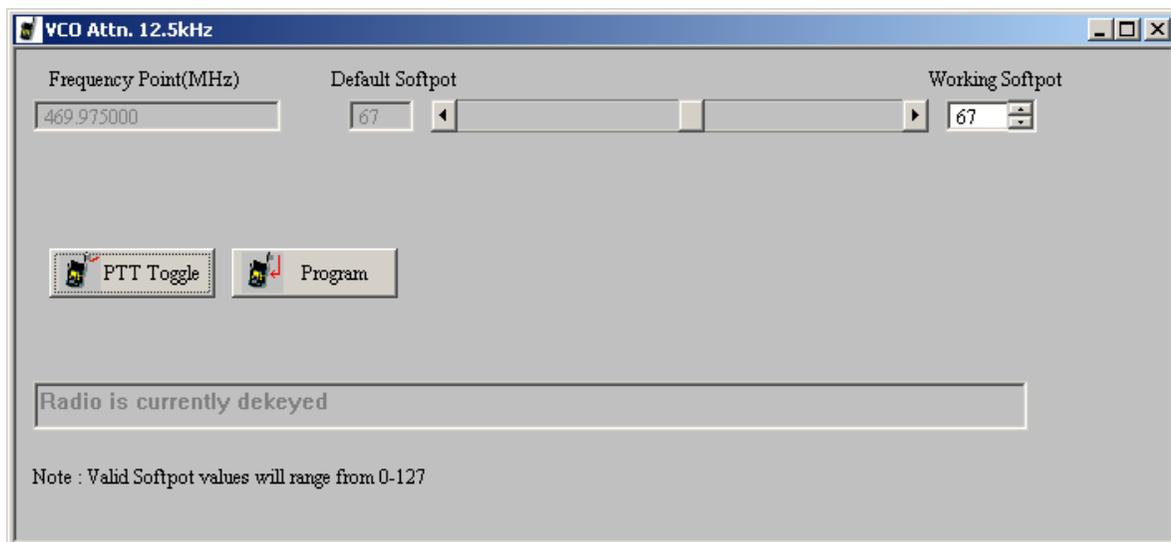


Figure 5-6. VCO Attenuation Window (12.5 kHz)

#### 5.4.4.1 VCO Attenuation 25 kHz

1. Under the **Tx Align** menu, select **VCO Attenuation 25 kHz** (Figure 5-6).
2. Begin with the lowest frequency. Select the thumb of the slider at the lowest frequency point and then press the **PTT Toggle** button to key up the radio at the corresponding frequency point. The spin control can also be toggled via its up/down arrow buttons. The softpot value can also be typed into the edit control (press **ENTER** to confirm your selection/send a softpot value).
3. **Inject 1 kHz** at an appropriate level until **2.3 V rms** is measured at the AC/DC METER (radio input) if using test box **RLN4460**.
4. Record the deviation obtained.
5. Adjust the slider; adjust the spin control or key in softpot values (press **ENTER** to confirm) for the frequency point until the deviation is within the range **specified in Table 5-4**.
6. Dekey the radio (Press the **PTT Toggle** button). Choose the next frequency, key up and repeat steps 3 to 6 until all seven tuning points are done.
7. Program the softpot value by pressing the **Program** button.
8. Exit the VCO Attn. 25 kHz function.

#### 5.4.4.2 VCO Attenuation 12.5 kHz

**Note:** **Tuning of Modulation Balance Attenuation and VCO Attenuation for 25 kHz channel bandwidth must be done first.**

1. Under the **Tx Align** menu, select **VCO Attenuation 12.5 kHz**.
2. Press **PTT Toggle** to key up the radio at the last non-0 transmit frequency point (normally F7).
3. Inject **1 kHz** at an appropriate level until **2.3 V rms** is measured at the AC/DC METER (radio input) if using test box **RLN4460**.
4. Record the deviation obtained.
5. Adjust the slider, adjust the spin control or key in softpot values (press **ENTER** to confirm) for the frequency point until the deviation is within the range **specified in Table 5-4**.
6. Press **PTT Toggle** to dekey the radio.
7. Program the softpot value by pressing the **Program** button.
8. Exit the VCO Attenuation 12.5 kHz function.

#### 5.4.4.3 VCO Attenuation 20 kHz

**Note:** **Tuning of Modulation Balance Attn. and VCO Attn. for 25 kHz channel bandwidth must be done first.**

1. Under the **Tx Align** menu, select **VCO Attenuation 20 kHz**.
2. Press **PTT Toggle** to key up the radio at the last non-0 transmit frequency point (normally F7).
3. Inject **1 kHz**: at an appropriate level until **2.3 V rms** is measured at the AC/DC METER (radio input) if using test box **RLN4460**.
4. Record the deviation obtained.
5. Adjust the slider; adjust the spin control or key in softpot values (press **ENTER** to confirm) for the frequency point until the deviation is within the range **specified in Table 5-4**.
6. Press **PTT Toggle** to dekey the radio.
7. Program the softpot value by pressing the **Program** button.
8. Exit the VCO Attn. 20 kHz function.

Table 5-4. Deviation Specifications

Band	Channel Spacing	Deviation (kHz)
UHF/VHF	25 kHz	4.40 - 4.60
UHF/VHF	12.5 kHz	2.20 - 2.30
UHF/VHF	20 kHz	3.40 - 3.60

### 5.4.5 DTMF Deviation Tuning

This tuning option controls the **Dual Tone MultiFrequency** deviation. Please note that **Modulation Balancing** and **VCO Attenuation** have to be performed prior to this tuning operation. Not doing so will result in the **wrong deviation value being obtained** while tuning the DTMF.

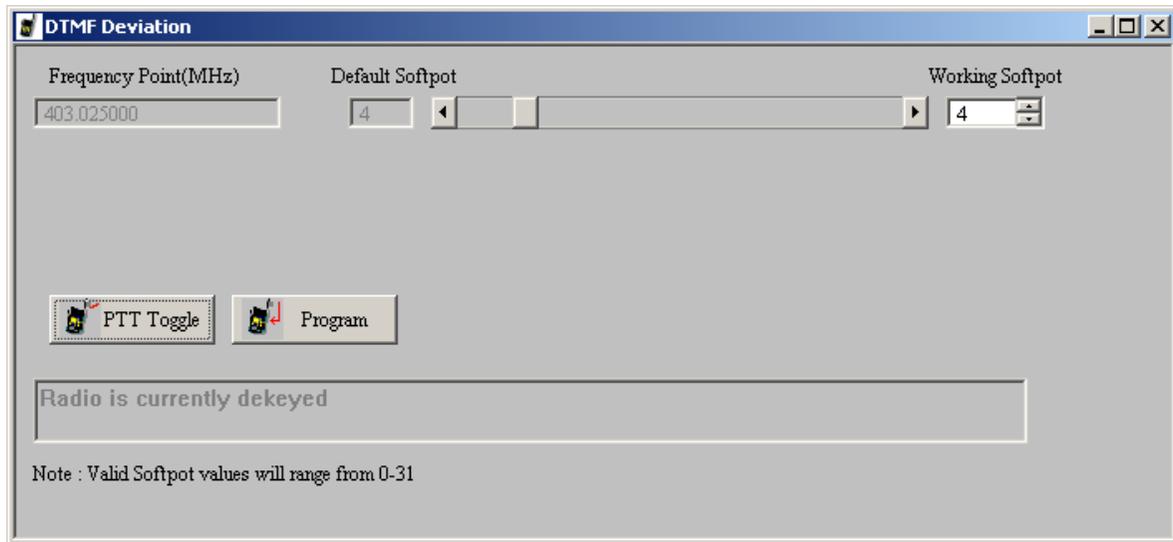


Figure 5-7. DTMF Deviation Tuning Window

1. Under **Tx Align**, select **DTMF Deviation** (Figure 5-7).
2. Press **PTT Toggle** to key the radio. Monitor the deviation obtained.
3. Adjust the slider, spin or edit control (press **ENTER** to confirm your selection/send a softpot value) until a deviation of **3.1-3.4 kHz** is obtained.
4. Press **PTT Toggle** again to dekey the radio.
5. Program the softpot value into the radio by pressing **Program**.
6. Exit the DTMF Deviation function.

### 5.4.6 MDC1200 Deviation Tuning (MDC radios only)

This tuning option controls the MDC1200 Signaling deviation. Please note that Modulation Balancing and VCO Attenuation have to be performed prior to this tuning operation. Not doing so will result in the wrong deviation value being obtained while tuning this feature.

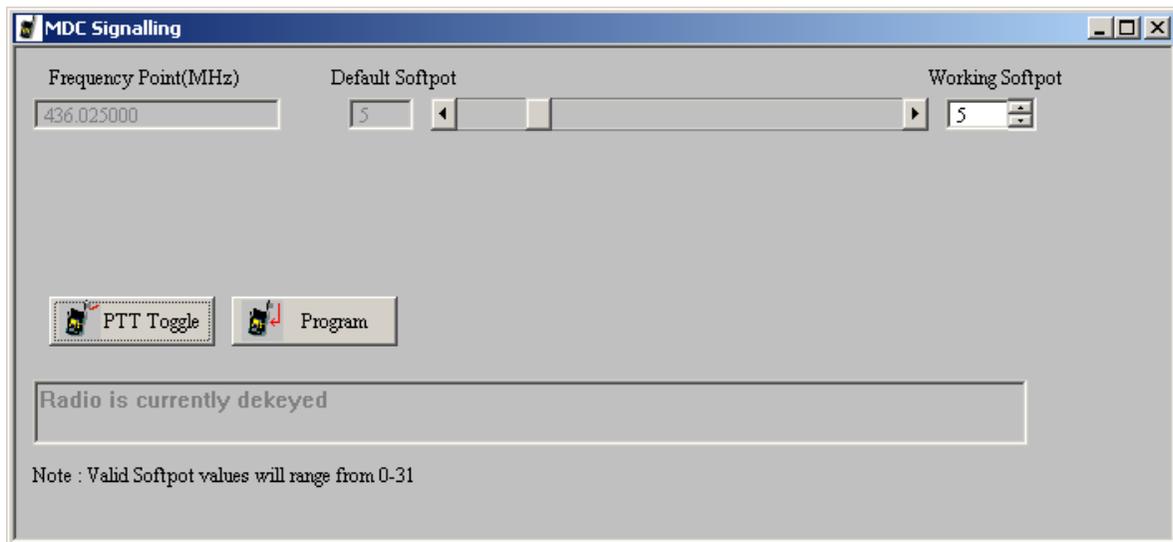


Figure 5-8. MDC1200 Deviation Tuning Window

1. Under the **Tx Align**, select **MDC1200 Signaling** (Figure 5-8).
2. Press **PTT Toggle** to key the radio up. Monitor the deviation obtained.
3. Adjust the slider, spin or edit control (press **ENTER** to confirm the selection/send a softpot value) until a deviation of **3.3-3.7 kHz** is obtained.
4. Press **PTT Toggle** again to dekey the radio.
5. Program the softpot value into the radio by pressing the **Program**.
6. Exit the MDC1200 Deviation function.

## 5.5 Receiver Tuning

The following sub-sections contain the procedures to tune the radio receiver. These procedures include:

- Rated Volume
- Squelch Tuning Front End Filter Tuning

### 5.5.1 Rated Volume Tuning

**Note:** When using test box RLN4460, the received audio output is taken from the AC/DC METER OUT terminals with the METER OUT rotary switch set to RX. The rated audio tuning procedure automatically configures the radio for 25 KHz. This means that a 3 kHz (for 25 kHz channel spacing) deviation must always be used, irrespective of the radio channel bandwidth.

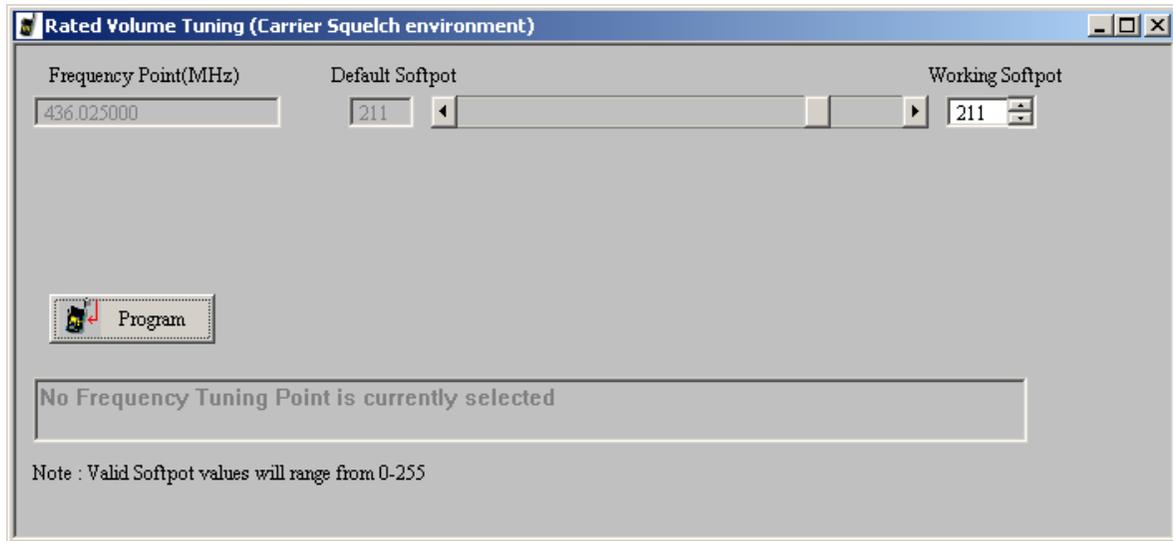


Figure 5-9. Rated Volume Tuning Window

**Perform the rated volume tuning procedure as follows:**

1. Under the **Rx Align** menu, select **Rated Volume** (Figure 5-9).
2. Inject a -47 dBm rf signal modulated with **1 kHz** tone at **3 KHz** (for 25 kHz channel spacing).
3. Adjust the softpot value by using the slider, keying in the edit box (press **ENTER** to confirm the selection or send a softpot value), or via the spin controls. Repeat this until **500 mW (3.46 V)** audio power is obtained. Rated Audio tuning is only done for 25 kHz channel spacing.
4. Press **Program** to commit the softpot value into the radio.
5. Exit the rated volume tuning function.

### 5.5.2 Squelch Tuning

- Note:**
1. Squelch tuning can only be accomplished after reference oscillator warping.
  2. When using the test box RLN4460, the received audio output is taken from the AC/DC METER OUT terminals with the METER OUT rotary switch set to RX. It is recommended that Rated Volume Tuning be performed so the the correct 10 dB SINAD level can be obtained.
  3. This tuning method is performed for multiple squelch tuning channels and multiple channel spacings.

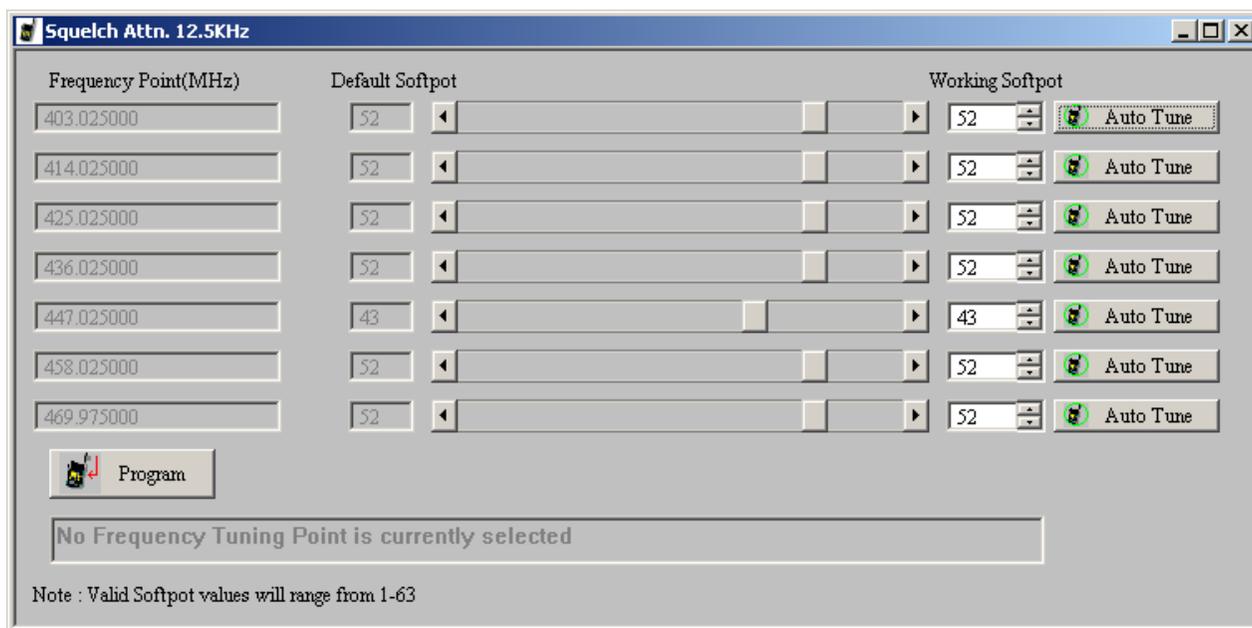


Figure 5-10. Squelch Tuning Window

#### 5.5.2.1 Manual Squelch Tuning

Perform the squelch tuning procedure as follows:

1. Under the Rx Align menu, select **Squelch Attenuation**. Select **Squelch Attenuation 12.5 kHz** or **Squelch Attenuation 25 kHz** Channel Spacing variations (Figure 5-10).
2. Apply an RF signal modulated with a 1 kHz tone at 60% rated deviation listed in Table 5-5 for current frequency point (F1 being the first) of 10 dB SINAD. That is, adjust the reference signal level until 10 dB SINAD is obtained at the SINAD meter. Squelch tuning can either be done manually (see Manual Squelch Tuning for procedure) or by Auto Squelch (see Manual Squelch Tuning for procedure). To obtain 10 dB, unmute the radio first by dragging the corresponding slider value to 1.

Table 5-5. Squelch Deviation Values

Channel Spacing	Rated System Deviation	Signal Generator Deviation
25 kHz	5.0 kHz	3.0 kHz
12.5 kHz	2.5 kHz	1.5 kHz
20 kHz	4.0 kHz	2.4 kHz

3. Set softpot to its maximum value to mute the radio.
4. Adjust the softpot value by using the slider, keying in the edit box or using the spin controls. Press **ENTER** to confirm the selection or use the spin controls. Do this until the radio is totally unmuted. Verify the squelch closing by inputting a signal level of **4 dB** lower than that of the **10 dB SINAD** level.
5. Repeat Steps 2 through 4 of Manual Squelch Tuning, for frequency points F2-F7.
6. Press **Program** to commit the softpot values into the radio.
7. Exit the Squelch Tuning function.

### 5.5.2.2 Auto Tune

**Note:** Proceed with caution since this procedure automatically programs the softpot value into your radio.

When you press the **Auto Tune** button, the radio automatically returns an optimum squelch value.

After you press the button, the radio may need time to produce an optimal setting for the squelch attenuation. The following steps describe the auto tune process:

1. Select current frequency point (F1 being the first), then press **Auto Tune**.
2. Repeat Steps 3-4 of the Manual Squelch Tuning section for frequency points F2-F7.

**Note:** Auto Tune will automatically update your radio's codeplug. Please be careful when using it.

### 5.5.3 RSSI System Level Tuning

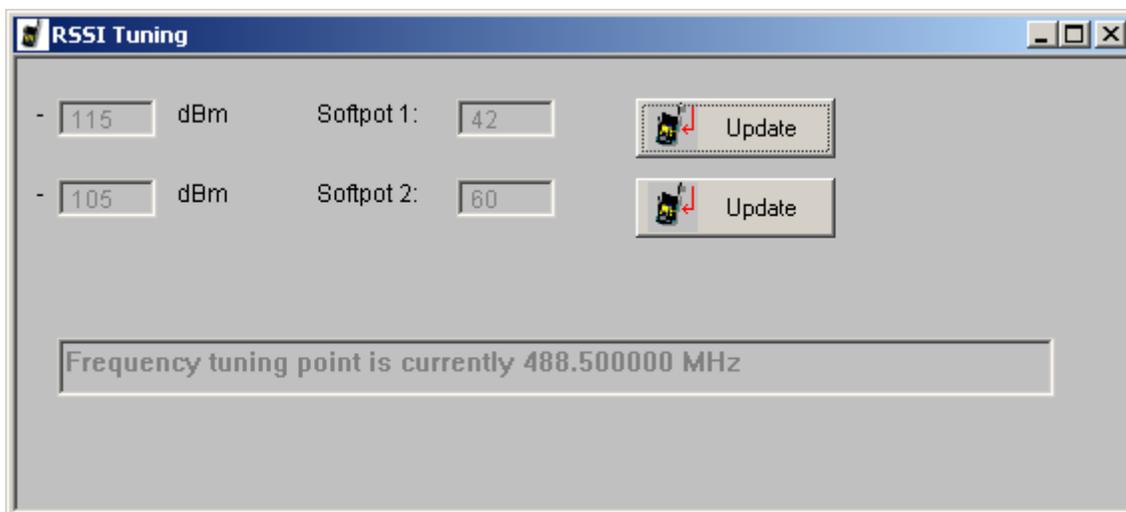


Figure 5-11. RSSI Tuning

1. Under the **Rx Align** menu, select **RSSI Tuning** (Figure 5-11).
2. Inject an on channel signal to the radio at **-47 dBm** at the frequency listed. Modulate the signal with a 1 kHz tone at 60% deviation (3 kHz) to verify that the radio is receiving the desired frequency. RSSI tuning is only done at 25 kHz channel spacing.
3. Change the level to the defined dBm level in the softpot box. (**-115 dBm or -105 dBm**).
4. Press the **Update** button for the softpot to be tuned to the RSSI value correlating to the applied level. The programmed RSSI value will be displayed.

5. Adjust the input level to reflect the next softspot value. Repeat steps 3 and 4 to tune the next value.

### 5.5.4 RSSI Display Tuning

1. Under the **Rx Align** menu, select **RSSI Display Tuning**.
2. Inject an on channel signal to the radio at **-47 dBm** at the frequency listed. Modulated the signal with a 1 kHz tone at 60% deviation (3 kHz) to verify the radio is receiving the desired frequency. RSSI tuning is only done at 25 kHz channel spacing.
3. Change the level to that which is needed to produce 12 SINAD (**approximately -119 dBm**).
4. Press the **Update** button for the softspot to be tuned to the RSSI value correlating to the applied level. The programmed RSSI value will be displayed.
5. Adjust the input level to **-90 dBm**.
6. Press the **Update** button for the softspot to be tuned to the RSSI value correlating to the applied level. The programmed RSSI value will be displayed.

## 5.6 Utilities

### 5.6.1 Program Serial No.

The Program Serial No. option under the Utilities heading allow the radio serial number to be programmed. However, the serial number of a particular radio can only be programmed if it was originally blank. If the serial number of the radio was not blank, then access to the screen will be denied.

### 5.6.2 Temp Comp Data Read

The **Temp Comp Data Read** command will read the Temp Compensation data out from the radio and then display it on a dialog screen. The data displayed is in 4-byte Hexadecimal form, i.e. 0-9,A-F. e.g. A5 E9 33 3A.

### 5.6.3 Temp Comp Data Write

The **Temp Comp Data Write** command will write user Temp Compensation data into the radio. The user will then be presented with a dialog screen of the temp comp data to commit/write into the radio. The Temp Comp data can be keyed in manually by the user as 4-byte Hexadecimal form.

## 5.7 Radio-to-Radio Cloning

1. Cloning is the process of copying the content of one radio (source radio) into another radio (destination radio). Radio content refers to system-type features such as frequency, squelch type options, trunking, etc.

**Note:** The source radio's serial number cannot be blank.

Radio functionality inherent in one radio cannot be cloned to another radio that does not contain the same functionality. Tuning and alignment information are not transferable and are not affected by cloning.

1. Signaling Identification Numbers (IDs) are duplicated in the cloning process. Unique IDs may be assigned with the CPS.

**Note:** Unsuccessful cloning attempts generates a continuous tone and may be an indication that the destination radio's codeplug is corrupted.

**Procedure:**

1. Turn source and target radios off.
2. Connect cloning cable (AAPMKN4003) to the side connector of both radios.
3. Turn on the destination radio.
4. Press and hold the two side buttons at the same time on the source radio and then power up the source radio (Figure 5-12). Both radios produce a “clone-entry” tone.
5. Release both side buttons, 1 and 2.
6. When cloning is completed, the source radio produce’s a “clone-exit” tone and both the source and destination radios reset.
7. Turn both radios off.
8. Disconnect the cloning cable from both radios and turn them on for normal operation.

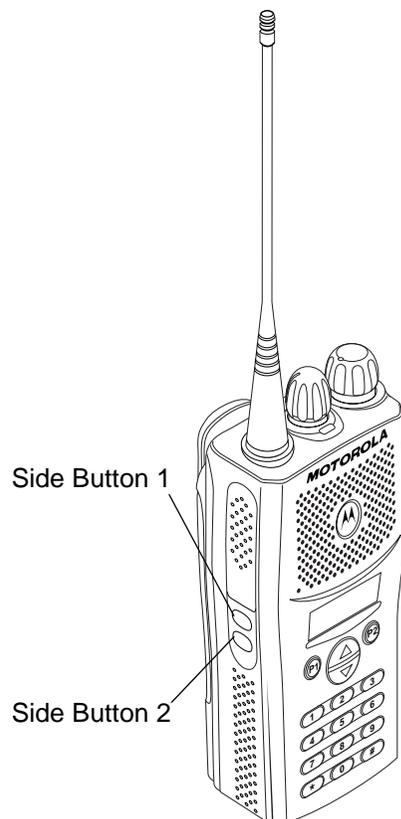


Figure 5-12. Side Button Locations

---

# Chapter 6 Full Keypad Model Disassembly and Re-assembly

## 6.1 Introduction

This section provides details about the following:

- Preventive maintenance (inspection and cleaning)
- Safe handling of CMOS and LDMOS devices
- Disassembly and re-assembly of the radio
- Repair procedures and techniques

## 6.2 Preventive Maintenance

The radios do not require a scheduled preventive maintenance program; however, periodic visual inspection and cleaning is recommended.

### 6.2.1 Inspection

Check that the external surfaces of the radio are clean, and that all external controls and switches are functional. It is not recommended to inspect the interior electronic circuitry.

### 6.2.2 Cleaning Procedures

The following procedures describe the recommended cleaning agents and the methods to be used when cleaning the external and internal surfaces of the radio. External surfaces include the front cover, housing assembly and battery case. These surfaces should be cleaned whenever a periodic visual inspection reveals the presence of smudges, grease, and/or grime.

**Note:** Internal surfaces should be cleaned only when the radio is disassembled for service or repair.

The only recommended agent for cleaning the external radio surfaces is a 0.5% solution of a mild dishwashing detergent in water. The only factory recommended liquid for cleaning the printed circuit boards and their components is isopropyl alcohol (70% by volume).



**CAUTION:** The effects of certain chemicals and their vapors can have harmful results on certain plastics. Avoid using aerosol sprays, tuner cleaners, and other chemicals.

#### Cleaning External Plastic Surfaces

Apply the 0.5% detergent-water solution sparingly with a stiff, non-metallic, short-bristled brush to work all loose dirt away from the radio. Use a soft, absorbent, lintless cloth or tissue to remove the solution and dry the radio. Make sure that no water remains entrapped near the connectors, cracks, or crevices.

---

### Cleaning Internal Circuit Boards and Components

Isopropyl alcohol (70%) may be applied with a stiff, non-metallic, short-bristled brush to dislodge embedded or caked materials located in hard-to-reach areas. The brush stroke should direct the dislodged material out and away from the inside of the radio. Make sure that controls or tunable components are not soaked with alcohol. Do not use high-pressure air to hasten the drying process since this could cause the liquid to collect in unwanted places. After completing the cleaning process, use a soft, absorbent, lintless cloth to dry the area. Do not brush or apply any isopropyl alcohol to the frame, front cover, or back cover.

**Note:** Always use a fresh supply of alcohol and a clean container to prevent contamination by dissolved material (from previous usage).

## 6.3 Safe Handling of CMOS and LDMOS Devices

Complementary metal-oxide semiconductor (CMOS) devices are used in this family of radios, and are susceptible to damage by electrostatic or high voltage charges. Damage can be latent, resulting in failures occurring weeks or months later. Therefore, special precautions must be taken to prevent device damage during disassembly, troubleshooting, and repair.

Handling precautions are mandatory for CMOS circuits and are especially important in low humidity conditions. DO NOT attempt to disassemble the radio without first referring to the following CAUTION statement.



**CAUTION:** This radio contains static-sensitive devices. Do not open the radio unless you are properly grounded. Take the following precautions when working on this unit:

- Store and transport all CMOS devices in conductive material so that all exposed leads are shorted together. Do not insert CMOS devices into conventional plastic “snow” trays used for storage and transportation of other semiconductor devices.
- Ground the working surface of the service bench to protect the CMOS device. We recommend using the Motorola Static Protection Assembly (part number 0180386A82), which includes a wrist strap, two ground cords, a table mat, and a floor mat.
- Wear a conductive wrist strap in series with a 100k resistor to ground. (Replacement wrist straps that connect to the bench top covering are Motorola part number RSX-4015.)
- Do not wear nylon clothing while handling CMOS devices.
- Do not insert or remove CMOS devices with power applied. Check all power supplies used for testing CMOS devices to be certain that there are no voltage transients present.
- When straightening CMOS pins, provide ground straps for the apparatus used.
- When soldering, use a grounded soldering iron.
- If at all possible, handle CMOS devices by the package and not by the leads. Prior to touching the unit, touch an electrical ground to remove any static charge that you may have accumulated. The package and substrate may be electrically common. If so, the reaction of a discharge to the case would cause the same damage as touching the leads.

## 6.4 Disassembling and Re-assembling the Radio — General

Since these radios may be disassembled and re-assembled with the use of only four (board to casting) screws, it is important to pay particular attention to the snaps and tabs, and how parts align with each other.

The following tools are required for disassembling the radio (see Chapter 4 for a list of service aids):

- Knob remover/chassis opener
- Penknife-size screwdriver
- TORX™ T6 screwdriver
- Scribe

If a unit requires more complete testing or service than is customarily performed at the basic level, send this unit to a Motorola Authorized Service Center. See Appendix B for a list of authorized service centers.

The following disassembly procedures should be performed only if necessary:

- Chassis Disassembly
- Speaker Disassembly
- PTT Disassembly

### 6.4.1 Radio Disassembly — Detailed

#### 6.4.1.1 Front Cover From Chassis Disassembly

1. Turn off the radio.
2. Remove the battery (Figure 6-1):
  - a. Slide the battery latch into the unlock position. Disengage by pushing downward and holding the latch towards the front of the radio.
  - b. With the battery latch disengaged, slide the battery down from the top of the radio about 1/2 in. Once the battery is free from the battery rails, lift it directly away from the radio.
  - c. Remove the battery from the radio.

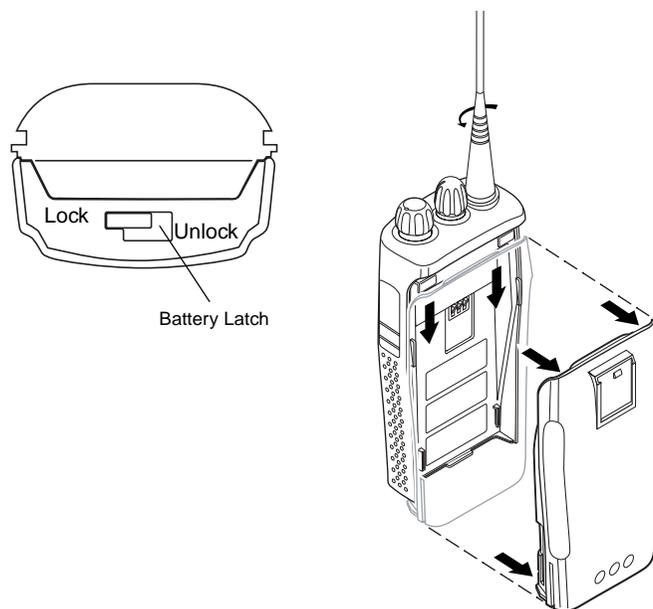


Figure 6-1. Battery Removal

3. Remove the antenna.
4. Pry off the volume and channel selector knobs from their shafts using the knob removal/chassis opener tool (Motorola part # 6686533Z01). (Figure 6-2).

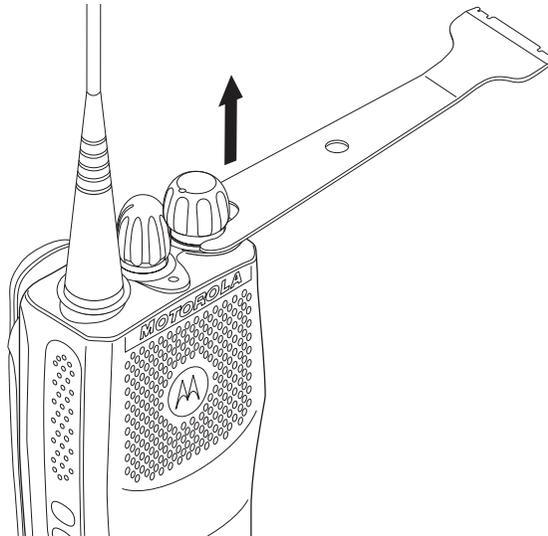


Figure 6-2. Antenna and Knob Removal

**Note:** Both knobs slide on and off. However the knobs are designed to fit very tightly on the shaft.

5. Separate the chassis from the front housing assembly by using the knob remover/chassis opener tool. Place the broad side of the opener into the slots located at the base of the radio (Figure 6-3). Press the handle on the opener downwards. This pressing action forces the thin inner plastic wall toward the base of the radio, releasing the two chassis base tabs.

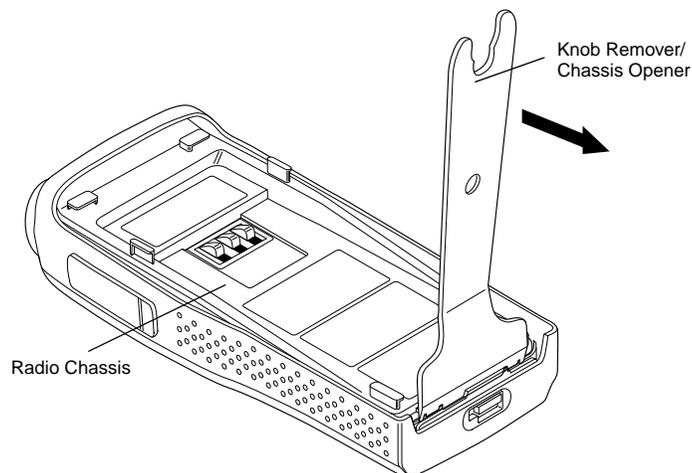


Figure 6-3. Chassis Removal




**CAUTION:** Marring the front cover O-ring sealing area will prevent the radio from sealing properly. If the O-ring is damaged, replace it with a new one.

6. Pull the chassis assembly out of the front cover only until the volume and channel selectors shaft just clear the top of the case. (Figure 6-4).


**Note:** The speaker wire assembly microphone wire assembly and keypad flex cable connector connecting the front housing assembly and the chassis prevent the two units from being completely separated

7. Rotate the bottom of the chassis up about 20° to disconnect the keyboard flex cable connector. Push down 2 end tabs to release flex connector at the bottom of the chassis.

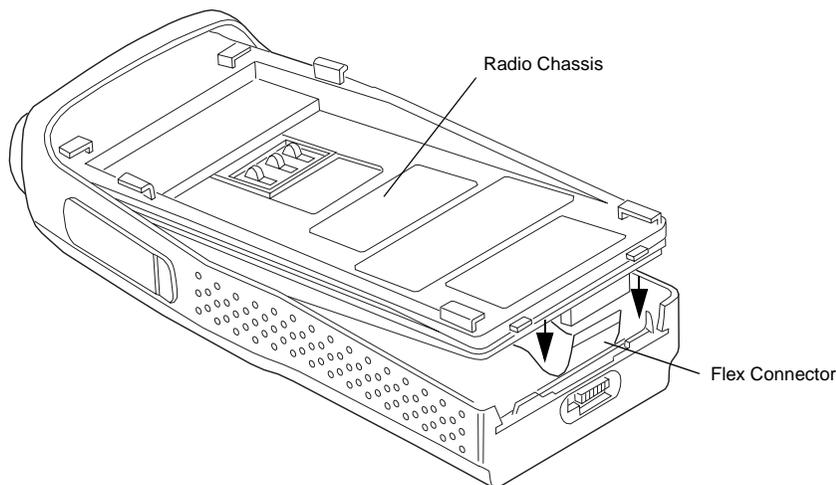

*Figure 6-4. Keyboard Flex Connection*

8. Rotate the chassis counterclockwise out of the housing and position next to the housing. Take care not to damage the speaker and microphone wires that are still connected to the chassis ([Figure 6-5](#)).

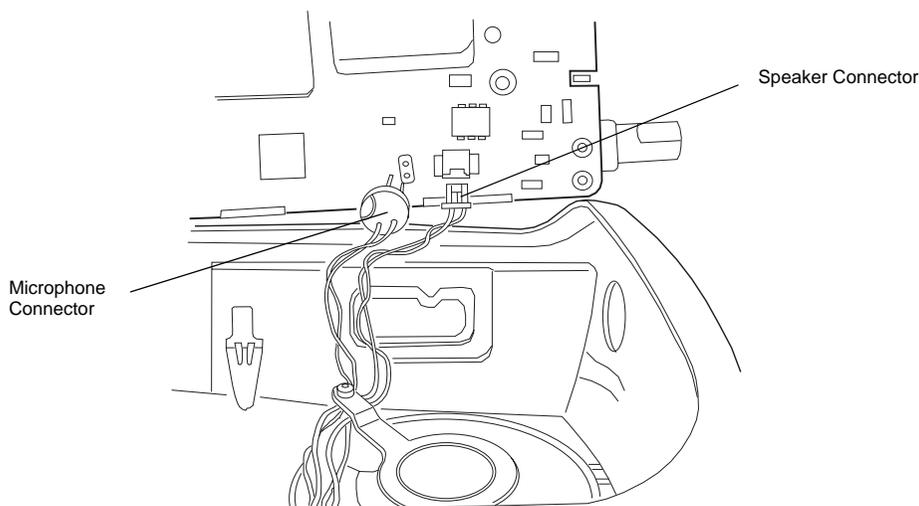


*Figure 6-5. Microphone and Speaker Connections*


9. Unplug the speaker wire assembly from the 2-pin connector on the chassis.
10. Unplug the microphone wire assembly from the socket on the chassis.
11. Move the chassis away from the housing and place on a clean work surface.

### 6.4.1.2 Dust Cover Disassembly


1. Gently pry the top of the dust cover away from the body of the radio. (See [Figure 6-6](#)).
2. Rotate the dust cover 90° in a counterclockwise direction to allow the key to be removed.
3. Separate the dust cover away from the body of the radio. The dust cover key is fragile; apply only light pressure to the key while removing the dust cover.

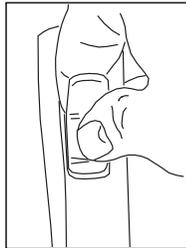

a. Pry dust cover from body.

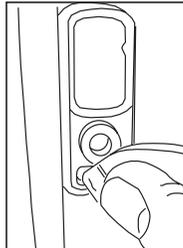

b. Rotate dust cover 90° to allow key to be removed.

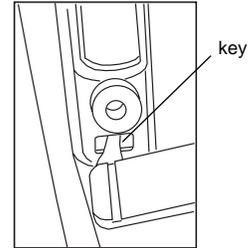


c. Separate dust cover from body.

*Figure 6-6. Dust Cover Disassembly*

### 6.4.1.3 Speaker and Microphone Disassembly

**Note:** The speaker is held in place with a retainer bracket. Be careful not to damage the speaker when removing the retainer bracket.

1. Remove the screw from the speaker retainer using a T6 Torx screwdriver ([Figure 6-7](#)).
2. Lift the retainer off the speaker, sliding end of retainer out of corner slot on the housing.
3. Lift the speaker out from the front housing.
4. Carefully lift microphone assembly out of housing.

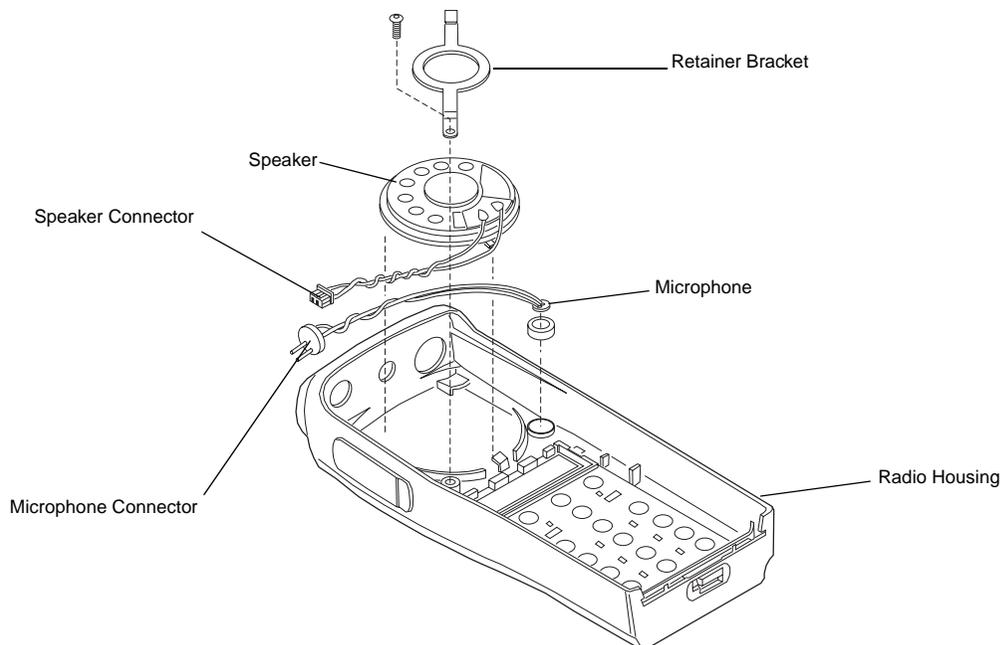

*Figure 6-7. Removal Speaker-Microphone Assembly*

#### 6.4.1.4 Keyboard Removal

1. Carefully pry the four keypad retainer locking tabs free from the housing using a scribe.

**Note:** Use care when removing the keypad retainer to prevent damage to the keyboard flex cable.

2. Lift the keypad retainer up from the bottom and slide the top tabs out.
3. Slide keypad retainer out of housing carefully to prevent damage to flex cable.



**CAUTION:** Refer to the CMOS CAUTION paragraph (6.3) before removing the main board. Be sure to use Electrostatic Discharge protection when handling circuit boards.

4. Lift LCD keypad board out of housing (Figure 6-8).
5. Lift keypad out of housing.

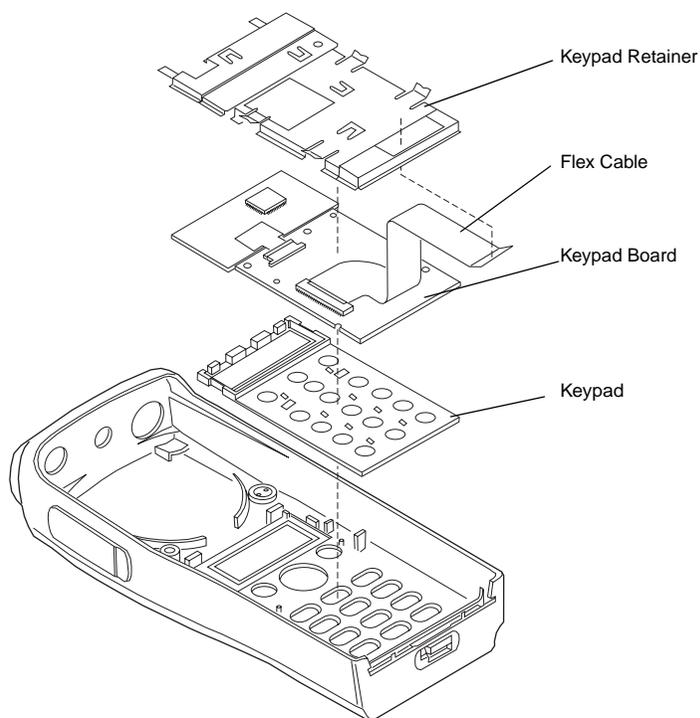


Figure 6-8. Keypad Removal

#### 6.4.1.5 PTT Disassembly

1. If required, the PTT (Figure 6-9) can be disassembled using a small screwdriver, as follows:
  - a. Insert the tip of a small screwdriver underneath the PTT and unsnap the top tab.
  - b. Pry the PTT away from the radio housing.
  - c. Inspect the two hooks. If bent or broken, the PTT must be replaced.
  - d. Remove the PTT seal.

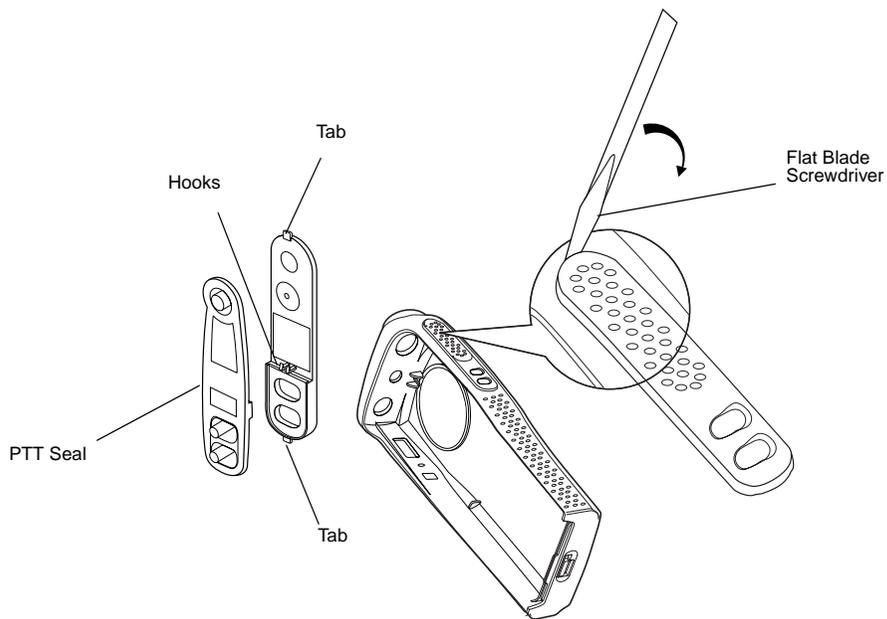


Figure 6-9. PTT Removal

#### 6.4.1.6 Chassis Disassembly



**CAUTION:** Refer to the CMOS CAUTION paragraph (see 3.3) before removing the main board. Be sure to use Electrostatic Discharge protection when handling circuit boards.

1. Remove the O-ring.
2. Use a Torx™ screwdriver with a T6 bit to remove the four screws (Figure 6-10) holding the main board to the chassis.

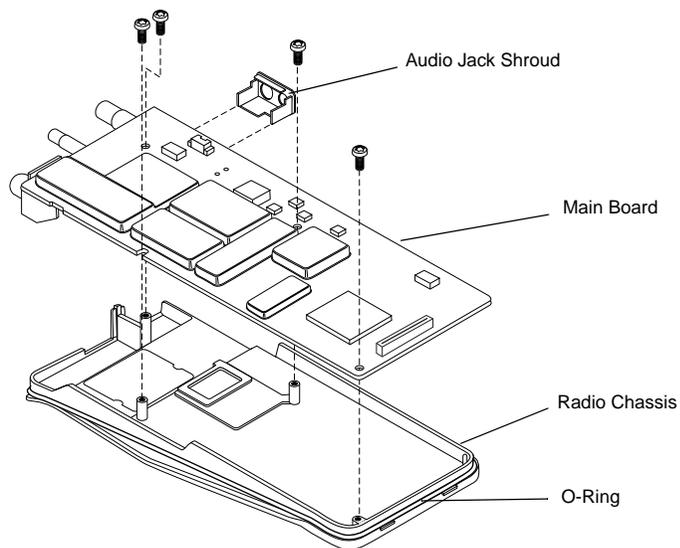


Figure 6-10. Removal of Main Board from Chassis

3. The audio jack shroud can be removed from the main board.

4. Lift the main board from the chassis ([Figure 6-10](#)).
5. Remove the battery contact seal.


## 6.4.2 Radio Re-assembly - Detailed

### 6.4.2.1 Dust Cover Re-assembly

1. Insert the tail of the dust cap into the bottom hole of the audio jacks housing opening ([Figure 6-11](#)).
2. Press the dust cap until the tail is fully into the hole.

**Note:** Make sure the dust cap is placed between the keypad retainer mounting post and the side wall of the radio.

3. Twist the dust cap counter-clockwise until the cap is seated properly onto the recess.
4. Press the cap again to ensure it fully covers the opening for the audio jack.

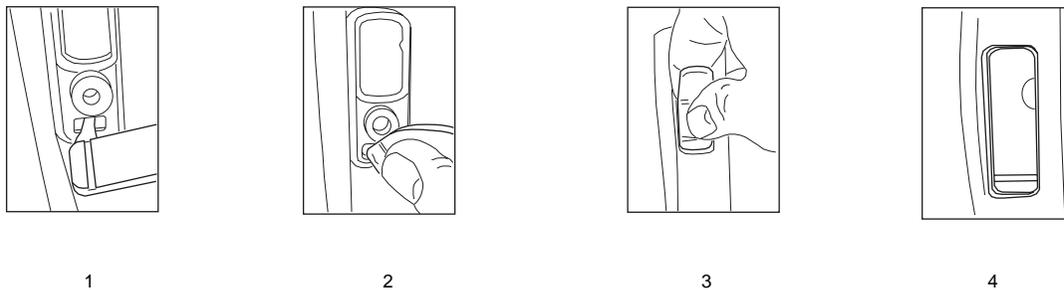

*Figure 6-11. Dust Cap Re-assembly*

### 6.4.2.2 Microphone and Speaker Re-assembly

1. Check that the mic and speaker felts are in position and not damaged. If damaged replace felts.
2. Insert the microphone sub-assembly into the microphone boot.
3. 3. Insert the Boot and microphone sub-assembly into the microphone recess in the housing and route wires as shown in [Figure 6-12](#).

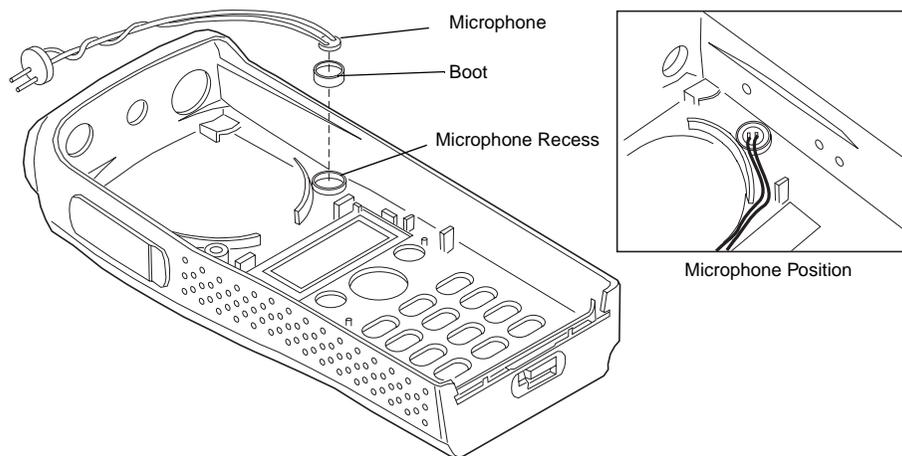


Figure 6-12. Microphone Re-assembly

4. Locate the speaker tab and align it with the tab opening in the front housing (Figure 6-13).
5. Insert the speaker tab into the speaker recess in the housing. Ensure the speaker is seated flush in the housing.

**Note:** Make sure the speaker and microphone wires are routed tightly between the speaker basket and the housing post.

6. Insert one end of the speaker retainer into the slot in the front housing (See Figure 6-13).

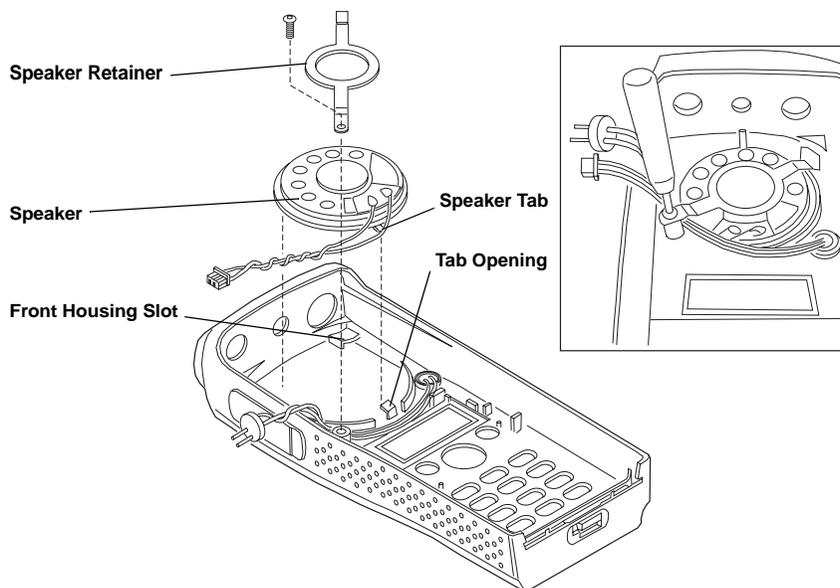


Figure 6-13. Speaker Re-assembly

**Note:** When fastening the speaker retainer screw, make sure the wires are out of the way to prevent pinching by the retainer.

7. Install the retainer screw using a T6 Torx screwdriver. Torque to 2.3 - 2.5 lb/in.

### 6.4.2.3 Keypad and LCD/Keyboard Re-assembly

1. Attach the flex cable from the LCD module to the keyboard, if not already attached ([Figure 6-15](#)).
2. Remove protective mylar from window and from keypad, if present.
3. Install the new keypad into the housing. Use the two housing posts for keypad alignment ([Figure 6-14](#)).

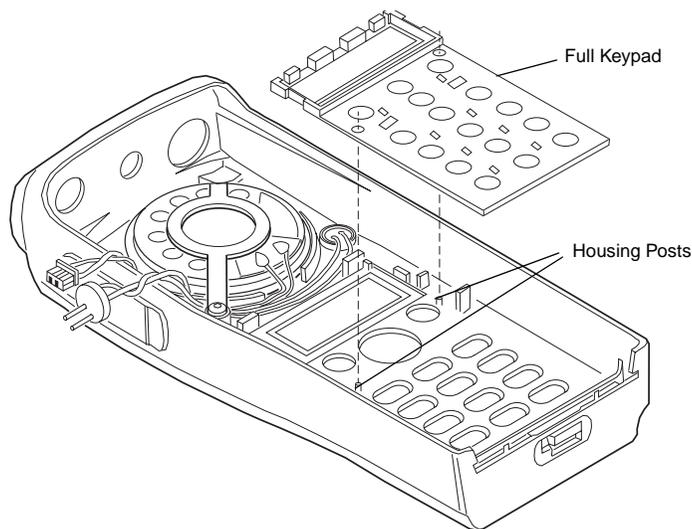


Figure 6-14. Keypad Re-assembly

4. Remove mylar from LCD if present.



**CAUTION:** Make sure the microphone and speaker wires are not trapped under the LCD module.

5. Install the LCD/Keypad sub-assembly into the housing ([Figure 6-15](#)).

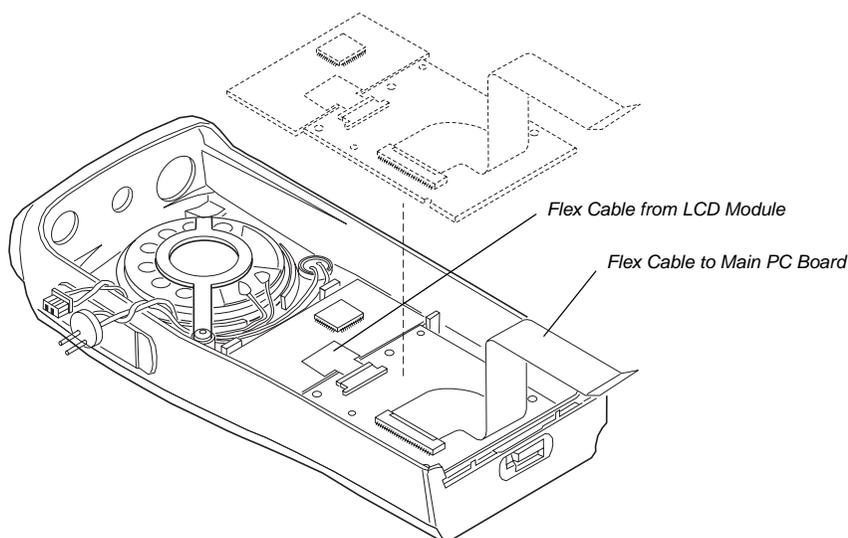


Figure 6-15. LCD/Keypad Board Re-assembly

6. Attach the flex cable into the connector on the keypad board, if not already connected.
7. Bend the flex cable as shown (Figure 6-15).

#### 6.4.2.4 Keyboard Retainer Re-assembly

1. Insert the flex cable through the slot at the bottom of the keyboard retainer (Figure 6-16).

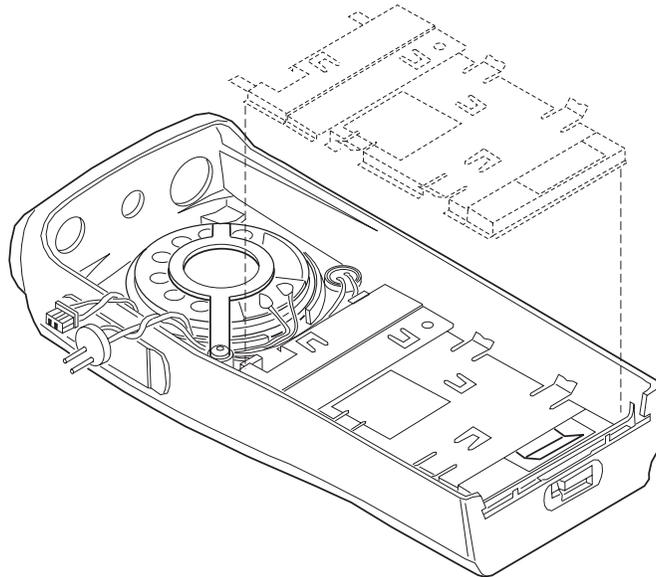


Figure 6-16. Keyboard Retainer Re-assembly

2. Insert the two top tabs of the keyboard retainer into the two tab retainers located on each side of the speaker in the front housing (Figure 6-16).
3. Press the four keypad retainer locking tabs into the housing.
4. Push the speaker and microphone wires into the top left hand corner of the housing.

#### 6.4.2.5 Chassis Assembly/Re-assembly

1. Replace the battery contact seal (if necessary) surrounding the battery contact (Figure 6-17).
2. Remove the old Interface Pad from the chassis by scraping off the pad and adhesive with a straight razor. Use rubbing alcohol and a cloth to completely remove the adhesive from the chassis surface. With the chassis clean and dry, add a new Interface Pad to the chassis.
3. Place the main circuit board straight down on top of the chassis with the frequency and volume switches facing down (Figure 6-17).

**Note:** Be sure the battery contact seal protrudes through the chassis and is not pinched under the chassis.

4. Use the T6 Torx screwdriver to fasten the screws holding the main board to the chassis. Tighten to 3.7 - 3.9 in/lb.
5. Replacing the O-ring.
  - a. If you have the older chassis (2786389Z01) use the older O-ring (3286431Z02). Position the O-ring in the top groove by the volume/frequency switches. Stretch the O-ring to place it into the retaining groove at the bottom end of the chassis.

- b. If you have the newer chassis (2786389Z02) use the newer O-ring (3286431Z05). Position the O-ring with the plug on the right side (speaker connector side). Push the plug all the way into the chassis slot until it is touching the chassis flange. Repeat for the left side. Stretch the O-ring to place it into the retaining groove at the top and bottom end of the chassis.
6. Check that the O-ring is not twisted and being held by the top and bottom chassis grooves.

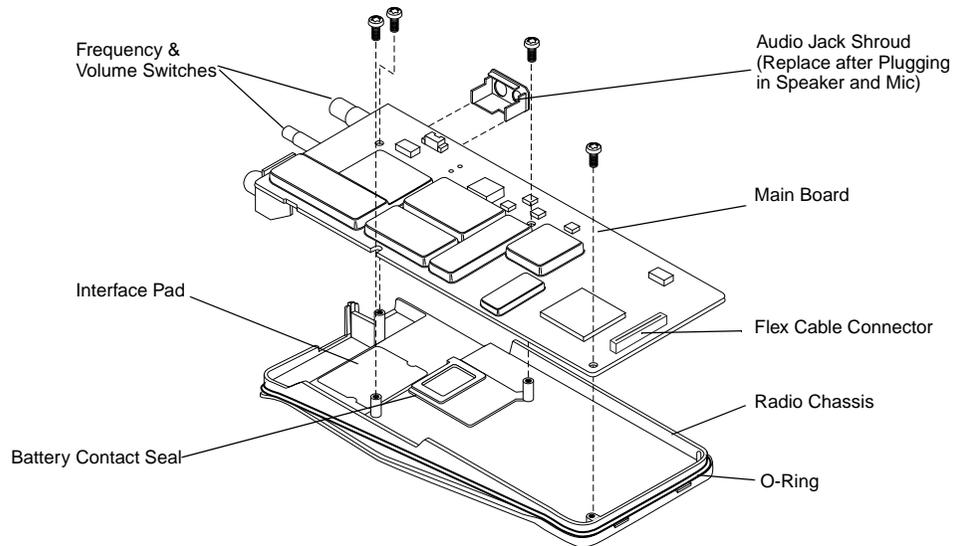


Figure 6-17. Main Board onto Chassis Re-assembly

#### 6.4.2.6 Chassis and Front Cover Re-assembly

1. Dress and connect the speaker wires..

**Note:** Care should be taken when dressing the speaker and microphone wires to avoid pinching them between the speaker magnet and shield, or between the accessory connector and housing.

**Note:** Ensure that the plug orientation is correct with the exposed pins in the wire casing facing upward and fully plugged in.

- a. Connect the speaker wire assembly into the 2-pin connector on the main board and bend the wires at the board connector so the wires are positioned toward the top of the radio (Figure 6-18).
- b. Connect the microphone wire assembly into the two hole socket on the main board and bend the wires at the board connector so the wires are positioned toward the top of the radio (Figure 6-18).
- c. Slide the audio jack shroud onto accessory connector (Figure 6-17).

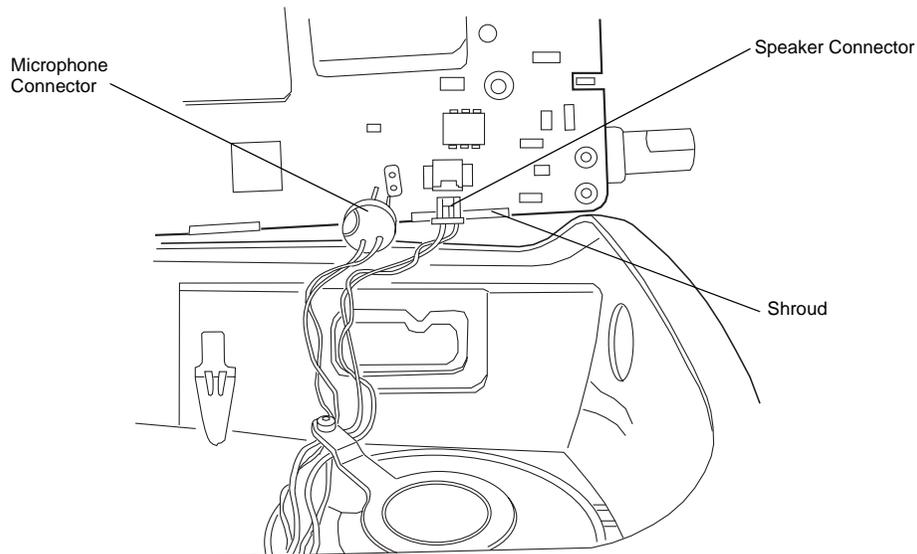


Figure 6-18. Microphone and Speaker Wires Re-assembly

2. Position the radio (Figure 6-19), and reconnect the flex connector from the keyboard into the connector located on the bottom of the main board, pushing up the 2 end tabs.
3. Slide the volume potentiometer and frequency switch shafts into their respective holes in the front cover. Look through the accessory connector opening to make certain that the wires are not pinched, between shroud and housing.

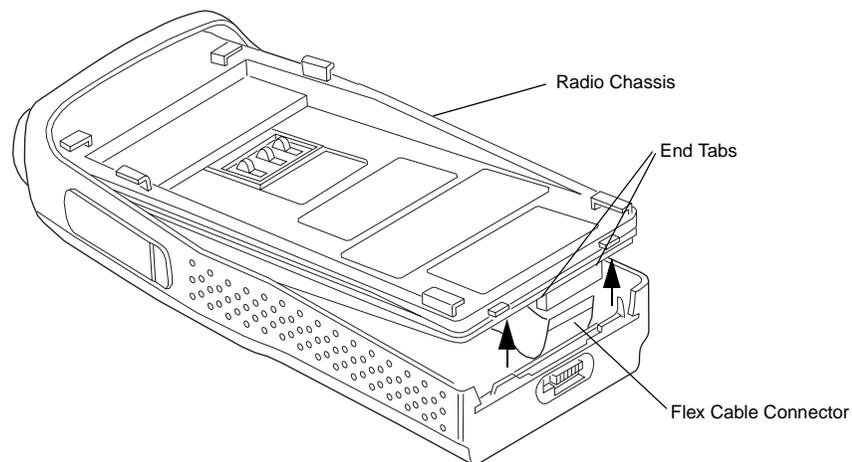


Figure 6-19. Keyboard Flex Cable Connection

4. Push the topside of the board chassis upward until it touches the housing end. Before snapping the board into the housing, perform the following checks:
  - a. Open the dust cap and ensure the wires are not pinched between the shroud and housing.
  - b. Ensure the O-ring is seated in the groove.
  - c. Ensure that the bottom side of the dust cap is fully pressed into the housing before the snapping the board into place.

5. Snap chassis assembly completely into the top of the front cover (Figure 6-20) until it settles in place.


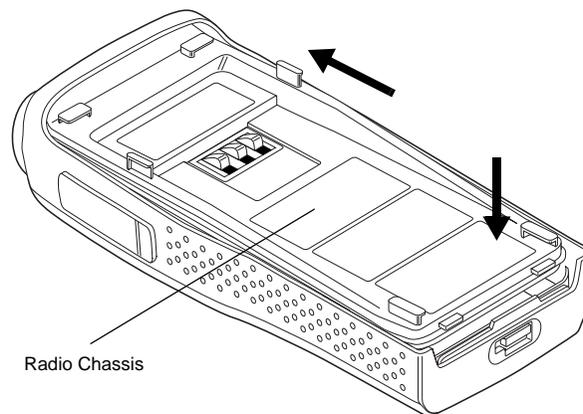


Figure 6-20. Fastening the Chassis

6. Make sure the O-ring is properly seated. If the O-ring seal is pinched, separate the chassis from the housing using the knob removal/chassis opener and dress O-ring properly.
7. Snap the bottom of the chassis into the front cover.
8. Check that O-ring is visible at the corners.
9. Re-assemble the knobs, antenna, and battery.

#### 6.4.2.7 PTT Re-assembly

1. Place the PTT seal over the ridge around the top hole. Press down to seat the seal around the ridge.
2. Place the bottom tab in the slot inside the front housing PTT opening. Slightly slide down the PTT and bow it by placing one finger under the middle of the PTT, so that the top tab can be aligned and inserted into the top slot (Figure 6-21a).
3. Press the PTT assembly against the front cover opening (Figure 6-21b).

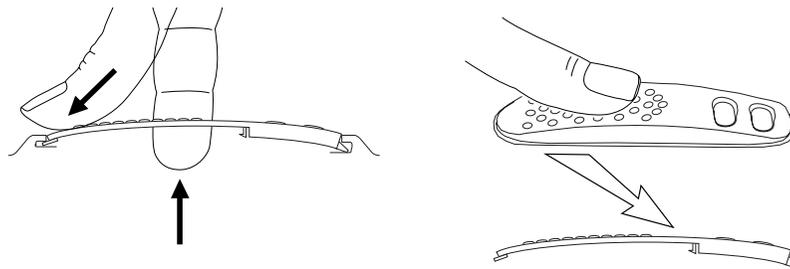

a. Place bottom tab into bottom slot.  
Place top tab into top slot.

b. Push down on PTT toward bottom  
of radio so hooks do not get crushed.

Figure 6-21. PTT Re-assembly

## 6.5 Mechanical View and Parts List

### 6.5.1 PR400 Full-Keypad Exploded View and Parts List

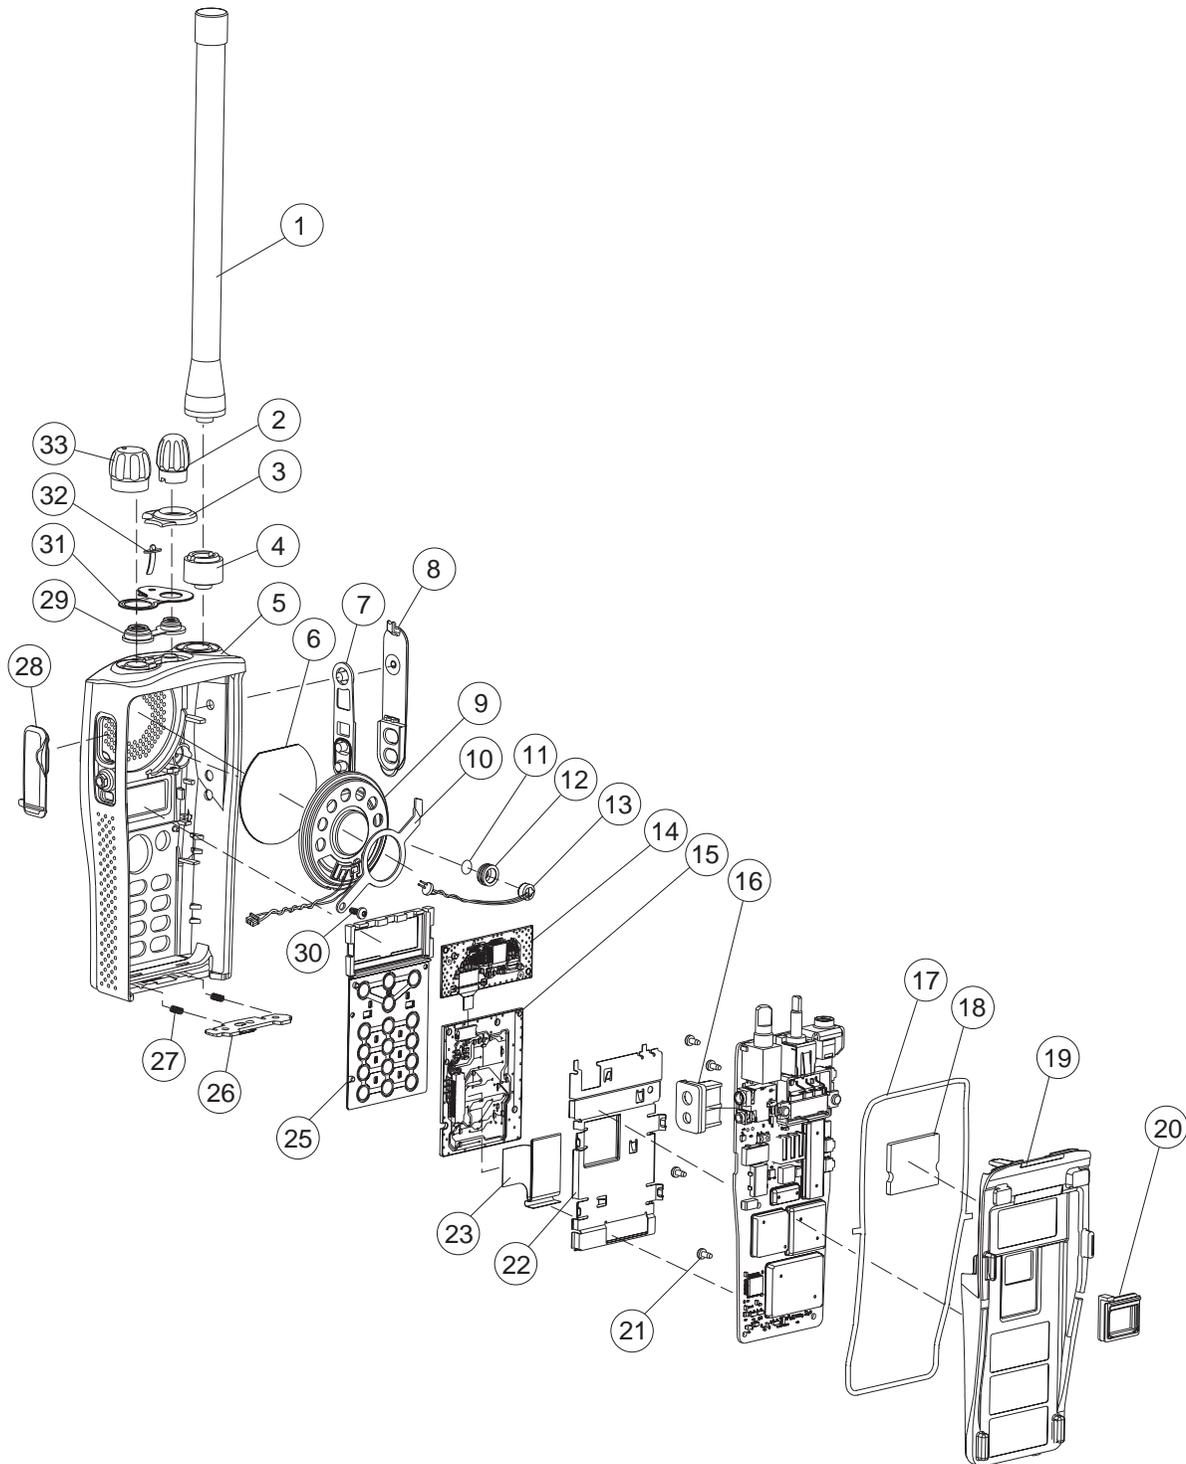


Figure 6-22. PR400 Full Keypad Radio Exploded View

Item	Motorola Part Number	Description
1	See Appendix A	Antenna
2	3680530Z02	Knob, Frequency
3	1386440Z03	Escutcheon, Top; 64 Ch.
4	5886627Z01	Antenna Adaptor/Seal (Optional)
5	1586391Z03	Housing, Full, with Lens
6	3586621Z01	Speaker, Felt
7	3886489Z01	PTT, Rubber
8	4586439Z01	PTT, Plastic
9	0186638Z01	Speaker Assembly
10	4286620Z01	Retainer Speaker
11	3586621Z02	Felt, Microphone
12	0780608V01	Boot, Microphone
13	0186639Z01	Microphone Plug Assembly
14	5104949J16	Display, LCD Module
15	0104017J18	Keypad Board Assy
16	1586437Z01	Shroud, Audio Jack
17	3286431Z05	Seal, Main O-ring
18	7586436Z02	Pad, PA Interface
19	2786389Z02	Chassis
20	3286435Z01	Seal, Battery Contact Block
21	0304726J05	Screws, Chassis; 4 Used
22	4286648Z01	Plate, Retainer
23	8486617Z01	28-Pin, Flex
25	7586654Z03	Keypad, Full
26	5586445Z02	Latch Assembly
27	4105944K01	Spring, Latch; 2 Used
28	3886441Z01	Cap, Dust
29	3286432Z01	Seal, Control Shaft
30	0386434Z01	Screw, Speaker Retainer
31	3386443Z01	Label, Escutcheon Seal
32	6186446Z02	Lightpipe
33	3680529Z01	Knob, Volume

Item	Motorola Part Number	Description
<b>NON-REFERENCED ITEMS</b>		
	3386625Z01	Nameplate, Motorola

**This Page Intentionally Blank**

---

# Chapter 7 Limited Keypad Model Disassembly and Re-assembly

## 7.1 Introduction

This section provides details about the following:

- Preventive maintenance (inspection and cleaning)
- Safe handling of CMOS and LDMOS devices
- Disassembly and re-assembly of the radio
- Repair procedures and techniques

## 7.2 Preventive Maintenance

The radios do not require a scheduled preventive maintenance program; however, periodic visual inspection and cleaning is recommended.

### 7.2.1 Inspection

Check that the external surfaces of the radio are clean, and that all external controls and switches are functional. It is not recommended to inspect the interior electronic circuitry.

### 7.2.2 Cleaning Procedures

The following procedures describe the recommended cleaning agents and the methods to be used when cleaning the external and internal surfaces of the radio. External surfaces include the front cover, housing assembly and battery case. These surfaces should be cleaned whenever a periodic visual inspection reveals the presence of smudges, grease, and/or grime.

**Note:** Internal surfaces should be cleaned only when the radio is disassembled for service or repair.

The only recommended agent for cleaning the external radio surfaces is a 0.5% solution of a mild dishwashing detergent in water. The only factory recommended liquid for cleaning the printed circuit boards and their components is isopropyl alcohol (70% by volume).



**CAUTION:** The effects of certain chemicals and their vapors can have harmful results on certain plastics. Avoid using aerosol sprays, tuner cleaners, and other chemicals.

#### Cleaning External Plastic Surfaces

Apply the 0.5% detergent-water solution sparingly with a stiff, non-metallic, short-bristled brush to work all loose dirt away from the radio. Use a soft, absorbent, lintless cloth or tissue to remove the solution and dry the radio. Make sure that no water remains entrapped near the connectors, cracks, or crevices.

---

### Cleaning Internal Circuit Boards and Components

Isopropyl alcohol (70%) may be applied with a stiff, non-metallic, short-bristled brush to dislodge embedded or caked materials located in hard-to-reach areas. The brush stroke should direct the dislodged material out and away from the inside of the radio. Make sure that controls or tunable components are not soaked with alcohol. Do not use high-pressure air to hasten the drying process since this could cause the liquid to collect in unwanted places. After completing the cleaning process, use a soft, absorbent, lintless cloth to dry the area. Do not brush or apply any isopropyl alcohol to the frame, front cover, or back cover.

**Note:** Always use a fresh supply of alcohol and a clean container to prevent contamination by dissolved material (from previous usage).

## 7.3 Safe Handling of CMOS and LDMOS Devices

Complementary metal-oxide semiconductor (CMOS) devices are used in this family of radios, and are susceptible to damage by electrostatic or high voltage charges. Damage can be latent, resulting in failures occurring weeks or months later. Therefore, special precautions must be taken to prevent device damage during disassembly, troubleshooting, and repair.

Handling precautions are mandatory for CMOS circuits and are especially important in low humidity conditions. DO NOT attempt to disassemble the radio without first referring to the following CAUTION statement.



**CAUTION: This radio contains static-sensitive devices. Do not open the radio unless you are properly grounded. Take the following precautions when working on this unit:**

- Store and transport all CMOS devices in conductive material so that all exposed leads are shorted together. Do not insert CMOS devices into conventional plastic “snow” trays used for storage and transportation of other semiconductor devices.
- Ground the working surface of the service bench to protect the CMOS device. We recommend using the Motorola Static Protection Assembly (part number 0180386A82), which includes a wrist strap, two ground cords, a table mat, and a floor mat.
- Wear a conductive wrist strap in series with a 100k resistor to ground. (Replacement wrist straps that connect to the bench top covering are Motorola part number RSX-4015.)
- Do not wear nylon clothing while handling CMOS devices.
- Do not insert or remove CMOS devices with power applied. Check all power supplies used for testing CMOS devices to be certain that there are no voltage transients present.
- When straightening CMOS pins, provide ground straps for the apparatus used.
- When soldering, use a grounded soldering iron.
- If at all possible, handle CMOS devices by the package and not by the leads. Prior to touching the unit, touch an electrical ground to remove any static charge that you may have accumulated. The package and substrate may be electrically common. If so, the reaction of a discharge to the case would cause the same damage as touching the leads.

## 7.4 Disassembling and Re-assembling the Radio — General

Since these radios may be disassembled and Re-assembled with the use of only four (board to casting) screws, it is important to pay particular attention to the snaps and tabs, and how parts align with each other.

The following tools are required for disassembling the radio (see Chapter 4 for a list of service aids):

- knob remover/chassis opener
- penknife-size screwdriver
- TORX™ T6 screwdriver
- scribe

If a unit requires more complete testing or service than is customarily performed at the basic level, send this unit to a Motorola Authorized Service Center. See Appendix B for a list of authorized service centers.

The following disassembly procedures should be performed only if necessary:

- Chassis Disassembly
- Speaker Disassembly
- PTT Disassembly

### 7.4.1 Radio Disassembly — Detailed

#### 7.4.1.1 Front Cover from Chassis Disassembly

1. Turn off the radio.
2. Remove the battery (Figure 7-1):
  - a. Slide the battery latch into the unlock position. Disengage by pushing downward and holding the latch towards the front of the radio.
  - b. With the battery latch disengaged, slide the battery down from the top of the radio about 1/2 in. Once the battery is free from the battery rails, lift it directly away from the radio.
  - c. Remove the battery from the radio.
3. Remove the antenna.

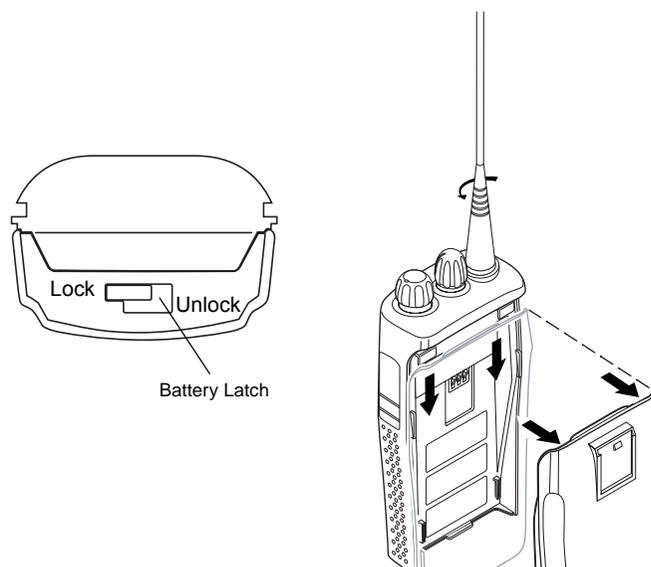


Figure 7-1. Battery Removal

4. Pry off the volume and channel selector knobs from their shafts using the knob remover/chassis opener tool (Motorola part # 6686533Z01) (Figure 7-2).

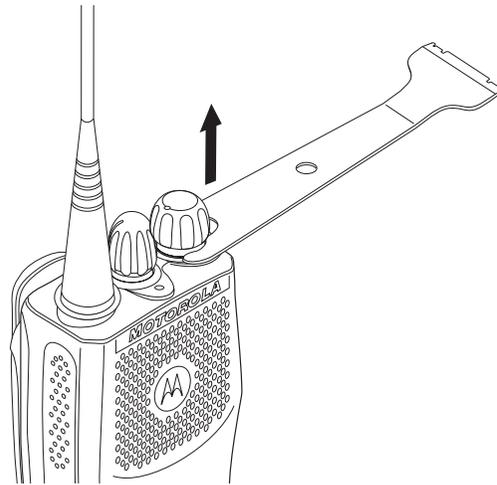


Figure 7-2. Antenna and Knob Removal

**Note:** Both knobs slide on and off. However, the knobs are designed to fit very tightly on the shaft.

5. Separate the chassis from the front housing assembly by using the knob remover/chassis opener tool. Place the broad side of the opener into the slots located at the base of the radio (Figure 7-3). Press the handle of the opener downwards. This pressing action forces the thin inner plastic wall toward the base of the radio, releasing the two chassis base tabs.

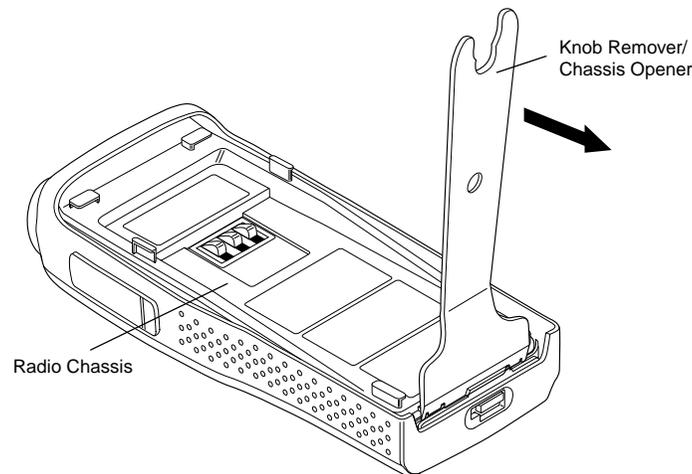


Figure 7-3. Chassis Removal



**CAUTION:** Marring the front cover O-ring sealing area will prevent the radio from sealing properly. If the O-ring is damaged, replace it with a new one.

**Note:** The speaker wire assembly microphone wire assembly and keypad flex cable connecting the front housing assembly and the chassis prevent the two units from being completely separated.

6. Pull the chassis assembly out of the front cover only until the volume and channel selectors shaft just clear the top of the case. (Figure 7-4).
7. Rotate the bottom of the chassis up about 20° to access the keyboard flex connector. Push down 2 end tabs to release flex connector at the bottom of the chassis.

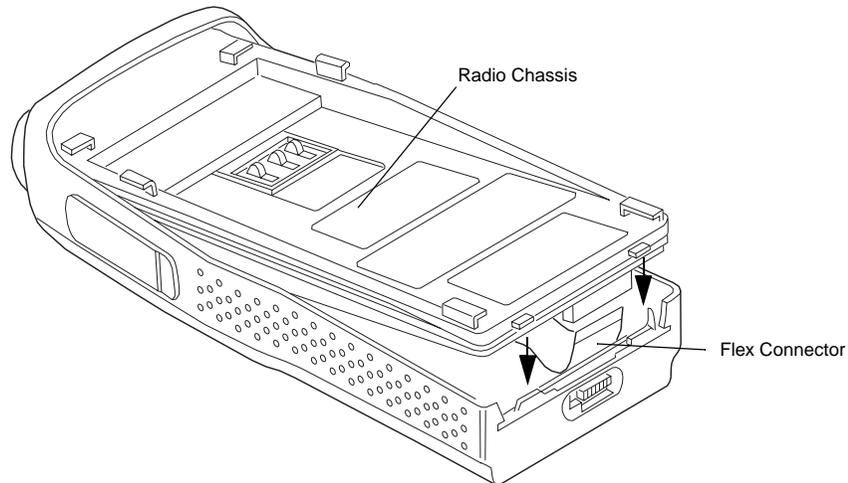


Figure 7-4. Keyboard Flex Connector

8. Rotate the chassis counterclockwise out of the housing and position next to the housing. Take care not to damage the speaker and microphone wires that are still connected to the chassis (Figure 7-5).


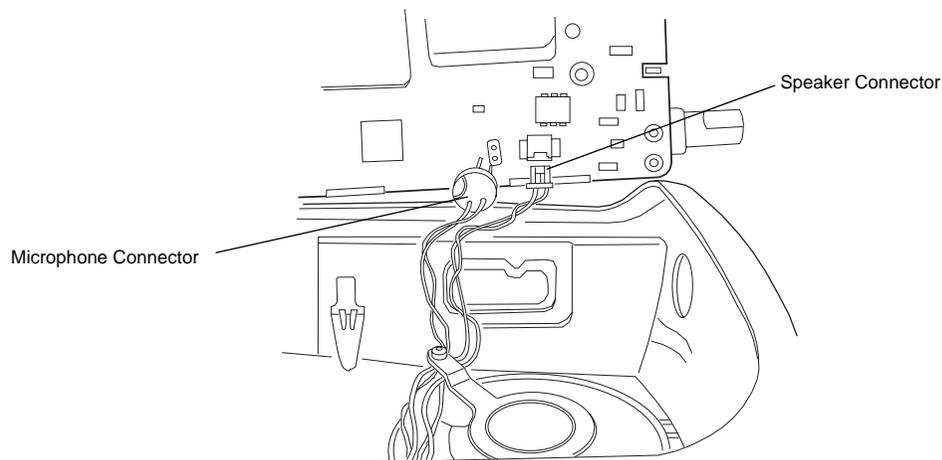


Figure 7-5. Microphone and Speaker Connections


9. Unplug the speaker wire assembly from the 2-pin connector on the chassis.
10. Unplug the microphone wire assembly from the socket on the chassis.
11. Move the chassis away from the housing and place on a clean work surface.

### 7.4.1.2 Dust Cover Disassembly


1. Gently pry the top of the dust cover away from the body of the radio. (See [Figure 7-6](#)).
2. Rotate the dust cover 90° in a counterclockwise direction to allow the key to be removed.
3. Separate the dust cover away from the body of the radio. The dust cover key is fragile; apply only light pressure to the key while removing the dust cover.

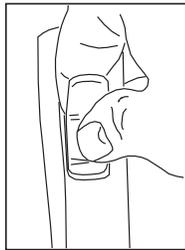

a. Pry dust cover from body.

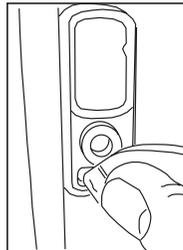

b. Rotate dust cover 90° to allow key to be removed.

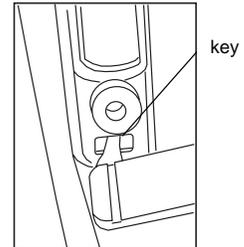


c. Separate dust cover from body.

*Figure 7-6. Dust Cover Disassembly*

### 7.4.1.3 Speaker and Microphone Disassembly

**Note:** The speaker is held in place with a retainer bracket. Be careful not to damage the speaker when removing the retainer bracket.

1. Remove the screw from the speaker retainer using a T6 Torx screwdriver ([Figure 7-7](#)).
2. Lift the retainer off the speaker, sliding end of retainer out of corner slot on the housing.
3. Lift the speaker out from the front housing.
4. Carefully lift microphone assembly out of housing.

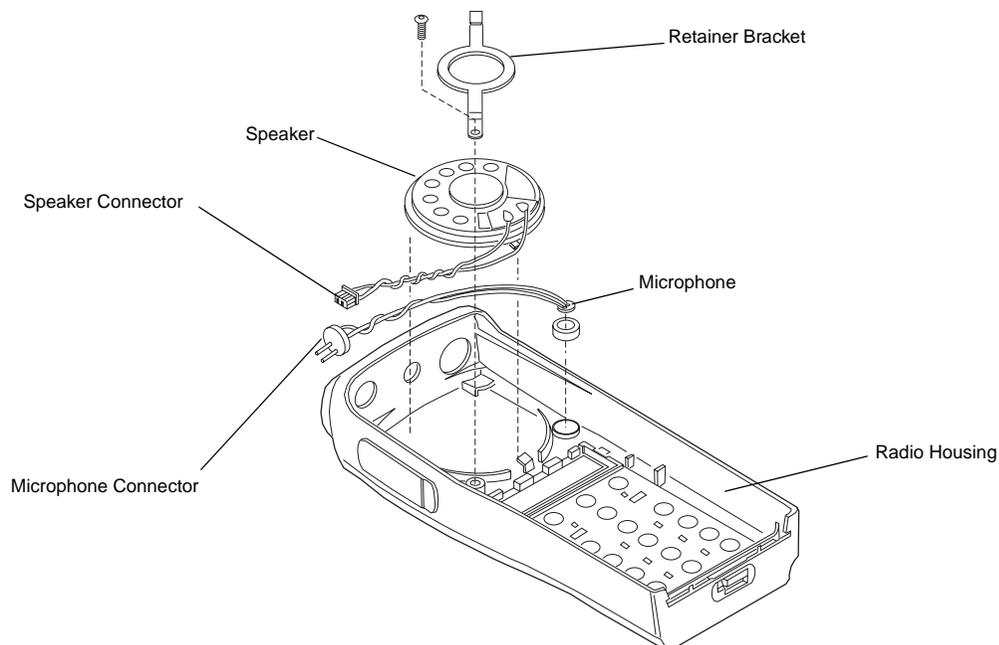

*Figure 7-7. Removal Speaker-Microphone Assembly*

#### 7.4.1.4 Keyboard Removal

1. Carefully pry the four keypad retainer locking tabs free from the housing using a scribe.

**Note:** Use care when removing the keypad retainer to prevent damage to the keyboard flex cable.

2. Lift the keypad retainer up from the bottom and slide the top tabs out.
3. Slide keypad retainer out of housing carefully to prevent damage to flex cable.



**CAUTION:** Refer to the **CMOS CAUTION** paragraph (7.3) before removing the main board. Be sure to use **Electrostatic Discharge** protection when handling circuit boards.

4. Lift LCD keypad board out of housing (Figure 7-8).
5. Lift keypad out of housing.


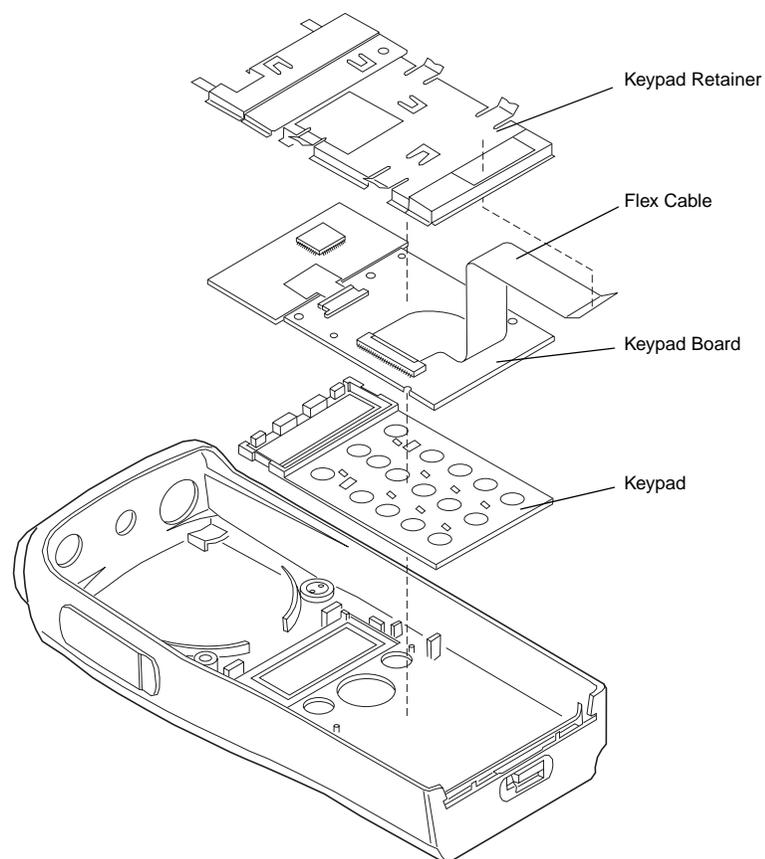


Figure 7-8. Keypad Removal

### 7.4.1.5 PTT Disassembly

1. If required, the PTT ([Figure 7-9](#)) can be disassembly using a small screwdriver, as follows:
  - a. Insert the tip of a small screwdriver underneath the PTT and unsnap the top tab.
  - b. Pry the PTT away from the radio housing.
  - c. Inspect the two hooks. If bent or broken, the PTT must be replaced.
  - d. Remove the PTT seal.

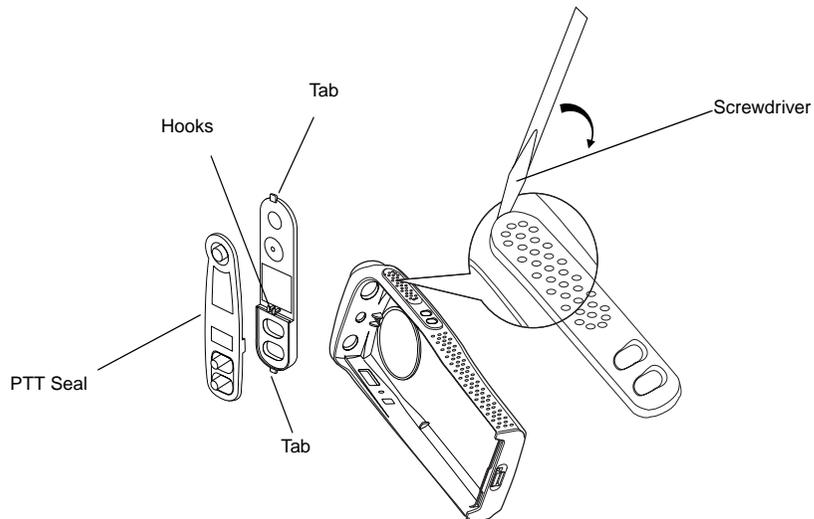

*Figure 7-9. PTT Removal*

### 7.4.2 Chassis Disassembly



**CAUTION:** Refer to the CMOS CAUTION paragraph (see 3.3) before removing the main board. Be sure to use Electrostatic Discharge protection when handling circuit boards.

1. Remove the O-ring.
2. Use a Torx™ screwdriver with a T6 bit to remove the four screws ([Figure 7-10](#)) holding the main board to the chassis.
3. The audio jack shroud can be removed from the main board.
4. Lift the main board from the chassis ([Figure 7-10](#)).
5. Remove the battery contact seal.

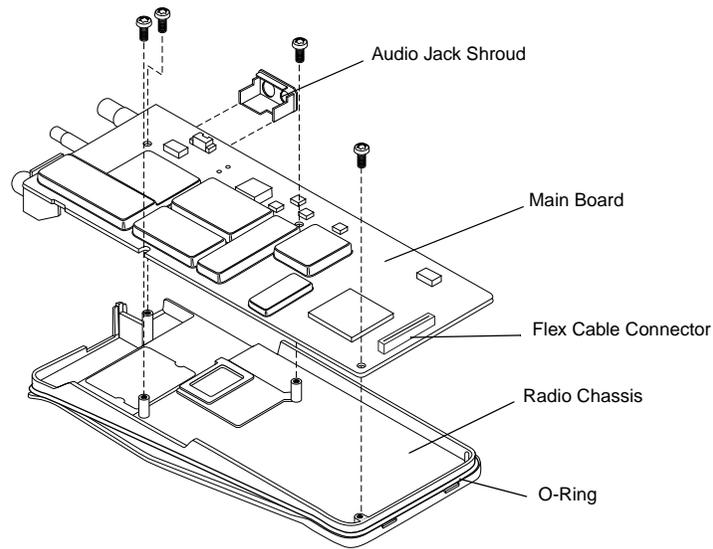


Figure 7-10. Removal of Main Board from Chassis

### 7.4.3 Radio Re-assembly - Detailed

#### 7.4.3.1 Dust Cover Re-assembly

1. Insert the tail of the dust cap into the bottom hole of the audio jacks housing opening (Figure 7-11).
2. Press the dust cap until the tail is fully into the hole.

**Note:** Make sure the dust cap is placed between the keypad retainer mounting post and the side wall of the radio.

3. Twist the dust cap counter-clockwise until the cap is seated properly onto the recess.
4. Press the cap again to ensure it fully covers the opening for the audio jack.

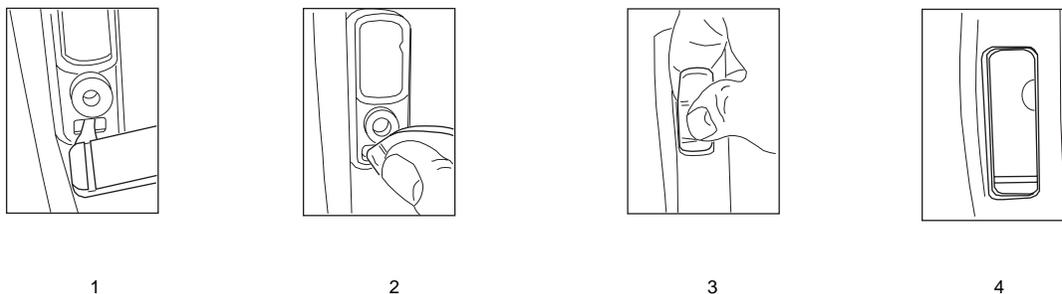


Figure 7-11. Dust Cap Re-assembly

#### 7.4.3.2 Microphone and Speaker Re-assembly

1. Check that the mic and speaker felts are in position and not damaged. If damaged replace felts.
2. Insert the microphone sub-assembly into the microphone boot.

3. Insert the Boot and microphone sub-assembly into the microphone recess in the housing and route wires as shown in [Figure 7-12](#).

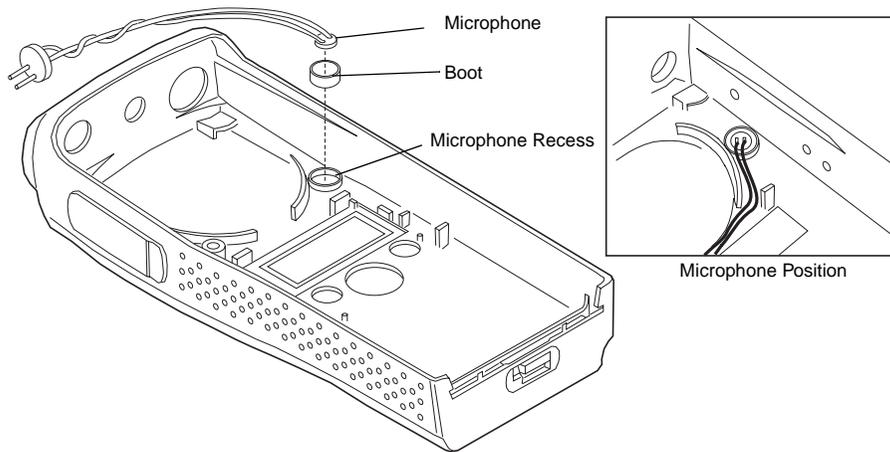


Figure 7-12. Microphone Re-assembly

4. Locate the speaker tab and align it with the tab opening in the front housing ([Figure 7-13](#)).
5. Insert the speaker tab into the speaker recess in the housing. Ensure the speaker is seated flush in the housing.

**Note:** Make sure the speaker and microphone wires are routed tightly between the speaker basket and the housing post.

6. Insert one end of the speaker retainer into the slot in the front housing (See [Figure 7-13](#)).

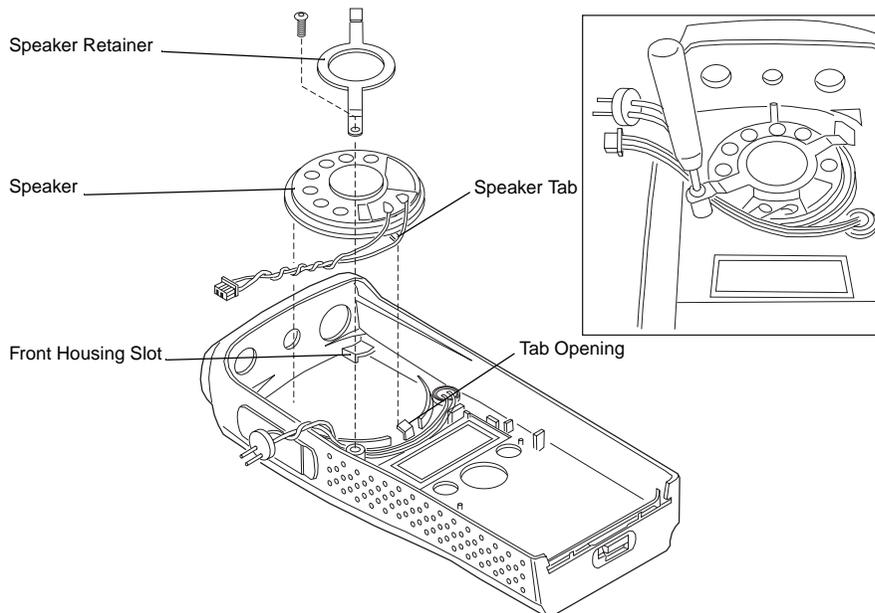



Figure 7-13. Speaker Re-assembly

**Note:** When fastening the speaker retainer screw, make sure the wires are out of the way to prevent pinching by the retainer.

7. Install the retainer screw using a T6 Torx screwdriver. Torque to 2.3 - 2.5 lb/in.


### 7.4.3.3 Keypad and LCD/Keyboard Re-assembly

1. Attach the flex cable connector from the LCD module to the keyboard, if not already attached ([Figure 7-15](#)).
2. Remove protective mylar from window and from keypad, if present.
3. Install the new keypad into the housing. Use the two housing posts for keypad alignment ([Figure 7-14](#)).

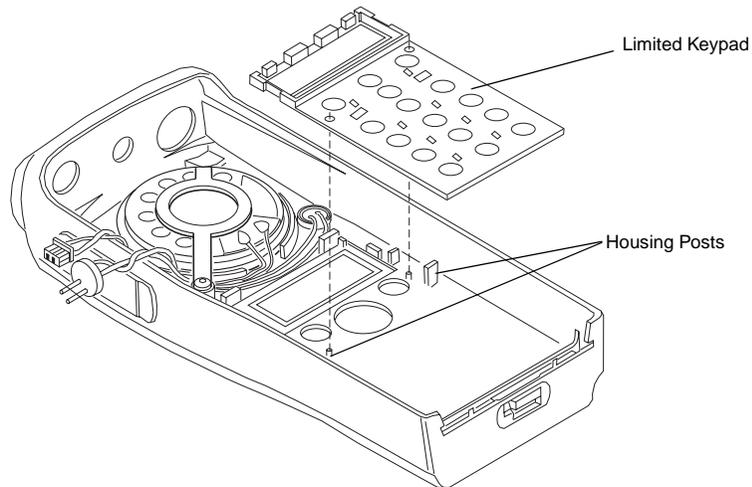

*Figure 7-14. Keypad Re-assembly*

4. Remove mylar from LCD if present.
5. Install the LCD/Keypad sub-assembly into the housing ([Figure 7-15](#)).

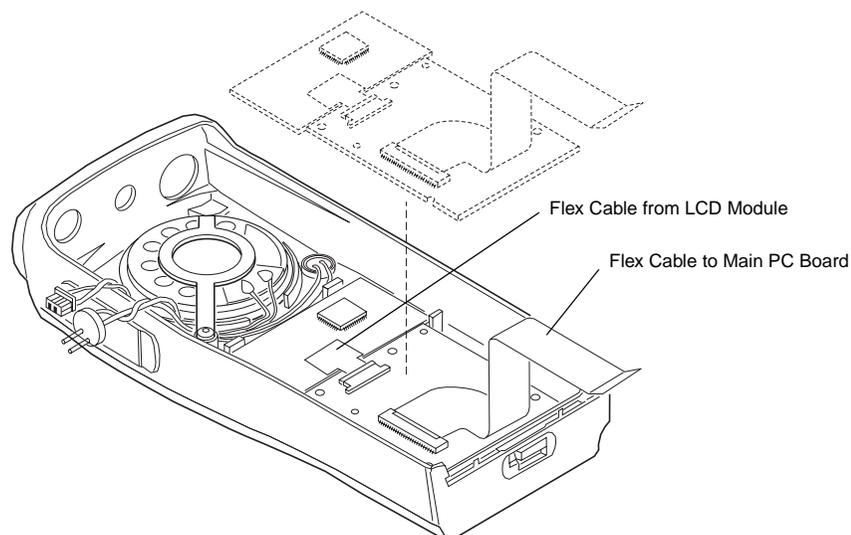

*Figure 7-15. LCD/Keypad Board Re-assembly*

6. Attach the flex cable connector into the connector on the keypad board, if not already connected.



**CAUTION: Make sure the microphone and speaker wires are not trapped under the LCD module.**

7. Bend the flex cable connector as shown (Figure 7-15).

#### 7.4.3.4 Keyboard Retainer Re-assembly

1. Insert the flex cable connector through the slot at the bottom of the keyboard retainer (Figure 7-16).

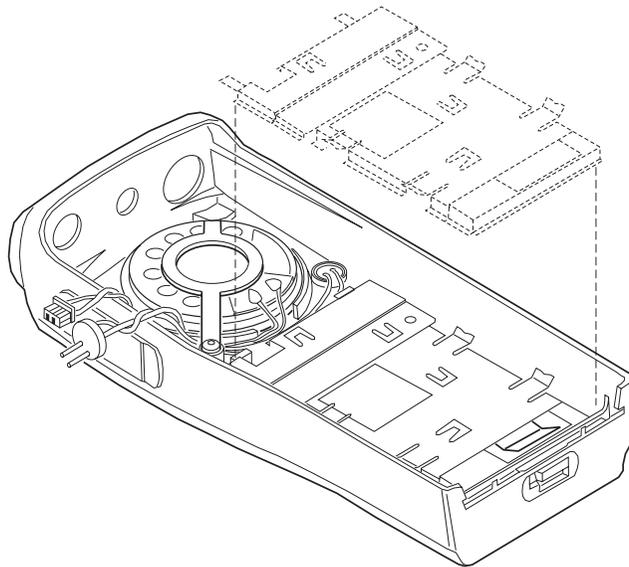


Figure 7-16. Keyboard Retainer Re-assembly

2. Insert the two top tabs of the keyboard retainer into the two tab retainers located on each side of the speaker in the front housing (Figure 7-16).
3. Press the four keypad retainer locking tabs into the housing.
4. Push the speaker and microphone wires into the top left hand corner of the housing.

#### 7.4.3.5 Chassis Assembly/Re-assembly

1. Replace the battery contact seal (if necessary) surrounding the battery contact (Figure 7-17).
2. Remove the old Interface Pad from the chassis by scraping off the pad and adhesive with a straight razor. Use rubbing alcohol and a cloth to completely remove the adhesive from the chassis surface. With the chassis clean and dry, add a new Interface Pad to the chassis.
3. Place the main circuit board straight down on top of the chassis with the frequency and volume switches facing down (Figure 7-17).

**Note:** Be sure the battery contact seal protrudes through the chassis and is not pinched under the chassis.

4. Use the T6 Torx screwdriver to fasten the screws holding the main board to the chassis. Tighten to 3.7 - 3.9 in/lb.

5. Replacing the O-ring.
  - a. If you have the older chassis (2786389Z01) use the older O-ring (3286431Z02). Position the O-ring in the top groove by the volume/frequency switches. Stretch the O-ring to place it into the retaining groove at the bottom end of the chassis.
  - b. If you have the newer chassis (2786389Z02) use the newer O-ring (3286431Z05). Position the O-ring with the plug on the right side (speaker connector side). Push the plug all the way into the chassis slot until it is touching the chassis flange. Repeat for the left side. Stretch the O-ring to place it into the retaining groove at the top and bottom end of the chassis.
6. Check the top corner of the chassis by flipping the O-ring, if the O-ring came out easily, twist the O-ring and re-try until the O-ring is held properly by the chassis.

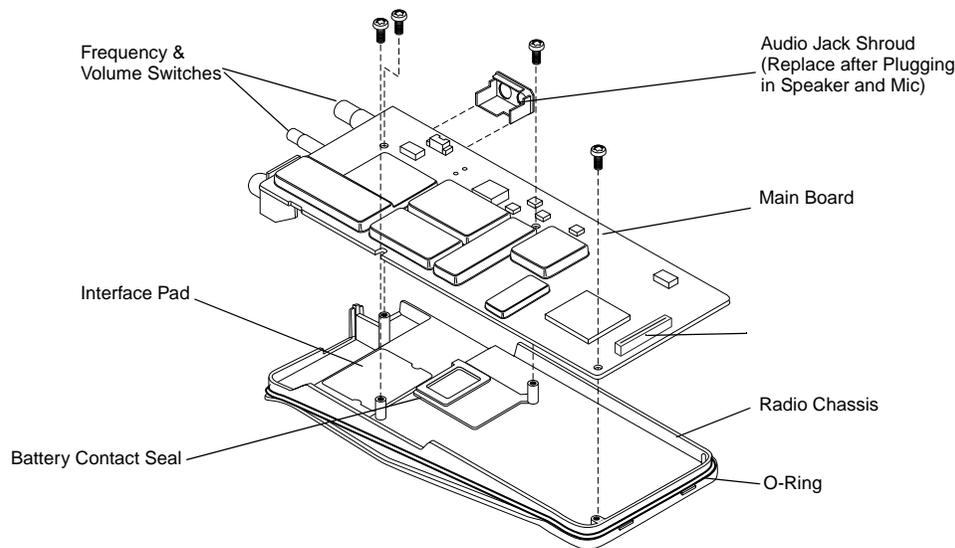


Figure 7-17. Installation of Main Board onto Chassis

#### 7.4.3.6 Chassis and Front Cover Re-assembly

1. Dress and connect the speaker wires.

**Note:** Care should be taken when dressing the speaker and microphone wires to avoid pinching them between the speaker magnet and shield, or between the accessory connector and housing.

**Note:** Ensure that the plug orientation is correct with the exposed pins in the wire casing facing upward and fully plugged in.

- a. Connect the speaker wire assembly into the 2-pin connector on the main board and bend the wires at the board connector so the wires are positioned toward the top of the radio (Figure 7-18).
- b. Connect the microphone wire assembly into the two hole socket on the main board and bend the wires at the board connector so the wires are positioned toward the top of the radio (Figure 7-18).
- c. Slide the audio jack shroud onto accessory connector (Figure 7-17).

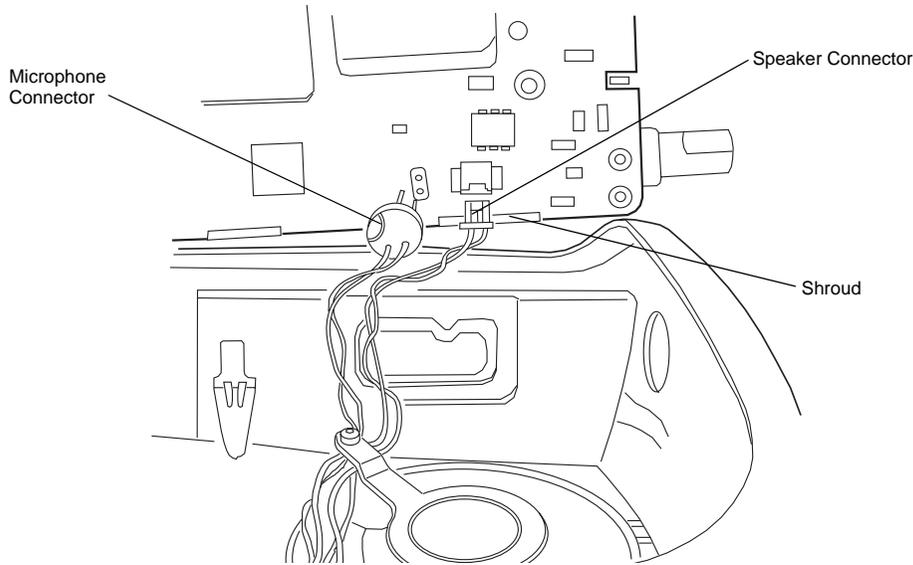


Figure 7-18. Microphone and Speaker Wires

2. Position the radio (Figure 7-19) and reconnect the flex cable connector from the keyboard into the connector located on the bottom of the main board, pushing up the 2 end tabs.
3. Slide the volume potentiometer and frequency switch shafts into their respective holes in the front cover. Look through the accessory connector opening to make certain that the wires are not pinched, between the shroud and housing.

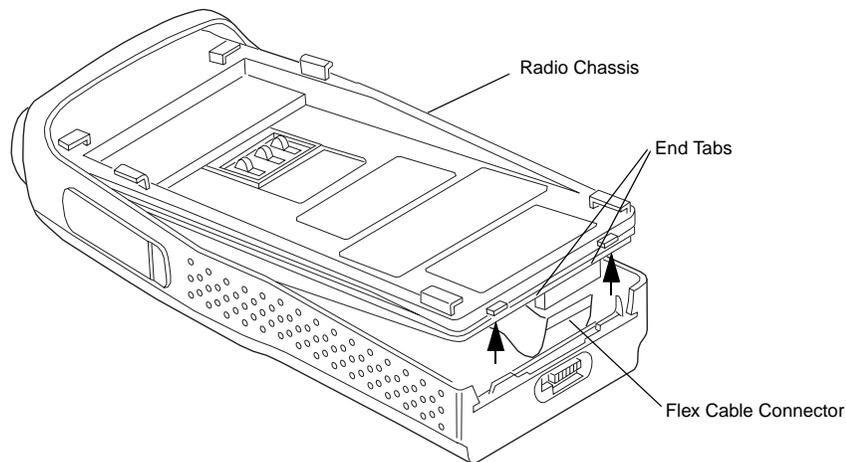


Figure 7-19. Keyboard Flex Cable Connection

4. Push the topside of the board chassis upward until it touches the housing end. Before snapping the board into the housing, perform the following checks:
  - a. Open the dust cap and ensure the wires are not pinched between the shroud and housing.
  - b. Ensure the O-ring is seated in the groove.
  - c. Ensure that the bottom side of the dust cap is fully pressed into the housing before the snapping the board into place.
5. Snap chassis assembly completely into the top of the front cover (Figure 7-20) until it settles in place.


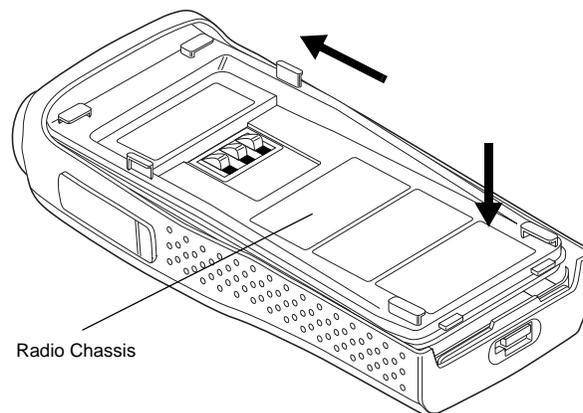


Figure 7-20. Fastening the Chassis


6. Make sure the O-ring is properly seated. If the O-ring seal is pinched, separate the chassis from the housing using the knob removal/chassis opener and dress O-ring properly.
7. Snap the bottom of the chassis into the front cover.
8. Check that O-ring is visible at the corners.
9. Re-assemble the knobs, antenna, and battery.

#### 7.4.3.7 PTT Re-assembly

1. Place the PTT seal over the ridge around the top hole. Press down to seat the seal around the ridge.
2. Place the bottom tab in the slot inside the front housing PTT opening. Slightly slide down the PTT and bow it by placing one finger under the middle of the PTT, so that the top tab can be aligned and inserted into the top slot (Figure 7-21a).
3. Press the PTT assembly against the front cover opening (Figure 7-21b).

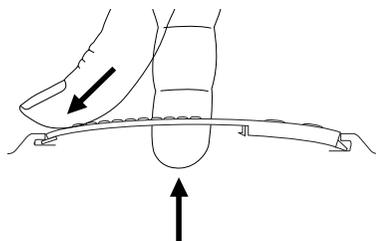

a. Place bottom tab into bottom slot. Place top tab into top slot.

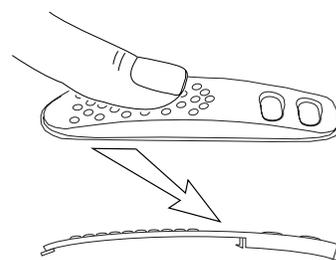

b. Push down on PTT toward bottom of radio so hooks do not get crushed.

Figure 7-21. PTT Re-assembly

## 7.5 Mechanical View and Parts List

### 7.5.1 PR400 Limited-Keypad Exploded View and Parts List

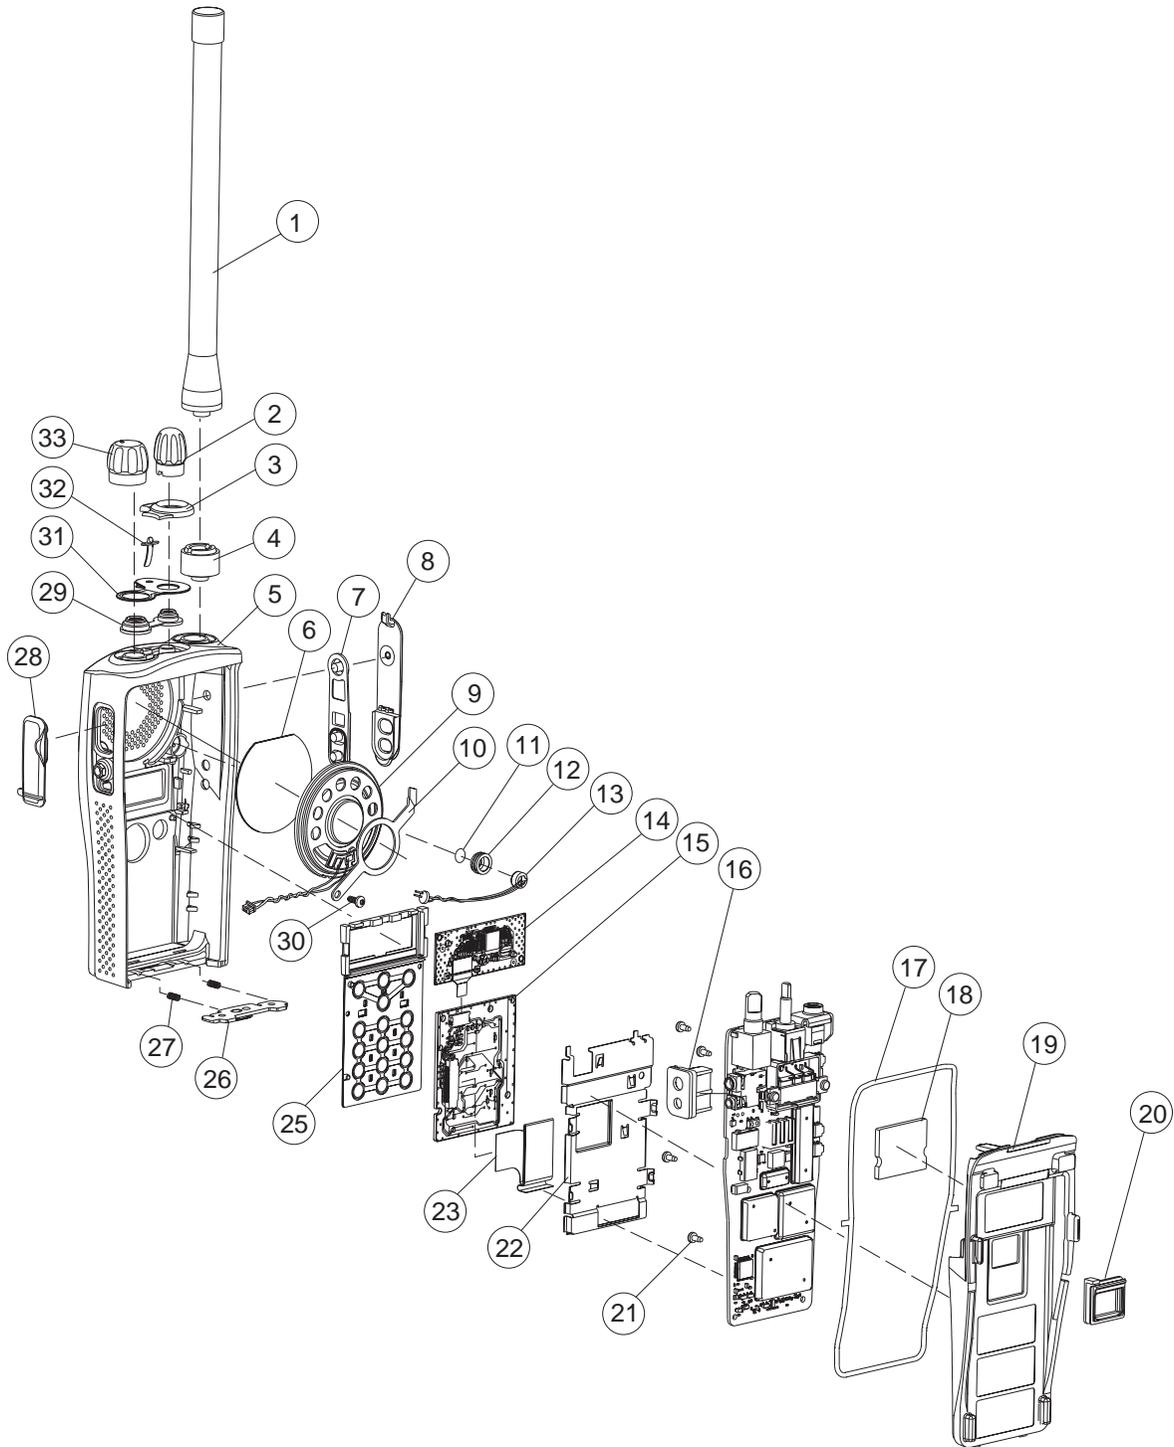


Figure 7-22. PR400 Limited Keypad Radio Exploded View

Item	Motorola Part Number	Description
1	See Section 6	Antenna
2	3680530Z02	Knob, Frequency
3	1386440Z03	Escutcheon, Top; 32 Ch.
4	5886627Z01	Antenna Adaptor/Seal (Optional)
5	1586391Z02	Housing, Limited, with Lens
6	3586621Z01	Speaker, Felt
7	3886489Z01	PTT, Rubber
8	4586439Z01	PTT, Plastic
9	0186638Z01	Speaker Assembly
10	4286620Z01	Retainer Speaker
11	3586621Z02	Felt, Microphone
12	0780608V01	Boot, Microphone
13	0186639Z01	Microphone Plug Assembly
14	5104949J16	Display, LCD Module
15	0104017J19	Keypad Board Assy
16	1586437Z01	Shroud, Audio Jack
17	3286431Z05	Seal, Main O-ring
18	7586436Z02	Pad, PA Interface
19	2786389Z02	Chassis
20	3286435Z01	Seal, Battery Contact Block
21	0304726J05	Screws, Chassis; 4 Used
22	4286648Z01	Plate, Retainer
23	8486617Z01	28-pin, Flex
25	7586654Z02	Keypad, Limited
26	5586445Z02	Latch Assembly
27	4105944K01	Spring, Latch; 2 Used
28	3886441Z01	Cap, Dust
29	3286432Z01	Seal, Control Shaft
30	0386434Z01	Screw, Speaker Retainer
31	3386443Z01	Label, Escutcheon Seal
32	6186446Z02	Lightpipe
33	3680529Z01	Knob, Volume

Item	Motorola Part Number	Description
<b>NON-REFERENCED ITEMS</b>		
	3386625Z01	Nameplate, Motorola

**This Page Intentionally Blank**

---

# Chapter 8 Non-Keypad Model Disassembly and Re-assembly

## 8.1 Introduction

This section provides details about the following:

- Preventive maintenance (inspection and cleaning)
- Safe handling of CMOS and LDMOS devices
- Disassembly and re-assembly of the radio
- Repair procedures and techniques

## 8.2 Preventive Maintenance

The radios do not require a scheduled preventive maintenance program; however, periodic visual inspection and cleaning is recommended.

### 8.2.1 Inspection

Check that the external surfaces of the radio are clean, and that all external controls and switches are functional. It is not recommended to inspect the interior electronic circuitry.

### 8.2.2 Cleaning Procedures

The following procedures describe the recommended cleaning agents and the methods to be used when cleaning the external and internal surfaces of the radio. External surfaces include the front cover, housing assembly and battery case. These surfaces should be cleaned whenever a periodic visual inspection reveals the presence of smudges, grease, and/or grime.

**Note:** Internal surfaces should be cleaned only when the radio is disassembled for service or repair.

The only recommended agent for cleaning the external radio surfaces is a 0.5% solution of a mild dishwashing detergent in water. The only factory recommended liquid for cleaning the printed circuit boards and their components is isopropyl alcohol (70% by volume).



**CAUTION:** The effects of certain chemicals and their vapors can have harmful results on certain plastics. Avoid using aerosol sprays, tuner cleaners, and other chemicals.

#### Cleaning External Plastic Surfaces

Apply the 0.5% detergent-water solution sparingly with a stiff, non-metallic, short-bristled brush to work all loose dirt away from the radio. Use a soft, absorbent, lintless cloth or tissue to remove the solution and dry the radio. Make sure that no water remains entrapped near the connectors, cracks, or crevices.

---

### Cleaning Internal Circuit Boards and Components

Isopropyl alcohol (70%) may be applied with a stiff, non-metallic, short-bristled brush to dislodge embedded or caked materials located in hard-to-reach areas. The brush stroke should direct the dislodged material out and away from the inside of the radio. Make sure that controls or tunable components are not soaked with alcohol. Do not use high-pressure air to hasten the drying process since this could cause the liquid to collect in unwanted places. After completing the cleaning process, use a soft, absorbent, lintless cloth to dry the area. Do not brush or apply any isopropyl alcohol to the frame, front cover, or back cover.

**Note:** Always use a fresh supply of alcohol and a clean container to prevent contamination by dissolved material (from previous usage).

## 8.3 Safe Handling of CMOS and LDMOS Devices

Complementary metal-oxide semiconductor (CMOS) devices are used in this family of radios, and are susceptible to damage by electrostatic or high voltage charges. Damage can be latent, resulting in failures occurring weeks or months later. Therefore, special precautions must be taken to prevent device damage during disassembly, troubleshooting, and repair.

Handling precautions are mandatory for CMOS circuits and are especially important in low humidity conditions. DO NOT attempt to disassemble the radio without first referring to the following CAUTION statement.



**CAUTION: This radio contains static-sensitive devices. Do not open the radio unless you are properly grounded. Take the following precautions when working on this unit:**

- Store and transport all CMOS devices in conductive material so that all exposed leads are shorted together. Do not insert CMOS devices into conventional plastic “snow” trays used for storage and transportation of other semiconductor devices.
- Ground the working surface of the service bench to protect the CMOS device. We recommend using the Motorola Static Protection Assembly (part number 0180386A82), which includes a wrist strap, two ground cords, a table mat, and a floor mat.
- Wear a conductive wrist strap in series with a 100k resistor to ground. (Replacement wrist straps that connect to the bench top covering are Motorola part number RSX-4015.)
- Do not wear nylon clothing while handling CMOS devices.
- Do not insert or remove CMOS devices with power applied. Check all power supplies used for testing CMOS devices to be certain that there are no voltage transients present.
- When straightening CMOS pins, provide ground straps for the apparatus used.
- When soldering, use a grounded soldering iron.
- If at all possible, handle CMOS devices by the package and not by the leads. Prior to touching the unit, touch an electrical ground to remove any static charge that you may have accumulated. The package and substrate may be electrically common. If so, the reaction of a discharge to the case would cause the same damage as touching the leads.

## 8.4 Disassembling and Re-assembling the Radio — General

Since these radios may be disassembled and re-assembled with the use of only four (board to casting) screws, it is important to pay particular attention to the snaps and tabs, and how parts align with each other.

The following tools are required for disassembling the radio (see Chapter 4 for a list of service aids):

- knob remover/chassis opener
- penknife-size screwdriver
- TORX™ T6 screwdriver

If a unit requires more complete testing or service than is customarily performed at the basic level, send this unit to a Motorola Authorized Service Center. See Appendix B for a list of authorized service centers.

The following disassembly procedures should be performed only if necessary:

- Chassis Disassembly
- Speaker Disassembly
- PTT Disassembly

### 8.4.1 Radio Disassembly — Detailed

#### 8.4.1.1 Front Cover From Chassis Disassembly

1. Turn off the radio.
2. Remove the battery (Figure 8-1):
  - a. Slide the battery latch into the unlock position. Disengage by pushing downward and holding the latch towards the front of the radio.
  - b. With the battery latch disengaged, slide the battery down from the top of the radio about 1/2 in. Once the battery is free from the battery rails, lift it directly away from the radio.
  - c. Remove the battery from the radio.

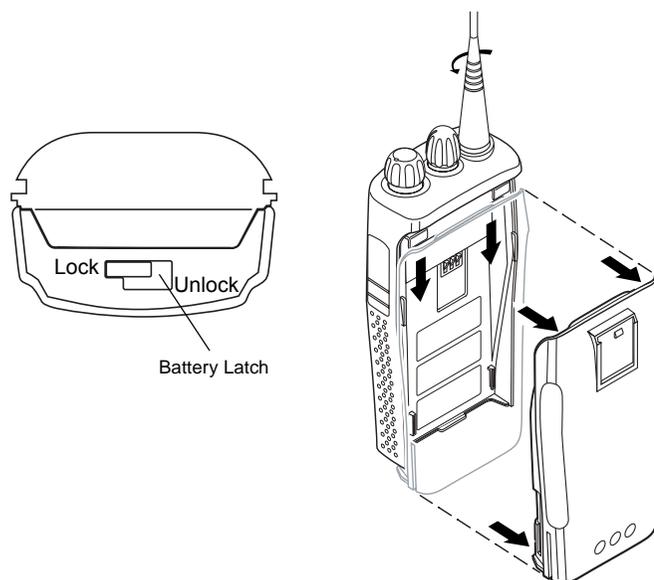


Figure 8-1. Battery Removal

3. Remove the antenna.
4. Pry off the volume and channel selector knobs from their shafts using the knob removal/chassis opener tool (Motorola part # 6686533Z01). (Figure 8-2)

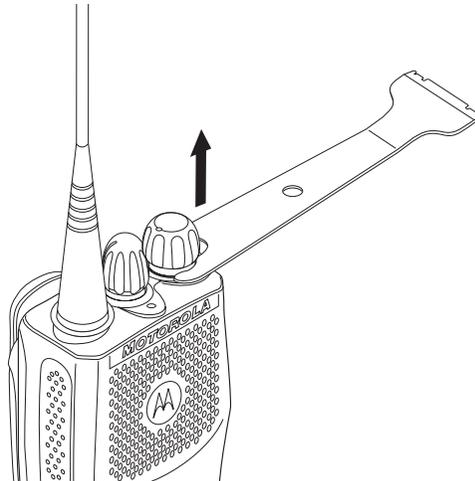


Figure 8-2. Antenna and Knob Removal

**Note:** Both knobs slide on and off. However the knobs are designed to fit very tightly on the shaft.

5. Separate the chassis from the front housing assembly by using the knob remover/chassis opener tool. Place the broad side of the opener into the slots located at the base of the radio (Figure 8-3). Press the handle on the opener downwards. This pressing action forces the thin inner plastic wall toward the base of the radio, releasing the two chassis base tabs..

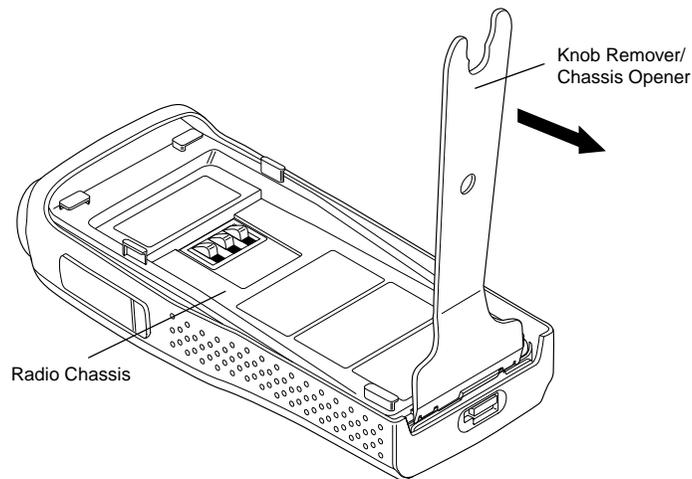


Figure 8-3. Chassis Removal



**CAUTION:** Marring the front cover O-ring sealing area will prevent the radio from sealing properly. If the O-ring is damaged, replace it with a new one.

**Note:** The speaker wire assembly microphone wire assembly and keypad ribbon connector connecting the front housing assembly and the chassis prevent the two units from being completely separated

6. Pull the chassis assembly out of the front cover only until the volume and channel selectors shaft just clear the top of the case. (Figure 8-4).

Rotate the chassis counterclockwise out of the housing and position next to the housing. Take care not to damage the speaker and microphone wires that are still connected to the chassis (Figure 8-4).


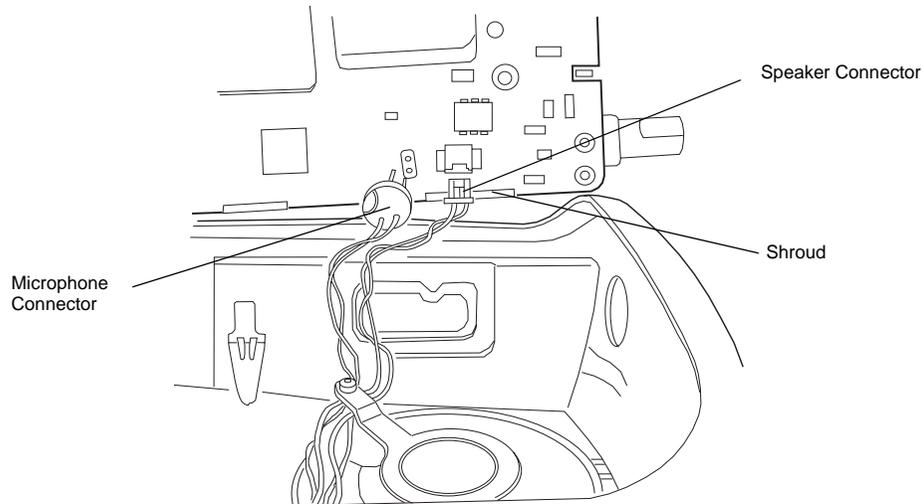


Figure 8-4. Microphone and Speaker Connections


7. Unplug the speaker wire assembly from the 2-pin connector on the chassis.
8. Unplug the microphone wire assembly from the socket on the chassis.
9. Move the chassis away from the housing and place on a clean work surface.

#### 8.4.1.2 Dust Cover Disassembly


1. Gently pry the top of the dust cover away from the body of the radio. (See Figure 8-5).
2. Rotate the dust cover 90° in a counterclockwise direction to allow the key to be removed.
3. Separate the dust cover away from the body of the radio. The dust cover key is fragile; apply only light pressure to the key while removing the dust cover.

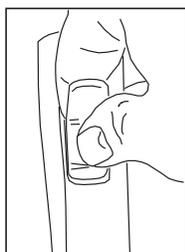

a. Pry dust cover from body.

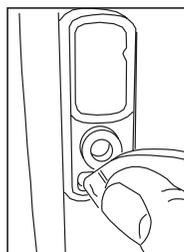

b. Rotate dust cover 90° to allow key to be removed.

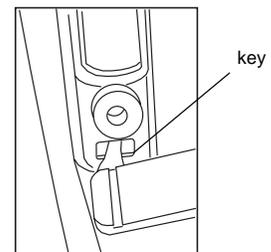


c. Separate dust cover from body.

Figure 8-5. Dust Cover Disassembly

### 8.4.1.3 Speaker and Microphone Disassembly

**Note:** The speaker is held in place with a retainer bracket. Be careful not to damage the speaker when removing the retainer bracket.

1. Remove the screw from the speaker retainer using a T6 Torx screwdriver (Figure 8-6).
2. Lift the retainer off the speaker, sliding end of retainer out of corner slot on the housing.
3. Lift the speaker out from the front housing.
4. Carefully lift microphone assembly out of housing.

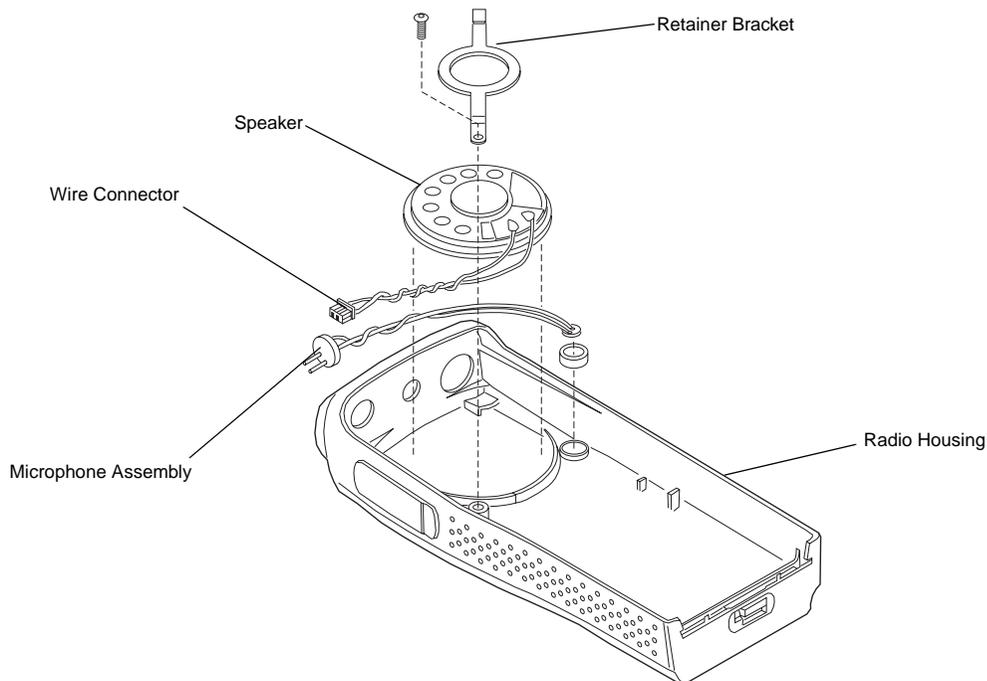

*Figure 8-6. Removal Speaker-Microphone Assembly*

### 8.4.1.4 PTT Disassembly

1. If required, the PTT (Figure 8-7) can be disassembled using a small screwdriver, as follows:
  - a. Insert the tip of a small screwdriver underneath the PTT and unsnap the top tab.
  - b. Pry the PTT away from the radio housing.
  - c. Inspect the two hooks. If bent or broken, the PTT must be replaced.
  - d. Remove the PTT seal.

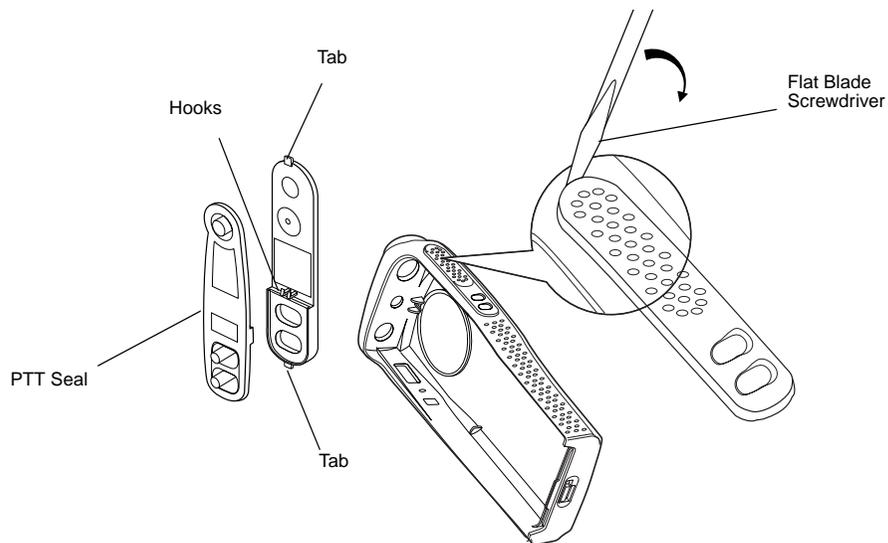


Figure 8-7. PTT Removal

## 8.4.2 Chassis Disassembly



**CAUTION:** Refer to the CMOS CAUTION paragraph (8.3) before removing the main board. Be sure to use Electrostatic Discharge protection when handling circuit boards.

1. Remove the O-ring.
2. Use a Torx™ screwdriver with a T6 bit to remove the four screws (Figure 8-8) holding the main board to the chassis.

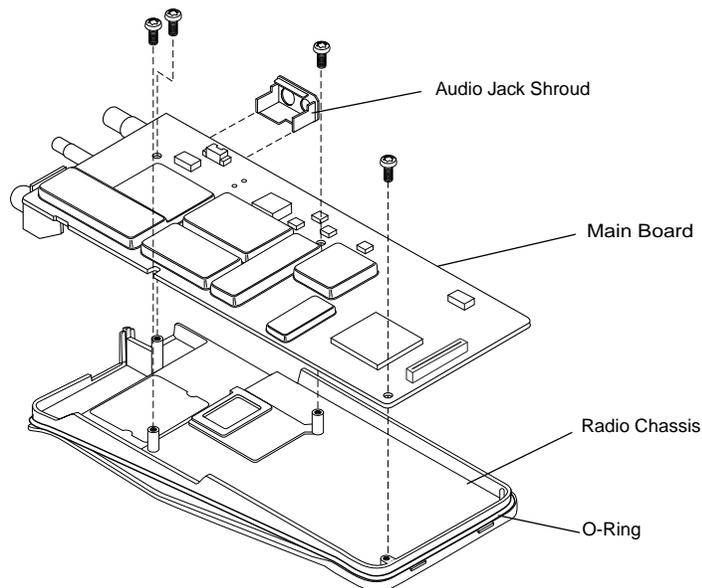



Figure 8-8. Removal of Main Board from Chassis

3. The audio jack shroud can be removed from the main board.
4. Lift the main board from the chassis.
5. Remove the battery contact seal.

### 8.4.3 Radio Re-assembly - Detailed

#### 8.4.3.1 Dust Cover Re-assembly


1. Insert the tail of the dust cap into the bottom hole of the audio jacks housing opening ([Figure 8-9](#)).
2. Press the dust cap until the tail is fully into the hole.
3. Twist the dust cap counter-clockwise until the cap is seated properly onto the recess.
4. Press the cap again to ensure it fully covers the opening for the audio jack.

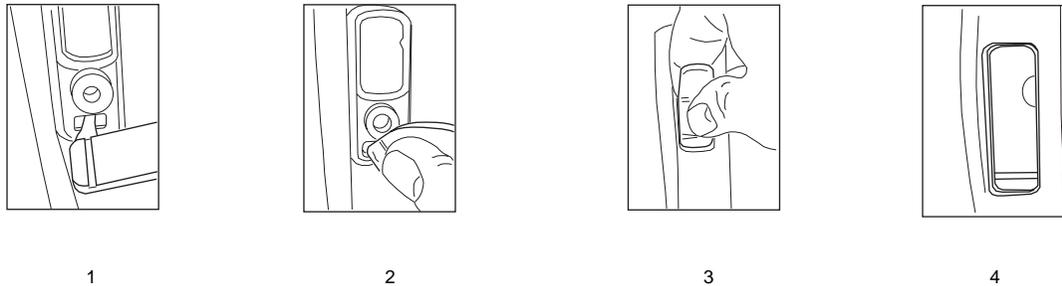

*Figure 8-9. Dust Cap Re-assembly*

#### 8.4.3.2 Microphone and Speaker Re-assembly

1. Check that the speaker felt is in position and is not damaged. If damaged replace felt.
2. Insert the microphone sub-assembly into the microphone boot.
3. Insert the Boot and microphone sub-assembly into the microphone recess in the housing and route the wires as shown in [Figure 8-10](#).

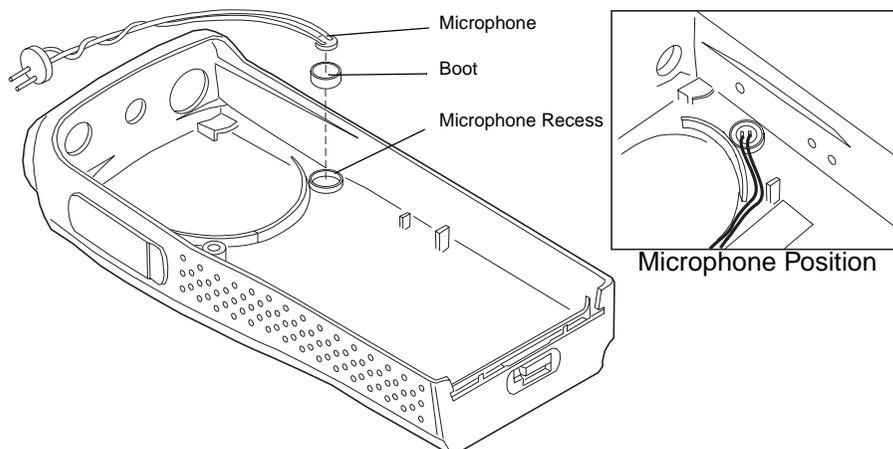


*Figure 8-10. Microphone Re-assembly*

4. Locate the speaker tab and align it with the tab opening in the front housing ([Figure 8-11](#)).
5. Insert the speaker tab into the speaker recess in the housing. Ensure the speaker is seated flush in the housing.

**Note:** Make sure the speaker and microphone wires are routed tightly between the speaker basket and the housing post

6. Insert one end of the speaker retainer into the slot in the front housing (See [Figure 8-11](#)).

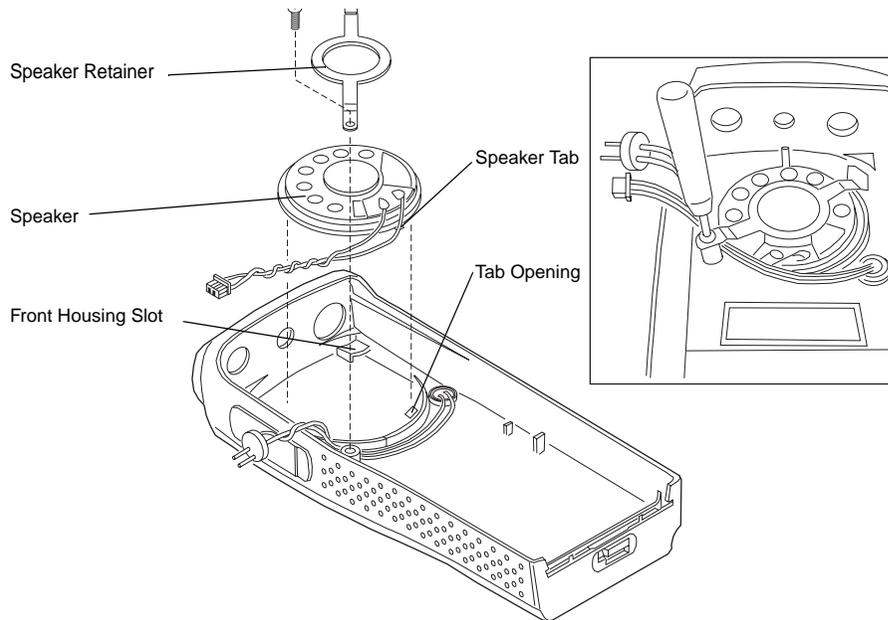

*Figure 8-11. Speaker Re-assembly*

**Note:** When fastening the speaker retainer screw, make sure the wires are out of the way to prevent pinching by the retainer.

7. Install the retainer screw using a T6 Torx screwdriver. Torque to 2.3 - 2.5 lb/in.

### 8.4.3.3 Chassis Assembly/Re-assembly

1. Replace the battery contact seal (if necessary) surrounding the battery contact ([Figure 8-12](#)).
2. Remove the old Interface Pad from the chassis by scraping off the pad and adhesive with a straight razor. Use rubbing alcohol and a cloth to completely remove the adhesive from the chassis surface. With the chassis clean and dry, add a new Interface Pad to the chassis.
3. Place the main circuit board straight down on top of the chassis with the frequency and volume switches facing down ([Figure 8-15](#)).

**Note:** Be sure the battery contact seal protrudes through the chassis and is not pinched under the chassis.

4. Use the T6 Torx screwdriver to fasten the screws holding the main board to the chassis. Tighten to 3.7 - 3.9 in/lb.
5. Replacing the O-ring.
  - a. If you have the older chassis (2786389Z01) use the older O-ring (3286431Z02). Position the O-ring in the top groove by the volume/frequency switches. Stretch the O-ring to place it into the retaining groove at the bottom end of the chassis.

- b. If you have the newer chassis (2786389Z02) use the newer O-ring (3286431Z05). Position the O-ring with the plug on the right side (speaker connector side). Push the plug all the way into the chassis slot until it is touching the chassis flange. Repeat for the left side. Stretch the O-ring to place it into the retaining groove at the top and bottom end of the chassis.
6. Check that the O-ring is not twisted and is being held by the top and bottom chassis groves.
  7. Replace the audio jack shroud.

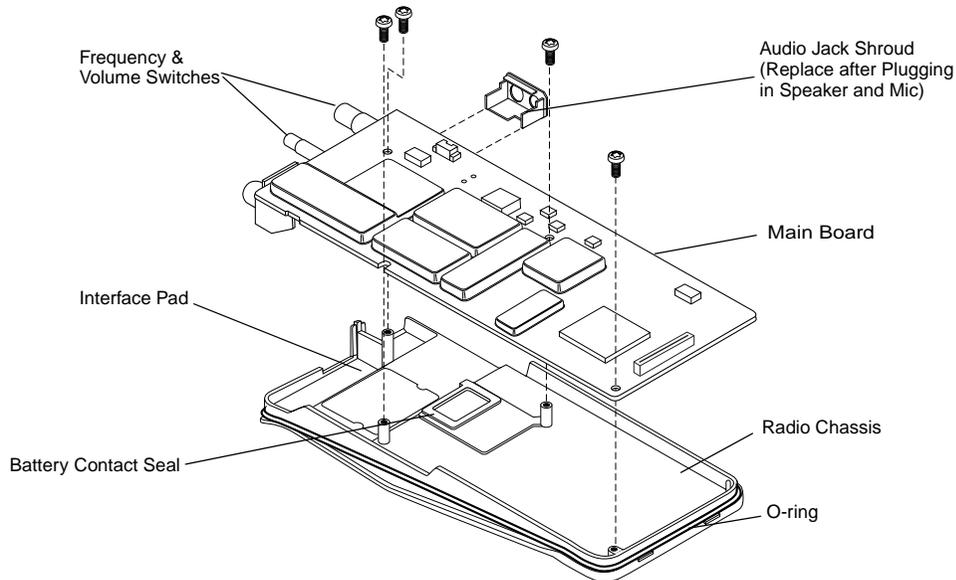


Figure 8-12. Installation of Main Board onto Chassis

#### 8.4.3.4 Chassis and Front Cover Re-assembly

1. Dress and connect the speaker wires.

**Note:** Care should be taken when dressing the speaker and microphone wires to avoid pinching them between the speaker magnet and shield, or between the accessory connector and housing.

**Note:** Ensure that the plug orientation is correct with the exposed pins in the wire casing facing upward and fully plugged in.

- a. Connect the speaker wire assembly into the 10-pin connector on the main board and bend the wires at the board connector so the wires are positioned toward the top of the radio (Figure 8-13).
  - b. Connect the microphone wire assembly into the two hole socket on the main board and bend the wires at the board connector so the wires are positioned toward the top of the radio (Figure 8-13).
  - c. Slide the audio jack shroud onto accessory connector (Figure 8-12).
2. Slide the volume potentiometer and frequency switch shafts into their respective holes in the front cover. Look through the accessory connector opening to make certain that the wires are not pinched.

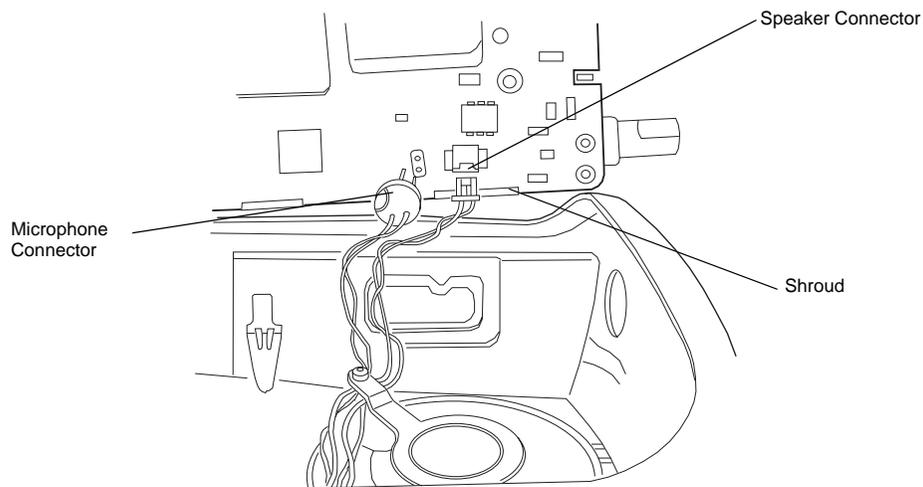


Figure 8-13. Microphone and Speaker Wires Re-assembly

3. Push the topside of the board chassis upward until it touches the housing end. Before snapping the board into the housing, perform the following checks.:
  - a. Open the dust cap and ensure the wires are not pinched between the shroud and housing.
  - b. Ensure the O-ring is seated in the groove.
  - c. Ensure that the bottom side of the dust cap is fully pressed into the housing before the snapping the board into place.


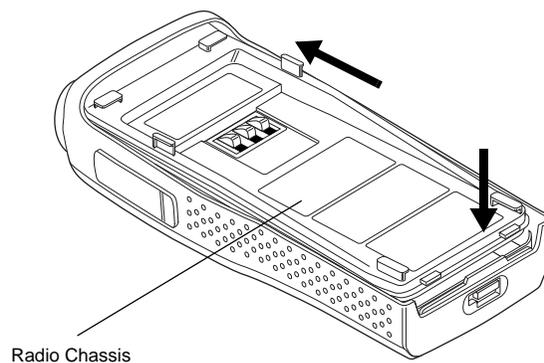


Figure 8-14. Fastening the Chassis


4. Snap chassis assembly completely into the top of the front cover (Figure 8-14) until it settles in place.
5. Make sure the O-ring is properly seated. If the O-ring seal is pinched, separate the chassis from the housing using the knob removal/chassis opener and dress O-ring properly.
6. Snap the bottom of the chassis into the front cover.
7. Check that O-ring is visible at the corners.
8. Re-assemble the knobs, antenna, and battery.

### 8.4.3.5 PTT Re-assembly

1. Place the PTT seal over the ridge around the top hole. Press down to seat the seal around the ridge.
2. Place the bottom tab in the slot inside the front housing PTT opening. Slightly slide down the PTT and bow it by placing one finger under the middle of the PTT, so that the top tab can be aligned and inserted into the top slot (Figure 8-15a).
3. Press the PTT assembly against the front cover opening (Figure 8-15b).

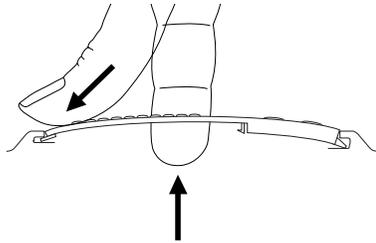

**a.** Place bottom tab into bottom slot.  
Place top tab into top slot.

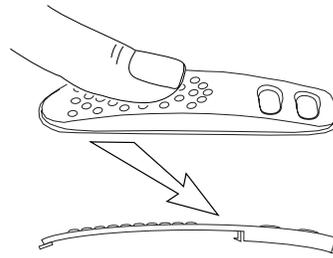

**b.** Push down on PTT toward bottom  
of radio so hooks do not get crushed.

*Figure 8-15. PTT Re-assembly*

## 8.5 Mechanical View and Parts List

### 8.5.1 PR400 Non-Keypad Exploded View and Parts List

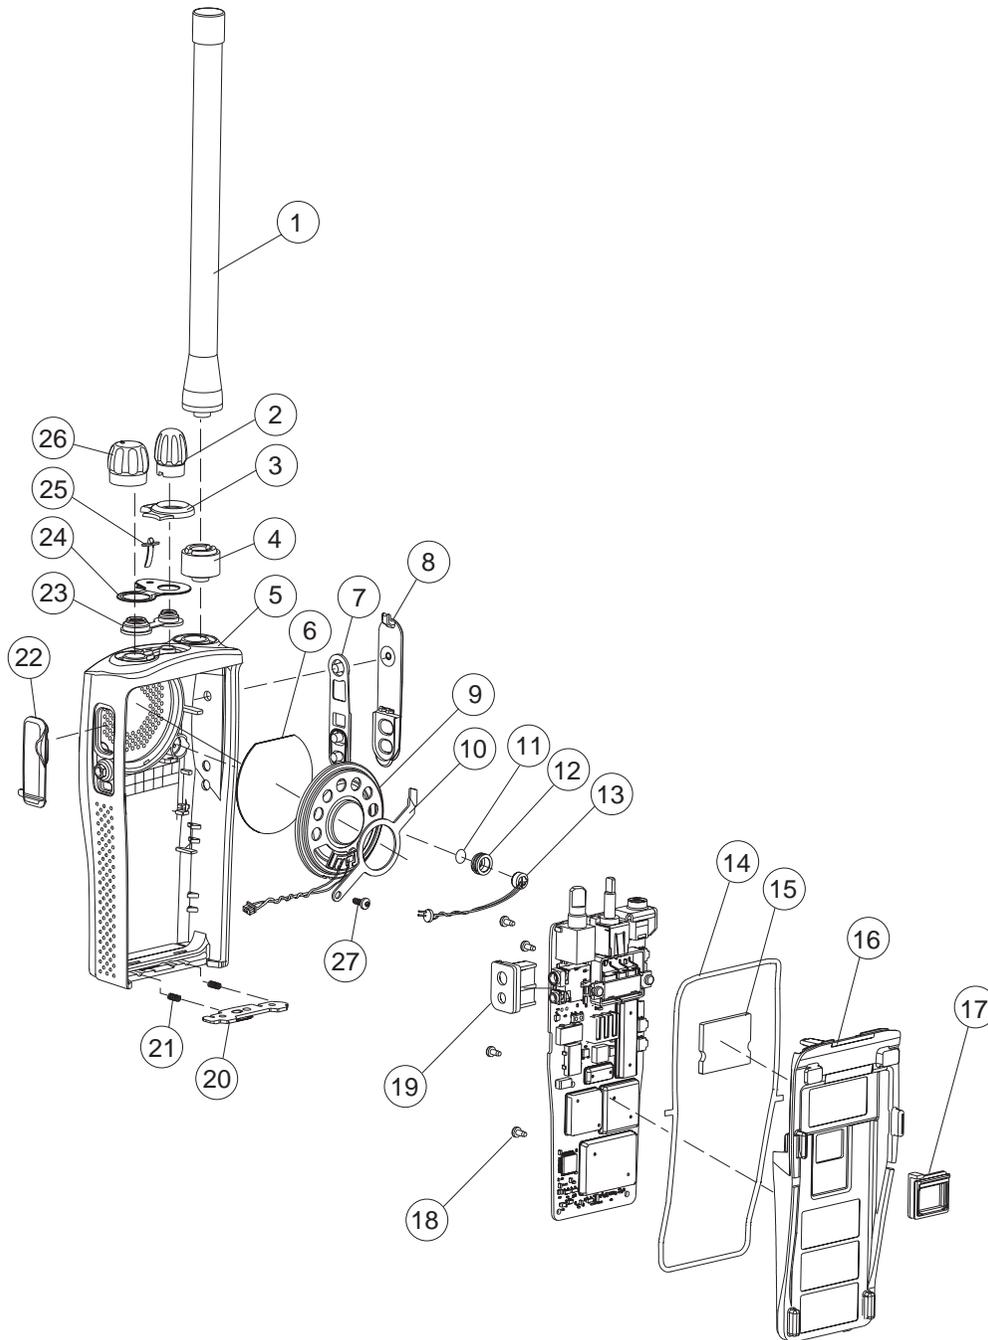


Figure 8-16. PR400 Non-Keypad Radio Exploded View

<b>Item</b>	<b>Motorola Part Number</b>	<b>Description</b>
1	See Section 6	Antenna
2	3680530Z02	Knob, Frequency
3	1386440Z02	Escutcheon, Top; 16 Ch.
4	5886627Z01	Antenna Adaptor / Seal
5	1586391Z01	Housing, Plain
6	3586621Z01	Felt, Speaker
7	3886489Z01	PTT, Rubber
8	4586439Z01	PTT, Plastic
9	0186638Z01	Speaker Assembly
10	4286620Z01	Retainer, Speaker
11	3586621Z02	Felt, Microphone
12	0780608V01	Boot, Microphone
13	0186639Z01	Microphone Plug Assembly
14	3286431Z05	Seal, Main O-ring
15	7586436Z02	Pad, PA Interface
16	2786389Z02	Chassis
17	3286435Z01	Seal, Battery Contact Block
18	0304726J05	Screws, Chassis; 4 Used
19	1586437Z01	Shroud, Audio Jack
20	5586445Z02	Latch Assembly
21	4105944K01	Spring, Latch; 2 Used
22	3886441Z01	Cap, Dust
23	3286432Z01	Seal, Control Shaft
24	3386443Z01	Label, Escutcheon Seal
25	6186446Z02	Lightpipe
26	3680529Z01	Knob, Volume
27	0386434Z01	Screw, Speaker Retainer
<b>NON-REFERENCED ITEMS</b>		
	3386625Z01	Nameplate, Motorola

---

## Chapter 9 Troubleshooting Tables

### 9.1 Power-Up Error Codes

During radio power-up, the radio performs dynamic tests to determine if the radio is working properly. Problems detected during these tests are presented as an error code on the radio's display. The presence of an error code should prompt a user that a problem exists and that a service technician should be contacted. Use [Table 9-1](#) to aid in understanding particular operational error codes.

*Table 9-1. Power-Up Error Code Display*

Error Code	Possible Causes	Corrective Action
RAM ERR	RAM Test Failure	Retest radio by turning it off and tuning it on again. If message reoccurs, replace main board or send radio to depot.
ROM ERR	ROM checksum is wrong	Reprogram FLASH memory and retest. If message reoccurs, replace main board or send radio to depot.
EPRM ERR	EEPROM Hardware Error – Codeplug structure mismatch or non-existence of codeplug or, EEPROM Checksum Error – Codeplug checksum is wrong	Reprogram codeplug with correct codeplug and retest. If message reoccurs, replace main board or send radio to depot.

### 9.2 Operational Error Codes

During radio operation, the radio performs dynamic tests to determine if the radio is working properly. Problems detected during these tests are presented as an error code on the radio's display. The presence of an error code should prompt a user that a problem exists and that a service technician should be contacted. Use [Table 9-2](#) to aid in understanding particular operational error codes.

*Table 9-2. Operational Error Code Display*

Error Code	Possible Causes	Corrective Action
SYN UNLK	Synthesizer Out-of-Lock	Verify codeplug and reprogram if necessary. If message reoccurs, replace main board or send radio to depot.

---

### 9.3 Troubleshooting Table for Receiver

Table [Table 9-3](#) lists the possible causes of, and corrections for, receiver problems.

*Table 9-3. Receiver Troubleshooting Table*

Symptom	Possible Causes	Corrective or Test (Measurements at Room Temperature)
Radio Dead; Display Does Not Turn On	1. Dead Battery.	Replace with charged battery.
	2. Blown Fuse	Send radio to depot.
	3. On/Off Switch	
	4. Regulators	
	5. Regulator fault	
Radio Dead; Display Turns On	Transceiver Board	Send radio to depot.
No Receive Audio, or Receiver Does Not Unmute	Programming	1. Does the transmitted signal match the receiver configuration (PL, DPL, etc.)?  2. With the monitor function enabled, can the radio be unmuted?
Audio Distorted or Not Loud Enough	Synthesizer Not On Frequency	Check synthesizer frequency by measuring the transmitter frequency; realign it off by more than $\pm 150$ Hz (VHF), $\pm 500$ Hz (UHF)
RF Sensitivity Poor	1. Synthesizer Not on Frequency	Check synthesizer frequency by measuring the transmitter frequency; realign it off by more than $\pm 150$ Hz (VHF), $\pm 500$ Hz (UHF)
	2. Antenna Switch/Connector	Send radio to depot.
	3. Receiver Front End Tuning	Check RF front-end tuning for optimum sensitivity using the tuner.
Radio Will Not Turn Off	Transceiver Board	Send radio to depot.

## 9.4 Troubleshooting Table for Transmitter

Table [Table 9-4](#) lists the possible causes of, and corrections for, transmitter problems.

*Table 9-4. Transmitter Troubleshooting Table*

Symptom	Possible Causes	Corrective or Test (Measurements at Room Temperature)
No RF Power Out	1. Tx Power Level or Frequency	Check Tx power level and frequency programming (from tuner).
	2. No Injection To Power Amplifier	Send radio to depot.
	Antenna Switch/Connector	
No Modulation; Distortion Modulation	1. Programming	Check deviation and compensation settings using the tuner.
	2. Transceiver Board	Send radio to depot.
Bad Microphone Sensitivity	1. Check Deviation and Compensation	Realign if necessary.
	2. Microphone	Send radio to depot.
No/Low Signaling (PL, DPL, MDC)	1. Programming	Check programming.
	2. Transceiver Board	Send radio to depot.
Cannot Set Deviation Balance	RF Board	Send radio to depot.

**This Page Intentionally Blank**

---

## Appendix A    Accessories

### Antennas

NAD6502_R	VHF Heliflex Antenna 14cm (146-174 MHz)
HAD9742	VHF Stubby Antenna, 9cm (146-162 MHz)
HAD9743	VHF Stubby Antenna, 9cm (162-174 MHz)
NAE6522_R	UHF Heliflex Stubby Antenna 9cm (438-470 MHz)
NAE6483_R	Flexible Whip Antenna (403-520 MHz)
8505816K26	UHF Heliflex Stubby (470-520 MHz)

### Carrying Accessories

RLN5496	Leather DTMF Case with 2-1/2 inch Swivel (for Full-Display models)
RLN5497	Leather DTMF Case with 3 inch Swivel (for Full-Display models)
RLN5498	Leather DTMF Case with Belt Loop (for Full-Display models)
RLN5640	Leather LTD DTMF Case with Belt Loop (for Limited Display models)
RLN5641	Leather LTD DTMF Case with 2-1/2 inch Swivel (for Limited Display models)
RLN5642	Leather LTD DTMF Case with 3 inch Swivel (for Limited Display models)
RLN5383	Leather Case with Belt Loop (For Non-Display models)
RLN5384	Leather Case with 2-1/2 inch Swivel (for Non-Display models)
RLN5385	Leather Case with 3 inch Swivel (for Non-Display models)
HLN9701	Nylon Case with Belt Loop (For all models)
HLN8255	3 inch Spring Action Belt Clip
RLN5644	2 inch Spring Action Belt Clip
NTN5243	Shoulder Strap for Hard Leather Cases (attaches to D-Shaped Rings on case)
HLN6602	Universal Chest Pack
RLN4815	Universal Radio Pak
RLN4570	Break-A-Way Chest Pack
1505596Z02	Replacement Strap for HLN6602 Universal Chest Pack
4280384F89	Belt Lengthener for RLN4815 Universal Radio Pak
HLN9985	Waterproof Bag

### Chargers

WPLN4138_R	Desktop Rapid 90-Min. Charger w/US NA Plug
EPNN7997	10 Hr. US NA 120 V Plug (plugs into radio accessory connector, used ONLY with battery NNTN4496)
WPLN4155_R	Slow Desktop Charger w/US NA Plug
EPNN7994	90 Min. Rapid US NA 120 V Plug
WPLN4161-R	Multi-Unit Rapid Charger w/US NA Plug

---

## Batteries

NNTN4496_R	NiCd, 1100 mAH
NNTN4497_R	Li-Ion, 1800 mAH
NNTN4851	NiMH, 1400 mAH
NNTN4852	NiMH FM, 1300 mAH
NNTN4970	Slim Li-Ion, 1600 mAH

## Audio Accessories

HMN9752	Earpiece with Volume Control, 1-Wire (plastic earloop) (Beige)
HMN9727	Earpiece without Volume Control, 1-Wire (plastic earloop) (Beige)
RLN4894	Earpiece without Volume Control, 1-Wire (plastic earloop) (Black)
HMN9754	Earpiece with Microphone & PTT Combined, 2-Wire (Beige)
RLN4895	Earpiece with Microphone & PTT Combined, 2-Wire (Black)
RLN5198_P	Earpiece with Microphone & PTT Combined (Black) including Low Noise Kit, 2-Wire Surveillance Kit w/Clear Comfortable Acoustic Tube (includes NTN8371)
RLN5317	2-Wire Comfort Earpiece w/Mic & PTT for use with HMN9754 & NTN8371 (Beige)
BDN6720	Flexible Ear Receiver (RX only)
HMN9036	Earbud with Microphone & PTT Combined, 2-Wire (Black)
HLN9132	Earbud Single Wire Receive Only (Black)
NTN8370	Extreme Noise Kit
NTN8371	Low Noise Kit
RLN4760	Small Custom Clear Earpiece, Right Ear
RLN4763	Small Custom Clear Earpiece, Left Ear
RLN4761	Medium Custom Clear Earpiece, Right Ear
RLN4764	Medium Custom Clear Earpiece, Left Ear
RLN4762	Large Custom Clear Earpiece, Right Ear
RLN4765	Large Custom Clear Earpiece, Left Ear
5080384F72	Replacement Noise Attenuating Plug for NTN8370
5080371E73	Replacement Ear Tip for use with low noise kit NTN8371 (Beige)
5080371E75	Replacement Ear Tip for use with low noise kit NTN8371 (Black)
7580372E11	Replacement Ear Cushion for use with earpiece BDN6720

## Headsets

RLN5411	Ultra-Lite Breeze Behind the Head Headset
PMMN4001	Earset with Flexible Boom Microphone
HMN9013	Lightweight Headset w/o In-line PTT
RMN4016	Lightweight Headset with In-line PTT
RLN5238	Lightweight Headset with In-line PTT, NFL Style
HMN9021	Medium Weight Over the Head Dual Muff Headset
HMN9022	Medium Weight Behind the Head Dual Muff Headset
BDN6647	Medium Weight Single Speaker Headset

---

BDN6648	Heavy Duty Dual Muff Headset with Noise Canceling Microphone
RMN5015	Heavy Duty Dual Muff Racing Headset (requires RKN4090 Headset Adapter Cable)
RKN4090	Adapter Cable for use with RMN5015 Racing Headset
RMN4051	2-Way Hard Hat Mount, Black, Noise Reduction Rating (22db) (requires RKN4094 Adapter Cable)
RMN4054	Receive-Only Hard Hat Mount Headset with 3.5mm Right Angle Plug
RMN4055	Receive-Only Headband Style Headset with 3.5mm Right Angle Plug
RKN4094	In-Line PTT Adapter for use with headsets RMN4051 only)
REX4648	Replacement Foam Ear Pad and Windscreen Kit for use with headsets HMN9013 & RMN4016
7580376E34	Replacement Ear Seals for use with headsets HMN9021 & HMN9022
5080371E66	Replacement Windscreen for use with headset BDN6647

### Ear Microphone Systems

BDN6646	Standard 95 dB Ear Microphone with PTT Interface Module
BDN6706	Standard 95 dB Ear Microphone with VOX & PTT Interface Module
0180358B38	Ring PTT Switch for Ear Microphone Systems BDN6646 & BDN6706
0180300E83	Body PTT Switch for Ear Microphone Systems BDN6646 & BDN6706
0180300E25	Ear Guard with Adjustable Loop
0180358B32	Ear Holder, Small (Black)
0180358B33	Ear Holder, Medium (Black)
0180358B34	Ear Holder, Large (Black)
0180358B35	Ear Holder, Small (Clear)
0180358B36	Ear Holder, Medium (Clear)
0180358B37	Ear Holder, Large (Clear)

### Remote Speaker Microphones

HMN9030	Remote Speaker Microphone
HKN9094	Replacement Cord for HMN9030

### Miscellaneous

TDN9327	Portable Radio Hanger for door panels up to 2.75 inches (slides over and hangs from the door panel in vehicle, radio belt clip required)
TDN9373	Portable Radio Hanger for door panels up to 2.75 to 3.25 inches (slides over and hangs from the door panel in vehicle, radio belt clip required)
RLN5500	Accessory Retainer Kit (for use with any audio accessory that needs to be secured to the radio due to demanding customer environments)

### Manuals

6881096C23	PR400 Full Keypad User Guide, English/French
6881096C26	PR400 Limited Keypad User Guide, English/French
6881096C27	PR400 Non-Keypad User Guide, English/French
6881096C25	PR400 Detailed Service Manual, English
HKLN4219	PR400 User Guide CDROM, English/French

**This Page Intentionally Left Blank**

---

# Appendix B Warranty, Service Support, and Replacement Parts

## B.1 Scope of Manual

This manual is intended for use by service technicians familiar with similar types of equipment. It contains service information required for the equipment described and is current as of the printing date. Changes which occur after the printing date may be incorporated by a complete Manual revision or alternatively as additions.

**Notes:** Before operating or testing these units, please read the Product Safety and RF Exposure Compliance section in the front of this manual.

## B.2 Warranty

Motorola offers long term support for its products. This support includes full exchange and/or repair of the product during the warranty period, and service/ repair or spare parts support out of warranty. Any “return for exchange” or “return for repair” by an authorized Motorola Dealer must be accompanied by a Warranty Claim Form. Warranty Claim Forms are obtained by contacting an Authorized Motorola Dealer.

### B.2.1 Warranty Period and Return Instructions

The terms and conditions of warranty are defined fully in the Motorola Dealer, Distributor, or Reseller contract. These conditions may change from time to time and the following notes are for guidance purposes only.

In instances where the product is covered under a “return for replacement” or “return for repair” warranty, a check of the product should be performed prior to shipping the unit back to Motorola. This is to ensure that the product has been correctly programmed or has not been subjected to damage outside the terms of the warranty.

### B.2.2 After Warranty Period

After the Warranty period, Motorola continues to support its products in two ways.

1. Motorola's Radio Products and Services Division (RPSD)\* offers a repair service to both end users and dealers at competitive prices.
2. Radio Products and Services Division (RPSD) supplies individual parts and modules that can be purchased by dealers who are technically capable of performing fault analysis and repair.

\* The Radio Products and Services Division (RPSD) was formerly known as the Accessories and Aftermarket Division (AAD)

## B.3 Replacement Parts Ordering

### B.3.1 Basic Ordering Information

When ordering replacement parts or equipment information, the complete identification number should be included. This applied to all components, kits, and chassis. If the component part number is not known, the order should include the number of the chassis or kit of which it is a part, a sufficient description of the desired component to identify it.

---

### B.3.2 Motorola Online

Motorola online users can access our on-line catalog at:

<HTTPS://WWW.motorola.com/businessonline>

To register for online access, please call 800-814-0601 (for U.S. and Canada Service Centers only).

### B.3.3 Mail Orders

Send written orders to the following addresses:

**Replacement Parts/Test  
Equipment/Manuals/Crystal  
Service Items:**

Motorola, Inc.  
Radio Products and Services Division  
Attention: Order Processing  
2200 Galvin Dr.  
Elgin, IL 60123  
U.S.A.

**Federal Government Orders:**

Motorola, Inc.  
U.S. Federal Government  
Markets Division  
Attention: Order Processing  
7230 Parkway Drive  
Landover, MD21076  
U.S.A.

**International Orders:**

Motorola, Inc.  
Radio Products and Services  
Division  
Attention: Order Processing  
2200 Galvin Dr.  
Elgin, IL 60123  
U.S.A.

### B.3.4 Telephone Orders

Radio Products and Services Division (RPSD)\*  
(United States and Canada)

7:00 AM to 7:00 PM (Central Standard Time)

Monday through Friday (Chicago, U.S.A.)

1-800-422-4210

847-538-8023 (International Orders)

U.S. Federal Government Markets Division (USFGMD)

1-800-826-1913 Federal Government Parts - Credit Card Only

8:30 AM to 5:00 PM (Eastern Standard Time)

### B.3.5 Fax Orders

Radio Products and Services Division (RPSD)  
(United States and Canada)

1-800-622-6210

847-576-3023 (International)

USFGMD

(Federal Government Orders)

1-800-526-8641 (For Parts and Equipment Purchased Orders)

### B.3.6 Parts Identification

Radio Products and Services Division (RPSD)  
(United States and Canada)

1-800-422-4210, menu 3

\* The Radio Products and Services Division (RPSD) was formerly known as the Accessories and Aftermarket Division (AAD)

### **B.3.7 Product Customer Service**

Customer Response Center  
(Non-technical Issues)  
1-800-247-2346  
FAX: 1-800-247-2347

## **B.4 Technical Support**

Technical support is available to assist the dealer/distributor in resolving any malfunction which may be encountered. Initial contact should be by telephone wherever possible. When contacting Motorola Technical Support (Customer Resources), be prepared to provide the product **model number** and the unit's **serial number**.

### **Motorola Radio Support Center**

3761 South Central Avenue  
Rockford, IL 61102-4294  
1-800-227-6772  
1-815-489-1000

### **Canadian Technical Logistics Centre**

400 Matheson Blvd. W,  
Mississauga, Ontario, Canada L5R 3M1  
1-800-543-3222  
1-416-756-5841  
1-888-331-9872 (Fax)

### **Motorola U.S. Federal Government Depot**

4395 Nicole Drive  
Lanham, MD 20706  
1-800-969-6680  
1-301-731-6676

**This Page Intentionally Left Blank**

---

## Glossary of Terms

Term	Definition
ALC	Automatic Level Control: a circuit in the transmit RF path that controls RF power amplifier output, provides leveling over frequency and voltage, and protects against high VSWR (voltage standing wave ratio).
ASFIC	Audio Signalling Filter Integrated Circuit
BKC	Bad Key Chirp
CD	Compact Disk
CMP	Compression
CPS	Customer Programming Software
CSQ	Carrier Squelch
DTMF	Dual-Tone Multifrequency
DPL	Digital Private-Line™
EEPROM	Electrically Erasable/Programmable Read-Only Memory: used by the radio to store its personality
Firmware	Software, or a software/hardware combination of computer programs and data, with a fixed logic configuration stores in a read-only memory. Information cannot be altered or reprogrammed.
FGU	Frequency Generation Unit
GaAs	Gallium Arsenide: a type of crystalline material used in some semiconductors.
GKC	Good Key Chirp
ISW	Inbound Signalling Word: data transmitted on the control channel from a subscriber unit to the central control unit.
LH DATA	Longhorn Data: a bidirectional 0-5V, RS-232 line protocol that uses the micro-controller's integrated RS-232 asynchronous serial communications interface (SCI) peripheral.
LLE	Low Level Expander: slight amount of volume expansion; used to improve the signal to noise ratio.
MCU	Micro Controller Unit
MRTI	Motorola Radio-Telephone Interconnect: a system that provides a repeater connection to the Public Switched Telephone Network (PSTN). The MRTI allows the radio to access the telephone network when the proper access code is received.
OMPAC	Over-Molded Pad-Array Carrier: a Motorola custom package, distinguished by the presence of solder balls on the bottom pads.
PC Board	Printed Circuit Board
PL	Private-Line® tone squelch: a continuous sub-audible tone that is transmitted along with the carrier.

---

Term	Definition
PLL	Phase-Locked Loop: a circuit in which an oscillator is kept in phase with a reference, usually after passing through a frequency divider.
PTT	Push-To-Talk: the switch located on the left side of the radio; when pressed, causes the radio to transmit.
RAM	Random Access Memory: the radio's RAM is loaded with a copy of the EEPROM data.
Registers	Short-term data-storage circuits within the microcontroller.
RESET	Reset line: an input to the microcontroller that restarts execution.
RF PA	Radio Frequency Power Amplifier
RIB	Radio Interface Box
ROM	Read Only Memory
RSSI	Received Signal-Strength Indicator: a dc voltage proportional to the received RF signal strength.
RPT/TA	Repeater/Talk-Around
Softpot	A computer-adjustable electronic attenuator
Software	Computer programs, procedures, rules, documentation, and data pertaining to the operation of a system.
SPI (clock and data lines)	Serial Peripheral Interface: how the microcontroller communicates to modules and ICs through the CLOCK and DATA lines.
Squelch	Muting of audio circuits when received signal levels fall below a pre-determined value.
Standby Mode	An operating mode whereby the radio is muted but still continues to receive data
TOT	Time-Out Timer: a timer that limits the length of a transmission.
TPL	Tone Private-line
μC	Microcontroller
UHF	Ultra High Frequency
μP	Microprocessor
VCO	Voltage-Controlled Oscillator: an oscillator whereby the frequency of oscillation can be varied by changing a control voltage.
VCOBIC	Voltage-Controlled Oscillator Buffer Integrated Circuit
VHF	Very High Frequency
VSWR	Voltage Standing Wave Ratio

# Index

## A

After Warranty Period.....	1-1
Appendix A Accessories .....	A-1
Appendix B Warranty, Service Support, and Replacement Parts .....	B-1
Replacement Parts Ordering .....	1-1
Basic Ordering Information.....	1-1
Fax Orders.....	1-2
Mail Orders.....	1-2
Motorola Online .....	1-2
Parts Identification.....	1-2
Product Customer Service .....	1-3
Scope of Manual.....	1-1
Technical Support .....	1-3
Telephone Orders.....	1-2
Warranty .....	1-1
After Warranty Period .....	1-1
Warranty Period and Return Instructions .....	1-1
Auto Tune, Receiver Tuning .....	5-13

## B

Basic Ordering Information .....	1-1
----------------------------------	-----

## C

Chassis and Front Cover Re-assembly, Full Keypad Model .....	6-13
Chassis and Front Cover Re-assembly, Limited Keypad Model.....	7-13
Chassis and Front Cover Re-assembly, PR400 Non-Keypad .....	8-10
Chassis Assembly/Re-assembly, Full Keypad Model .....	6-12
Chassis Assembly/Re-assembly, Limited Keypad Model.....	7-12
Chassis Assembly/Re-assembly, PR400 Non-Keypad .....	8-9
Chassis Disassembly, Non-Keypad .....	8-7

Chassis Disassembly, Full Keypad Model .....	6-8
Chassis Disassembly, Limited Keypad Model.....	7-8
Cleaning Procedures, Limited Keypad Model.....	7-1
Cleaning Procedures, Non-Keypad .....	8-1
Cleaning Procedures, Full Keypad Model.....	6-1
Computer Software Copyrights.....	ii
Disclaimer.....	ii
Document Copyrights .....	ii
Foreword .....	ii
Product Safety and RF Exposure Compliance .....	ii
CPS Programming Setup, Radio Alignment .....	5-1

## D

Disassembling and Re-assembling the Radio - General, Full Keypad Model .....	6-3
Disassembling and Re-assembling the Radio - General, Limited Keypad Model.....	7-3
Disassembling and Re-assembling the Radio - General, Non-Keypad .....	8-3
Disclaimer, Computer Software Copyrights .....	ii
Document Copyrights, Computer Software Copyrights.....	ii
DTMF Deviation Tuning .....	5-9
Dust Cover Disassembly, Full Keypad Model .....	6-6
Dust Cover Disassembly, Limited Keypad Model..	7-6
Dust Cover Disassembly, Non-Keypad .....	8-5
Dust Cover Re-assembly Non-Keypad .....	8-8
Dust Cover Re-assembly, Full Keypad Model.....	6-9
Dust Cover Re-assembly, Limited Keypad Model .	7-9

## E

## F

Fax Orders.....	1-2
Foreword, Computer Software Copyrights.....	ii
Front Cover From Chassis Disassembly, Full Keypad Model .....	6-3

---

Front Cover from Chassis Disassembly, Limited Keypad Model.....	7-3	Inspection, Non-Keypad.....	8-1
Front Cover From Chassis Disassembly, Non-Keypad .....	8-3	Introduction, Full Keypad Mod .....	6-1
Full Keypad Model Disassembly and Re-assembly .....	6-1	Introduction, Limited Keypad Model.....	7-1
Introduction .....	6-1	Introduction, Non-Keypad .....	8-1
Preventive Maintenance.....	6-1	Introduction, Radio Alignment.....	5-1
Inspection .....	6-1	Introduction, Theory Of Operation .....	2-1
Cleaning Procedures .....	6-1	<b>J</b>	
Safe Handling of CMOS and LDMOS Devices ..	6-2	<b>K</b>	
Disassembling and Re-assembling the Radio - General .....	6-3	Keyboard Removal, Full Keypad Model .....	6-7
Radio Disassembly - Detailed .....	6-3	Keyboard Removal, Limited Keypad Model .....	7-7
Front Cover From Chassis Disassembly ..	6-3	Keyboard Retainer Re-assembly, Full Keypad Model .....	6-12
Dust Cover Disassembly .....	6-6	Keyboard Retainer Re-assembly, Limited Keypad Model .....	7-12
Speaker and Microphone Disassembly....	6-6	Keypad and LCD/Keyboard Re-assembly, Full Keypad Model .....	6-11
Keyboard Removal .....	6-7	Keypad and LCD/Keyboard Re-assembly, Limited Keypad Model.....	7-11
PTT Disassembly .....	6-7	<b>L</b>	
Chassis Disassembly .....	6-8	Limited Keypad Model Disassembly and Re-assembly .....	7-1
Radio Re-assembly - Detailed.....	6-9	Introduction.....	7-1
Dust Cover Re-assembly .....	6-9	Preventive Maintenance .....	7-1
Microphone and Speaker Re-assembly ...	6-9	Inspection.....	7-1
Keypad and LCD/Keyboard Re-assembly .....	6-11	Cleaning Procedures.....	7-1
Keyboard Retainer Re-assembly.....	6-12	Safe Handling of CMOS and LDMOS Devices ..	7-2
Chassis Assembly/Re-assembly .....	6-12	Disassembling and Re-assembling the Radio - General .....	7-3
Chassis and Front Cover Re-assembly ..	6-13	Radio Disassembly - Detailed .....	7-3
PTT Re-assembly.....	6-15	Front Cover from Chassis Disassembly ...	7-3
Mechanical View and Parts List.....	6-16	Dust Cover Disassembly .....	7-6
PR400 Full-Keypad Exploded View and Parts List.....	6-16	Speaker and Microphone Disassembly....	7-6
<b>G</b>		Keyboard Removal.....	7-7
General, Performance Checks .....	4-1	PTT Disassembly .....	7-8
<b>H</b>		Chassis Disassembly .....	7-8
<b>I</b>		Radio Re-assembly - Detailed.....	7-9
Initial Test Equipment Control Settings, Radio Tuning Setup.....	5-3	Dust Cover Re-assembly .....	7-9
Inspection, Full Keypad Model .....	6-1	Microphone and Speaker Re-assembly ...	7-9
Inspection, Limited Keypad Model .....	7-1	Keypad and LCD/Keyboard Re-assembly .....	7-11

---

Keyboard Retainer Re-assembly .....	7-12	Modulation Balance Attenuation, Transmitter Alignment.....	5-4
Chassis Assembly/Re-assembly.....	7-12	Motorola Online .....	1-2
Chassis and Front Cover Re-assembly..	7-13	<b>N</b>	
PTT Re-assembly .....	7-15	Non-Keypad Model Disassembly and Re-assembly.....	8-1
Mechanical View and Parts List.....	7-16	Introduction.....	8-1
Limited-Keypad Exploded View and Parts List .....	7-16	Preventive Maintenance .....	8-1
List of Figures .....	vii	Inspection.....	8-1
List of Tables .....	x	Cleaning Procedures.....	8-1
<b>M</b>		Safe Handling Of CMOS and LDMOS Devices.....	8-2
Mail Orders .....	1-2	Disassembling and Re-assembling the Radio - General.....	8-3
Major Assemblies, Theory Of Operation.....	2-1	Radio Disassembly - Detailed .....	8-3
Manual Squelch, Receiver Tuning.....	5-12	Front Cover From Chassis Disassembly..	8-3
MDC1200 Deviation Tuning (MDC radios only) ...	5-10	Dust Cover Disassembly.....	8-5
Mechanical View and Parts List, Full Keypad Model .....	6-16	Speaker and Microphone Disassembly ...	8-6
Mechanical View and Parts List, Limited Keypad Model.....	7-16	PTT Disassembly.....	8-6
Mechanical View and Parts List, Non-Keypad .....	8-13	Chassis Disassembly .....	8-7
Microphone and Speaker Re-assembly, Full Keypad Model .....	6-9	Radio Re-assembly - Detailed .....	8-8
Microphone and Speaker Re-assembly, Limited Keypad Model.....	7-9	Dust Cover Re-assembly .....	8-8
Microphone and Speaker Re-assembly, Non-Keypad .....	8-8	Microphone and Speaker Re-assembly...	8-8
MIL Standards.....	1-8	Chassis Assembly/Re-assembly.....	8-9
Model Charts and Test Specifications.....	1-1	Chassis and Front Cover Re-assembly .	8-10
Radio Model Information.....	1-1	PTT Re-assembly .....	8-11
MIL Standards .....	1-9	Mechanical View and Parts List .....	8-13
Model Chart for VHF 136-162 MHz .....	1-2	Non-Keypad Exploded View and Parts List.....	8-13
Model Chart for VHF 146-174 MHz .....	1-3	<b>O</b>	
Model Chart for UHF 403-438 MHz .....	1-5	Operational Error Codes.....	9-1
Model Chart for UHF 438-470 MHz .....	1-6	<b>P</b>	
Model Chart for UHF 465-495 MHz .....	1-7	Parts Identification .....	1-2
UHF Specifications .....	1-8	Performance Checks .....	4-1
VHF Specifications .....	1-4	General.....	4-1
Model Chart for UHF 403-438 MHz .....	1-5	Power-Up Self Test.....	4-1
Model Chart for UHF 438-470 MHz .....	1-6	RF Test Mode .....	4-2
Model Chart for UHF 465-495 MHz .....	1-7	PTT Disassembly, Limited Keypad Model.....	7-8
Model Chart for VHF 136-162 MHz .....	1-2	PTT Disassembly, PR400 Non-Keypad .....	8-6
Model Chart for VHF 146-174 MHz .....	1-3	PTT Re-assembly, Limited Keypad Model .....	7-15

PTT Re-assembly, PR400 Non-Keypad ..... 8-11

Power-Up Error Codes ..... 9-1

Power-Up Self Test, Performance Checks ..... 4-1

PR400 Full-Keypad Exploded View and Parts List ..... 6-16

PR400 Limited-Keypad Exploded View and Parts List ..... 7-16

PR400 Non-Keypad Exploded View and Parts List ..... 8-13

Preventive Maintenance, Full Keypad Model ..... 6-1

Preventive Maintenance, Limited Keypad Model... 7-1

Preventive Maintenance, Non-Keypad ..... 8-1

Product Customer Service ..... 1-3

Product Safety and RF Exposure Compliance..... ii

Program Serial No, Utilities ..... 514

PTT Disassembly, Full Keypad Model..... 6-7

PTT Re-assembly, Full Keypad Model ..... 6-15

**Q**

**R**

Radio Alignment Procedures ..... 5-1

    CPS Programming Setup..... 5-1

    Introduction ..... 5-1

    Radio Tuning Setup ..... 5-2

        Initial Test Equipment Control Settings..... 5-3

    Transmitter Alignment Options..... 5-3

        Reference Oscillator Warp..... 5-3

        Modulation Balance Attenuation..... 5-4

        Transmit Power Tuning..... 5-5

            To Perform Transmit Low Power Tuning ... 5-6

            To Perform Transmit High Power Tuning .. 5-6

    VCO Attenuation..... 5-7

        VCO Attenuation 12.5 kHz ..... 5-8

        VCO Attenuation 20 kHz ..... 5-8

        VCO Attenuation 25 kHz ..... 5-7

    DTMF Deviation Tuning ..... 5-9

    MDCI200 Deviation Tuning (MDC radios only)..... 5-10

    Receiver Tuning ..... 5 10

    Rated Volume Tuning ..... 5-11

    Squelch Tuning ..... 5-12

        Auto Tune ..... 5-13

    Manual Squelch Tuning..... 5-12

    RSSI Display Tuning..... 5-14

    RSSI System Level Tuning..... 5-13

    Radio-to-Radio Cloning ..... 5-14

Radio Disassembly - Detailed, Full Keypad Model ..... 6-3

Radio Disassembly - Detailed, Limited Keypad Model..... 7-3

Radio Disassembly - Detailed, Non-Keypad ..... 8-3

Radio Model Information..... 1-1

Radio Re-assembly - Detailed, Full Keypad Model ..... 6-9

Radio Re-assembly - Detailed, Limited Keypad Model..... 7-9

Radio Re-assembly - Detailed, Non-Keypad ..... 8-8

Radio Tuning Setup..... 5-2

Radio-to-Radio Cloning..... 5-14

Rated Volume Tuning, Receiver Tuning ..... 5-11

Receiver Tuning ..... 5 10

Receiver, Theory Of Operation ..... 2-1

Reference Oscillator Warp, Transmitter Alignment ..... 5-3

Replacement Parts Ordering ..... 1-1

RF Test Mode, Performance Checks ..... 4-2

RSSI Display Tuning, Receiver Tuning..... 5-14

RSSI System Level Tuning, Receiver Tuning ..... 5-13

**S**

Safe Handling of CMOS and LDMOS Devices, Full Keypad Model ..... 6-2

Safe Handling of CMOS and LDMOS Devices, Limited Keypad Model..... 7-2

Safe Handling Of CMOS and LDMOS Devices, Non-Keypad ..... 8-2

Scope of Manual ..... 1-1

Service Aids..... 3-2

Speaker and Microphone Disassembly, Full Keypad Model y..... 6-6

Speaker and Microphone Disassembly, Limited Keypad Model..... 7-6

Speaker and Microphone Disassembly, Non-Keypad ..... 8-6

Squelch Tuning, Receiver Tuning..... 5-12

**T**

Technical Support .....	1-3
Telephone Orders .....	1-2
Temp Comp Data Read, Utilities .....	5-14
Temp Comp Data Write, Utilities .....	5-14
Test Equipment, Service Aids, and Service Tools.....	3-1
Service Aids.....	3-2
Test Equipment.....	3-1
Theory Of Operation .....	2-1
Introduction.....	2-1
Major Assemblies .....	2-1
Receiver .....	2-1
Transmitter.....	2-2
To Perform Transmit High Power Tuning .....	5-6
To Perform Transmit Low Power Tuning .....	5-6
Transmit Power Tuning .....	5-5
Transmitter Alignment Options .....	5-3
Transmitter, Theory Of Operation.....	2-2
Troubleshooting Tables .....	9-1
Power-Up Error Codes.....	9-1
Operational Error Codes.....	9-1
Troubleshooting Table for Receiver.....	9-2
Troubleshooting Table for Transmitter .....	9-3

**U**

UHF Specifications .....	1-8
Utilities .....	5-14
Program Serial No .....	5-14
Temp Comp Data Read .....	5-14
Temp Comp Data Write .....	5-14

**V**

VCO Attenuation 12.5 kHz.....	5-8
VCO Attenuation 20 kHz.....	5-8
VCO Attenuation 25 kHz.....	5-7
VCO Attenuation .....	5-7
VHF Specifications.....	1-4

**W**

Warranty Period and Return Instructions.....	1-1
Warranty .....	1-1

**X****Y****Z**

**This Page Intentionally Left Blank**





MOTOROLA and The Stylized M logo are trademarks of Motorola, Inc.  
All other product or service names are the property of their respective owners.  
© 2004 Motorola, Inc. All rights reserved. Printed in U.S.A.



**6881096C24-A**



**MANUAL REVISION  
6881096C24-A  
PR400  
Portable Radios  
Basic Service Manual**

---

This revision outlines changes that have occurred since the printing of your manual. Use this information to supplement your manual. Installation of these changes in earlier equipment is not necessary except as recommended in Motorola Service and Repair Notes (SRNs).

**REVISION CHANGE:**

Please use the following information to supplement your existing basic service manual. The table that follows lists the pages attached to this PMR and their related basic service manual chapter.

<b>Page</b>	<b>Chapter</b>	<b>Section Title</b>	<b>Description</b>
4-2	4	RF Test Mode	Added note for RF Test Mode setup requirement
5-2	5	Radio Tuning Setup	Added note for Global Tuner setup requirement



---

## Notes

---

## Chapter 4 Performance Checks

### 4.1 General

These radios meet published specifications through their manufacturing process by utilizing high-accuracy laboratory-quality test equipment. The recommended field service equipment is as accurate as the manufacturing equipment with few exceptions. This accuracy must be maintained in compliance with the manufacturer's recommended calibration schedule.

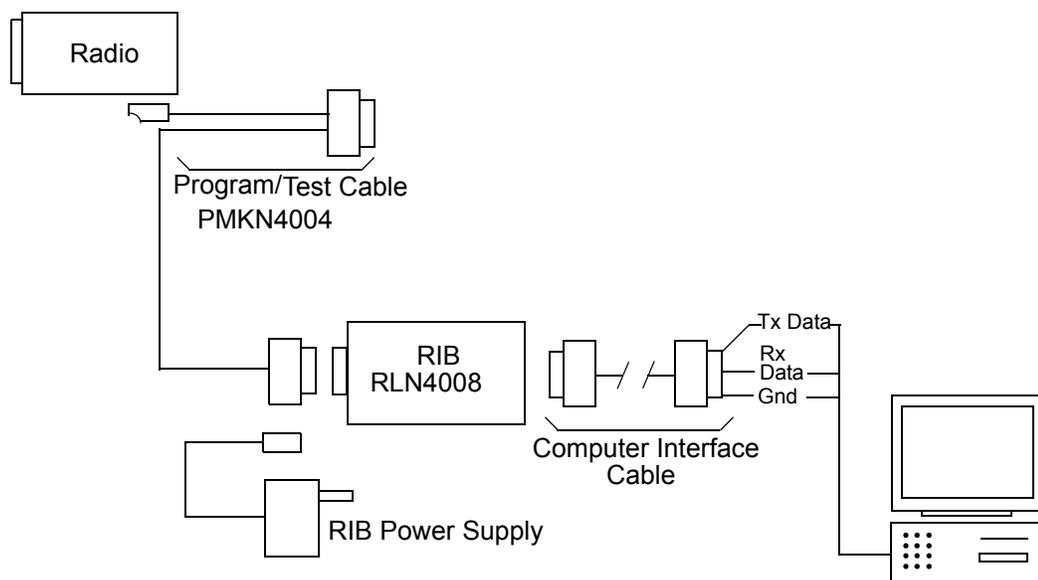


Figure 4-1. Radio Performance Checks Setup

### 4.2 Power-Up Self Test

Applying power to the radio by using the on/off volume control, starts a self-test routine which checks the RAM, EEPROM hardware and EEPROM checksum. Pressing and holding SB1 while turning on the radio causes the self-test routine to check for the ROM checksum as well. If these checks are successfully completed, the radio will generate the Self-Test Pass Tone. If the self-test is not successful, a Self-Test Fail Tone is heard.

Supply voltage can be connected from the battery eliminator. The equipment required for alignment procedures is connected as shown in the Radio Performance Checks Setup diagram (Figure 4-1).

Initial equipment control settings should be as indicated in [Table 4-1](#) and should be the same for all performance checks and tuner alignment procedures.

*Table 4-1. Initial Equipment Control Settings*


Service Monitor	Test Set	Power Supply
Monitor Mode: Power Monitor	Spkr set: A	Voltage: 7.5 Vdc
RF Attenuation: -70	Spkr/load: Speaker	DC on/standby: Standby
AM, CW, FM: FM	PTT: OFF	Volt Range: 10 V
Oscilloscope Source: Mod Oscilloscope Horiz: 1 0 mSec/Div Oscilloscope Vert: 2.5kHz/Div Oscilloscope Trig: Auto Monitor Image: Hi Monitor BW: Nar Monitor Squelch: mid CW Monitor Vol: 1/4 CW		Current: 2.5 A

### 4.3 RF Test Mode

When the PR400 radio is operating in its normal environment, the radio's microcomputer controls the RF channel selection, transmitter key-up, and receiver muting, according to the customer codeplug configuration. However, when the unit is on the bench for testing, alignment, or repair, it must be removed from its normal environment using a special routine, called RF TEST MODE. This mode allows bench testing of the radio at various test frequencies across the entire band, at both high and low transmit power (if applicable), at various channel spacings, and with different coded or carrier squelch types. Any customer specific programming in the radio will not be changed or affected by use of the RF Test Mode..

**Note: Radio Setup Requirement**

Ensure at least one Conventional Personality Channel is programmed on the radio for RF Test Mode to function properly.

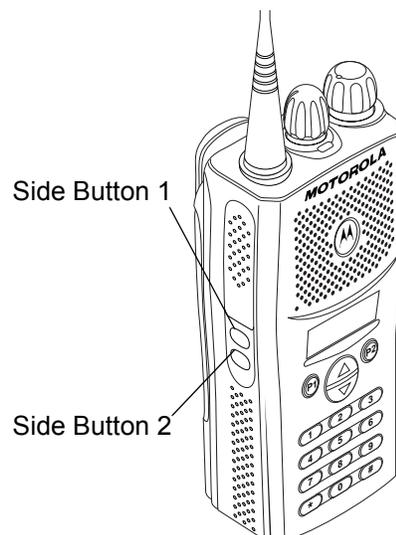

*Figure 4-2. Side Button Locations*

---

# Chapter 5 Radio Alignment Procedures

## 5.1 Introduction

This chapter provides an overview of the Commercial Series Customer Programming Software (CPS) and the Global Tuner as designed for use in a Windows<sup>®</sup> 98/NT4/2000/ME/XP environment. Both cover all the functions of the traditional Radio Service Software (RSS) package.

They are both available in the CPS and Global Tuner (CD ROM) Kit (RVN4191).

## 5.2 CPS Programming Setup

Refer to online help files for the CPS Programming procedures. (See [Figure 5-1](#) for CPS Programming Setup).

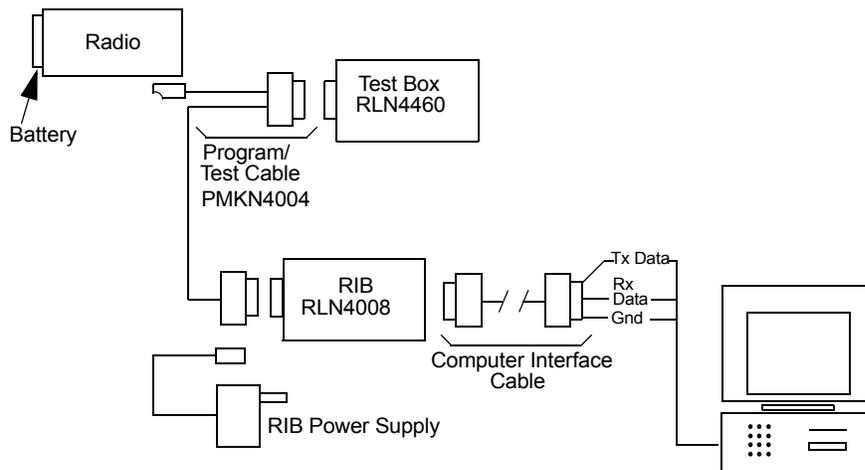


Figure 5-1. CPS Programming Setup

### 5.3 Radio Tuning Setup

A Windows 98/NT4/2000/ME/XP PC (personal computer) and Global Tuner are required to tune the radio. To perform the tuning procedures, the radio must be connected to the PC, RIB (Radio Interface Box) and Universal Test Set as shown in Figure 5-2 below. Refer to online help files for the tuning procedures.

**Note: Radio Setup Requirement**  
 Ensure at least one Conventional Personality Channel is programmed on the radio for Global Tuner to function properly.

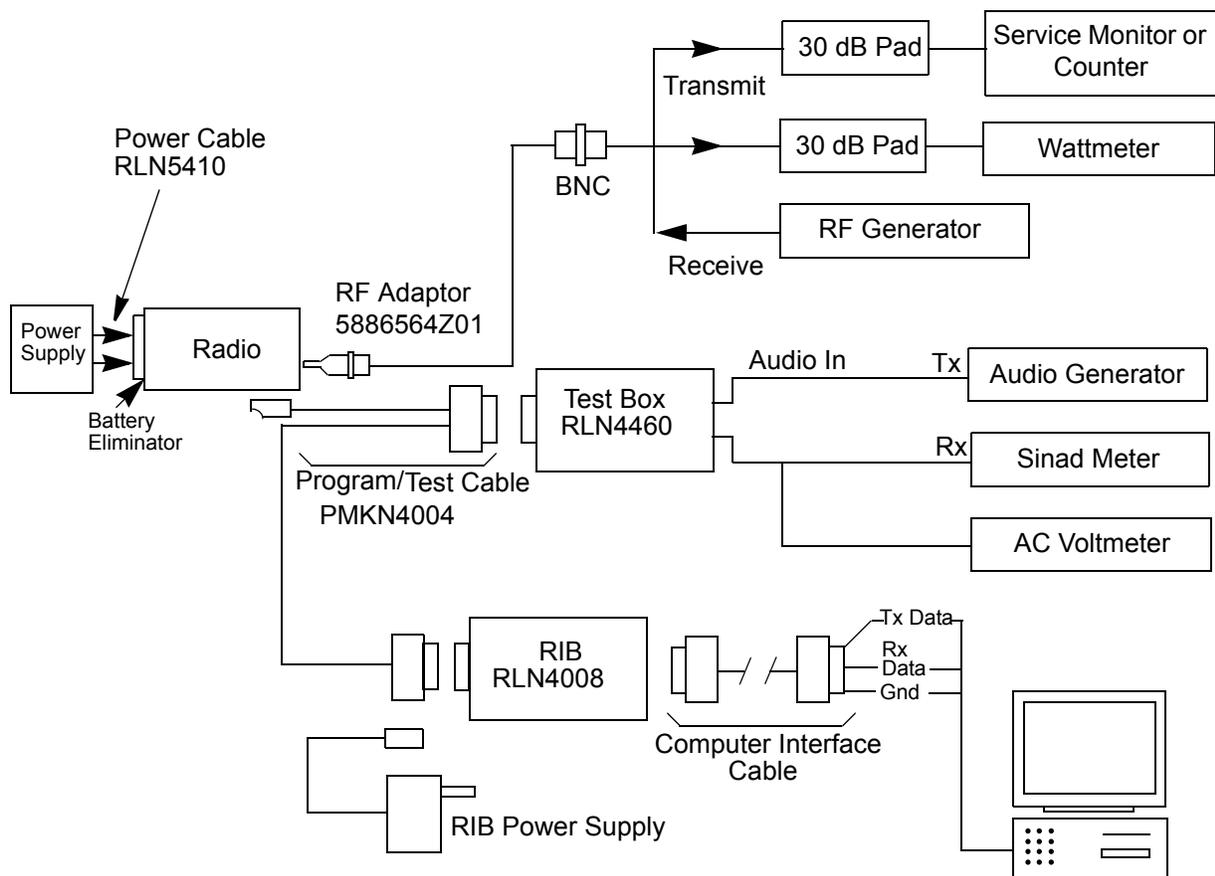


Figure 5-2. Radio Tuning Setup