

## Contents


This retrofit kit includes the following items:

- |                  |   |                        |                     |
|------------------|---|------------------------|---------------------|
| • Front Cover    | NTN7151B (for non keypad radios), or<br>NTN7156A-SP01 (for keypad radios) | • HT 1000 Label        | 3305183R56          |
| • Controls Flex  | NTN7087A  | • Escutcheon, 2-Freq.  | 1305872V02          |
| • Front Shield   | 2605891U02  | • Escutcheon, 16-Freq. | 1305872V01          |
| • Motorola Label | 3305183R55  | • Conductive Pad       | 7505870Z03 (qty. 2) |

## Corrective Action

Refer to Service Manual 68P81200C40, page 17, SECTION IV. DISASSEMBLY AND REASSEMBLY.

1. Per service manual disassembly procedure, remove the front cover, the front shield, and the controls flex. Discard those three parts.
2. Replace the front cover, front shield, and controls flex with the replacement items from the retrofit kit.
3. Refer to Figure 1 for placement of conductive pads. Remove backing from the conductive pads and stick them to the surfaces as illustrated in Figure 1.

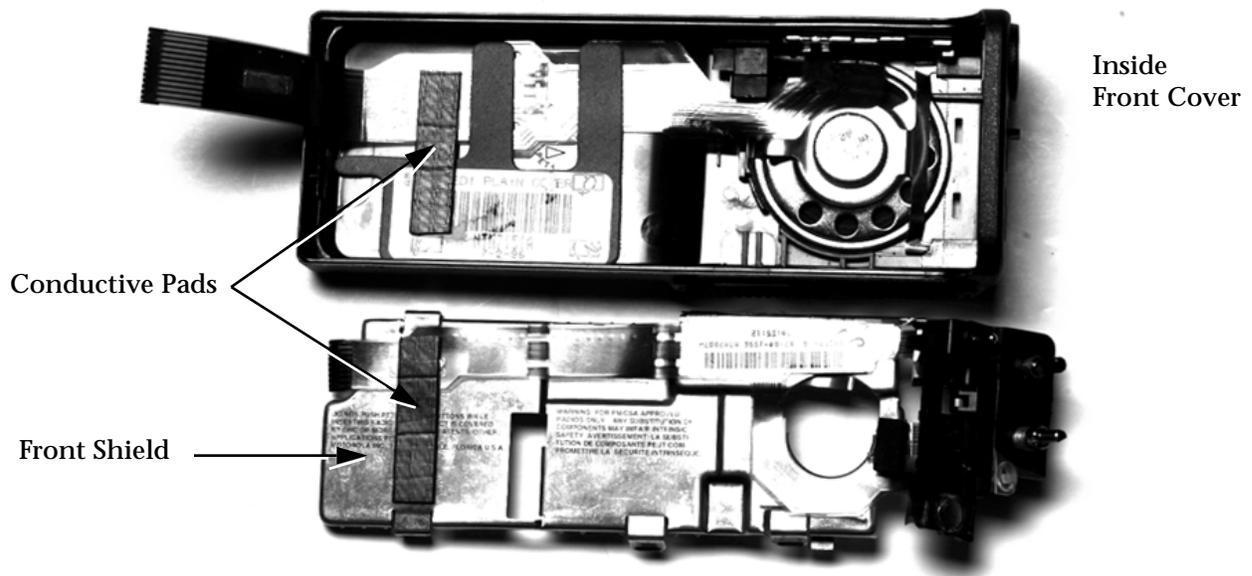

*Figure 1. Conductive Pad Placement*

4. Reassembly the radio per instructions in the service manual.
5. Install new escutcheon and labels provided.
6. Retest per instructions on SRN1206.

 , and Motorola are trademarks of Motorola, Inc.

© 1996 by Motorola Radio Products Group  
 8000 W. Sunrise Blvd., Ft. Lauderdale, FL 33322  
 Printed in U.S.A. 11/96. All Rights Reserved.