

8.4 T2000-05 Remote Speaker Kit

The T2000-05 remote speaker kit provides a 4Ω external speaker for T2010, T2015 and T2030 models.

8.4.1 Components Required

The T2000-05 kit contains the following components:

Quantity	Description
1	T2000 speaker complete with mounting bracket and thumb screws
2	M4 self tapping screws
2	'U' type captive nuts for self tapping screws
5m	speaker wire complete with receptacles and speaker socket

8.4.2 Fitting

- 1 Choose a suitable mounting position for the speaker.

With the speaker fitted to the mounting bracket, check that it does not interfere with the operation of any of the vehicle controls.

- 2 Fix the speaker mounting bracket securely in the chosen location with suitable fasteners. Two M4 self tapping screws and 'U' type captive nuts have been supplied for this purpose.

Caution: Check before drilling that the drill will not damage any components or wiring behind the panel.

- a If drilling directly into metal, drill two 3.5mm holes in the appropriate locations and secure the bracket with the supplied M4 self tapping screws.
 - b If mounting the bracket to any other material, such as plastic, drill two 4.5mm holes and attach the bracket with the M4 screws and captive nuts. Slide a captive nut over the edge of the panel to align with each hole, ensuring that the screw will pass through the larger hole to thread into the smaller hole.
 - c If neither of the above methods is appropriate, M4 screws, nuts and shakeproof washers are equally suitable.
- 3 Attach the speaker to the mounting bracket with the thumbscrews.

4 Refer to Figure 8.4.1.

Remove the existing internal speaker link and insert the three speaker wire receptacles into the appropriate power connector holes, as shown.

If the internal speaker is not required, cut the internal speaker ground link.

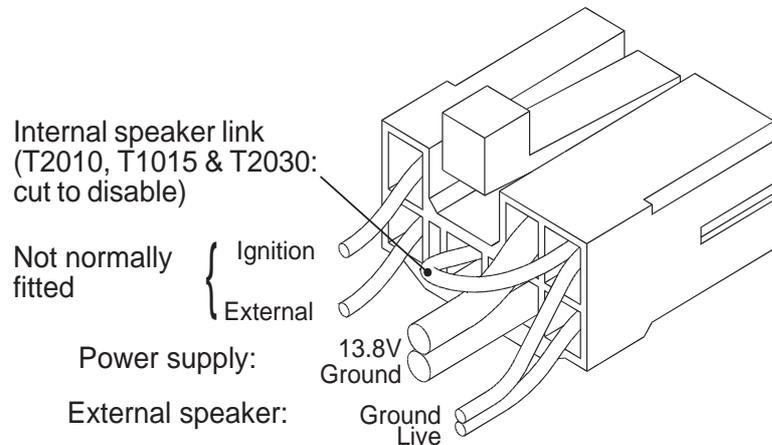


Figure 8.4.1 T2000 Power Connector

5 Plug the speaker into the socket provided on the speaker wire, neatly loop any excess wire and secure with a cable tie.

Peel the protective plastic off the “Tait” label on the front of the speaker.