



System Release 7.13

ASTRO® 25 INTEGRATED VOICE AND DATA

GTR 8000 BASE RADIO

November 2012



6871022P86-A

Copyrights

The Motorola products described in this document may include copyrighted Motorola computer programs. Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted computer programs. Accordingly, any copyrighted Motorola computer programs contained in the Motorola products described in this document may not be copied or reproduced in any manner without the express written permission of Motorola.

© 2012 Motorola Solutions, Inc. All Rights Reserved

No part of this document may be reproduced, transmitted, stored in a retrieval system, or translated into any language or computer language, in any form or by any means, without the prior written permission of Motorola Solutions, Inc.

Furthermore, the purchase of Motorola products shall not be deemed to grant either directly or by implication, estoppel or otherwise, any license under the copyrights, patents or patent applications of Motorola, except for the normal nonexclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Disclaimer

Please note that certain features, facilities, and capabilities described in this document may not be applicable to or licensed for use on a particular system, or may be dependent upon the characteristics of a particular mobile subscriber unit or configuration of certain parameters. Please refer to your Motorola contact for further information.

Trademarks

MOTOROLA, MOTO, MOTOROLA SOLUTIONS, and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC and are used under license. All other trademarks are the property of their respective owners.

European Union (EU) Waste of Electrical and Electronic Equipment (WEEE) directive



The European Union's WEEE directive requires that products sold into EU countries must have the crossed out trash bin label on the product (or the package in some cases).

As defined by the WEEE directive, this cross-out trash bin label means that customers and end-users in EU countries should not dispose of electronic and electrical equipment or accessories in household waste.

Customers or end-users in EU countries should contact their local equipment supplier representative or service centre for information about the waste collection system in their country.

Document History

Version	Description	Date
6871022P86-A	First release of the <i>GTR 8000 Base Radio</i> manual.	November 2012

Contents

1	GTR 8000 Base Radio Description	1-1
1.1	Introduction	1-1
1.1.1	GPW 8000 Receiver	1-2
1.2	GTR 8000 Base Radio/GPW 8000 Receiver Components	1-2
1.3	Supported System Configurations	1-3
1.3.1	Supported Frequencies for Trunked IV&D and Conventional Architectures	1-3
1.3.2	Supported Frequencies for HPD	1-4
1.4	Overview For a GTR 8000 Base Radio in a Trunked IP Simulcast Subsystem	1-4
1.5	Overview For a GTR 8000 Base Radio in a Trunked Single-Site Repeater Configuration	1-4
1.5.1	How To Configure The HP2610 Ethernet LAN Switch	1-6
1.6	Overview For a GTR 8000 Base Radio in a High Performance Data (HPD) Subsystem	1-6
1.7	Overview for a GTR 8000 Base Radio or GPW 8000 Receiver in Conventional Architectures	1-8
1.7.1	ASTRO 25 Conventional Base Radio/Receiver	1-8
1.7.2	Analog Conventional Base Radio/Receiver	1-9
1.8	Power Efficiency Package	1-10
1.9	GTR 8000 Base Radio/GPW 8000 Receiver Specifications	1-12
1.9.1	GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data (700 and 800 MHz)	1-12
1.9.1.1	Industry Canada	1-16
1.9.2	GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data UHF R1 (380–435 MHz)	1-17
1.9.2.1	Industry Canada	1-20
1.9.3	GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data UHF R2 (435–524 MHz)	1-21
1.9.3.1	Industry Canada	1-25
1.9.4	GTR 8000 Base/GPW 8000 Receiver Radio Specifications for Integrated Voice and Data VHF (136–174 MHz)	1-25
1.9.4.1	Industry Canada	1-29
1.9.5	GTR 8000 Base Radio Specifications for High Performance Data (700 and 800 MHz)	1-29
1.9.5.1	Industry Canada	1-31
2	GTR 8000 Base Radio Theory of Operation	2-1
2.1	Functions of the GTR 8000 Base Radio Modules	2-1
2.1.1	Function of the Transceiver Module	2-1
2.1.1.1	Transceiver Control Board	2-2
2.1.1.2	Transceiver RF Board	2-2
2.1.1.2.1	Exciter	2-3
2.1.1.2.2	Receiver	2-3
2.1.1.3	Transceiver External Interfaces	2-3
2.1.1.3.1	Transceiver Switch	2-3
2.1.1.3.2	Transceiver Option Card Intercom Button	2-4
2.1.1.3.3	Transceiver Ports (Rear)	2-4
2.1.2	Function of the Power Amplifier Module	2-4
2.1.2.1	Power Amplifier Input/Output Connections	2-5
2.1.3	Function of the Fan Module	2-6
2.1.4	Function of the Power Supply	2-7
2.1.4.1	AC/DC Power Distribution – Base Radio	2-9
2.1.4.2	Power Supply Battery Charger	2-9
2.1.4.3	Battery Temperature Sensor Cable	2-10
2.1.4.4	ON/OFF Switch for Power Supply and Battery Charger	2-10
2.1.4.5	Power Supply Module - Backplane Connections	2-11
2.2	Backplanes and Card Cages	2-12
2.3	RFDS Modules	2-12

2.3.1	RFDS - Preselector (700/800 MHz).....	2-12
2.3.2	RFDS - Preselector (UHF).....	2-12
2.3.3	RFDS - Preselector (VHF).....	2-13
2.3.4	RFDS - Transmit Filter (700/800 MHz)	2-13
2.3.5	RFDS - Duplexer (700/800 MHz)	2-14
2.3.6	RFDS - Duplexer (UHF).....	2-14
2.3.7	RFDS - Duplexer (VHF).....	2-15
2.3.8	RFDS - External Dual Circulator/Isolator Tray (700/800 MHz)	2-16
2.3.9	RFDS - External Dual Circulator/Isolator Tray (UHF)	2-17
2.3.10	RFDS - External Dual Circulator/Isolator Tray (VHF).....	2-18
2.3.11	Antenna Relay Module.....	2-18
2.3.11.1	Mounting Locations.....	2-19
2.3.11.2	Functional Operation.....	2-22
3	GTR 8000 Base Radio Installation	3-1
3.1	Pre-Installation Tasks	3-1
3.1.1	Equipment Installation Process Overview.....	3-1
3.2	General Safety Precautions	3-2
3.2.1	DC Mains Grounding Connections.....	3-4
3.2.1.1	Disconnect Device – Permanently Connected.....	3-4
3.2.1.2	Multiple Power Source.....	3-4
3.2.1.3	Connection to Primary Power.....	3-4
3.2.1.4	Replaceable Batteries.....	3-5
3.2.2	Maintenance Requiring Two People	3-5
3.2.3	Equipment Racks.....	3-5
3.2.3.1	Lifting Equipment Racks Horizontally	3-5
3.2.3.2	Lifting Equipment Racks Vertically	3-5
3.3	General Installation Standards and Guidelines	3-7
3.3.1	General Site Preparation Overview	3-7
3.3.2	General Equipment Inspection and Inventory Recommendations	3-8
3.3.3	General Placement and Spacing Recommendations	3-9
3.3.4	General Cabinet Bracing Recommendations	3-9
3.3.5	General Floor Mounting Procedure for Cabinets or Racks	3-9
3.3.6	General Bonding and Grounding Requirements	3-10
3.3.7	General Cabling Requirements.....	3-10
3.3.8	General Power Guidelines and Requirements	3-11
3.3.8.1	General AC Power Guidelines and Requirements	3-11
3.3.8.2	General Breaker Recommendations	3-12
3.3.8.3	General Battery Installation Recommendations	3-12
3.3.9	General Electrostatic Discharge Recommendations	3-13
3.3.10	FCC Requirements.....	3-13
3.3.11	Networking Tools	3-13
3.3.12	General Installation/Troubleshooting Tools	3-14
3.3.12.1	General Tools.....	3-14
3.3.12.2	Rack Tools.....	3-14
3.3.13	Technical Support for Installation.....	3-15
3.3.13.1	Site-Specific Information	3-16
3.4	GTR 8000 Base Radio Hardware Installation	3-16
3.4.1	Placement and Spacing	3-16
3.4.2	Rack Mounting The GTR 8000 Base Radio	3-17
3.4.2.1	How to Mount the Base Radio/Receiver	3-18
3.4.3	Connecting Power	3-18
3.4.3.1	Connecting Power Cables to a GTR 8000 Base Radio	3-18
3.4.3.2	DC Power Connection Wire Gauge Calculations for Integrated Voice and Data.....	3-19
3.4.3.3	DC Power Connection Wire Gauge Calculations for HPD.....	3-19
3.4.3.4	Mounting the Battery Temperature Sensor	3-21

3.4.4	Grounding The GTR 8000 Base Radio.....	3-22
3.4.4.1	How to Ground Base Radio/Receiver.....	3-23
3.4.5	Connections – Rear (Integrated Voice and Data).....	3-23
3.4.6	Connections – Rear (HPD).....	3-26
3.4.7	Connections – Front.....	3-27
3.4.7.1	System Connector Ports (Conventional).....	3-30
3.4.7.2	Wireline Port Pin-Outs.....	3-33
3.4.7.3	Microphone Port Pin-Outs.....	3-34
3.4.7.4	Speaker Port Pin-Outs.....	3-34
3.4.7.5	V.24 Port Pin-Outs.....	3-35
3.4.7.6	GTR 8000 Base Radio – Part 68 Information.....	3-35
3.5	Installation/Troubleshooting Tools.....	3-36
3.5.1	Quick Connect RF Coaxial Adapters for GTR 8000 Base Radio Support.....	3-36
3.6	Device Software Installation Prerequisites.....	3-37
3.7	Using Software Download.....	3-39
3.8	Device Installation Using the UNC.....	3-41
3.8.1	Discovering a Device with the UNC.....	3-42
3.8.2	Loading Device OS Images to the UNC.....	3-44
3.8.3	Loading Software to a Device.....	3-45
3.8.3.1	Enabling FTP Service.....	3-46
3.8.3.2	Transferring and Installing the OS Image.....	3-46
3.8.3.3	Inspecting Device Properties for Transferred and Installed Software.....	3-50
3.8.3.4	Disabling FTP Service.....	3-51
4	GTR 8000 Base Radio Configuration.....	4-1
4.1	Configuration Software.....	4-1
4.2	Discovering Devices in the UNC.....	4-1
4.3	Security/Authentication Services.....	4-2
4.4	Configuring a Device Using CSS.....	4-3
4.4.1	Initial Configuration of a Device Using CSS.....	4-3
4.4.2	Connecting Through a Serial Port Link.....	4-4
4.4.3	Serial Connection Configurations.....	4-6
4.4.3.1	Setting the Device IP Address and Pairing Number Using CSS.....	4-7
4.4.3.2	Pairing To a Comparator.....	4-8
4.4.3.3	Serial Security Services Using CSS.....	4-9
4.4.3.3.1	Setting the Serial Security Services Using CSS.....	4-9
4.4.3.4	Resetting SNMPv3 User Credentials to Factory Defaults Using CSS.....	4-10
4.4.4	Connecting Through an Ethernet Port Link.....	4-11
4.4.5	Ethernet Connection Configurations.....	4-14
4.4.5.1	Setting the BR/CM Pairing Number Using CSS.....	4-14
4.4.5.2	Setting the Date and Time Using CSS.....	4-15
4.4.5.3	Changing SNMPv3 Configuration and User Credentials Using CSS.....	4-15
4.4.5.3.1	Adding or Modifying an SNMPv3 User Using CSS.....	4-18
4.4.5.3.2	Performing an SNMPv3 Connection Verification Using CSS.....	4-19
4.4.5.4	Configuring DNS Using CSS.....	4-20
4.4.5.4.1	How to Configure DNS Using CSS.....	4-21
4.4.5.5	Customizing the Login Banner Using CSS.....	4-22
4.4.5.6	Setting the SWDL Transfer Mode Using CSS.....	4-23
4.4.5.7	Setting the NTP Server Settings.....	4-24
4.4.5.8	Setting Up the Local Password Configuration Using the CSS.....	4-25
4.4.6	CSS Configuration Parameters for the GTR 8000 Base Radio (Trunked Simulcast).....	4-26
4.4.7	CSS Configuration Parameters for the GTR 8000 Base Radio (Trunked Repeater).....	4-27
4.4.8	CSS Configuration Parameters for the GTR 8000 Base Radio (HPD).....	4-28
4.4.9	CSS Configuration Parameters for the GTR 8000 Base Radio (Conventional).....	4-30
4.4.10	Configuring Tx Power Values and Battery Type.....	4-31
4.4.11	Setting RMC System Gain.....	4-32

4.5	Using VoyenceControl to Configure Centralized Authentication on Devices	4-33
5	GTR 8000 Base Radio Optimization	5-1
5.1	Aligning the Internal Frequency Reference Oscillator	5-1
5.1.1	GTR 8000 Base Radio Time and Frequency Inputs	5-2
5.2	Equalizing the Battery	5-2
5.3	Aligning ASTRO Simulcast (Trunked Operation)	5-3
5.4	Aligning ASTRO/Analog Simulcast (Conventional Operation)	5-3
5.5	Aligning Carrier Squelch	5-3
5.6	Aligning Tx Wireline	5-4
5.7	Aligning Rx Wireline	5-4
5.8	Tuning a Preselector	5-4
5.8.1	VHF Tuning Procedures	5-5
5.8.1.1	Calculating Proper VHF Alignment Frequency	5-5
5.8.1.1.1	Calculating The VHF Alignment Frequency For a Single Receive Frequency	5-5
5.8.1.1.2	Calculating The VHF Alignment Frequency for Multi Receive Frequencies	5-5
5.8.1.2	Preparing The Equipment For VHF Alignment	5-6
5.8.1.3	VHF Tuning Procedure	5-6
5.8.1.3.1	Tuning The VHF Preselector	5-8
5.8.2	UHF Tuning Procedures	5-8
5.8.2.1	Calculating Proper UHF Alignment Frequency	5-8
5.8.2.1.1	Calculating The UHF Alignment Frequency For a Single Receive Frequency	5-8
5.8.2.1.2	Calculating The UHF Alignment Frequency For Multi Receive Frequencies	5-9
5.8.2.2	Preparing The Equipment For UHF Alignment	5-10
5.8.2.3	UHF Tuning Procedure	5-10
5.8.2.3.1	Tuning The UHF Preselector	5-12
5.9	Tuning a Duplexer	5-12
5.9.1	Field Tuning Overview	5-12
5.9.2	Required Test Equipment	5-13
5.9.3	Tuning a 700/800 MHz Duplexer	5-13
5.9.4	Tuning a VHF Duplexer	5-13
5.9.4.1	Setting Up for Tuning a VHF Duplexer	5-14
5.9.4.1.1	How To Set Up Tuning The VHF Duplexer	5-15
5.9.4.2	Tuning VHF Duplexer Low Pass Resonators	5-15
5.9.4.2.1	How To Tune VHF Duplexer Low Pass Resonators	5-16
5.9.4.3	Tuning VHF Duplexer High Pass Resonators	5-16
5.9.4.3.1	How To Tune VHF Duplexer High Pass Resonators	5-17
5.9.4.4	Tuning VHF Duplexer High Notch Loop Assemblies	5-17
5.9.4.4.1	How To Tune VHF Duplexer High Notch Loop Assemblies	5-18
5.9.4.5	Tuning VHF Duplexer Low Notch Loop Assemblies	5-18
5.9.4.5.1	How To Tune VHF Duplexer Low Notch Loop Assemblies	5-19
5.9.4.6	Verifying VHF Duplexer Insertion Loss	5-19
5.9.4.6.1	How To Verify VHF Duplexer Insertion Loss	5-21
5.9.4.7	Verifying VHF Duplexer Isolation	5-21
5.9.4.7.1	How To Verify VHF Duplexer Isolation	5-23
5.9.4.8	VHF Duplexer Post Tuning Checks	5-23
5.9.5	Tuning a UHF Duplexer	5-23
5.9.5.1	Setting Up for Tuning a UHF Duplexer	5-24
5.9.5.1.1	How To Set Up Tuning the UHF Duplexer	5-25
5.9.5.2	Tuning UHF Duplexer Low Pass Resonators	5-25
5.9.5.2.1	How To Tune UHF Duplexer Low Pass Resonators	5-26
5.9.5.3	Tuning UHF Duplexer High Pass Resonators	5-26
5.9.5.3.1	How To Tune UHF Duplexer High Pass Resonators	5-27
5.9.5.4	Tuning UHF Duplexer High Notch Loop Assemblies	5-27
5.9.5.4.1	How To Tune UHF Duplexer High Notch Loop Assemblies	5-28
5.9.5.5	Tuning UHF Duplexer Low Notch Loop Assemblies	5-28

5.9.5.5.1	How To Tune UHF Duplexer Low Notch Loop Assemblies	5-29
5.9.5.6	Verifying UHF Duplexer Insertion Loss	5-29
5.9.5.6.1	How To Verify UHF Duplexer Insertion Loss	5-31
5.9.5.7	Verifying UHF Duplexer Isolation	5-31
5.9.5.7.1	How To Verify UHF Duplexer Isolation	5-33
5.9.5.8	UHF Duplexer Post Tuning Checks	5-33
5.10	Testing the GTR 8000 Base Radio/GPW 8000 Receiver Performance with a Service Monitor for Integrated Voice and Data	5-33
5.10.1	Deviation Standards (Digital Operation)	5-34
5.10.2	Monitoring the Power Supply Module	5-35
5.10.3	Verifying Receiver Performance (Digital Operation)	5-35
5.10.4	Verifying Receiver Performance (Analog Operation)	5-38
5.10.5	Checking Receiver Sensitivity (Self-test Method) (IV and D)	5-39
5.10.6	Monitoring the Transmitter Metering Points	5-40
5.10.7	Verifying Transmitter Performance (Digital Operation)	5-41
5.10.8	Verifying Transmitter Performance (Analog Operation)	5-43
5.11	Testing the GTR 8000 Base Radio Performance with a Service Monitor for HPD	5-45
5.11.1	Setting Up the HPD Service Monitor for Testing the Base Radio	5-46
5.11.2	Performing In-band Power Meter User Calibration	5-48
5.11.3	Measuring HPD BR Tx Power, Frequency Accuracy and Tx EVM	5-49
5.11.4	Measuring HPD BR Rx Sensitivity and Rx BER	5-52
5.11.5	Checking Receiver Sensitivity (Self-test Method) (HPD)	5-57
6	GTR 8000 Base Radio Maintenance	6-1
6.1	Fan Grill Cleaning Instructions	6-1
6.2	Aligning the Internal Frequency Reference Oscillator	6-1
7	GTR 8000 Base Radio Operation	7-1
7.1	Base Radio Operational States for Trunked Simulcast	7-1
7.2	Base Radio Operational States for Trunked Repeater and HPD	7-1
7.3	Base Radio Operational States for Conventional	7-2
7.3.1	Packet Data interactions with Multiple NAC's	7-2
7.3.2	Supplementary Signaling interactions with Multiple NAC's	7-2
7.4	Illegal Carrier Determination Feature (Trunked)	7-3
7.5	RF Channel Interference Determination Feature (Conventional)	7-3
8	GTR 8000 Base Radio Troubleshooting	8-1
8.1	General Troubleshooting	8-1
8.2	Troubleshooting Tools	8-4
8.2.1	Using Unified Event Manager to Monitor Links and Components	8-4
8.2.1.1	Analyzing Unified Event Manager Active Alarm Window	8-4
8.2.1.2	Diagnostic Options in UEM	8-5
8.2.2	MOSCAD Network Fault Management	8-5
8.2.3	Using Unified Network Configurator for Troubleshooting	8-6
8.2.4	Using Configuration/Service Software (CSS) for GTR 8000 Base Radio Troubleshooting	8-6
8.2.4.1	Alarm Log from Internal Diagnostic Tests	8-6
8.2.4.2	Resetting Passwords and SNMPv3 Passphrases	8-6
8.3	Site Controller Failure – Impact on GTR 8000 Base Radio for Trunked Operation	8-7
8.4	Conventional Site Controller Failure - Impact on GTR 8000 for Conventional Operation	8-7
8.5	Using Motorola System Support Center (SSC)	8-8
8.5.1	Gathering Information Before Calling Motorola	8-8
8.5.2	Where to Call for Service	8-8
8.5.2.1	Motorola System Support Center (SSC)	8-8
8.5.3	Use of Subcontractors	8-9
9	GTR 8000 Base Radio FRU Procedures	9-1
9.1	Field Replaceable Units (FRUs) and Parts	9-1
9.2	Replacing a Radio Transceiver Module	9-4
9.2.1	How To Replace a Transceiver Module	9-5

9.3	Replacing the Fan Assembly	9-10
9.3.1	How To Replace the Fan Assembly	9-11
9.4	Replacing a Power Supply	9-13
9.4.1	How To Replace a Power Supply	9-13
9.5	Replacing a Power Supply Fan	9-15
9.5.1	How To Replace a Power Supply Fan	9-16
9.6	Replacing a Power Amplifier	9-17
9.6.1	How To Replace a Power Amplifier	9-18
9.7	Replacing the GTR 8000 Base Radio Backplane	9-21
9.7.1	How To Replace a GTR 8000 Base Radio Backplane	9-21
9.8	Replacing a Preselector Filter	9-27
9.8.1	How To Replace a Preselector Filter	9-28
9.9	Replacing Transmit Filters (700/800 MHz)	9-28
9.9.1	How To Replace Transmit Filters (700/800 MHz)	9-29
9.10	Replacing the Dual Circulator/Isolator Modules	9-30
9.10.1	How To Replace The Dual Circulator/Isolator Modules	9-33
9.11	Replacing a Duplexer (700/800 MHz)	9-35
9.11.1	How To Replace a Duplexer (700/800 MHz)	9-36
9.12	Replacing a Duplexer (UHF)	9-37
9.12.1	How To Replace a Duplexer (UHF)	9-37
9.13	Replacing a Duplexer (VHF)	9-39
9.13.1	How To Replace a Duplexer (VHF)	9-40
9.14	Replacing an Antenna Relay	9-40
9.14.1	How To Replace an Antenna Relay	9-41
10	GTR 8000 Base Radio Reference	10-1
10.1	LEDs	10-1
10.1.1	GTR 8000 Base Radio Transceiver LEDs	10-1
10.1.1.1	Transceiver Status and Alarm LEDs	10-1
10.1.1.2	Transceiver Ethernet Link Status LEDs	10-2
10.1.1.3	Transceiver Application-Controlled LEDs	10-2
10.1.1.4	Transceiver Services-Controlled LEDs	10-3
10.1.2	Transceiver Option Card Intercom LED	10-4
10.1.3	Power Amplifier LEDs	10-4
10.1.4	Fan Module LED	10-5
10.1.5	Power Supply LEDs	10-6
10.2	RFDS Equipment Specifications	10-7
10.2.1	Transmit Filter Specifications (700/800 MHz)	10-7
10.2.2	Preselector Filter Specifications (700/800 MHz)	10-8
10.2.3	Preselector Filter Specifications (UHF)	10-8
10.2.4	Preselector Filter Specifications (VHF)	10-9
10.2.5	Duplexer Specifications (700/800 MHz)	10-9
10.2.6	Duplexer Specifications (UHF)	10-10
10.2.7	Duplexer Specifications (VHF)	10-10
10.2.8	External Dual Circulator Specifications (700/800 MHz)	10-11
10.2.9	External Dual Circulator Specifications (UHF)	10-11
10.2.10	External Dual Circulator Specifications (VHF)	10-12
10.2.11	Antenna Relay Specifications	10-12
11	GTR 8000 Base Radio Disaster Recovery	11-1
11.1	Recovery Sequence for GTR 8000 Base Radio	11-1
11.2	Performing a Site Download With PSC 9600 Site Controllers	11-3
11.3	Performing a Site Download With GCP 8000 Site Controllers	11-5
Appendix A	Conventional GTR 8000 Base Radio Option Kits	A-1
A.1	T2-2R, T3-3R, and T4-4R Receiver Mute Option Kits	A-1
A.1.1	T2-2R Receiver Mute Option Kit	A-2
A.1.1.1	T2-2R Receiver Mute Option Kit Parts List	A-3

A.1.2	T3-3R Receiver Mute Option Kit	A-4
A.1.2.1	T3-3R Receiver Mute Option Kit Parts List	A-5
A.1.3	T4-4R Receiver Mute Option Kit	A-6
A.1.3.1	T4-4R Receiver Mute Option Kit Parts List	A-8
A.1.4	Expected Site Performance for T2-2R, T3-3R, and T4-4R Receiver Mute	A-9
A.1.5	Tn-nR Receiver Mute Option Kit	A-10
A.1.5.1	Tn-nR Receiver Mute Option Kit Parts List	A-11
A.1.6	Installing the T2-2R, T3-3R, and T4-4R Receiver Mute Option Kits	A-11
A.1.7	Configuring the T2-2R, T3-3R, and T4-4R Receiver Mute Option Kits	A-13
A.2	T1-2R with Talk-Around Option Kit	A-16
A.2.1	T1-2R with Talk-Around Option Kit Parts List	A-18
A.2.2	Expected Site Performance for T1-2R with Talk-Around	A-19
A.2.3	Installing the T1-2R with Talk-Around Option Kit	A-19
A.2.4	Configuring the T1-2R with Talk-Around Option Kit	A-20
A.3	T2-2R with Duplexer and Triple Relay Option Kit	A-23
A.3.1	T2-2R with Duplexer and Triple Relay Option Kit Parts List	A-26
A.3.2	Expected Site Performance for T2-2R with Duplexer and Triple Relay	A-27
A.3.3	Installing the T2-2R with Duplexer and Triple Relay Option Kit	A-27
A.3.4	Configuring the T2-2R with Duplexer and Triple Relay Option Kit	A-28
Appendix B	Analog Simulcast Cable Assembly	B-1
B.1	Analog Simulcast Cable Kit Parts List	B-1
B.2	Assembling the Analog Simulcast Cable and Panel	B-2
B.3	Installing the Analog Simulcast Cable in an Open Rack Configuration	B-3
B.4	Installing the Analog Simulcast Cable in a Cabinet Configuration	B-5
B.5	Analog Simulcast Cable Pin Assignment	B-6

List of Figures

Figure 1-1	GTR 8000 Base Radio/GPW 8000 Receiver	1-1
Figure 1-2	Single-Site Repeater Configuration 1	1-5
Figure 1-3	Single Site Repeater Configuration 2	1-5
Figure 1-4	GTR 8000 Base Radios in HPD Remote Site	1-7
Figure 2-1	Transceiver Module (Front View)	2-1
Figure 2-2	Transceiver Control Board Information Flow	2-2
Figure 2-3	Transceiver Reset Switch (viewable through drop-down door)	2-3
Figure 2-4	Transceiver Option Card Intercom Button (behind fan module)	2-4
Figure 2-5	Transceiver Module (Backplane Connections)	2-4
Figure 2-6	Power Amplifier Module	2-5
Figure 2-7	Power Amplifier (Backplane Connections)	2-6
Figure 2-8	Fan Module	2-7
Figure 2-9	Power Supply	2-7
Figure 2-10	AC and DC Power Distribution in the GTR 8000 Base Radio	2-9
Figure 2-11	Power Supply Connections (Rear)	2-11
Figure 2-12	Preselector Filter (700/800 MHz)	2-12
Figure 2-13	Preselector (UHF)	2-13
Figure 2-14	Preselector (VHF)	2-13
Figure 2-15	Transmit Filter (700/800 MHz)	2-14
Figure 2-16	Duplexer (700/800 MHz)	2-14
Figure 2-17	Duplexer (UHF)	2-15
Figure 2-18	Duplexer (VHF)	2-16
Figure 2-19	External Dual Circulator/Isolator Tray (700/800 MHz)	2-17
Figure 2-20	External Dual Circulator/Isolator Tray (UHF)	2-18
Figure 2-21	Antenna Relay Module Connections	2-19
Figure 2-22	Base Radio Backplane Mounting Location	2-20
Figure 2-23	Antenna Relay Module Mounted on Backplane Cover	2-21
Figure 2-24	Antenna Relay Module Mounted on Peripheral Tray	2-22
Figure 2-25	Functional Block and Interconnect Diagram for Antenna Relay Module (Bracket Mounting)	2-23
Figure 2-26	Functional Block and Interconnect Diagram for Antenna Relay Module (Peripheral Tray Mounting)	2-24
Figure 3-1	Warning Label on Hot Modules	3-3
Figure 3-2	Lengths and Angles for Lifting Using the Eyenuts	3-6
Figure 3-3	Proper Alignment of the Eyenuts	3-7
Figure 3-4	Base Radio/Receiver Mounted in Rack	3-17
Figure 3-5	Battery Temperature Sensor Example 1	3-21
Figure 3-6	Battery Temperature Sensor Example 2	3-22
Figure 3-7	Rack Grounding	3-23
Figure 3-8	Base Radio/Receiver Integrated Voice & Data Backplane	3-24
Figure 3-9	Base Radio – HPD Backplane	3-26
Figure 3-10	Base Radio/Receiver – Front	3-28
Figure 3-11	50-Pin System Connector Pin-Outs (Conventional)	3-33
Figure 3-12	Wireline Port Pin-Outs	3-33
Figure 3-13	Microphone Port Pin-Outs	3-34
Figure 3-14	Speaker Port Pin-Outs	3-35
Figure 3-15	VoyenceControl Welcome Page	3-47
Figure 3-16	VoyenceControl Login Window	3-48
Figure 3-17	VoyenceControl Dashboard	3-48
Figure 4-1	SNMPv3 Security Level Option Prompt	4-2
Figure 4-2	CSS Login Banner	4-3
Figure 4-3	CSS Login Banner	4-6
Figure 4-4	SNMPv3 Security Level Option Prompt	4-13

Figure 4-5	CSS Network Services Configuration – DNS Tab	4-21
Figure 4-6	Remote Access Configuration Tab	4-24
Figure 4-7	Password Configuration Window	4-25
Figure 5-1	Preselector Tuning — VHF	5-7
Figure 5-2	Preselect Tuning — UHF	5-11
Figure 5-3	VHF Duplexer Tuning Setup	5-14
Figure 5-4	Test Equipment Set Up for Tuning VHF Duplexer Low Pass Resonator	5-15
Figure 5-5	Test Equipment Set Up for Tuning VHF Duplexer High Pass Resonator	5-16
Figure 5-6	Test Equipment Set Up for Tuning VHF Duplexer High Notch Loop Assemblies	5-17
Figure 5-7	Test Equipment Set Up for Tuning VHF Duplexer Low Notch Loop Assemblies	5-18
Figure 5-8	Verifying VHF Duplexer Insertion Loss — Connecting Test Equipment	5-19
Figure 5-9	Verifying VHF Duplexer Insertion Loss — Connecting Duplexer Cable Assembly	5-20
Figure 5-10	Verifying VHF Duplexer Isolation — Connecting Test Equipment	5-21
Figure 5-11	Verifying VHF Duplexer Isolation — Connecting Duplexer Cable Assembly	5-22
Figure 5-12	UHF Duplexer Tuning Setup	5-24
Figure 5-13	Test Equipment Set Up for Tuning UHF Duplexer Low Pass Resonator	5-25
Figure 5-14	Test Equipment Set Up for Tuning UHF Duplexer High Pass Resonator	5-26
Figure 5-15	Test Equipment Set Up for Tuning UHF Duplexer High Notch Loop Assemblies	5-27
Figure 5-16	Test Equipment Set Up for Tuning UHF Duplexer Low Notch Loop Assemblies	5-28
Figure 5-17	Verifying UHF Duplexer Insertion Loss — Connecting Test Equipment	5-29
Figure 5-18	Verify UHF Duplexer Insertion Loss — Connecting Duplexer Cable Assembly	5-30
Figure 5-19	Verifying UHF Duplexer Isolation — Connecting Test Equipment	5-31
Figure 5-20	Verifying UHF Duplexer Isolation — Connecting Duplexer Cable Assembly	5-32
Figure 5-21	Metering Screen Window	5-35
Figure 5-22	Configuration for Modulation Fidelity Measurement (Aeroflex 2975 Series Service Monitor)	5-43
Figure 5-23	Configuration for Modulation Fidelity Measurement (Aeroflex 2975 Series Service Monitor)	5-45
Figure 5-24	HPD Service Monitor Test Screen (Aeroflex 3900 Series Service Monitor)	5-46
Figure 5-25	HPD Service Monitor - RF Control Settings Window (Aeroflex 3900 Series Service Monitor)	5-49
Figure 5-26	CSS Test and Measurement Screen	5-51
Figure 5-27	HPD Service Monitor - Rx Meter Subscreen, Reset Soft Keys (Aeroflex 3900 Series Service Monitor)	5-51
Figure 5-28	HPD Service Monitor - RF Control Settings Window (Aeroflex 3900 Series Service Monitor)	5-53
Figure 5-29	CSS Test and Measurement Screen	5-55
Figure 5-30	HPD Service Monitor - Rx Meter Subscreen and Soft Keys (Aeroflex 3900 Series Service Monitor)	5-56
Figure 5-31	CSS Test and Measurement Screen	5-58
Figure 8-1	MOSCAD Network Fault Management	8-5
Figure 9-1	Transceiver Module	9-5
Figure 9-2	GTR 8000 Base Radio Modules	9-5
Figure 9-3	Fan Assembly	9-11
Figure 9-4	Power Supply	9-13
Figure 9-5	Power Supply Fan	9-15
Figure 9-6	Power Amplifier Module	9-18
Figure 9-7	Captive Screws	9-18
Figure 9-8	GTR 8000 Power Amplifier RF Cable (Front)	9-20
Figure 9-9	GTR 8000 Base Radio Showing Connections to Backplane Through Backplane Cover	9-21
Figure 9-10	Fan Cable Connector	9-24
Figure 9-11	EMI Spring Panel Guide Rail Alignment	9-25
Figure 9-12	Preselector Filter (700/800 MHz)	9-27
Figure 9-13	Preselector Filter (UHF)	9-27
Figure 9-14	Preselector Filter (VHF)	9-27
Figure 9-15	Transmit Filter (700/800 MHz)	9-29
Figure 9-16	External Dual Circulator/Isolator Tray (700/800 MHz)	9-31
Figure 9-17	External Dual Circulator/Isolator Tray (UHF)	9-32
Figure 9-18	Duplexer Module (700/800 MHz)	9-35

Figure 9-19	Duplexer Module (UHF)	9-37
Figure 9-20	Duplexer Module for IVD (VHF)	9-39
Figure 10-1	Transceiver LEDs (viewable through drop-down door)	10-1
Figure 10-2	Transceiver Option Card Intercom LED (viewable behind the fan module).....	10-4
Figure 10-3	Power Amplifier LEDs, viewable through drop-down door.....	10-4
Figure 10-4	Fan Module-Alarm LED (lower right corner).....	10-5
Figure 10-5	Power Supply Module.....	10-6
Figure A-1	T2-2R Receiver Mute Option Kit Wiring Diagram.....	A-2
Figure A-2	T3-3R Receiver Mute Option Kit Wiring Diagram.....	A-4
Figure A-3	T4-4R Receiver Mute Configuration	A-6
Figure A-4	T4-4R Splitter and Antenna Relay Tray	A-6
Figure A-5	T4-4R Receiver Mute Option Kit Wiring Diagram.....	A-7
Figure A-6	Tn-nR Receiver Mute Option Kit Wiring Diagram.....	A-10
Figure A-7	CSS - WildCard Tables Example	A-14
Figure A-8	T1-2R Talk-Around Option Kit Wiring Diagram	A-17
Figure A-9	T2-2R with Duplexer and Triple Relay Configuration.....	A-23
Figure A-10	Triple Antenna Relay Tray	A-24
Figure A-11	T2-2R with Duplexer and Triple Relay Option Kit Wiring Diagram	A-25
Figure B-1	Analog Simulcast Cable and Panel Assembly	B-2
Figure B-2	Analog Simulcast Cable in an Open Rack Configuration	B-3
Figure B-3	Analog Simulcast Assembly in Rack – GTR 8000 Base Radio Backplane	B-4
Figure B-4	Connected Analog Simulcast Cable – GTR 8000 Base Radio Front View	B-4
Figure B-5	Analog Simulcast Cable – GTR 8000 Base Radio with Fan Modules.....	B-5
Figure B-6	Analog Simulcast Cable in a Cabinet Configuration	B-5
Figure B-7	Telco T57 Female Connector on the Analog Simulcast Cable.....	B-7

List of Tables

Table 1-1	Base Radio/Receiver Modules and Function	1-2
Table 1-2	Standby Power Consumption.....	1-11
Table 1-3	GTR 8000 Base Radio/GPW 8000 Receiver General Specifications IV&D (700 and 800 MHz)	1-12
Table 1-4	GTR 8000 Base Radio Transmitter Specifications for IV&D (700 and 800 MHz)	1-14
Table 1-5	GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D (700 and 800 MHz)	1-14
Table 1-6	GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D (700 and 800 MHz)	1-16
Table 1-7	GTR 8000 Base Radio/GPW 8000 Receiver Industry Canada for IVD (700 and 800 MHz).....	1-16
Table 1-8	GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D UHF R1 (380–435 MHz)	1-17
Table 1-9	GTR 8000 Base Radio Transmitter Specifications for IV&D UHF R1 (380–435 MHz).....	1-18
Table 1-10	GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D UHF R1 (380–435 MHz).....	1-19
Table 1-11	GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D UHF R1 (380–435 MHz).....	1-20
Table 1-12	GTR 8000 Base Radio/GPW 8000 Receiver Industry Canada for IV&D (UHF R1 380–435 MHz).....	1-20
Table 1-13	GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D UHF R2 (435–524 MHz).....	1-21
Table 1-14	GTR 8000 Base Radio Transmitter Specifications for IV&D UHF R2 (435–524 MHz).....	1-22
Table 1-15	GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D UHF R2 (435–524 MHz).....	1-23
Table 1-16	GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D UHF R2 (435–524 MHz).....	1-24
Table 1-17	GTR 8000 Base Radio/GPW 8000 Receiver Industry Canada for IV&D (UHF R2 435–524 MHz).....	1-25
Table 1-18	GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D VHF (136–174 MHz).....	1-25
Table 1-19	GTR 8000 Base Radio Transmitter Specifications for IV&D VHF (136–174 MHz).....	1-26
Table 1-20	GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D VHF (136–174 MHz).....	1-27
Table 1-21	GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D VHF (136–174 MHz)	1-28
Table 1-22	GTR 8000 Base/GPW 8000 Receiver Radio Industry Canada for IV&D (VHF 136–174 MHz)	1-29
Table 1-23	General Specifications for GTR 8000 Base Radio for HPD (700 and 800 MHz)	1-29
Table 1-24	Transmitter Specifications for GTR 8000 Base Radio for HPD (700 and 800 MHz)	1-30
Table 1-25	Receiver Specifications for GTR 8000 Base Radio (700 and 800 MHz HPD)	1-30
Table 1-26	FCC Identification for GTR 8000 Base Radio for HPD (700 and 800 MHz)	1-31
Table 1-27	Industry Canada for GTR 8000 Base Radio (700/800 MHz)	1-31
Table 2-1	Transceiver Front Reset Switch Functions	2-3
Table 2-2	ON/OFF Switch - States for Power Supply and Battery Charger	2-10
Table 2-3	Power Supply Module Backplane Connections.....	2-11
Table 3-1	Activities for Site Preparation	3-8
Table 3-2	Heavy Gauge Wire Resistance Examples	3-12
Table 3-3	DC Power Connection Wire Gauge Maximum Distances for Integrated Voice & Data	3-19
Table 3-4	Power Connection Wire Gauge Maximum Distances for HPD	3-20
Table 3-5	Base Radio/Receiver Backplane Connections for Integrated Voice & Data.....	3-24
Table 3-6	Base Radio Backplane Connections for HPD	3-26
Table 3-7	Transceiver Connections - Front.....	3-28
Table 3-8	50–Pin System Connector Pin-Outs (Conventional)	3-30
Table 3-9	Wireline Port Pin-Outs	3-33
Table 3-10	Microphone Port Pin-Outs	3-34
Table 3-11	Speaker Port Pin-Outs	3-34
Table 3-12	V.24 Port Pin-Outs.....	3-35
Table 3-13	Quick Connect RF Coaxial Adapters for GTR 8000 Base Radio Support.....	3-36
Table 4-1	DNS Nameservers for Devices in Dynamic System Resilience and Non-Dynamic System Resilience Sites	4-20
Table 4-2	Conventional Comparator System Name Variables	4-20
Table 5-1	Base Radio Time and Frequency Inputs	5-2

Table 5-2	Deviation Standards for ASTRO 25 System Test Patterns	5-34
Table 7-1	Illegal Carrier Determination	7-3
Table 8-1	GTR 8000 Base Radio General Troubleshooting	8-1
Table 8-2	Base Radio Diagnostic Options in UEM	8-5
Table 8-3	Local Password and SNMPv3 Passphrase Troubleshooting	8-7
Table 9-1	GTR 8000 Base Radio Field Replaceable Units	9-1
Table 9-2	GTR 8000 Base Radio Field Replaceable Parts	9-3
Table 9-3	Individual Replaceable Parts on External Dual Circulator Tray	9-4
Table 9-4	GTR 8000 Base Radio Cables	9-4
Table 10-1	Transceiver Status and Alarm LEDs	10-2
Table 10-2	Transceiver Ethernet Link Status LEDs	10-2
Table 10-3	Transceiver Application-Controlled LEDs	10-3
Table 10-4	Transceiver Services-Controlled LEDs	10-3
Table 10-5	Power Amplifier LEDs	10-5
Table 10-6	Power Supply LEDs	10-6
Table 10-7	Transmit Filter Specifications (700/800 MHz)	10-7
Table 10-8	Preselector Filter Specifications (700/800 MHz)	10-8
Table 10-9	Preselector Filter Specifications (UHF)	10-8
Table 10-10	Preselector Filter Specifications (VHF)	10-9
Table 10-11	Duplexer Specifications (700/800 MHz)	10-9
Table 10-12	Duplexer Specifications (UHF)	10-10
Table 10-13	Duplexer Specifications (VHF)	10-10
Table 10-14	External Dual Circulator Specifications (700/800 MHz)	10-11
Table 10-15	External Dual Circulator Specifications (UHF)	10-11
Table 10-16	External Dual Circulator Specifications (VHF)	10-12
Table 10-17	Antenna Relay Specifications	10-12
Table A-1	T2-2R Receiver Mute Option Kit Parts List	A-3
Table A-2	T3-3R Receiver Mute Option Kit Parts List	A-5
Table A-3	T4-4R Receiver Mute Option Kit Parts List	A-8
Table A-4	Total Transmit and Receive Attenuation for T2-2R, T3-3R, and T4-4R Receiver Mute	A-9
Table A-5	Tn-nR Receiver Mute Option Kit Parts List	A-11
Table A-6	T1-2R with Talk-Around Option Kit Parts List	A-18
Table A-7	Total Transmit and Receive Attenuation for T1-2R with Talk-Around	A-19
Table A-8	T2-2R with Duplexer and Triple Relay Option Kit Parts List	A-26
Table A-9	Total Transmit and Receive Attenuation for T2-2R with Duplexer and Triple Relay	A-27
Table B-1	Analog Simulcast Cable Kit Parts List	B-1
Table B-2	Analog Simulcast Cable Pin Assignment	B-7

List of Processes

- 3.1.1 — Equipment Installation Process Overview3-1
- 3.6 — Device Software Installation Prerequisites3-37
- 3.8 — Device Installation Using the UNC3-41
- 4.2 — Discovering Devices in the UNC.....4-1
- 4.4.1 — Initial Configuration of a Device Using CSS.....4-3
- 4.4.6 — CSS Configuration Parameters for the GTR 8000 Base Radio (Trunked Simulcast).....4-26
- 4.4.7 — CSS Configuration Parameters for the GTR 8000 Base Radio (Trunked Repeater)4-27
- 4.4.8 — CSS Configuration Parameters for the GTR 8000 Base Radio (HPD).....4-28
- 4.4.9 — CSS Configuration Parameters for the GTR 8000 Base Radio (Conventional)4-30
- 4.5 — Using VoyenceControl to Configure Centralized Authentication on Devices.....4-33
- 11.1 — Recovery Sequence for GTR 8000 Base Radio11-1

List of Procedures

1.5.1 — How To Configure The HP2610 Ethernet LAN Switch	1-6
3.3.5 — General Floor Mounting Procedure for Cabinets or Racks	3-9
3.4.2.1 — How to Mount the Base Radio/Receiver	3-18
3.4.4.1 — How to Ground Base Radio/Receiver.....	3-23
3.8.1 — Discovering a Device with the UNC	3-42
3.8.2 — Loading Device OS Images to the UNC.....	3-44
3.8.3.1 — Enabling FTP Service	3-46
3.8.3.2 — Transferring and Installing the OS Image.....	3-46
3.8.3.3 — Inspecting Device Properties for Transferred and Installed Software	3-50
3.8.3.4 — Disabling FTP Service	3-51
4.4.2 — Connecting Through a Serial Port Link.....	4-4
4.4.3.1 — Setting the Device IP Address and Pairing Number Using CSS	4-7
4.4.3.3.1 — Setting the Serial Security Services Using CSS	4-9
4.4.3.4 — Resetting SNMPv3 User Credentials to Factory Defaults Using CSS	4-10
4.4.4 — Connecting Through an Ethernet Port Link.....	4-11
4.4.5.1 — Setting the BR/CM Pairing Number Using CSS	4-14
4.4.5.2 — Setting the Date and Time Using CSS	4-15
4.4.5.3 — Changing SNMPv3 Configuration and User Credentials Using CSS.....	4-15
4.4.5.3.1 — Adding or Modifying an SNMPv3 User Using CSS	4-18
4.4.5.3.2 — Performing an SNMPv3 Connection Verification Using CSS.....	4-19
4.4.5.4.1 — How to Configure DNS Using CSS.....	4-21
4.4.5.5 — Customizing the Login Banner Using CSS	4-22
4.4.5.6 — Setting the SWDL Transfer Mode Using CSS.....	4-23
4.4.5.8 — Setting Up the Local Password Configuration Using the CSS	4-25
4.4.10 — Configuring Tx Power Values and Battery Type	4-31
4.4.11 — Setting RMC System Gain.....	4-32
5.8.1.1.1 — Calculating The VHF Alignment Frequency For a Single Receive Frequency.....	5-5
5.8.1.1.2 — Calculating The VHF Alignment Frequency for Multi Receive Frequencies	5-5
5.8.1.2 — Preparing The Equipment For VHF Alignment.....	5-6
5.8.1.3.1 — Tuning The VHF Preselector	5-8
5.8.2.1.1 — Calculating The UHF Alignment Frequency For a Single Receive Frequency.....	5-8
5.8.2.1.2 — Calculating The UHF Alignment Frequency For Multi Receive Frequencies	5-9
5.8.2.2 — Preparing The Equipment For UHF Alignment.....	5-10
5.8.2.3.1 — Tuning The UHF Preselector	5-12

5.9.4.1.1 — How To Set Up Tuning The VHF Duplexer	5-15
5.9.4.2.1 — How To Tune VHF Duplexer Low Pass Resonators	5-16
5.9.4.3.1 — How To Tune VHF Duplexer High Pass Resonators.....	5-17
5.9.4.4.1 — How To Tune VHF Duplexer High Notch Loop Assemblies.....	5-18
5.9.4.5.1 — How To Tune VHF Duplexer Low Notch Loop Assemblies.....	5-19
5.9.4.6.1 — How To Verify VHF Duplexer Insertion Loss.....	5-21
5.9.4.7.1 — How To Verify VHF Duplexer Isolation.....	5-23
5.9.4.8 — VHF Duplexer Post Tuning Checks.....	5-23
5.9.5.1.1 — How To Set Up Tuning the UHF Duplexer	5-25
5.9.5.2.1 — How To Tune UHF Duplexer Low Pass Resonators	5-26
5.9.5.3.1 — How To Tune UHF Duplexer High Pass Resonators.....	5-27
5.9.5.4.1 — How To Tune UHF Duplexer High Notch Loop Assemblies.....	5-28
5.9.5.5.1 — How To Tune UHF Duplexer Low Notch Loop Assemblies.....	5-29
5.9.5.6.1 — How To Verify UHF Duplexer Insertion Loss.....	5-31
5.9.5.7.1 — How To Verify UHF Duplexer Isolation.....	5-33
5.9.5.8 — UHF Duplexer Post Tuning Checks.....	5-33
5.10.2 — Monitoring the Power Supply Module	5-35
5.10.3 — Verifying Receiver Performance (Digital Operation).....	5-35
5.10.4 — Verifying Receiver Performance (Analog Operation)	5-38
5.10.5 — Checking Receiver Sensitivity (Self-test Method) (IV and D).....	5-39
5.10.6 — Monitoring the Transmitter Metering Points	5-40
5.10.7 — Verifying Transmitter Performance (Digital Operation).....	5-41
5.10.8 — Verifying Transmitter Performance (Analog Operation).....	5-43
5.11.1 — Setting Up the HPD Service Monitor for Testing the Base Radio.....	5-46
5.11.2 — Performing In-band Power Meter User Calibration.....	5-48
5.11.3 — Measuring HPD BR Tx Power, Frequency Accuracy and Tx EVM	5-49
5.11.4 — Measuring HPD BR Rx Sensitivity and Rx BER	5-52
5.11.5 — Checking Receiver Sensitivity (Self-test Method) (HPD).....	5-57
9.2.1 — How To Replace a Transceiver Module.....	9-5
9.3.1 — How To Replace the Fan Assembly.....	9-11
9.4.1 — How To Replace a Power Supply	9-13
9.5.1 — How To Replace a Power Supply Fan	9-16
9.6.1 — How To Replace a Power Amplifier	9-18
9.7.1 — How To Replace a GTR 8000 Base Radio Backplane.....	9-21
9.8.1 — How To Replace a Preselector Filter	9-28
9.9.1 — How To Replace Transmit Filters (700/800 MHz)	9-29

9.10.1 — How To Replace The Dual Circulator/Isolator Modules9-33

9.11.1 — How To Replace a Duplexer (700/800 MHz)9-36

9.12.1 — How To Replace a Duplexer (UHF)9-37

9.13.1 — How To Replace a Duplexer (VHF)9-40

9.14.1 — How To Replace an Antenna Relay9-41

11.2 — Performing a Site Download With PSC 9600 Site Controllers..... 11-3

11.3 — Performing a Site Download With GCP 8000 Site Controllers..... 11-5

A.1.6 — Installing the T2-2R, T3-3R, and T4-4R Receiver Mute Option KitsA-11

A.1.7 — Configuring the T2-2R, T3-3R, and T4-4R Receiver Mute Option Kits.....A-13

A.2.3 — Installing the T1-2R with Talk-Around Option KitA-19

A.2.4 — Configuring the T1-2R with Talk-Around Option Kit.....A-20

A.3.3 — Installing the T2-2R with Duplexer and Triple Relay Option KitA-27

A.3.4 — Configuring the T2-2R with Duplexer and Triple Relay Option Kit.....A-28

B.2 — Assembling the Analog Simulcast Cable and PanelB-2

B.3 — Installing the Analog Simulcast Cable in an Open Rack ConfigurationB-3

B.4 — Installing the Analog Simulcast Cable in a Cabinet ConfigurationB-5

About GTR 8000 Base Radio

What Is Covered In This Manual?

This manual contains the following chapters:

- [Chapter 1 GTR 8000 Base Radio Description](#) provides a high-level description of the GTR 8000 Base Radio and the function it serves on your system.
- [Chapter 2 GTR 8000 Base Radio Theory of Operation](#) explains how the GTR 8000 Base Radio works in the context of your system.
- [Chapter 3 GTR 8000 Base Radio Installation](#) details installation procedures relating to the GTR 8000 Base Radio.
- [Chapter 4 GTR 8000 Base Radio Configuration](#) details configuration procedures relating to the GTR 8000 Base Radio.
- [Chapter 5 GTR 8000 Base Radio Optimization](#) contains optimization procedures and recommended settings relating to the GTR 8000 Base Radio.
- [Chapter 6 GTR 8000 Base Radio Maintenance](#) describes periodic maintenance procedures relating to the GTR 8000 Base Radio.
- [Chapter 7 GTR 8000 Base Radio Operation](#) details tasks that you will perform once the GTR 8000 Base Radio is installed and operational on your system.
- [Chapter 8 GTR 8000 Base Radio Troubleshooting](#) provides fault management and troubleshooting information relating to the GTR 8000 Base Radio.
- [Chapter 9 GTR 8000 Base Radio FRU Procedures](#) lists the Field Replaceable Units (FRUs) and Field Replaceable Entities (FREs) and includes replacement procedures applicable to the GTR 8000 Base Radio.
- [Chapter 10 GTR 8000 Base Radio Reference](#) contains supplemental reference information relating to the GTR 8000 Base Radio indicator LEDs.
- [Chapter 11 GTR 8000 Base Radio Disaster Recovery](#) provides references and information that enables you to recover a GTR 8000 Base Radio in the event of failure.

Useful Background Information

Motorola offers various courses designed to assist in learning about the system. For information, go to <http://www.motorolasolutions.com/training> to view the current course offerings and technology paths.

Related Information

In addition to the information in the table below, see the Related Information Guide.


Related Information	Purpose
<i>Standards and Guidelines for Communication Sites</i>	<p>Provides standards and guidelines that should be followed when setting up a Motorola communications site.</p> <p>This may be purchased on CD 9880384V83, by calling the North America Parts Organization at 800-422-4210 or the international number at 302-444-9842.</p>
<i>System Documentation Overview</i>	<p>For an overview of the ASTRO® 25 system documentation, open the graphical user interface for the ASTRO® 25 system documentation set and select the System Documentation Overview link. This opens a file that includes:</p> <ul style="list-style-type: none"> • ASTRO® 25 system release documentation descriptions • ASTRO® 25 system diagrams • ASTRO® 25 system glossary <p>For an additional overview of the system, review the architecture and descriptive information in the manuals that apply to your system configuration.</p>
<i>Dynamic System Resilience</i>	<p>Provides all the information required to understand, operate, maintain, and troubleshoot the Dynamic System Resilience feature.</p>
<i>Conventional Operations</i> <i>Quick Guide for Replacing a Conventional QUANTAR® with a GTR 8000 Base Radio</i>	<p>Provides the information required to understand and operate the conventional GTR 8000 Base Radio in a Centralized or Distributed Conventional Architecture.</p>
<i>Trunked IP Simulcast Subsystem Remote Site HPD Standalone System - Infrastructure</i>	<p>Provides the information required to understand and operate the GTR 8000 Base Radio in an ASTRO® 25 trunked site.</p>

1 GTR 8000 Base Radio Description

This chapter provides a high-level description of the GTR 8000 Base Radio and GPW 8000 Receiver and the function they serve in your system.

1.1 Introduction

Figure 1-1 GTR 8000 Base Radio/GPW 8000 Receiver

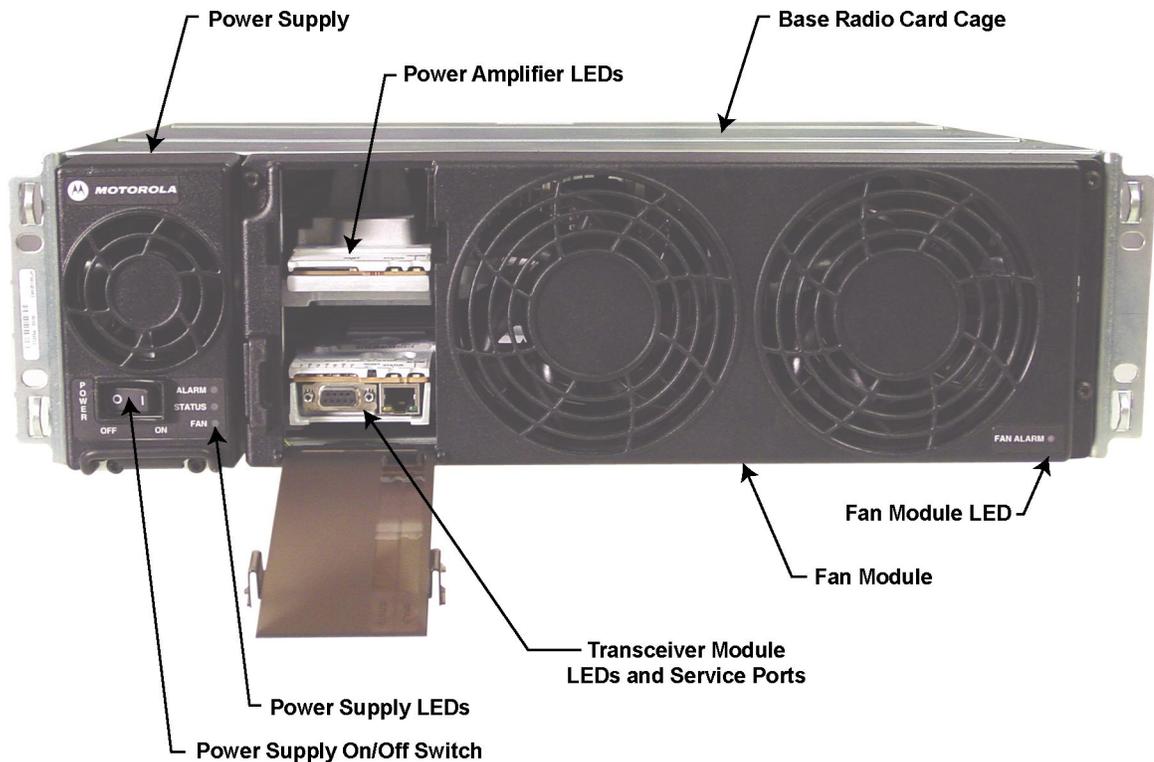

GTR8000_NonXS_BR_Front_DoorDown1

This manual provides information on the standalone GTR 8000 Base Radio and GPW 8000 Receiver and associated applications. The term base radio or BR is used to denote the transceiver and associated modules. As viewed in these instances, one base radio is a standalone configuration.

A GTR 8000 Base Radio consists of a transceiver module, power amplifier module, fan module and power supply. The transceiver module includes the functionality for the exciter, receiver, and station control with an optional transceiver option card. The base radio software, configuration, and network management, as well as inbound/outbound traffic handling, are performed through the transceiver module. On-board serial and Ethernet service ports are located on this module for local servicing through CSS. The power amplifier module amplifies the low-level modulated RF signal from the transceiver module and delivers the amplified signal on the path to the transmit antenna. The power supply module supports the transceiver and power amplifier modules. Radio Frequency Distribution System (RFDS) provides the interface between the transceivers and the site antennas and between the power amplifier and the site antennas.

1.1.1 GPW 8000 Receiver

A receive-only conventional GPW 8000 Receiver consists of a transceiver module, fan module and power supply. The transceiver module includes the functionality for the receiver and station control with or without an optional transceiver option card. The receiver software, configuration, and network management, as well as inbound traffic handling, are performed through the transceiver module. On-board serial and Ethernet service ports are located on this module for local servicing through CSS. The power supply module supports the transceiver module. Radio Frequency Distribution System (RFDS) provides the interface between the receiver and the site antennas.

The receiver provides all the receive function of a GTR 8000 Base Radio as a receive-only station in a Conventional Architecture or ASTRO® 3.1 Conventional System. The receiver operates in a voting environment with connection to a comparator providing additional receive only stations in areas where it would otherwise be difficult to receive a signal from low power subscriber units. The receiver also operates as a monitor receiver in a non-voting environment with connection to a console.

1.2 GTR 8000 Base Radio/GPW 8000 Receiver Components

Table 1-1 Base Radio/Receiver Modules and Function

GTR 8000 Base Radio	Description
Power Supply	Operates from either an AC or DC input and provides the DC operating voltage for the base radio. Also provides a separate battery charger, which can be used to maintain the charge on a 48 VDC nominal system, positive or negative ground, if installed.
Power Amplifier (PA)*	Accepts a low-level modulated RF signal from the transceiver module and amplifies it for transmission through the site transmit antenna. Also provides a low-level RF feedback signal to the transceiver module to achieve the required transmitter linearity. Also performs functions related to the fan module.
Transceiver (XCVR)	Provides the control, exciter, and receiver functions for the base radio.



NOTE

The exciter functionality is turned off in the GPW 8000 Receiver.

Table 1-1 Base Radio/Receiver Modules and Function (cont'd.)

GTR 8000 Base Radio	Description
Transceiver Option Card	<p>An optional board that attaches to the control board of the transceiver. Provides an internal 10 MHz frequency reference. For conventional base radio/receiver operation it also provides the analog interfaces and wild card I/Os. The transceiver option card is available in two categories:</p> <ul style="list-style-type: none"> • OCXO (Oven Controlled Crystal Oscillator) • TCXO (Temperature Compensated Crystal Oscillator)
Fan	Provides intermittent forced air cooling for the power amplifier and transceiver modules.

* = Not applicable in the GPW 8000 Receiver.

1.3 Supported System Configurations

The GTR 8000 Base Radio is available in the following system architectures:

- High Performance Data (HPD)
- Trunked IP Simulcast Subsystems (IV&D)
- Trunked Single-Site Repeater Configuration (IV&D)
- Centralized Conventional Architectures
- Distributed Conventional (Subsystem) Architecture
- ASTRO® 3.1 Conventional System
- Analog Only Conventional System

1.3.1 Supported Frequencies for Trunked IV&D and Conventional Architectures

The GTR 8000 Base Radio and GPW 8000 Receiver are available in the following frequency bands:

- 700, 800 MHz (700 MHz analog conventional is not available within the U.S.A. or Canada)
- UHF R1 (380–435 MHz)
- UHF R2 (435–524 MHz)
- VHF (136–174 MHz)



NOTE

RFDS information provided in this documentation pertains to the RFDS equipment supplied by Motorola.

1.3.2 Supported Frequencies for HPD

The GTR 8000 Base Radio is available for 25 kHz operation in 700 and 800 MHz frequency bands.

1.4 Overview For a GTR 8000 Base Radio in a Trunked IP Simulcast Subsystem

The base radio captures inbound signals through external receive (Rx) antennas from the subscriber/mobile radios and then amplifies, filters and demodulates the signals into voice packets which are forwarded to a comparator. The comparator processes the received voice packets for a particular call and forwards the best quality voice packets to the zone core, which routes them to the associated base radio at each remote site. At a predetermined time, all of the base radios transmit the voice packets simultaneously on the same frequency to complete the communication.

A maximum of 30 base radios can be installed per remote site. Each base radio has an Ethernet connection to a switch at the site for the Network Management interface.

1.5 Overview For a GTR 8000 Base Radio in a Trunked Single-Site Repeater Configuration

This configuration consists of standalone GTR 8000 Base Radios and standalone GCP 8000 Site Controllers in a single-site repeater configuration, or can be used in a multi-site system to provide a system migration step that enables replacement of PSC 9600 Site Controllers or base radios other than the GTR 8000 Base Radios. The base radios may be colocated with the site controllers, or be separated (non-colocated) from the site controllers.




NOTE

This configuration can only be used in non-voting configurations.

Support is provided only for FDMA when the base radios are physically separated from and not colocated with the site controllers. TDMA requires the use of a frequency reference and timing reference that can only be provided through the site controller's CP3 links, which cannot be extended to non-colocated base radios when the distance exceeds the noted limits. This configuration is supported only on repeater sites.

An Ethernet cable is used to extend the site controllers signal to the first non-colocated base radio through the site controllers Net AUX port into the base radios SC-A port. The site controllers Net AUX port must be enabled and configured using the CSS for 100/FULL (speed and duplex). When the distance between the site controllers and the first non-colocated base radio exceeds 328 ft. (100 m), an external HP 2610 or HP 2620 24-port Ethernet LAN switch must be used to extend the site controllers signal. When there are additional non-colocated base radios and those base radios are more than 328 ft. (100 m) from the previous non-colocated base radio, additional Ethernet LAN switches are required to continue to extend the site controller's signal. See [Figure 1-2](#).


Figure 1-2 Single-Site Repeater Configuration 1

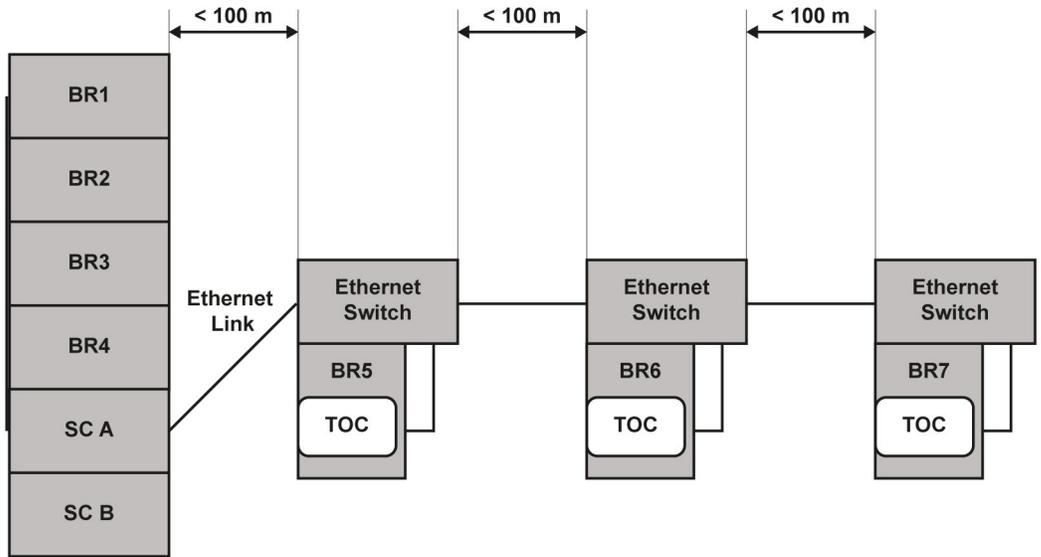

Single_site_rptr_conf_1_A

If the distance between the first non-colocated base radio and subsequent non-colocated base radios is less than 328 ft. (100 m), a single Ethernet LAN switch can be used to distribute the site controllers call control signaling to those non-colocated base radios. The stated distance limit for a shielded twisted pair Ethernet cable (CAT5) is 328 ft. (100 m) before the signal degrades too much to be used. See [Figure 1-3](#).

Figure 1-3 Single Site Repeater Configuration 2

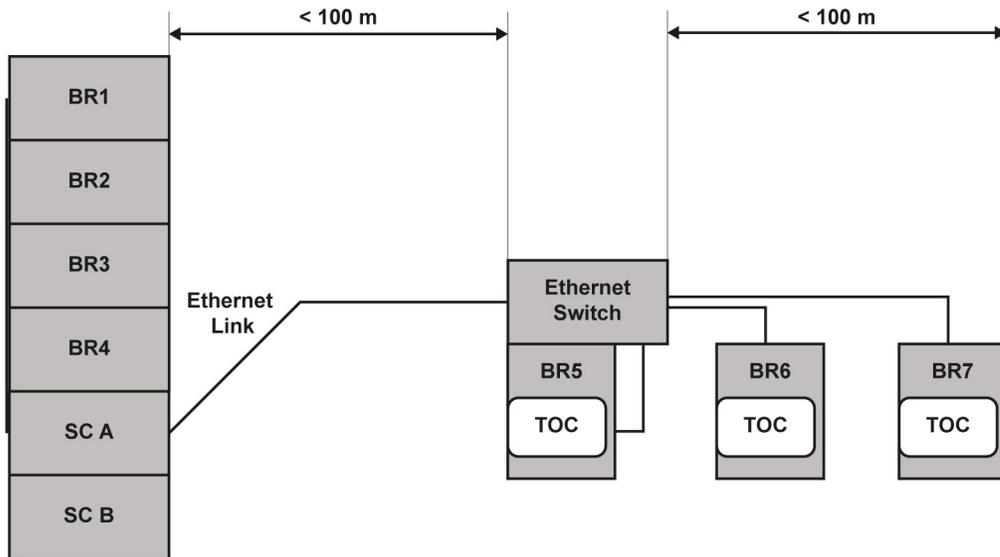

Single_site_rptr_conf_2_A

Once the site controller link is extended, the control plane could be open to access from elements other than the base radios. Each Ethernet LAN switch must be manually configured to provide MAC Port lockdown to make sure that only the proper devices can communicate with each other. MAC Port lockdown may also be applied on any unused

Expansion Ports on the site controller. See the *MAC Port Lockdown* manual to lock down the site controller. The switch ports may be enabled or disabled according to specific security guidelines. See “Enabling/Disabling Ports on HP Switches Using Local Access” in the *System LAN Switches* manual.

Each non-colocated base radio is equipped with a transceiver option card, which provides an internal 10 MHz frequency reference. See the “Reference Oscillator Alignment Procedures” of the base radio Alignment Screens in the *Configuration/Service Software (CSS) Online Help* for alignment details. The base radios that are colocated with the site controllers do not require the transceiver option card.

When the Ethernet LAN switch is used in a configuration that does not include centralized network management, the switch must be programmed manually. See the *System LAN Switches* manual. [1.5.1 How To Configure The HP2610 Ethernet LAN Switch, page 1-6](#) uses the HP 2610 Ethernet LAN switch as an example.

1.5.1 How To Configure The HP2610 Ethernet LAN Switch

Procedure Steps

1 Enter the following commands at the prompt: `ProCurve Switch 2610-24#`

2 `ProCurve Switch 2610-24# erase startup-config`
(This removes any existing switch configuration)

3 `ProCurve Switch 2610-24# config`
(This puts the switch into configuration mode)

4 `ProCurve Switch 2610-24(config)# int X`
(Using Port X as an example)

5 `ProCurve Switch 2610-24(eth-X)# speed-duplex 100-Full`
(This sets interface X to 100MB/Full Duplex)

6 `ProCurve Switch 2610-24(eth-X)# write memory`
(This saves the configuration changes to persistent memory)

1.6 Overview For a GTR 8000 Base Radio in a High Performance Data (HPD) Subsystem

The GTR 8000 Base Radio provides the radio frequency (RF) link between the system site controller and the subscriber/mobile radios. The base radio captures inbound signals through external receive (Rx) antennas from the subscriber/mobile radios and then amplifies, filters and demodulates the signals into data packets which are forwarded to the site controller. The site controller routes/receives digitized data payload to/from the Radio Network Gateway (RNG) for further processing and routing.

The site controller receives digitized data payload and control packets from the RNG and routes them to a specified base radio. The base radio extracts the control instructions from the packets and uses them for internal management such as channel frequency assignment. The base radio maps the digital data packets to discrete voltage levels which are then used to modulate an RF carrier. The modulated RF carrier is amplified and may be combined with other RF channels, filtered and routed to the transmission (Tx) antenna(s).

The first four base radios at the site are defined as home channel capable. Settings for the base radio are made through Unified Network Configurator (UNC) and Configuration/Service Software (CSS).


Besides the power supply module supporting the transceiver and power amplifier modules, it can also provide auxiliary power to a connected site controller or receive multicoupler/low noise amplifier (RMC/LNA).

The HPD base radio provides a full-duplex RF interface to HPD Mobile Subscriber Units (MSUs). The HPD base radios are available for 25 kHz HPD operation in the 700 or 800 MHz bands. Up to five HPD base radios may be installed at the site. Each base radio has an Ethernet connection to both of the site controller modules at the site.

The HPD base radio uses Radio Link Adaptation (RLA) to provide high-speed, reliable, enhanced data performance when communicating traffic with MSUs. RLA uses adaptive modulation techniques, with slower and more reliable modulation for control signaling and retries, and faster modulation methods when traffic is successfully being delivered between the base radio and MSUs.

The HPD base radio is implemented with 2X receiver diversity. This receiver diversity enhances the inbound signals from the MSUs on the channel.

Figure 1-4 GTR 8000 Base Radios in HPD Remote Site

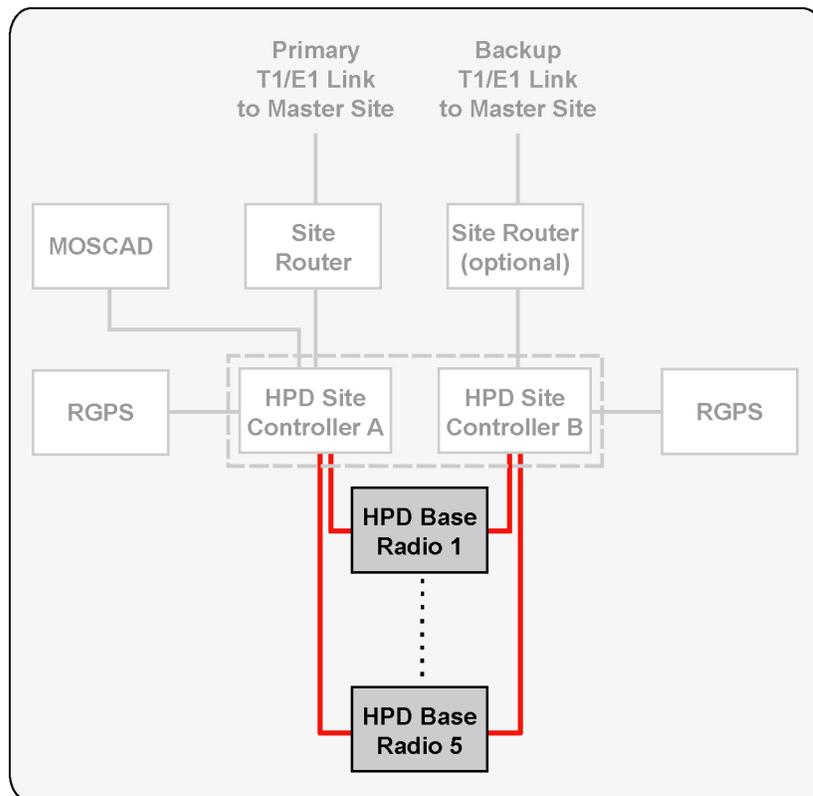

HPD_RS_comp_base_radio

The HPD base radio uses Time Division Multiplex (TDM) frames for random access channels, reserved access channels, and broadcast messages. All carriers in the system are synchronized by a Global Positioning System (GPS) so that transmission slots are synchronized across sites. The base radio is able to schedule inbound/outbound traffic for half-duplex MSUs so that outbound traffic intended for the MSU does not conflict with inbound random or reserved access traffic from the MSU.

1.7 Overview for a GTR 8000 Base Radio or GPW 8000 Receiver in Conventional Architectures

Throughout this manual the term “conventional” addresses either an analog only base radio/receiver or an ASTRO® 25 Conventional base radio/receiver that operates in either digital mode or mixed (analog/digital) mode. Conventional base radios/receivers operate within:

- an analog only infrastructure
- a Centralized or Distributed Conventional Architecture, or
- an ASTRO® 3.1 Conventional System.

Each conventional base radio/receiver uses either:

- a 2- or 4-wire TRC or 4-wire EM interface in an analog infrastructure
- a V.24 interface for digital voice and data traffic to either a Channel Bank, Digital Interface Unit, CCGW, MLC 8000, or ASTRO-TAC 3000 Comparator and an optional 4-wire link for analog voice in a mixed mode configuration
- an IP interface for digital voice and data traffic to a CCGW or GCM 8000 Comparator.



NOTE

For information about conventional functions and topologies supported by the base radio/receiver, see the *Conventional Operations* manual. Note that the base radio can be IP managed while using the 4-wire/V.24 interface for channel traffic.



NOTE

A base radio/receiver can be implemented as a QUANTAR® replacement within an ASTRO® 3.1 conventional system. The implementation details can be found in the *Quick Guide for Replacing a Conventional QUANTAR with a GTR 8000 Base Radio* manual.

1.7.1 ASTRO 25 Conventional Base Radio/Receiver

ASTRO® 25 Conventional base radio/receiver features include:

- Separate Tx and Rx network access code
- Console or repeat priority
- Repeater set-up knockdown from the console
- Voice and data
- Control Messages (TSBK)

- Standalone repeater
- Control station
- Receive-only station
- Voting
- Multicast
- Simulcast
- Console Control
 - Monitor Mode
 - Repeat Control
 - Frequency Select
 - Scan Control (supported for Gold Elite console)
 - Receive Qualifier Control (supported by Gold Elite console)
- WildCard Operation
- Multi-Channel – up to 16 channels with base station or repeater functionality
- Multiple Network Access Code (Multi-NAC) Operation
- Scan Operation
- Analog Phone Patch

An ASTRO® 25 Conventional base radio/receiver can be used in the following architectures:

- ASTRO® 3.1 Conventional Systems
- Centralized Conventional Architectures
 - Zone Core with Colocated Conventional Channels
 - Trunked IP Simulcast Remote Site with Conventional Channels
 - Dispatch Console Site with Colocated Conventional Channels
 - Conventional-Only Remote Site
 - HPD Site with Conventional Channels
- Distributed Conventional (Subsystem) Architectures
 - Conventional Base Radio Sites
 - Conventional Hub Sites

1.7.2 Analog Conventional Base Radio/Receiver

Analog conventional base radio/receiver features include:

- 12.5 kHz analog channel operation with HearClear settings (800 MHz)
- Repeater Access Control
- Multi-Channel – up to 16 channel with base station or repeater functionality
- Alarm tones over-the-air and over-the-wireline
- Transmit Antenna Relay Control and Simplex Operation
- WildCard Operation
- EM Interface; Ext PTT keying and COR receiver I/O

- 4-wire and V.24 connections to a DIU or an ASTRO-TAC 3000 Comparator using the same V.24 connector pin-outs as a QUANTAR® Base Radio
- Analog simulcast support using Gen Tx and PL Analog inputs and Ext PTT and Ext PTT keying
- Multi-PL receive operation
- RA/RT configuration with analog 4-wire connections
- Analog Wireline Automatic Level Control (ALC)
- Wideband Receiver Operation
- Telephone Interconnect
- PL/DPL
- Tone Remote Control (TRC)
- Fall Back In-Cabinet Repeat (Automatic Mode)*
- In-Cabinet Repeat (External Mode)*
- Control Station
- Interfaces for local microphone and speaker
- Receive-only Analog Functionality (GPW 8000 Receiver only)
- Simplex operation
- Scan Operation
- Voting
- Multicast
- Simulcast

* For detailed information on the differences between the automatic **Fallback In-Cabinet Repeat** and the externally-wired **In-Cabinet Repeat** functions, see the *Conventional Operations* manual.

An analog conventional base radio/receiver can be used in the following architectures:

- ASTRO® 3.1 Conventional Systems
- Centralized Conventional Architectures
 - Zone Core with Colocated Conventional Channels
 - Trunked IP Simulcast Remote Site Conventional Channels
 - Dispatch Console Site with Colocated Conventional Channels
 - Conventional-Only Remote Site
- Distributed Conventional (Subsystem) Architectures
 - Conventional Base Radio Sites
 - Conventional Hub Sites

1.8 Power Efficiency Package

The GTR 8000 Base Radio or GPW 8000 Receiver is available in a Power Efficiency Package, which provides low standby power consumption (see [Table 1-2](#)) functionality for ASTRO® 25 Conventional base radios and receivers and trunked base radios operating in the UHF-R1 and UHF-R2 frequency bands. The Power Efficiency Package optimizes the power consumption for supported base radios/receivers. This allows for the use of power generated from alternate energy sources such as solar or wind.

The Power Efficiency Package hardware includes a modified transceiver, power amplifier, power supply, fan, and optional transceiver option card (internal reference) along with additional software configurations through CSS.

The following conditions must be met to obtain a power consumption of less than or equal to 35 W:

- DC source only
- Speaker turned OFF (if equipped with a transceiver option card)
- No activation of Aux Out Relays (if equipped with a transceiver option card)
- No 29 V AUX loads. For example: active draws by a site controller
- CSS configured for applications not requiring receiver diversity
- CSS Fan Holdover configured to “short” (length of time the base radio fan stays ON after transmission)
- Ambient temperature of 104 °F (40 °C) or less (single fan operation – disabling one of the fans within the fan module. See [9.3 Replacing the Fan Assembly, page 9-10](#) in the FRU Procedures chapter for instructions on how to disable the fan.)



NOTE

To validate the 35 W standby power consumption specification, wait for the main fans to turn off after the transmitter dekeys. The turn off delay of the main fans is controlled by the fan holdover configuration in the CSS. Single fan operation requires the Tx Power Out in the CSS to be limited to 50 W.

- Transceiver, power amplifier, power supply, fan, and TCXO transceiver option card (internal reference) are all power efficiency package versions



NOTE

The TCXO transceiver option card is available only for non-simulcast conventional systems. The OCXO transceiver option card is available for trunked or simulcast systems, but does not guarantee 35 W.

Table 1-2 Standby Power Consumption

	Conventional Non-Simulcast	Conventional Simulcast	Trunked Non-Simulcast	Trunked Simulcast
Internal Reference Capable	35 W	45 W	35 W	45 W
Not Internal Reference Capable	35 W	35 W	35 W	35 W

1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications

The following lists the specifications for the GTR 8000 Base Radio and GPW 8000 Receiver.

- 1.9.1 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data (700 and 800 MHz), page 1-12.
- 1.9.2 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data UHF R1 (380–435 MHz), page 1-17
- 1.9.3 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data UHF R2 (435–524 MHz) , page 1-21.
- 1.9.4 GTR 8000 Base/GPW 8000 Receiver Radio Specifications for Integrated Voice and Data VHF (136–174 MHz) , page 1-25.
- 1.9.5 GTR 8000 Base Radio Specifications for High Performance Data (700 and 800 MHz), page 1-29.



IMPORTANT

Specifications are subject to change without notice.

1.9.1 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data (700 and 800 MHz)

Table 1-3 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications IV&D (700 and 800 MHz)

General Specifications	
Model Number	T7039A (GTR 8000 Base Radio) T7540A (GPW 8000 Receiver)
Number of Channels (trunked)	1
Number of Channels (conventional)	16
Size (H x W x D)	133mm x 483mm x 457mm (5.25" x 19" x 18")
Weight	21 kg (46 lbs) base radio 16 kg (36 lbs) receiver
Temperature Range	Operating: -30 to 60 °C (-22 to 140 °F) Storage: -40 to 85 °C (-40 to 185 °F)

Table 1-3 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications IV&D (700 and 800 MHz) (cont'd.)

General Specifications	
Operating Altitude	Up to 1800 meters (5900 feet) above mean sea level Above 1800 meters (5900 feet), the derating is 1.5 °C/km (0.8 °F/1000 feet) Above 3000 meters (9800 feet), the peak power derating for the Tx filter is 1 dB/1km (0.3 dB/1000 feet) Maximum operational altitude is 5000 meters (16900 feet)
Power Requirements	AC: 90-264 VAC, 47-63 Hz DC: 43.2-60 VDC
Power Consumption (GTR 8000 Base Radio Transmitting)	AC: C4FM, FM: 470 W max H-DQPSK, LSM: 530 W max DC: C4FM, FM: 430 W max H-DQPSK, LSM: 490 W max
Power Consumption (GPW 8000 Receiver)	AC: 85 W max DC: 50 W max
Power Consumption (GTR 8000 Base Radio Standby)	AC: 110 W max DC: 75 W max
Channel Spacing	12.5/25 kHz
Power Supply Type	Switching
Battery Revert	Included
Input/Output Impedance	50 Ohms
Antenna Connector Types	Tx: N female Rx: BNC female without preselector N female with preselector
Frequency Stability Internal Reference (transceiver option card)	Aging: 30 ppb/yr 100 ppb/5yr Temperature: 40 ppb

Table 1-3 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications IV&D (700 and 800 MHz) (cont'd.)

General Specifications	
Frequency Stability External Reference	TRAK
Frequency Generation	Synthesized

Table 1-4 GTR 8000 Base Radio Transmitter Specifications for IV&D (700 and 800 MHz)

Transmitter Specifications	
Frequency Range	762–776, 851–870 MHz
Power Output*	2-100 W
Electronic Bandwidth	Full Bandwidth
Modulation	C4FM, LSM, H-DQPSK, FM
Modulation Fidelity	5%
Spurious and Harmonic Emissions Attenuation	90 dB
Analog FM Hum and Noise	
	12.5 kHz 45 dB
	25 kHz 50 dB
Analog Audio Distortion	Less than 2% at 1000 Hz
Emission Designators	8K70D1W, 8K10F1E, 8K70D7W, 8K10F7W, 8K10F1D, 16K0F3E, 9K80D7W, 11K0F3E
Adjacent Channel Power Ratio	
	12.5 kHz offset, 6 kHz BW: 67 dB
Tx Noise in Rx Band	-145 dBc/Hz
Intermodulation Attenuation	80 dB

*Full transmitter output power is available during battery revert.



NOTE

The output power reference plane is the output connector of the power amplifier. The loss of the transmitter output cable (PA output to back of base radio) is 4% at 800 MHz. However, the base radio software allows the transmitter output power to be set at 10% above rated value.

Table 1-5 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D (700 and 800 MHz)

Receiver Specifications	
Frequency Range	792–825 MHz
Modulation (GTR 8000 Base Radio)	C4FM, H-CPM, FM

Table 1-5 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D (700 and 800 MHz) (cont'd.)

Receiver Specifications	
Modulation (GPW 8000 Receiver)	C4FM, FM
Analog Sensitivity (12 dB SINAD)	
	12.5 kHz -118 dBm
	25 kHz -117 dBm
Digital Sensitivity 5% Bit Error Rate Static (BER)	
	C4FM: -118 dBm
	H-CPM: -116 dBm
Faded Sensitivity 5% Bit Error Rate (BER)	
	C4FM: -110 dBm
Intermodulation Rejection	85 dB
Digital Adjacent Channel Rejection	60 dB
Analog Adjacent Channel Rejection (EIA603) Analog 12.5 kHz	75 dB
Analog Adjacent Channel Rejection (TIA603D)	
	Analog 12.5 kHz 50 or 60 dB (adjustable)
	Analog 25 kHz 80 dB
Spurious and Image Response Rejection	
	85 dB
	100 dB with preselector
Analog Audio Response	+1, -3 dB from 6 dB per octave de-emphasis; 300–3000 Hz referenced to 1000 Hz at line output
Analog Audio Distortion	3% or 5% (adjustable)
Analog FM Hum and Noise	
	12.5 kHz 45 dB
	25 kHz 50 dB
Signal Displacement Bandwidth	1 kHz
Intermediate Frequencies	
	1st: 73.35 MHz
	2nd: 2.16 MHz
Electronic Bandwidth	Full Bandwidth
Blocking Immunity	100 dB
Conducted Spurious	-57 dBm
Bit Error Rate Floor	0.01%

Table 1-6 GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D (700 and 800 MHz)

FCC Identification			
Frequency Range	Type	Power Output	Type Acceptance Number
762-776 MHz	Transmitter	2-100 W	ABZ89FC5812
851-870 MHz	Transmitter	2-100 W	ABZ89FC5810
792-825 MHz	Receiver	N/A	ABZ89FR5811

1.9.1.1 Industry Canada

Table 1-7 GTR 8000 Base Radio/GPW 8000 Receiver Industry Canada for IVD (700 and 800 MHz)

IC Approval Number	Frequency Range	Type	Power Output	IC Model Number
109AB-T7039	Tx 851–869 MHz, Rx 806–824 MHz	LSM	Variable 2-100 Watts (average)	T7039-800
109AB-T7039	Tx 851–869 MHz, Rx 806–824 MHz	C4FM, FM	Variable 2-100 Watts	T7039-800
109AB-T7039	Tx 764–770 MHz, Rx 794–800 MHz	LSM	Variable 2-100 Watts (average)	T7039-700
109AB-T7039	Tx 764–770 MHz, Rx 794–800 MHz	C4FM, FM	Variable 2-100 Watts	T7039-700
109AB-5811	Rx 794–800 MHz, Rx 806–824 MHz	N/A	N/A	T7540-800

1.9.2 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data UHF R1 (380–435 MHz)

Table 1-8 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D UHF R1 (380–435 MHz)

General Specifications	
Model Number	T7039A (GTR 8000 Base Radio) T7504A (GPW 8000 Receiver)
Number of Channels (trunked)	1
Number of Channels (conventional)	16
Size (H x W x D)	133mm x 483mm x 457mm (5.25" x 19" x 18")
Weight	21 kg (46 lbs) base radio 16 kg (36 lbs) receiver
Temperature Range	Operating: -30 to 60 °C (-22 to 140 °F) Storage: -40 to 85 °C (-40 to 185 °F)
Operating Altitude	Up to 1800 meters (5900 feet) above mean sea level Above 1800 meters (5900 feet), the derating is 1.5 °C/km (0.8 °F/1000 feet) Maximum operational altitude is 5000 meters (16900 feet)
Power Requirements	AC: 90-264 VAC, 47-63 Hz DC: 43.2-60 VDC
Power Consumption (GTR 8000 Base Radio Transmitting)	AC: C4FM, FM: 500 W max H-DQPSK, LSM: 550 W max DC: C4FM, FM: 460 W max H-DQPSK, LSM: 510 W max
Power Consumption (GPW 8000 Receiver)	AC: 85 W max DC: 50 W max
Power Consumption (GTR 8000 Base Radio Standby)	AC: 110 W max DC: 75 W max

Table 1-8 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D UHF R1 (380–435 MHz) (cont'd.)

General Specifications	
Power Consumption (GTR 8000 Base Radio/GPW 8000 Receiver Standby with Power Efficiency Package)	AC: 70 W DC: 35 W
Channel Spacing	12.5/25 kHz
Power Supply Type	Switching
Battery Revert	Included
Input/Output Impedance	50 Ohms
Antenna Connector Types	Tx: N female Rx: BNC female without preselector N female with preselector
Frequency Stability Internal Reference (OCXO transceiver option card)	Aging: 30 ppb/yr 100 ppb/5yr Temperature: 40 ppb
Frequency Stability Internal Reference (TCXO transceiver option card)	Aging: 1000 ppb/yr Temperature: 500 ppb
Frequency Stability External Reference	TRAK
Frequency Generation	Synthesized

Table 1-9 GTR 8000 Base Radio Transmitter Specifications for IV&D UHF R1 (380–435 MHz)

Transmitter Specifications	
Frequency Range	380–435 MHz
Power Output*	2-110 W C4FM, FM 2-100 W LSM, H-DQPSK
Electronic Bandwidth	Full Bandwidth
Modulation	C4FM, LSM, H-DQPSK, FM
Modulation Fidelity	5%
Spurious and Harmonic Emissions Attenuation	90 dB
Analog FM Hum and Noise	12.5 kHz 45 dB 25 kHz 50 dB

Table 1-9 GTR 8000 Base Radio Transmitter Specifications for IV&D UHF R1 (380–435 MHz) (cont'd.)

Transmitter Specifications	
Analog Audio Distortion	Less and 2% (1% typical) at 1000 Hz
Emissions Designators	8K70D1W, 8K10F1E, 8K10F7W, 8K10F1D, 8K70D7W, 16K0F3E, 9K80D7W, 11K0F3E
Adjacent Channel Power Ratio	
	12.5 kHz offset, 6 kHz BW: 67 dB
Tx Noise in Rx Band	142 dBc/Hz
Intermodulation Attenuation	65 dB

**NOTE**

The output power reference plane is the output connector of the power amplifier. The loss of the transmitter output cable (PA output to back of base radio) is 3% at 450 MHz. However, the base radio software allows the transmitter output power to be set at 10% above rated value.

Table 1-10 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D UHF R1 (380–435 MHz)

Receiver Specifications	
Frequency Range	380–435 MHz
Modulation (GTR 8000 Base Radio)	C4FM, H-CPM, FM
Modulation (GPW 8000 Receiver)	C4FM, FM
Analog Sensitivity (12 dB SINAD)	
	12.5 kHz -118 dBm
	25 kHz -117 dBm
Digital Sensitivity 5% Bit Error Rate Static (BER)	
	C4FM: -118 dBm
	H-CPM: -116 dBm
Faded Sensitivity 5% Bit Error Rate (BER)	
	C4FM: -110 dBm
Intermodulation Rejection	85 dB
Digital Adjacent Channel Rejection	60 dB
Analog Adjacent Channel Rejection (EIA603) Analog 12.5 kHz	75 dB
Analog Adjacent Channel Rejection (TIA603D)	
	Analog 12.5 kHz 50 or 60 dB (adjustable)
	Analog 25 kHz 80 dB

Table 1-10 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D UHF R1 (380–435 MHz) (cont'd.)

Receiver Specifications	
Spurious and Image Response Rejection	85 dB 100 dB with preselector
Analog Audio Response	+1, -3 dB from 6 dB per octave de-emphasis; 300–3000 Hz referenced to 1000 Hz at line output
Analog Audio Distortion	3% or 5% (adjustable)
Analog FM Hum and Noise	12.5 kHz 45 dB 25 kHz 50 dB
Signal Displacement Bandwidth	1 kHz
Intermediate Frequencies	1st: 73.35 MHz 2nd: 2.16 MHz
Electronic Bandwidth	Full Bandwidth
Blocking Immunity	100 dB
Conducted Spurious	-57 dBm
Bit Error Rate Floor	0.01%

Table 1-11 GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D UHF R1 (380–435 MHz)

FCC Identification			
Frequency Range	Type	Power Output	Type Acceptance Number
406.1–435 MHz	Transmitter	2-110 W C4FM, FM 2-100 W LSM, H-DQPSK	ABZ89FC4821
380–435 MHz	Receiver	N/A	ABZ89FR4822

1.9.2.1 Industry Canada

Table 1-12 GTR 8000 Base Radio/GPW 8000 Receiver Industry Canada for IV&D (UHF R1 380–435 MHz)

IC Approval Number	Frequency Range	Type	Power Output	IC Model Number
109AB-T7039	Tx 406.1–430 MHz, Rx 406.1–430 MHz	C4FM, FM	Variable 2-110 Watts	T7039-UHFR1
109AB-T7039	Tx 406.1–430 MHz, Rx 406.1–430 MHz	LSM, H-DQPSK	Variable 2-100 Watts	T7039-UHFR1
109AB-4822	Rx 406.1–430 MHz	N/A	N/A	T7540-UHFR1

1.9.3 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for Integrated Voice and Data UHF R2 (435–524 MHz)

Table 1-13 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D UHF R2 (435–524 MHz)

General Specifications	
Model Number	T7039A (GTR 8000 Base Radio) T7540A (GPW 8000 Receiver)
Number of Channels (trunked)	1
Number of Channels (conventional)	16
Size (H x W x D)	133mm x 483mm x 457mm (5.25" x 19" x 18")
Weight	21 kg (46 lbs) base radio 16 kg (36 lbs) receiver
Temperature Range	Operating: -30 to 60 °C (-22 to 140 °F) Storage: -40 to 85 °C (-40 to 185 °F)
Operating Altitude	Up to 1800 meters (5900 feet) above mean sea level Above 1800 meters (5900 feet), the derating is 1.5 °C/km (0.8 °F/1000 feet) Maximum operational altitude is 5000 meters (16900 feet)
Power Requirements	AC: 90-264 VAC, 47-63 Hz DC: 43.2-60 VDC
Power Consumption (GTR 8000 Base Radio Transmitting)	AC: C4FM, FM: 460 W max H-DQPSK, LSM: 510 W max DC: C4FM, FM: 420 W max H-DQPSK, LSM: 470 W max
Power Consumption (GPW 8000 Receiver)	AC: 85 W max DC: 50 W max
Power Consumption (GTR 8000 Base Radio Standby)	AC: 110 W max DC: 75 W max

Table 1-13 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D UHF R2 (435–524 MHz) (cont'd.)

General Specifications	
Power Consumption (GTR 8000 Base Radio/GPW 8000 Receiver Standby with Power Efficiency Package)	AC: 70 W DC: 35 W
Channel Spacing	12.5/25 kHz
Power Supply Type	Switching
Battery Revert	Included
Input/Output Impedance	50 Ohms
Antenna Connector Types	Tx: N female Rx: BNC female without preselector N female with preselector
Frequency Stability Internal Reference (OCXO transceiver option card)	Aging: 30 ppb/yr 100 ppb/5yr Temperature: 40 ppb
Frequency Stability Internal Reference (TCXO transceiver option card)	Aging: 1000 ppb/yr Temperature: 500 ppb
Frequency Stability External Reference	TRAK
Frequency Generation	Synthesized

Table 1-14 GTR 8000 Base Radio Transmitter Specifications for IV&D UHF R2 (435–524 MHz)

Transmitter Specifications	
Frequency Range	435–524 MHz
Power Output*	2-110 W C4FM, FM 2-100 W LSM, H-DQPSK
Electronic Bandwidth	Full Bandwidth
Modulation	C4FM, LSM, H-DQPSK, FM
Modulation Fidelity	5%
Spurious and Harmonic Emissions Attenuation	90 dB
Analog FM Hum and Noise	12.5 kHz 45 dB 25 kHz 50 dB

Table 1-14 GTR 8000 Base Radio Transmitter Specifications for IV&D UHF R2 (435–524 MHz) (cont'd.)

Transmitter Specifications	
Analog Audio Distortion	Less than 2% (1% typical) at 1000 Hz
Emissions Designators	8K70D1W, 8K10F1E, 8K10F7W, 8K10F1D, 8K70D7W, 16K0F3E, 9K80D7W, 11K0F3E
Adjacent Channel Power Ratio	
	12.5 kHz offset, 6 kHz BW: 67 dB
Tx Noise in Rx Band	-142 dBc/Hz
Intermodulation Attenuation	65 dB

*Full transmitter output power is available during battery revert.

**NOTE**

The output power reference plane is the output connector of the power amplifier. The loss of the transmitter output cable (PA output to back of base radio) 3% at 450 MHz. However, the base radio software allows the transmitter output power to be set at 10% above rated value.

Table 1-15 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D UHF R2 (435–524 MHz)

Receiver Specifications	
Frequency Range	435–524 MHz
Modulation (GTR 8000 Base Radio)	C4FM, H-CPM, FM
Modulation (GPW 8000 Receiver)	C4FM, FM
Analog Sensitivity (12 dB SINAD)	
	12.5 kHz -118 dBm
	25 kHz -117 dBm
Digital Sensitivity 5% Bit Error Rate Static (BER)	
	C4FM: -118 dBm
	H-CPM: -116 dBm
Faded Sensitivity 5% Bit Error Rate (BER)	
	C4FM: -110 dBm
Intermodulation Rejection	85 dB
Digital Adjacent Channel Rejection	60 dB
Analog Adjacent Channel Rejection (EIA603) Analog 12.5 kHz	75 dB
Analog Adjacent Channel Rejection (TIA603D)	

Table 1-15 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D UHF R2 (435–524 MHz) (cont'd.)

Receiver Specifications	
Analog 12.5 kHz	50 or 60 dB (adjustable)
Analog 25 kHz	80 dB
Analog Audio Response	+1, -3 dB from 6 dB per octave de-emphasis; 300-3000 Hz referenced to 1000 Hz at line output
Analog Audio Distortion	3% or 5% (adjustable)
Analog FM Hum and Noise	
	12.5 kHz 45 dB
	25 kHz 50 dB
Spurious and Image Response Rejection	85 dB 100 dB with preselector
Signal Displacement Bandwidth	1 kHz
Intermediate Frequencies	
	1st: 73.35 MHz
	2nd: 2.16 MHz
Electronic Bandwidth	Full Bandwidth
Blocking Immunity	100 dB
Conducted Spurious	-57 dBm
Bit Error Rate Floor	0.01%

Table 1-16 GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D UHF R2 (435–524 MHz)

FCC Identification			
Frequency Range	Type	Power Output	Type Acceptance Number
435–512 MHz	Transmitter	2-110 W C4FM, FM, 2-100 W, LSM, H-DQPSK	ABZ89FC4819
435–524 MHz	Receiver	N/A	ABZ89FR4820

1.9.3.1 Industry Canada

Table 1-17 GTR 8000 Base Radio/GPW 8000 Receiver Industry Canada for IV&D (UHF R2 435–524 MHz)

IC Approval Number	Frequency Range	Type	Power Output	IC Model Number
109AB-T7039	Tx 450–470 MHz, Rx 450–470 MHz	C4FM, FM	Variable 2-110 Watts	T7039-UHFR2
109AB-T7039	Tx 450–470 MHz, Rx 450–470 MHz	LSM, H-DQPSK	Variable 2-100 Watts	T7039-UHFR2
109AB-4820	Rx 450–470 MHz	N/A	N/A	T7540-UHFR2

1.9.4 GTR 8000 Base/GPW 8000 Receiver Radio Specifications for Integrated Voice and Data VHF (136–174 MHz)

Table 1-18 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D VHF (136–174 MHz)

General Specifications	
Model Number	T7039A (GTR 8000 Base Radio) T7540A (GPW 8000 Receiver)
Number of Channels (trunked)	1
Number of Channels (conventional)	16
Size (H x W x D)	133mm x 483mm x 457mm (5.25" x 19" x 18")
Weight	21 kg (46 lbs) base radio 16 kg (36 lbs) receiver
Temperature Range	Operating: -30 to 60 °C (-22 to 140 °F) Storage: -40 to 85 °C (-40 to 185 °F)
Operating Altitude	Up to 1800 meters (5900 feet) above mean sea level Above 1800 meters (5900 feet), the derating is 1.5 °C/km (0.8 °F/1000 feet) Maximum operational altitude is 5000 meters (16900 feet)
Power Requirements	AC: 90-264 VAC, 47-63 Hz DC: 43.2-60 VDC
Power Consumption (GTR 8000 Base Radio Transmitting)	AC: C4FM, FM: 500 W max H-DQPSK, LSM: 410 W max

Table 1-18 GTR 8000 Base Radio/GPW 8000 Receiver General Specifications for IV&D VHF (136–174 MHz) (cont'd.)

General Specifications	
	DC: C4FM, FM: 460 W max H-DQPSK, LSM: 360 W max
Power Consumption (GPW 8000 Receiver)	
	AC: 85 W max
	DC: 50 W max
Power Consumption (GTR 8000 Base Radio Standby)	
	AC: 110 W max
	DC: 75 W max
Channel Spacing	12.5/25 kHz
Power Supply Type	Switching
Battery Revert	Included
Input/Output Impedance	50 Ohms
Antenna Connector Types	
	Tx: N female
	Rx: BNC female without preselector N female with preselector
Frequency Stability Internal Reference (transceiver option card)	Aging: 30 ppb/yr 100 ppb/5yr Temperature: 40 ppb
Frequency Stability External Reference	TRAK
Frequency Generation	Synthesized

Table 1-19 GTR 8000 Base Radio Transmitter Specifications for IV&D VHF (136–174 MHz)

Transmitter Specifications	
Frequency Range	136–174 MHz
Power Output*	2-100 W C4FM, FM 2-60 W LSM, H-DQPSK
Electronic Bandwidth	Full Bandwidth
Modulation	C4FM, LSM, H-DQPSK, FM
Modulation Fidelity	5%
Spurious and Harmonic Emissions Attenuation	90 dB
Analog FM Hum and Noise	

Table 1-19 GTR 8000 Base Radio Transmitter Specifications for IV&D VHF (136–174 MHz) (cont'd.)

Transmitter Specifications	
	12.5 kHz 45 dB
	25 kHz 50 dB
Analog Audio Distortion	Less than 2% (1% typical) at 1000 Hz
Emissions Designators	8K70D1W, 8K10F1E, 8K10F7W, 8K10F1D, 8K70D7W, 16K0F3E, 9K80D7W, 11K0F3E
Adjacent Channel Power Ratio	
	12.5 kHz offset, 6 kHz BW: 67 dB
Intermodulation Attenuation	55 dB

*Full transmitter output power is available during battery revert.

**NOTE**

The output power reference plane is the output connector of the power amplifier. The loss of the transmitter output cable (PA output to back of base radio) 1% at 150 MHz. However, the base radio software allows the transmitter output power to be set at 10% above rated value.

Table 1-20 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D VHF (136–174 MHz)

Receiver Specifications	
Frequency Range	136–174 MHz
Modulation (GTR 8000 Base Radio)	C4FM, H-CPM, FM
Modulation (GPW 8000 Receiver)	C4FM, FM
Analog Sensitivity (12 dB SINAD)	
	12.5 kHz -119 dBm
	25/30 kHz -118 dBm
Digital Sensitivity 5% Bit Error Rate Static (BER)	
	C4FM: -119 dBm
	H-CPM: -117 dBm
Faded Sensitivity 5% Bit Error Rate (BER)	
	C4FM: -111 dBm
Intermodulation Rejection	85 dB
Digital Adjacent Channel Rejection	60 dB
Analog Adjacent Channel Rejection (EIA603) Analog 12.5 kHz	75 dB
Analog Adjacent Channel Rejection (TIA603D)	

Table 1-20 GTR 8000 Base Radio/GPW 8000 Receiver Specifications for IV&D VHF (136–174 MHz) (cont'd.)

Receiver Specifications	
Analog 12.5 kHz	50 or 60 dB (adjustable)
Analog 25 kHz	80 dB
Spurious and Image Response Rejection	90 dB 95 dB with preselector
Analog Audio Response	+1, -3 dB from 6 dB per octave de-emphasis; 300–3000 Hz referenced to 1000 Hz at line output
Analog Audio Distortion	3% or 5% (adjustable)
Analog FM Hum and Noise	12.5 kHz 45 dB 25 kHz 50 dB
Signal Displacement Bandwidth	1 kHz
Intermediate Frequencies	1st: 44.85 MHz 2nd: 2.16 MHz
RF Input Connector with Optional Preselector	N female
Electronic Bandwidth	Full Bandwidth
Blocking Immunity	100 dB
Conducted Spurious	-57 dBm
Bit Error Rate Floor	0.01%

Table 1-21 GTR 8000 Base Radio/GPW 8000 Receiver FCC Identification for IV&D VHF (136–174 MHz)

Frequency Range	Type	FCC Identification	
		Power Output	Type Acceptance Number
136–174 MHz	Transmitter	2-100 W C4FM, FM 2-60 W LSM, H-DQPSK	ABZ89FC3790
136–174 MHz	Receiver	N/A	ABZ89FR3791

1.9.4.1 Industry Canada

Table 1-22 GTR 8000 Base/GPW 8000 Receiver Radio Industry Canada for IV&D (VHF 136–174 MHz)

IC Approval Number	Frequency Range	Type	Power Output	IC Model Number
109AB-T7039	Tx 138–174 MHz, Rx 138–174 MHz	C4FM, FM	Variable 2-100 Watts	T7039-VHF
109AB-T7039	Tx 138–174 MHz, Rx 138–174 MHz	LSM, H-DQPSK	Variable 2-60 Watts	T7039-VHF
109AB-3791	Rx 138–174 MHz	N/A	N/A	T7540-VHF

1.9.5 GTR 8000 Base Radio Specifications for High Performance Data (700 and 800 MHz)

Table 1-23 General Specifications for GTR 8000 Base Radio for HPD (700 and 800 MHz)

General Specifications	
Model Number	T7039A
Number of Channels	1
Size (H x W x D)	133mm x 483mm x 457mm (5.25" x 19" x 18")
Weight	21 kg (46 lbs)
Temperature Range	Operating: -30 to 60 °C (-22 to 140 °F) Storage: -40 to 85 °C (-40 to 185 °F)
Operating Altitude	Up to 1800 meters (6000 feet) above mean sea level
Power Requirements	AC: 90-264 VAC, 47-63 Hz DC: 43.2-60 VDC
Power Consumption	AC: 450 W DC: 410 W
Channel Spacing	25 kHz
Modulation	64 QAM, 16 QAM, QPSK
Power Supply Type	Switching
Battery Revert	Included
Input/Output Impedance	50 Ohms
Antenna Connector Types	Tx: N female Rx: BNC female
Frequency Stability	External Reference (TRAK)
Frequency Generation	Synthesized

Table 1-24 Transmitter Specifications for GTR 8000 Base Radio for HPD (700 and 800 MHz)

Transmitter Specifications	
Frequency Range	762–776, 851–870 MHz
Power Output*	2-50 W
Electronic Bandwidth	Full Bandwidth
Error Vector Magnitude	10%
Spurious and Harmonic Emissions Attenuation	90 dB
Emissions Designators	17K7D7D
Adjacent Channel Power Ratio	
25 kHz offset, 18 kHz BW:	58 dB
37.5 kHz offset, 25 kHz BW:	65 dB
Tx Noise in Rx Band	-142 dBc/Hz
Intermodulation Attenuation	80 dB

* Full transmitter output power is available during battery revert.

**NOTE**

The output power reference plane is the output connector of the power amplifier. The loss of the transmitter output cable (PA output to back of base radio) is 4% at 800 MHz. However, the base radio software allows the transmitter output power to be set at 10% above rated value.

Table 1-25 Receiver Specifications for GTR 8000 Base Radio (700 and 800 MHz HPD)

Receiver Specifications	
Frequency Range	792–825 MHz
Digital Sensitivity 1% Bit Error Rate Static (BER)	
64 QAM:	-98 dBm
16 QAM:	-104 dBm
QPSK:	-111 dBm
Faded Sensitivity 1% Bit Error Rate TU50 (BER)	
64 QAM:	-90 dBm
16 QAM:	-96 dBm
QPSK:	-101 dBm
Faded Sensitivity 5% Bit Error Rate HT200 (BER)	
64 QAM:	-90 dBm

Table 1-25 Receiver Specifications for GTR 8000 Base Radio (700 and 800 MHz HPD) (cont'd.)

Receiver Specifications	
Faded Sensitivity 2% Bit Error Rate HT200 (BER)	16 QAM: -94 dBm
Faded Sensitivity 1% Bit Error Rate HT200 (BER)	QPSK: -98 dBm
Intermodulation Rejection*	75 dB
Digital Adjacent Channel Rejection*	50 dB
Spurious and Image Response Rejection*	85 dB
Intermediate Frequencies	1st: 73.35 MHz 2nd: 2.16 MHz
Electronic Bandwidth	Full Bandwidth
Blocking Immunity	90 dB
Conducted Spurious	-57 dBm
Bit Error Rate Floor	0.01%
Co-Channel Rejection QPSK	11 dB

* Reference signal is QPSK

Table 1-26 FCC Identification for GTR 8000 Base Radio for HPD (700 and 800 MHz)

FCC Identification			
Frequency Range	Type	Power Output	Type Acceptance Number
762–776 MHz	Transmitter	2-50 W	ABZ89FC5812
851–870 MHz	Transmitter	2-50 W	ABZ89FC5810
792–825 MHz	Receiver	N/A	ABZ89FR5811

1.9.5.1 Industry Canada

Table 1-27 Industry Canada for GTR 8000 Base Radio (700/800 MHz)

IC Approval Number	Frequency Range	Type	Power Output	IC Model Number
109AB-T7039	Tx 851–866 MHz, Rx 806–821 MHz	HPD	Variable 250 Watts (average)	T7039-800
109AB-T7039	Tx 764–770 MHz, Rx 794–800 MHz	HPD	Variable 2-50 Watts (average)	T7039-700

2 GTR 8000 Base Radio Theory of Operation

For an understanding of the GTR 8000 Base Radio components, review the modules that provide the base radio functionality, the modules that provide RF distribution functionality (RFDS), and the backplane that connects to other modules within the site.

This chapter explains how the GTR 8000 Base Radio works in the context of your system.

2.1 Functions of the GTR 8000 Base Radio Modules

The following lists GTR 8000 Base Radio modules:

- Transceiver (XCVR) module (with or without transceiver option card)
- Power amplifier module (not applicable in a GPW 8000 Receiver)
- Fan module
- Power supply module

2.1.1 Function of the Transceiver Module

The transceiver module provides the control, exciter, receiver, and optional transceiver option card for the base radio/receiver.

Figure 2-1 Transceiver Module (Front View)



GTR8000_XCVR_wSAC

The transceiver generates the station reference, which typically needs to be locked on to one of many possible external sources. The external source can be either the site controller TDM clocks or the external reference operating at 5 or 10 MHz. An internal frequency reference operating at 10 MHz is available in an optional transceiver option card.

The transceiver SPI bus allows communication with its receiver and exciter circuitry, as well as the power supply and power amplifier modules.

There are two or three circuit boards in the transceiver:

- **Transceiver Control Board:** Performs the control management, digital signal processing, and transmit and receive data formatting for the base radio.

- **Transceiver RF Board:** Contains DC power conversion/regulation and performs receiver and exciter functions.
- **Transceiver Option Card:** An optional board that attaches to the control board. Provides an internal 10 MHz frequency reference. For conventional base radio/receiver operation it also provides the analog interfaces and wildcard I/Os. The transceiver option card requires an internal frequency reference oscillator alignment at different intervals that is mandated by its category and frequency band. See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures and mandated intervals. The transceiver option card is available in two categories:
 - **OCXO (Oven Controlled Crystal Oscillator)** – operates at 0.1 ppm which is inclusive to temperature and aging. The OCXO Transceiver Option Card is available in 700/800 MHz, UHF R1/R2, and VHF frequency bands.
 - **TCXO (Temperature Compensated Crystal Oscillator)** – operates at 1.5 ppm, of which 0.5 ppm is allocated to temperature and 1.0 ppm is allocated to aging. Reference precision with the TCXO is traded for lower power consumption. The TCXO mandates shorter maintenance intervals. The TCXO transceiver option card is available in UHF R1/R2 frequency bands. The TXCO is only available for non-simulcast conventional systems.


2.1.1.1 Transceiver Control Board

The main operating software for the base radio is loaded in the XCVRs control section. As the main manager for the base radio, the XCVR control board provides operational control over the other station modules. It handles three types of information flow, in the following ways:

- Serves as a gateway between the network and RF functionality, by distributing the RF payload to and from the network.
- Supports operational and diagnostic functions with digital control data (for example: site information, channel assignments, and identification numbers for call processing).
- Ensures the flow of other network management configuration information.

Figure 2-2 shows the information flow through the transceiver control and RF sections for trunked and digital conventional operation.

Figure 2-2 Transceiver Control Board Information Flow

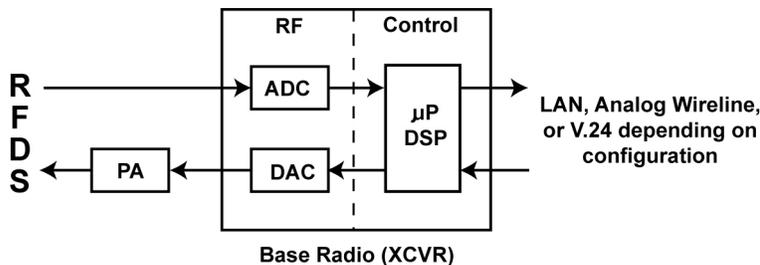

GTR8000_RF_Ethernet_Flow

2.1.1.2 Transceiver RF Board

In addition to DC power conversion/regulation, the XCVR RF board provides circuitry for the following exciter and receiver functions.

2.1.1.2.1 Exciter

The exciter on the XCVR RF board provides the transmitter functions for the base radio. The exciter circuitry generates a low-level, modulated RF signal that passes to the power amplifier. It supports various modulation types as well as bandwidths up to 25 kHz, through software programming.

The exciter also provides a controlled output power level to the power amplifier.



NOTE

The Exciter is present in a GPW 8000 Receiver but, is powered down to save energy.

2.1.1.2.2 Receiver

The receiver provides either single receiver input or dual (HPD or TDMA) receiver inputs for dual diversity. The receiver also provides enhanced diagnostic capabilities using an on board noise source generator. It includes a wide tuning range (electronic varactor-tuned) preselector. The preselector is electronically tuned to the desired receive frequency anywhere between 792–825 MHz, UHF R1 380–435 MHz, UHF R2 435–524 MHz, or VHF 136–174 MHz.

2.1.1.3 Transceiver External Interfaces

The transceiver external interfaces include seven external ports, a switch and LEDs. If a transceiver option card is part of the transceiver, there are four additional external ports. See [3.4.7 Connections – Front, page 3-27](#) for the port connections. See [10.1 LEDs, page 10-1](#) for information on the LEDs.

2.1.1.3.1 Transceiver Switch

There is one multifunction Reset switch on the front of the transceiver module, accessible through the drop-down door to the left of the fans. The Reset switch has two functions:

Figure 2-3 Transceiver Reset Switch (viewable through drop-down door)



GTR8000_XCVR_LED_Closeup_1


Table 2-1 Transceiver Front Reset Switch Functions

User Action	Result
Press switch for less than 1 second	Service Mode (LED 3 lights amber)
Press switch for more than 3 seconds	Transceiver Control Module Reset

2.1.1.3.2 Transceiver Option Card Intercom Button

There is one intercom button on the front of the transceiver option card, accessible behind the fan module. Pressing the intercom button toggles the intercom function between the ON and OFF states.


Figure 2-4 Transceiver Option Card Intercom Button (behind fan module)

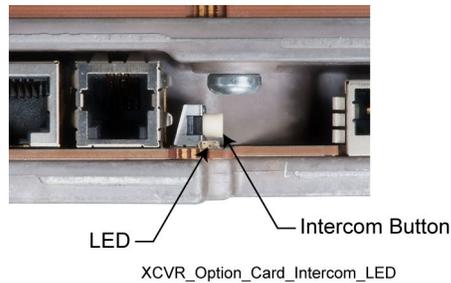

2.1.1.3.3 Transceiver Ports (Rear)

The transceiver interconnects to the backplane using a 120-pin HVDML digital connector and 8-pack RF connector, as shown in the figure. These connections handle multiple signals including power supply communications, power amplifier communications, fan interface, and peripheral interface. The digital connection receives alarm data and the site controllers' TDM signals, which are used to pass reference and control data to the base radio.

Figure 2-5 Transceiver Module (Backplane Connections)

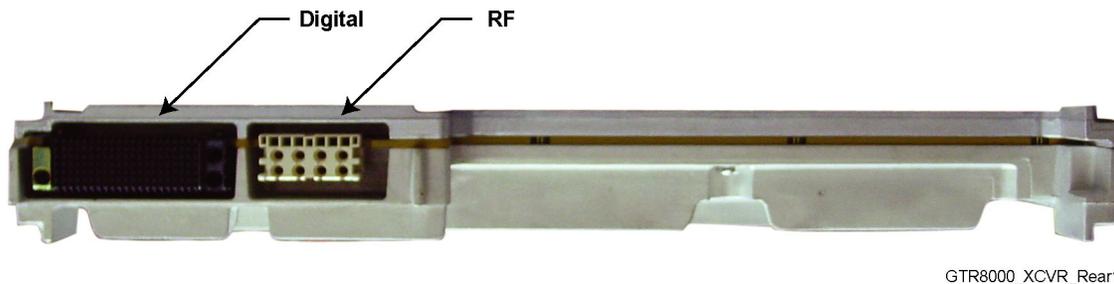

- **Single Receiver Input:** An RJ-45 Ethernet port on the base radio backplane is cabled to a site LAN switch for this channel. The backplane also provides an RF connection to the transceiver for receive (Rx) path A.
- **Dual Receiver Input:** RJ-45 Ethernet ports on the base radio backplane are cabled to corresponding ports on the site controller backplanes (HPD). The backplane also provides RF connections to the transceiver for receive (Rx) paths A and B (HPD and TDMA).

2.1.2 Function of the Power Amplifier Module




The PA module is not applicable in a GPW 8000 Receiver.

The power amplifier (PA) is a forced convection-cooled RF power amplifier. It accepts a low-level modulated RF signal from the transceiver module, and amplifies it for transmission through the site transmit antenna. Also, to complete the Cartesian correction loop (linearization method), it provides a low level RF feedback signal to the transceiver module to achieve the required transmitter linearity.

Transmit power output can be set using Configuration/Service Software (CSS). See [4.4.10 Configuring Tx Power Values and Battery Type](#), page 4-31.

The power amplifier also performs functions related to the fan module, including reporting of the fan module status and supplying power to the fan power bus.

Figure 2-6 Power Amplifier Module

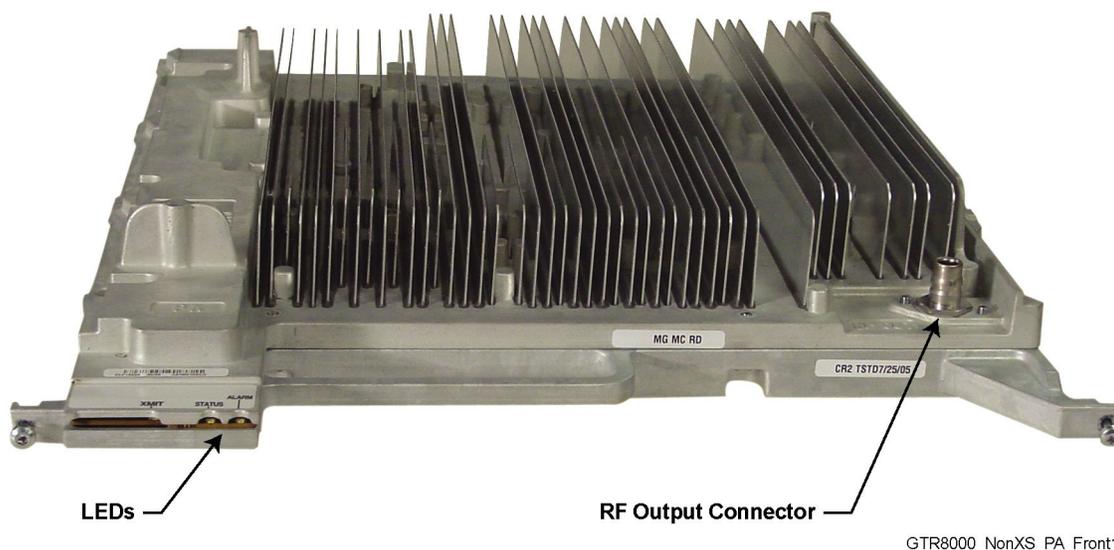

The power amplifier is comprised of six internal modules:

- Core Board
- Converter Board
- Driver Amplifier Board
- Final Amplifier Board
- Distribution Board
- Output Circuitry

2.1.2.1 Power Amplifier Input/Output Connections

There are three electrical connection assemblies on the power amplifier:

- RF output (front QN "quick-N" connector) on front of power amplifier module




NOTE

This is cabled to the N-type female bulkhead connection at the rear of the base radio housing.

- DC power supply/control signal (backplane connection)

- RF input/feedback (backplane connection).

Figure 2-7 Power Amplifier (Backplane Connections)

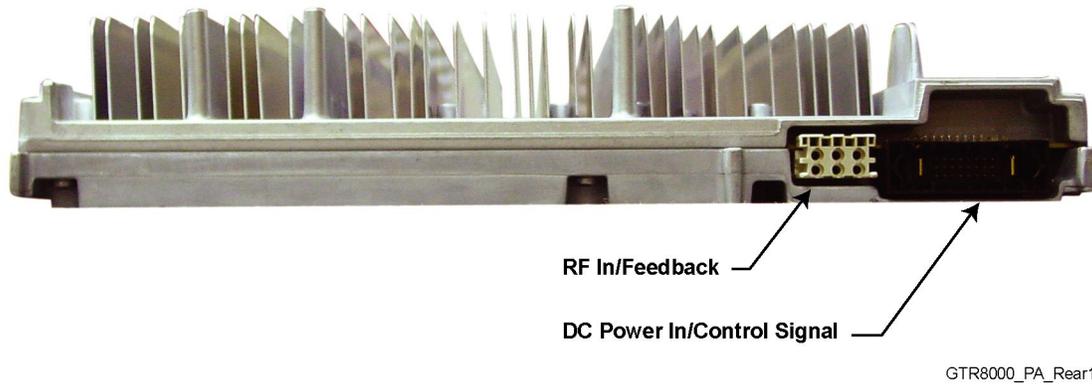

2.1.3 Function of the Fan Module

The fan module provides intermittent forced air cooling for the power amplifier and transceiver modules. The fans are controlled by a thermostat in the modules behind the fan module. The fan module houses two 119 mm axial fans which deliver a total of approximately 160 cubic feet per minute of airflow. Nominal fan speed is 4100 revolutions per minute. Each fan has a built-in speed sensor which turns on the red Fan Alarm LED if the fan speed for either fan falls below 30% of the rated speed.

If the fan module is used for the Power Efficiency Package, the following must be configured in the CSS in order to take full advantage of the Power Efficiency Package:

- Optional fan holdover time (length of time the base radio/receiver fan stays ON after transmission).
- Disabling one of the fans within the fan module. See [9.3.1 How To Replace the Fan Assembly, page 9-11](#) for instructions on how to disable one of the fans.
- Configuring the base radios Tx Power Out in the CSS should be limited to 50 W.


The fan module connects to the base radio backplane through a 4pin port on the front of the base radio chassis.



NOTE

The power supply module has its own fan which provides independent airflow.

Figure 2-8 Fan Module

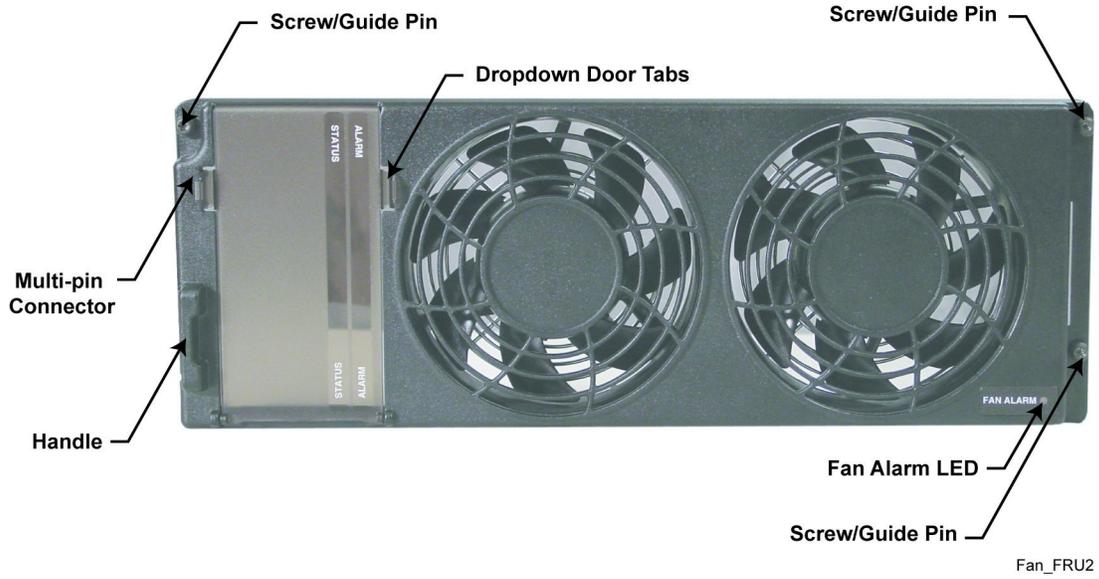

2.1.4 Function of the Power Supply

Figure 2-9 Power Supply



HPD_Power_Supply_FRU.jpg

The power supply, with front-to-rear airflow, operates from either an AC or DC input and provides the DC operating voltage for the base radio. However the power supply prioritizes an AC source (if present) over that of a DC source.

**NOTE**

If the power supply module is used for the Power Efficiency Package, the power supply must be used in DC mode in order to obtain the 35 W standby power consumption performance.

When operating from an AC source (90 to 264 VAC, 47-63 Hz), the supply generates two DC output voltages of 29 V with respect to output ground. The power supply automatically adjusts to AC input ranges and supplies a steady output.

In AC mode, the power supply provides a separate battery charger which can be used to maintain the charge on a 48 VDC nominal system, positive or negative ground, if installed. The supply generates two DC output voltages of 29 V with reference to output ground, when operating from a DC source (43.2 VDC to 60VDC maximum, positive or negative ground). This voltage limit includes consideration of the battery charging "float voltage" associated with the intended supply system, regardless of the marked power rating of the equipment.

The battery charger is not usable when operating from a DC input power source.

The power supply contains several switching-type power supply circuits as follows:

- Power factor correction circuitry
- Battery charging circuitry
- Diagnostics and monitoring circuitry

The power supply controls its own continuously running fan, changing its speed to fast or slow as needed.


**NOTE**

GTR 8000 Base Radio: If the power supply module is used for the Power Efficiency Package, the power supply fan does not run below a 40 °C air inlet temperature in DC mode with the transmitter in a de-keyed state.

GPW 8000 Receiver: If the power supply module is used for the Power Efficiency Package, the power supply fan does not run below a 40 °C air inlet temperature.

2.1.4.1 AC/DC Power Distribution – Base Radio

Figure 2-10 AC and DC Power Distribution in the GTR 8000 Base Radio

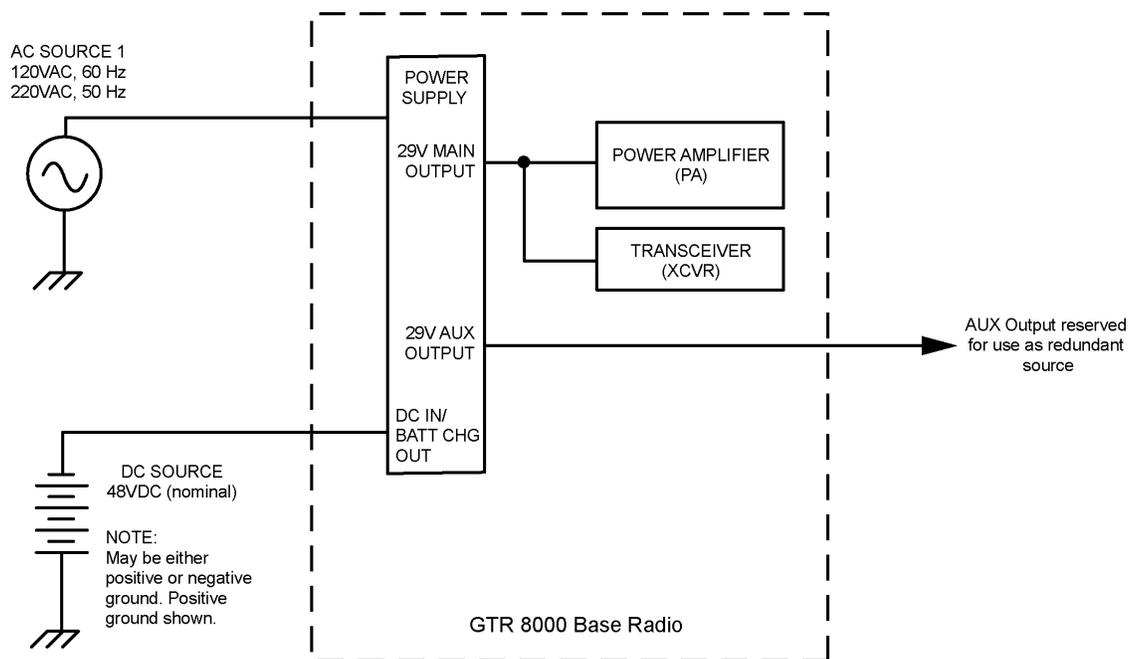

HPD_GTR8000_BR_ACDC_Flow

If present, the base radio operates from AC power as the preferred power source. When AC power is not available, the base radio switches to operate from the DC source. Operation returns to the AC source when the AC source is restored. Switchover from AC to DC and back again is fully automatic. No operator action is required.

The Main DC output of the power supply is used to provide power to the power amplifier and the transceiver. The Auxiliary output of the power supply is not used within the base radio, but is reserved for use as a redundant power input to other site components such as the site controller.

2.1.4.2 Power Supply Battery Charger

The power supply includes an integrated battery charger. The battery charger is controlled entirely through software residing on the associated device module. Software contains the information on supported battery types and obtains user-specific information pertaining to the particular site. The device software receives battery bus voltage and battery temperature information from the power supply and uses these variables in conjunction with supported battery charging profiles to return a signal which sets the charger output voltage appropriately. The battery charge and temperature conditions may be viewed through Configuration/Service Software (CSS) and Unified Network Configurator (UNC) or through alarms to Unified Event Manager (UEM).

The maximum charging current available from the integrated charger is 3A (48VDC nominal system). In order to ensure that the charger is capable of maintaining an adequate state-of-charge on the backup battery, and the backup battery is restored to full capacity within a reasonable amount of time following operation on battery backup power. Motorola recommends that a battery with capacity no larger than 60A-hr be connected to a single charger .

In addition to standard sealed lead-acid batteries (valve-regulated lead acid or gel cells), the power supply supports charging of vented lead-acid and NiCd batteries.

2.1.4.3 Battery Temperature Sensor Cable

The integrated charger in the power supply performs temperature compensated battery charging when a temperature sensor is connected. If the sensor is disconnected, the charger continues to operate as an uncompensated charger with the charging profile following the minimum charger voltage specified by the battery manufacturer.

Included is a 40 foot battery temperature sensor cable, which attaches to a battery pack, supplied by your organization, and to the backplane of the device. This three-wire cable carries a voltage signal to the power supply from the sensor element, which needs to be mounted in close proximity to the storage battery. Voltage is proportional to the battery temperature and is used by diagnostic circuitry in the power supply module. This cable is extended to a total length of 190 feet using 50 foot extensions. See [3.4.3.4 Mounting the Battery Temperature Sensor, page 3-21](#).



IMPORTANT

Continuous operation with a disconnected sensor is not recommended.

2.1.4.4 ON/OFF Switch for Power Supply and Battery Charger

This table identifies the switch states for the power supply and battery charger.

Table 2-2 ON/OFF Switch - States for Power Supply and Battery Charger


Switch Position	Power Supply State	Battery Charger State
ON (1)	<ul style="list-style-type: none"> Power Factor Correction (PFC) section is active (AC input only) Main DC converter runs to create the MAIN and AUX DC outputs 	Can be started if desired (AC input only)
OFF (0)	<ul style="list-style-type: none"> Main DC converter is turned OFF and the MAIN and AUX DC outputs become 0.0VDC 	Disabled (AC input only)

2.1.4.5 Power Supply Module - Backplane Connections

Table 2-3 Power Supply Module Backplane Connections

Port/Type	Description
AC	Input only
Battery / DC Power and Control Signal	<p>48 VDC:</p> <ul style="list-style-type: none"> Provides the DC input to the power supply when operating from a DC source. Connects the charger output to the standby battery when operating from an AC input with a standby DC battery. <p>29 VDC:</p> <ul style="list-style-type: none"> Provides the Main and Aux DC outputs of the power supply for use by the power amplifier, transceiver, and site controller. <p>Other signals handled by this connector include control interface and battery temperature interface.</p>

Figure 2-11 Power Supply Connections (Rear)

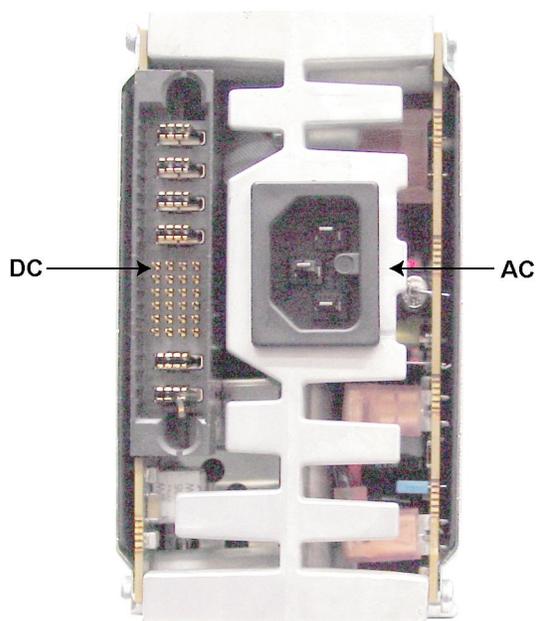

GTR8000_PS_Rear1

2.2 Backplanes and Card Cages

Card cages for the GTR 8000 Base Radio are created with a welded and riveted design. Each card cage has a backplane.


- See [3.4.5 Connections – Rear \(Integrated Voice and Data\)](#), page 3-23 and [3.4.6 Connections – Rear \(HPD\)](#), page 3-26.

2.3 RFDS Modules

The Radio Frequency Distribution System (RFDS) equipment included in your system depends on what options were purchased from Motorola. The following lists some examples of the RFDS equipment available for your system.

2.3.1 RFDS - Preselector (700/800 MHz)

Figure 2-12 Preselector Filter (700/800 MHz)

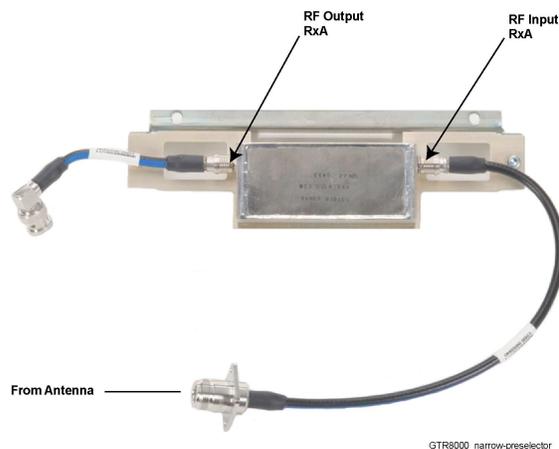


The preselector provides a first level of band pass filtering for inbound RF signals. RF input and output connectors are cabled to the GTR 8000 Base Radios RF Output RxA. This filter must be included to fulfill TIA102-CAAB Class A spurious response rejection (90 dB). The filter is usually not required when using a receiver multicoupler system. This filter can NOT be retuned in the field.

2.3.2 RFDS - Preselector (UHF)

The preselector rejects unwanted signals including the transmitter signals from overloading the receiver. This filter must be included to fulfill TIA102-CAAB Class A spurious response rejection (90 dB). The filter is usually not required when using a receiver multicoupler system. This filter can be retuned in the field.


Figure 2-13 Preselector (UHF)

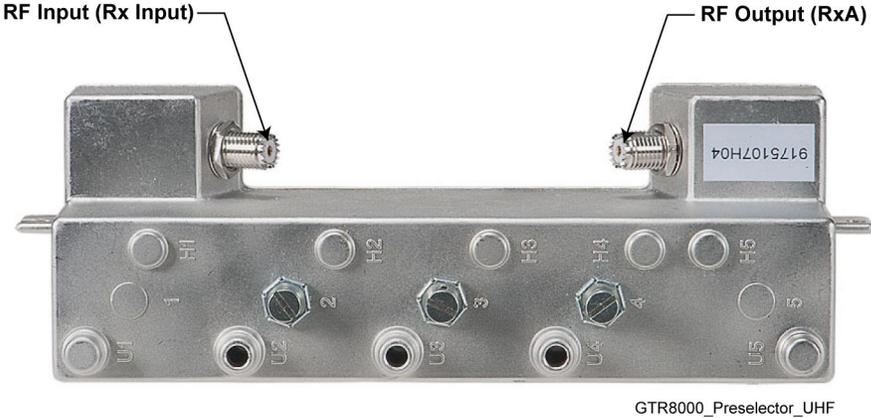

2.3.3 RFDS - Preselector (VHF)

The preselector rejects unwanted signals including the transmitter signals from overloading the receiver. This filter must be included to fulfill TIA102-CAAB Class A spurious response rejection (90 dB). The filter is usually not required when using a receiver multicoupler system. This filter can be retuned in the field.


Figure 2-14 Preselector (VHF)

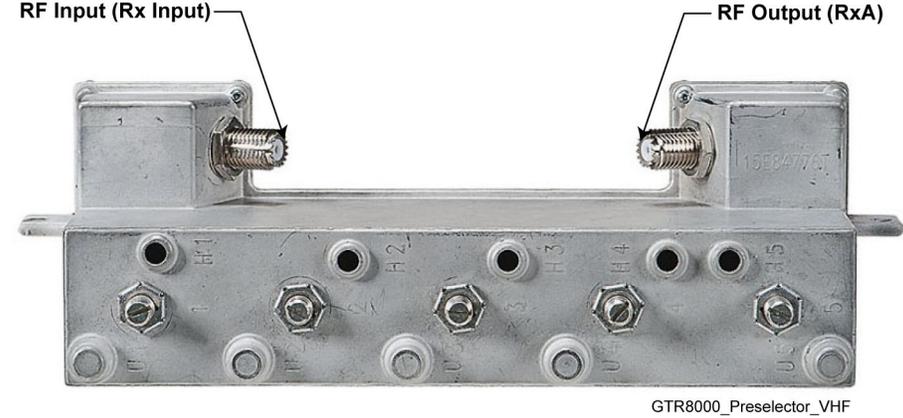

2.3.4 RFDS - Transmit Filter (700/800 MHz)

The transmit filter removes any noise in the receive sub-band. The Tx Output from the GTR 8000 Base Radio connects to the Transmit Filters Tx In. The Transmit Filters Tx Out connects the Tx Output or any other RFDS equipment.

Figure 2-15 Transmit Filter (700/800 MHz)

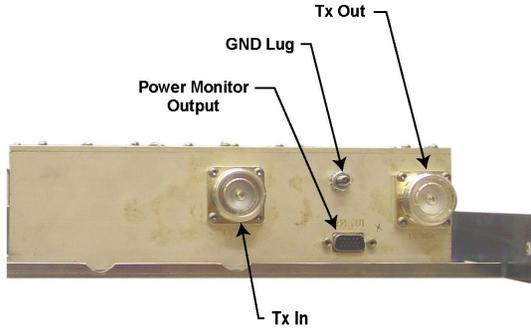


GTR8000_RFDS_XS_TXFilter_Front1

2.3.5 RFDS - Duplexer (700/800 MHz)

This optional filter provides the capability to use a single antenna for both transmitter and receiver. Only one transmitter and receiver can be combined.


Figure 2-16 Duplexer (700/800 MHz)

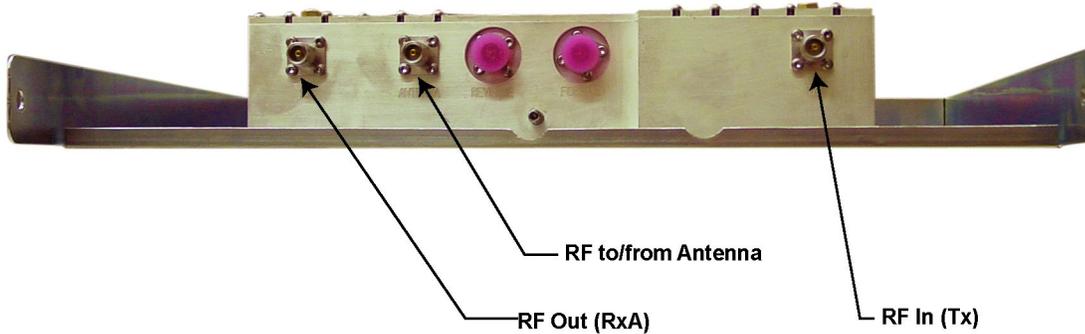

GTR8000_RFDS_NonXS_Duplexer_Rear1

2.3.6 RFDS - Duplexer (UHF)

This optional filter provides the capability to use a single antenna for both transmitter and receiver. Only one transmitter and receiver can be combined.

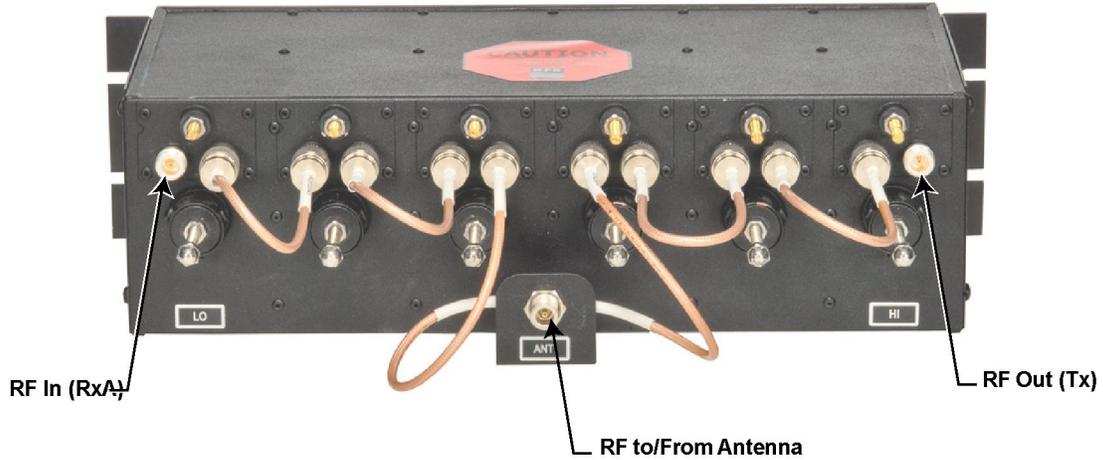
Figure 2-17 Duplexer (UHF)

GTR 8000 Duplexer UHF

2.3.7 RFDS - Duplexer (VHF)


This optional filter provides the capability to use a single antenna for both transmit and receiver. Only one transmitter and receiver can be combined.

Figure 2-18 Duplexer (VHF)

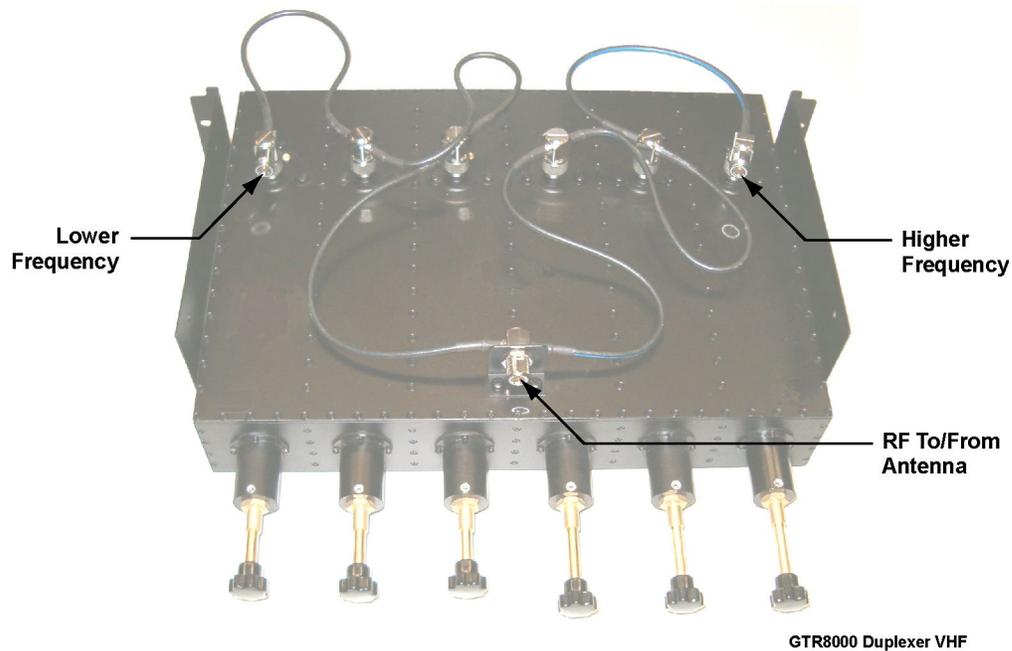

2.3.8 RFDS - External Dual Circulator/Isolator Tray (700/800 MHz)


An option for the GTR 8000 Base Radio is an External Dual Circulator module which isolates the base radio from the antenna, thus preventing the transmitter from generating intermodulation. The circulator load dissipates reflected power. It includes a cable that connects to the RF Peripherals port on the base radio backplane to provide temperature monitoring.

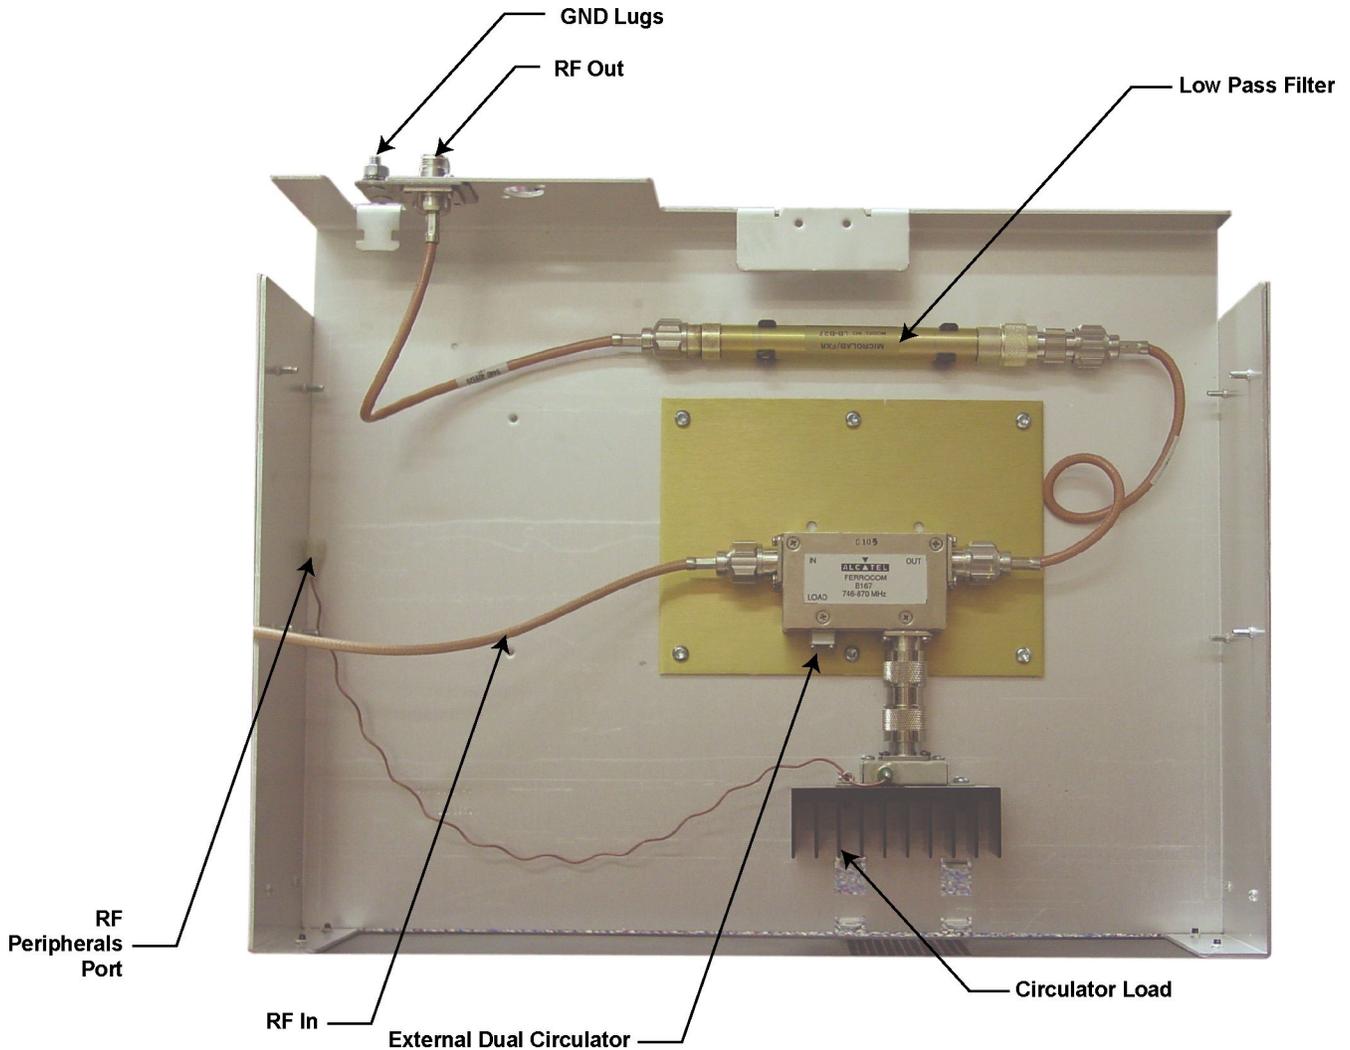Figure 2-19 External Dual Circulator/Isolator Tray (700/800 MHz)

GTR8000_RFDS_NonXS_Isolator_Tray1

2.3.9 RFDS - External Dual Circulator/Isolator Tray (UHF)

An option for the GTR 8000 Base Radio is an External Dual Circulator module which isolates the base radio from the antenna, thus preventing the transmitter from generating intermodulation. The circulator load dissipates reflected power. It includes a cable that connects to the RF Peripherals port on the base radio backplane to provide temperature monitoring.

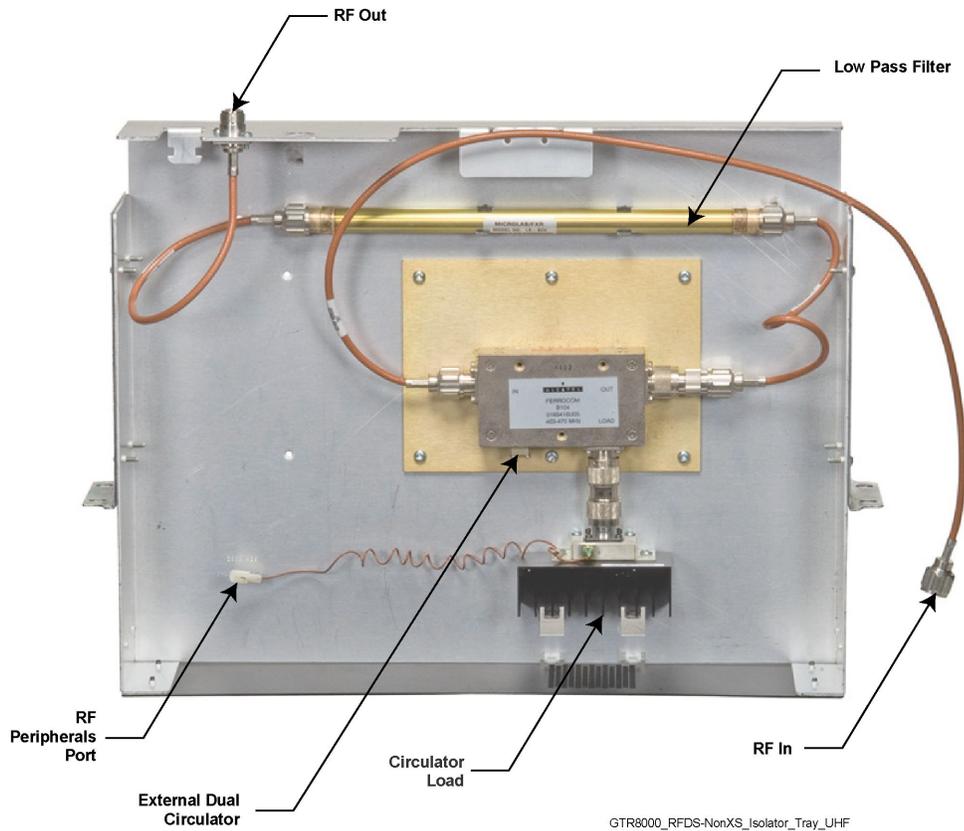Figure 2-20 External Dual Circulator/Isolator Tray (UHF)

2.3.10 RFDS - External Dual Circulator/Isolator Tray (VHF)

An option for the GTR 8000 Base Radio is an External Dual Circulator module which isolates the base radio from the antenna, thus preventing the transmitter from generating intermodulation. The circulator load dissipates reflected power. It includes a cable that connects to the RF Peripherals port on the base radio backplane to provide temperature monitoring.

2.3.11 Antenna Relay Module


The antenna relay module allows a single antenna to be used for both transmit and receive functions on a conventional GTR 8000 Base Radio. The antenna relay module is controlled by a signal from the base radio transceiver module and is typically mounted on the backplane cover on the rear of the base radio, or on the peripheral tray if the base radio is equipped with other options. [Figure 2-21](#) shows the antenna relay module input and output external connections. Settings for the antenna relay module are made through Configuration/Service Software (CSS) and UNC.



NOTE

If the antenna relay is Enabled and it is then disconnected, a failure is generated and logged stating the antenna relay is disconnected. However, the base radio also generates an exciter failure because the antenna relay is controlled and monitored through the exciter module. The exciter failure should be ignored until after the antenna relay failure is corrected. The failures are reported in the Status Report and UEM.

Figure 2-21 Antenna Relay Module Connections

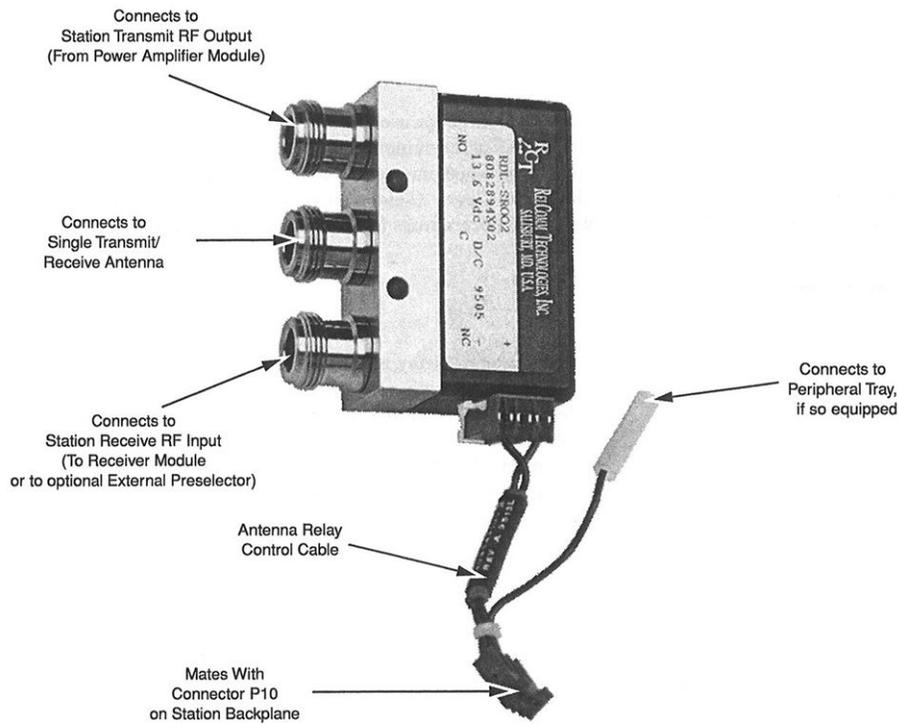


2.3.11.1 Mounting Locations


The antenna relay module may be installed in either of two locations.

On base radios **not equipped** with the peripheral tray, the antenna relay is mounted on the backplane cover.

Figure 2-22 Base Radio Backplane Mounting Location

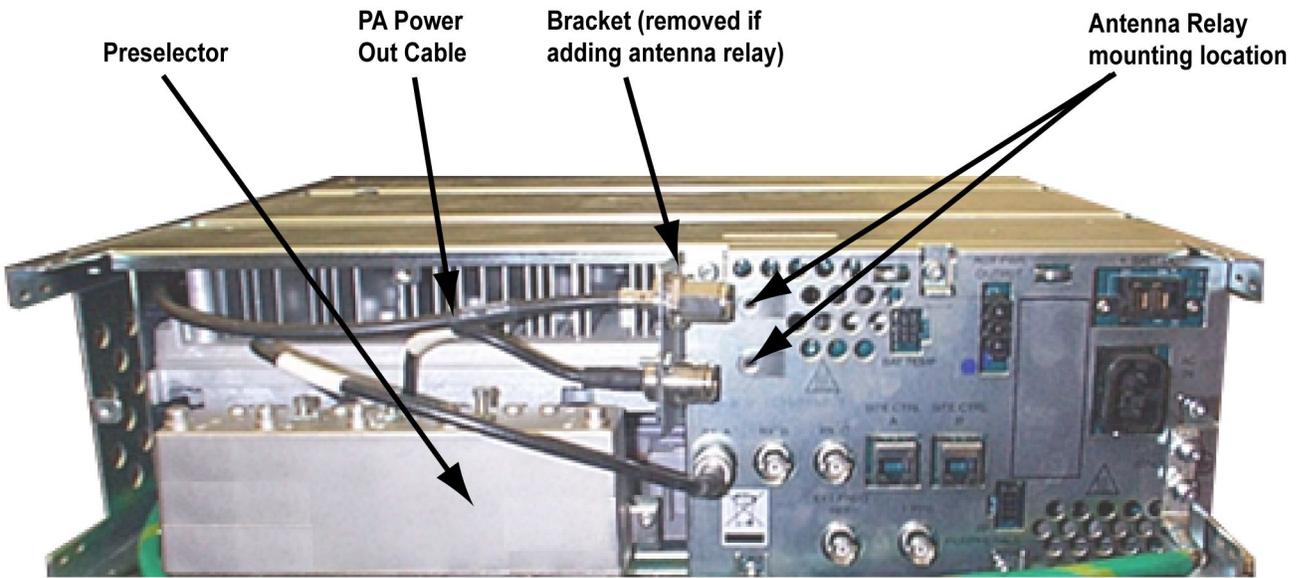

Antenna_Relay_Mounting_Location

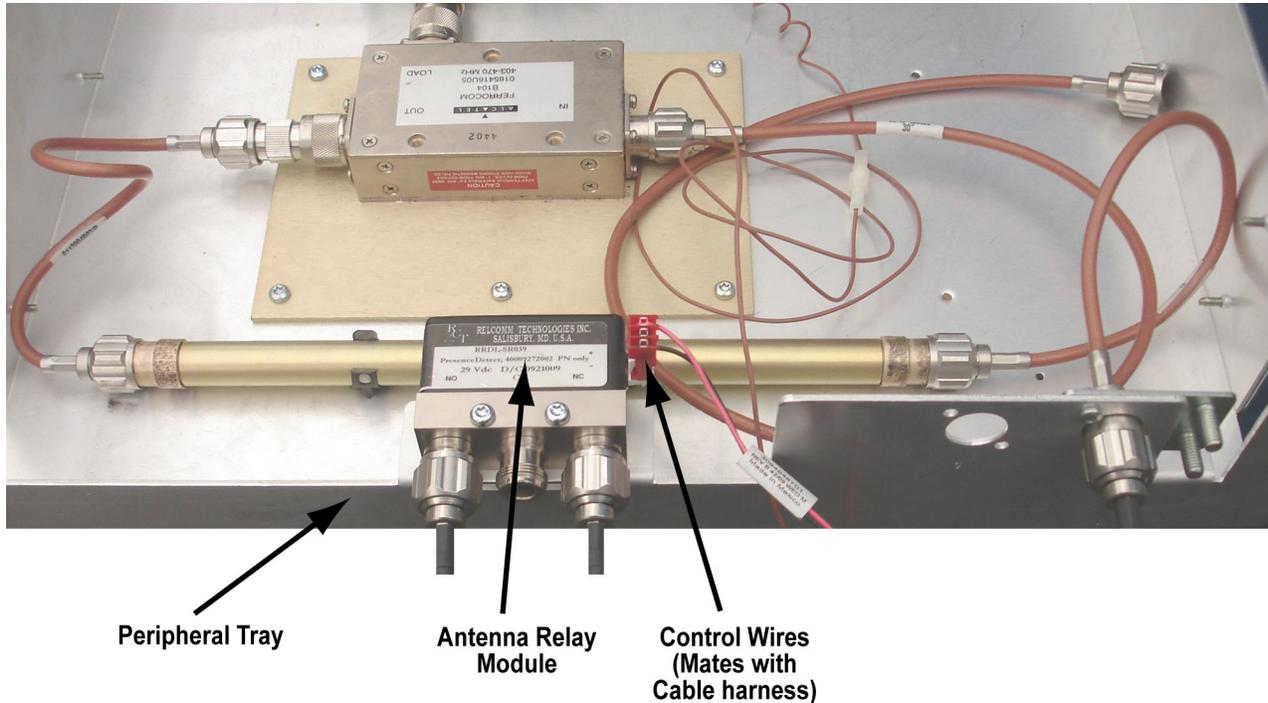Figure 2-24 Antenna Relay Module Mounted on Peripheral Tray

Antenna_Relay_on_Peripheral_Tray

2.3.11.2 Functional Operation


The antenna relay module contains a relay with a set of normally open and normally closed contacts. The relay coil is controlled by a signal from the transceiver module that connect to Receiver input port Rx-A or the PA deck to a single transmit/receive antenna.



NOTE


Note that with the relay de-energized, the antenna is connected to Receiver input port Rx-A. To connect the antenna to the PA deck, the transceiver module must energize the relay.

Figure 2-25 Functional Block and Interconnect Diagram for Antenna Relay Module (Bracket Mounting)

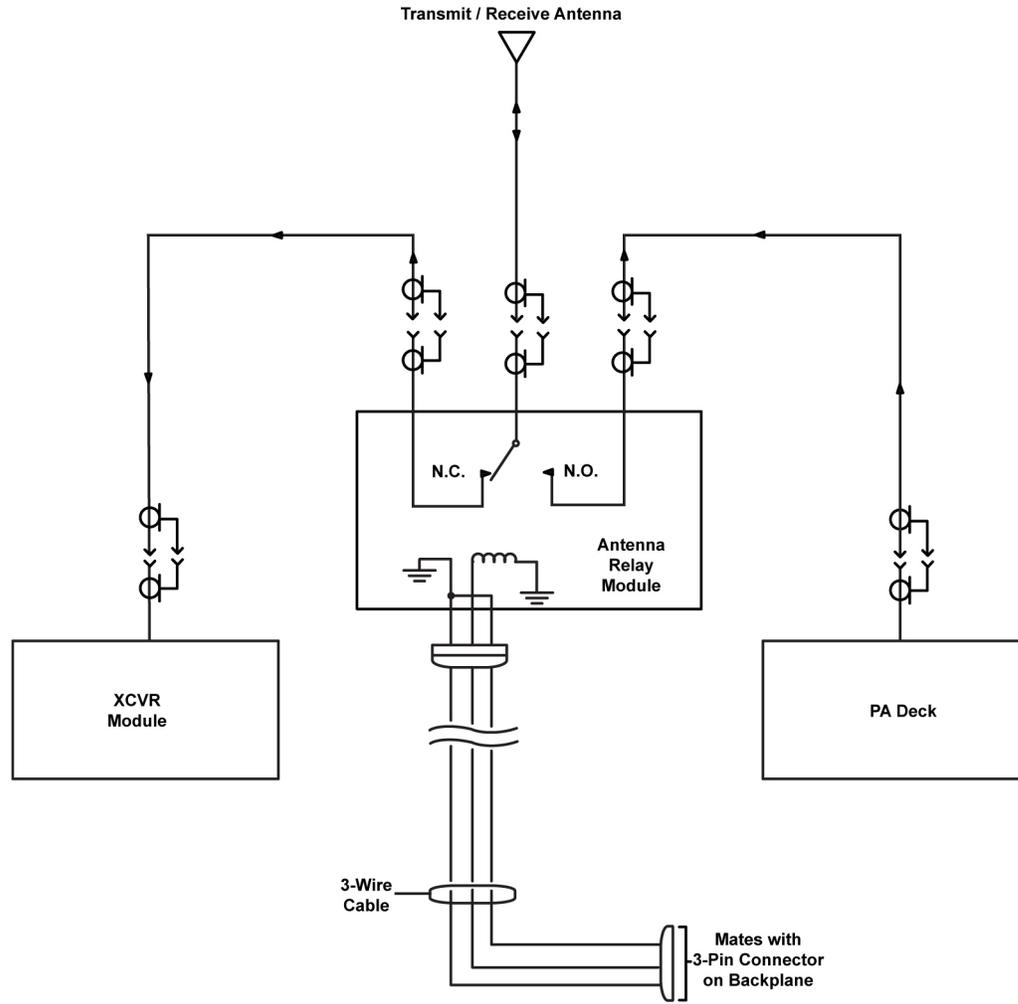

Antenna_Relay_Bracket_Mounting_1

Figure 2-26 Functional Block and Interconnect Diagram for Antenna Relay Module (Peripheral Tray Mounting)

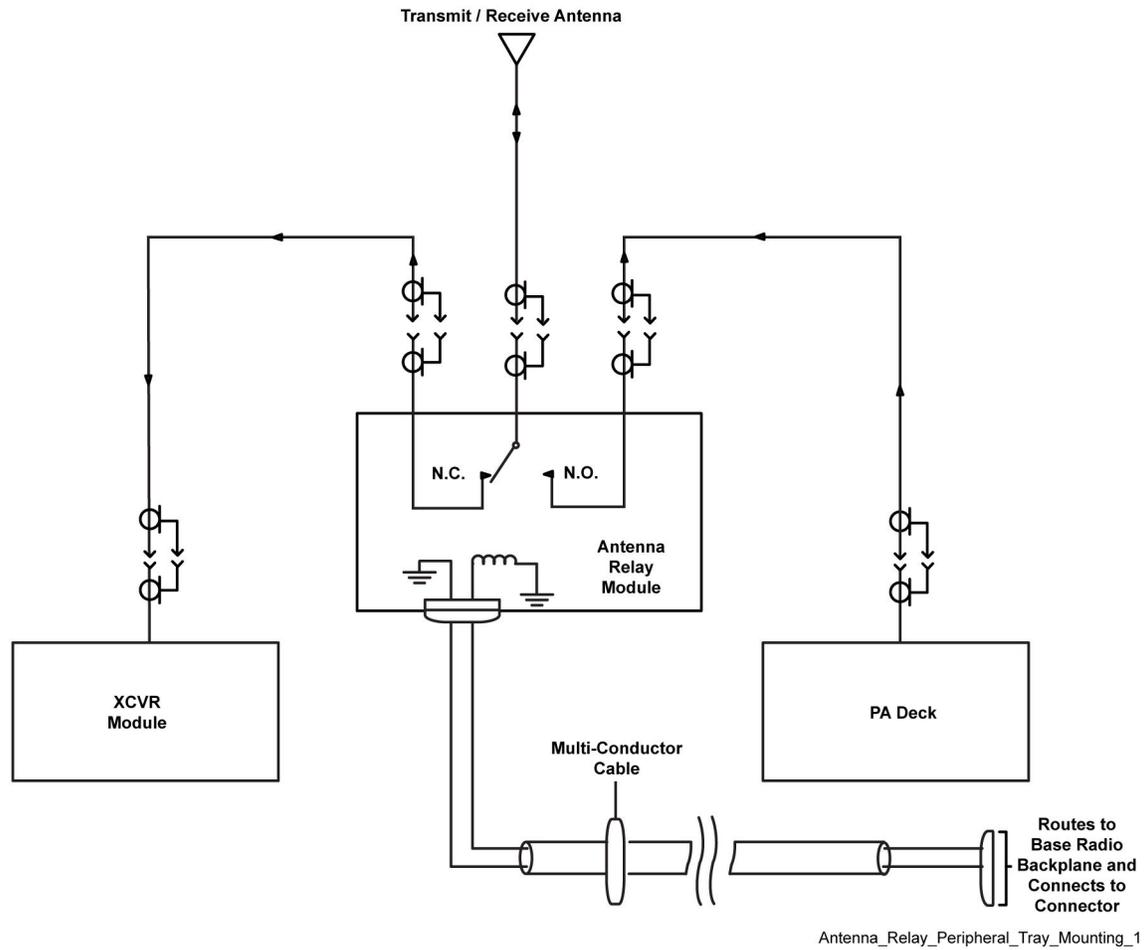

3 GTR 8000 Base Radio Installation

This chapter details installation procedures relating to GTR 8000 Base Radio.

3.1 Pre-Installation Tasks

Follow this process to perform the installation tasks. Make sure you have the following:

- appropriate cables
- access to SWDL, CSS, and UNC
- IP/DNS information
- login and password information

3.1.1 Equipment Installation Process Overview

Process Steps

- 1 Prepare the site to comply with the Motorola requirements and specifications for the equipment, as listed in the *Standards and Guidelines for Communication Sites* manual. Other codes and guidelines that may apply to the location must also be met. See [3.2 General Safety Precautions, page 3-2](#).
 - 2 Inspect and inventory all racks, cabinets, cables, and other equipment with a Motorola representative to ensure that the order is complete. See [3.3 General Installation Standards and Guidelines, page 3-7](#).
 - 3 A variety of tools are needed to install and service the equipment. If information is needed regarding where to obtain any of the equipment and tools listed, contact the Motorola System Support Center (SSC). See [3.3.12 General Installation/Troubleshooting Tools, page 3-14](#) for a list of general recommended tools for installing and servicing the hardware.
 - 4 Install all equipment using the site drawings and other documents provided by the Field Engineer. Use the installation standards and guidelines for placing and installing equipment.
 - 5 Properly ground all the racks and cabinets to protect against ground faults, electrical surges, and lightning. See [3.4 GTR 8000 Base Radio Hardware Installation, page 3-16](#).
 - 6 Connect all necessary cables within a rack and between the racks for system interconnection. See [3.4.5 Connections – Rear \(Integrated Voice and Data\), page 3-23](#), [3.4.6 Connections – Rear \(HPD\), page 3-26](#), and [3.4.7 Connections – Front, page 3-27](#).
 - 7 Run a preliminary check of a site before applying power.
-

- 8 See [3.6 Device Software Installation Prerequisites, page 3-37](#) for a list of items you need access to prior to installing the software.

- 9 See [3.8 Device Installation Using the UNC, page 3-41](#) to discover the base radio and to load OS software images from the UNC.

- 10 See [4.4 Configuring a Device Using CSS, page 4-3](#) to program the configurations into the base radio using CSS.

- 11 See [4.5 Using VoyenceControl to Configure Centralized Authentication on Devices, page 4-33](#) to program the base radio using UNC.

3.2 General Safety Precautions



CAUTION

Compliance with FCC guidelines for human exposure to Electromagnetic Energy (EME) at Transmitter Antenna sites generally requires that Personnel working at a site shall be aware of the potential for exposure to EME and can exercise control of exposure by appropriate means, such as adhering to warning sign instructions, using standard operating procedures (work practices), wearing personal protective equipment, or limiting the duration of exposure. For more details and specific guidelines, see Appendix A of the *Motorola Standards and Guidelines for Communications Sites manual*.

Observe the following general safety precautions during all phases of operation, service, and repair of the equipment described in this manual. Follow the safety precautions listed and all other warnings and cautions necessary for the safe operation of all equipment. Refer to the appropriate section of the product service manual for additional pertinent safety information. Because of the danger of introducing additional hazards, do not install substitute parts or perform any unauthorized modifications of equipment.



NOTE

The installation process requires preparation and knowledge of the site before installation begins. Review installation procedures and precautions in the *Motorola Standards and Guidelines for Communications Sites manual* before performing any site or component installation.

Always follow all applicable safety procedures, such as Occupational Safety and Health Administration (OSHA) requirements, National Electrical Code (NEC) requirements, local code requirements, safe working practices. Also, good judgment must be made by personnel. General safety precautions include the following:


- Read and follow all warning notices and instructions marked on the product or included in this manual before installing, servicing, or operating the equipment. Retain these safety instructions for future reference.
- If troubleshooting the equipment while power is on, be aware of the live circuits.
- Do not operate the radio transmitters unless all RF connectors are secure and all connectors are properly terminated.
- All equipment must be properly grounded in accordance with the *Motorola Standards and Guidelines for Communications Sites manual* and specified installation instructions for safe operation.

- Slots and openings in the cabinet are provided for ventilation. Do not block or cover openings that protect the devices from overheating.
- Only a qualified technician familiar with similar electronic equipment should service equipment.
- Some equipment components can become extremely hot during operation. Turn off all power to the equipment and wait until sufficiently cool before touching.
- Maintain emergency first aid kits at the site.
- Have personnel call in with their travel routes to help ensure their safety while traveling between remote sites.
- Institute a communications routine during certain higher risk procedures where the on-site technician continually updates management or safety personnel of the progress so that help can be dispatched if needed.
- Never store combustible materials in or near equipment racks. The combination of combustible material, heat, and electrical energy increases the risk of a fire safety hazard.
- Equipment shall be installed in site meeting the requirements of a "restricted access location," per UL60950-1, which is defined as follows: "Access can only be gained by service persons or by user who has been warned about the possible burn hazard on equipment metal housing. Access to the equipment is through the use of a tool or lock and key, or other means of security, and is controlled by the authority responsible for the location."

**WARNING**

Burn hazard. The metal housing of the product may become extremely hot. Use caution when working around the equipment.

Figure 3-1 Warning Label on Hot Modules

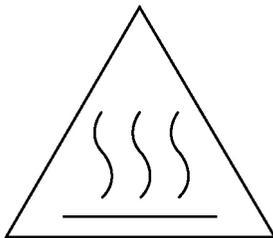

warning_hot

**CAUTION**

All Tx and Rx RF cables' outer shields must be grounded per Motorola Standards and Guidelines for Communications Sites manual requirements.

**CAUTION**

DC input voltage shall be no higher than 60VDC. This maximum voltage shall include consideration of the battery charging "float voltage" associated with the intended supply system, regardless of the marked power rating of the equipment. Failure to follow this guideline may result in electric shock.



CAUTION

All Tx and Rx RF cables shall be connected to a surge protection device according to the Motorola Standards and Guidelines for Communications Sites manual. Do not connect Tx and Rx RF cables directly to outside antenna.



WARNING

RF energy burn hazard. Disconnect power in the cabinet to prevent injury while disconnecting and connecting antennas.



IMPORTANT

All equipment must be serviced by Motorola trained personnel.

3.2.1 DC Mains Grounding Connections



CAUTION

This equipment is designed to permit the connection of the earthed conductor of the DC supply circuit to the earthing conductor at the equipment. If this connection is made, all of the following conditions must be met:

- This equipment must be connected directly to the DC supply system earthing electrode conductor or to a bonding jumper from an earthing terminal bar or bus in which the DC supply system earthing electrode conductor is connected.
- This equipment must be located in the same immediate area (such as adjacent cabinets) as any other equipment that has a connection between the earthed conductor of the same DC supply circuit and the earthing conductor, (and also the point of earthing of the DC system). The DC system must not be earthed elsewhere.
- The DC supply source is to be located within the same premises as the equipment.
- Switching or disconnecting devices must not be in the earthed circuit conductor between the DC source and the point of connection of the earthing electrode conductor.

3.2.1.1 Disconnect Device – Permanently Connected

A readily accessible disconnect device (circuit breaker or switch) must be incorporated in the building installation wiring.

3.2.1.2 Multiple Power Source

This product has multiple power sources. If service requires the removal of a power source, disconnect all inputs (AC and DC powers) to remove power completely to the equipment before servicing.

3.2.1.3 Connection to Primary Power

For supply connections, use wires suitable for at least 75 °C.

3.2.1.4 Replaceable Batteries



CAUTION

Risk of Explosion if Battery is replaced by an incorrect type. Dispose of Used Batteries According to the Instructions.

3.2.2 Maintenance Requiring Two People

Identify maintenance actions that require two people to perform the repair. Two people are required when:

- A repair has the risk of injury that would require one person to perform first aid or call for emergency support. An example would be work around high voltage sources. If an accident occurs to one person, another person may be required to remove power and call for emergency aid.
- Use the National Institute of Occupational Safety and Health (NIOSH) lifting equation to determine whether one or two persons can lift a system component when it must be removed and replaced in its rack.

3.2.3 Equipment Racks

Equipment racks should only be lifted without the use of lifting equipment when sufficient personnel are available to ensure that regulations covering health and safety are not breached. Motorola recommends the use of an appropriate powered mechanical lifting apparatus for moving and lifting the equipment racks. In addition to these points, refer to and comply with any local regulations that govern the use of lifting equipment.



WARNING

Crush hazard could result in death, personal injury, or equipment damage. Equipment racks can weigh up to 360 kg (800 lb.). Follow the instructions below for proper lifting procedures.

3.2.3.1 Lifting Equipment Racks Horizontally

In some cases, equipment racks are shipped in the horizontal position. Use the appropriate lifting apparatus to lift the racks upright. Comply with all applicable health and safety regulations, and any other regulations applicable to lifting heavy equipment.

Do not use the eye nuts mounted on the top of the rack to lift the rack upright from a horizontal position. The eye nuts are not designed to lift horizontally and could fail resulting in damage to the equipment or injury to personnel.



WARNING

Crush hazard: could result in death, personal injury, or equipment damage.

3.2.3.2 Lifting Equipment Racks Vertically


Some equipment racks have four M10 eye nuts mounted in the top of the rack. Use these eye nuts to lift the equipment rack vertically. Before using these eye nuts, visually check them and the rack hardware for any damage that may have occurred during shipping.

**WARNING**

Do not use the eyenuts if damage is apparent. Contact Motorola for replacements.


Use all four eyenuts when lifting the equipment rack. The minimum distance from each eyenut to the lifting point must be 1.2 meters (47.2 in.). Using a shorter length than that specified could cause the eyenuts to fail. This figure shows the minimum lengths and proper lifting angles using the eyenuts.

Figure 3-2 Lengths and Angles for Lifting Using the Eyenuts

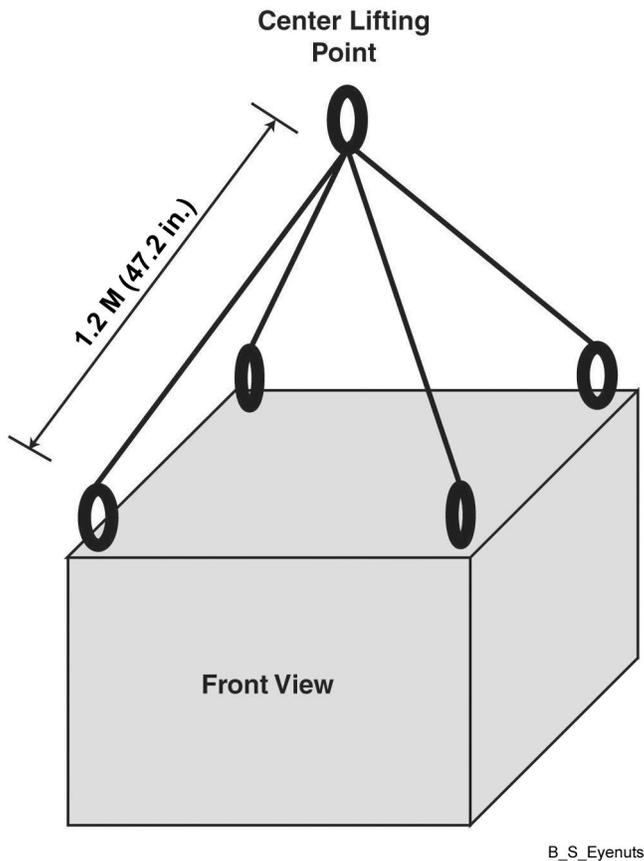

If eyenuts are removed or become loose, install them properly before lifting the equipment rack. Tighten the eyenuts and bolt assembly by hand. Correct eyenut tightness and alignment are crucial to ensure the eyenut assembly performs to its intended lifting capacity. The eyenuts must be aligned to point towards the center lifting point of the cabinet and tightened to between 90 to 120 in-lbs torque.

This figure shows the proper alignment of the eyenuts.

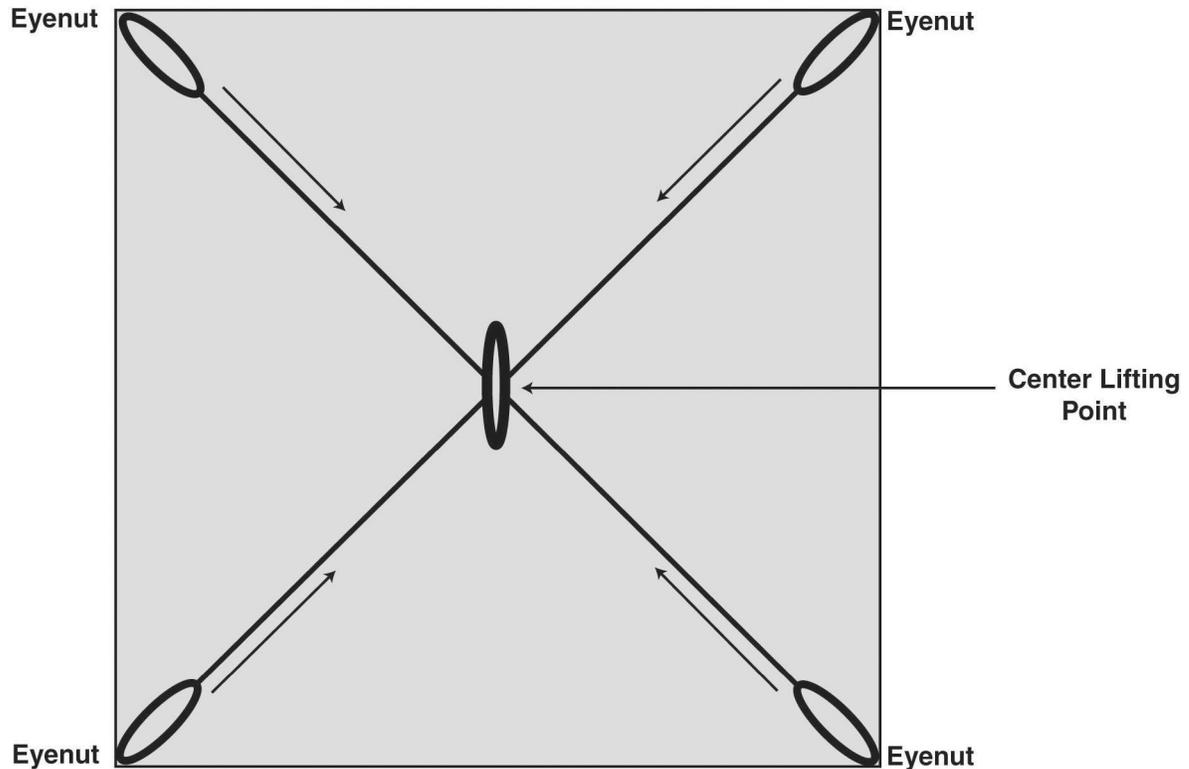Figure 3-3 Proper Alignment of the EyenuTs

3.3 General Installation Standards and Guidelines

This section provides several guidelines to ensure a quality install. Review these guidelines before unpacking and installing the system. Additionally, review the installation information in the *Standards and Guidelines for Communication Sites* manual for more details, including:

- Equipment installation
- Antenna installation

You should also review installation information specifically for GTR 8000 Base Radios and subsystems in [3.4 GTR 8000 Base Radio Hardware Installation, page 3-16](#).

3.3.1 General Site Preparation Overview

Perform the activities listed in this table to ensure proper site preparation. The table references specific chapters in the Motorola *Standards and Guidelines for Communication Sites* manual for more information.

Table 3-1 Activities for Site Preparation

Activity	Description of Activity	Chapter Reference
Review the site plan.	<ul style="list-style-type: none"> Prevents potential on-site and off-site interference by local trunked systems. Minimizes cable lengths. Determines the location of telecom equipment. 	<ul style="list-style-type: none"> Chapter 4 "Site Design and Development"
Determine site access and security.	Outlines of site access and security measures.	<ul style="list-style-type: none"> Chapter 3 "Site Acquisition" Chapter 4 "Site Design and Development"
Review safety considerations.	Outlines general, installation, and environmental safety guidelines and requirements as well as OSHA related considerations.	<ul style="list-style-type: none"> Chapters 2 "Safety Summary" Chapter 5 "Communications Site Building Design and Installation"
Schedule installation of telephone service.	Ensures options and functions of on-site, two-way communications for personnel safety and maintenance.	<ul style="list-style-type: none"> Chapter 3 "Site Acquisition"
Review grounding specifications.	Ensures the site meets or exceeds the Quality Audit Checklist in Appendix F as well as the Power and Grounding Checklist in Appendix D.	<ul style="list-style-type: none"> Chapter 6 "External Grounding" Chapter 7 "Internal Ground" Chapter 8 "Power Sources" Chapter 9 "Transient Voltage Surge Suppression"
Schedule installation of site power.	Covers grounding, power sources, and surge protection.	<ul style="list-style-type: none"> Chapters 6 "External Grounding" Chapter 7 "Internal Ground" Chapter 8 "Power Sources" Chapter 9 "Transient Voltage Surge Suppression"

3.3.2 General Equipment Inspection and Inventory Recommendations

Motorola recommends that an inventory of all equipment is taken with a Motorola representative to ensure that the order is complete. Carefully inspect all equipment and accessories to verify they are in good condition. Promptly report any damaged or missing items to a Motorola representative.



WARNING

Do not tamper with factory configuration settings for these devices. This includes software configuration, firmware release, password, and physical connections. Motorola has configured and connected these devices to meet specific performance requirements. Tampering with these devices may result in unpredictable system performance or catastrophic failure.

3.3.3 General Placement and Spacing Recommendations

The following are recommendations for placing equipment at a site:

- Place each rack on a firm, level, and stable surface and bolt the racks together.
- Use correct mounting hardware and shims to prevent rack movement.
- Use strain relief when installing and positioning cables and cords to help ensure that no interruption of service occurs.
- Provide an appropriate amount of space around all components to allow for proper air flow, cooling, and safe access to equipment.
- Locate the site racks and other equipment with enough spacing to allow access for service.



NOTE

Proper spacing of equipment is essential for ease of maintenance, and safety of personnel. Spacing requirements have been established to meet the National Fire Protection Associations (NFPA) Code, and the American Society of Heating, Refrigerating, and Air Conditioning Engineers (ASHRAE) standards. Also adhere to any local regulations that apply to the installation.

- Locate the system in an area that is free of dust, smoke, and electrostatic discharge (ESD).
- See the *Motorola Standards and Guidelines for Communication Sites* manual for details on these space requirements.

3.3.4 General Cabinet Bracing Recommendations

Use all supplied bracing hardware when installing a rack or cabinet and secure all equipment within a rack or cabinet.

If additional equipment needs to be installed, refer to the system design document provided by the field engineer or consult the Motorola Field Representative.

Subsystem cabinets are self-supporting structures. In areas subject to seismic activity, additional bracing of the cabinet may be required to prevent it from tipping. However, the bracing hardware must be locally procured. There are no specific procedures within this manual for bracing cabinets in active seismic areas.

3.3.5 General Floor Mounting Procedure for Cabinets or Racks

When and where to use:

Perform the following steps to properly install a cabinet or open rack within a site building. Cabinets and racks must be secured to the floor for optimum stability. This procedure is written so that the cabinet or rack is moved only once.

Procedure Steps

- 1 Carefully mark the mounting holes with a pencil, as indicated on the appropriate cabinet or rack footprint.
 - 2 Drill the marked mounting holes to the appropriate depth of the mounting hardware with a hammer drill and bit.
 - 3 Insert an anchor into the drilled hole. If necessary, tap the anchor into place using a hammer.
 - 4 For cabinets, remove the four screws securing the bottom kick panel to the front and back of the cabinet. Remove the kick panel and set aside during installation.
 - 5 Carefully move the cabinet or rack into the position indicated by the holes in the floor.
-



WARNING

Equipment cabinets and racks are heavy and may tip. Use extreme caution when moving. Lift from top eyelets with appropriate apparatus or secure the cabinet or rack from tipping if lifting from bottom. Failure to do so could result in death or serious injury or equipment damage.

- 6 Adjust and level the cabinet or rack as necessary to position the cabinet mounting holes with the pre-drilled holes.
 - 7 Secure the cabinet or rack to the site floor with the locally procured mounting hardware.
-



IMPORTANT

If the cabinet or rack is to be secured to a concrete floor, 1/2-inch grade 8 bolts with anchors are recommended.

3.3.6 General Bonding and Grounding Requirements

Cabinets and racks include a rack grounding bar (RGB) with the capacity to terminate numerous ground wires. Equipment added to the cabinet or rack should be attached to the ground bar using solid or stranded 6 AWG copper wire.

The RGB uses dual-hole lugs to terminate ground wires. The minimum number of dual-hole attachments is system dependent and is specified by the customer. This bar provides electrical continuity between all bonds and ground wire with a current carrying capacity equal to or exceeding that of a 6 AWG copper wire.

See the Motorola *Standards and Guidelines for Communication Sites* manual for more information on proper bonding and ground at a site.

3.3.7 General Cabling Requirements

Diagrams for cabling are typically included in the System-specific configuration documentation provided by Motorola. Also see the Motorola *Standards and Guidelines for Communication Sites* manual for cabling standards.

**IMPORTANT**

System certification was completed using shielded cables. To prevent emission problems, use only shielded cables. Do not substitute other cable types.

- Ensure equipment is positioned to avoid excessive tension on cables and connectors. Cables must be loose with absolutely no stress on the connectors. Careful cable routing and securing the cables with tie wraps (or other devices) is one way to provide this protection. Maintenance loops are recommended.
- Dress the cables neatly using cable ties. Do not tighten the cable ties until you are sure that the required service length and bend radius requirements are met. Cable ties should be loose enough to allow adjustment.
- Verify that all cables are properly labeled to match System-specific configuration documentation provided by Motorola.
- Ensure that cables do not exceed the minimum bend radius as outlined in the Motorola *Standards and Guidelines for Communication Sites* manual.

**NOTE**

For more information on cabling guidelines, see the documentation supplied with components from each equipment manufacturer.

**WARNING**

Use only Category 5 Shielded Twisted Pair (or higher) for cabling Ethernet connections. Motorola has engineered this system to meet specific performance requirements. Using other cabling and connectors may result in unpredictable system performance or catastrophic failure.

3.3.8 General Power Guidelines and Requirements

Follow the guidelines in the Motorola *Standards and Guidelines for Communication Sites* manual for information on providing electrical service, power budgeting, selecting batteries, and other topics for supplying power at the site.

Electrical installation work shall be carried out in accordance with the current edition of the NFPA 70 and local building codes. Where required, only a qualified and licensed electrician shall be used for all electrical installations.

3.3.8.1 General AC Power Guidelines and Requirements

The Motorola *Standards and Guidelines for Communication Sites* manual defines the guidelines and requirements for cabinets and racks which house equipment that requires AC power input. Some of the guidelines and requirements are as follows:

- The cabinet or rack is designed to accept 120/240 V, single-phase power with an amperage service size as required by the electronic equipment.
- Cabinets and racks serviced by commercial power must be equipped with a nationally recognized test laboratory (NRTL) certified power distribution module that contains a main circuit breaker or individual circuit breakers of the correct size as required for the electronic equipment or specified by the customer.
- A decal showing an electrical schematic of the power wiring is affixed to the inside surface of the cabinet.

- All AC power equipment and electrical components must conform to National Electrical Manufacturers Association (NEMA) and National Electrical Code (NEC). These must also be listed by an NRTL.
- A surge arrester, designed to protect equipment systems from a 120/240 V service and load center, is placed on the power feed ahead of all individual load center circuit breakers. This gapless arrester must be listed by an NRTL for the purpose intended.
- Selection of a surge arrester is based on the susceptibility of the equipment powered by the electrical service, with margin provided for locally generated disturbances. See ANSI/IEEE C62.41 (21) for more details.
- At least one 120 V AC, 15 A duplex convenience outlet equipped with ground fault interrupter (GFI) protection must be provided in the electronic equipment compartment.



CAUTION

Do not use surge/transient suppressors without careful and expert power system analysis.



SUGGESTION

Redundant devices could be terminated on different AC main phases so that a single phase failure does not result in a power loss for both devices.

3.3.8.2 General Breaker Recommendations

In order to ensure that a fault which causes the breaker to open does not result in the loss of multiple transmit channels, each base radio power supply should have its own supply breaker. The breaker recommendations for AC and DC supply breakers are as follows:

- For a 120 VAC, 60 Hz application, the AC supply breaker should be rated for a continuous current of 20A. For a 220VAC, 50 Hz application, the AC supply breaker should be rated for a continuous current of 10A minimum, not to exceed 20A.
- Individual DC breakers are not used. For information involving the sizing of cables and DC power distribution, see the *Standards and Guidelines for Communication Sites* manual.
- Site installation shall include a single current interrupting device on the DC input distribution (fuse or circuit breaker) rated for the application loading, not to exceed 200A. For each standalone base radio, the DC supply breaker should be rated for a continuous current of 25A.

3.3.8.3 General Battery Installation Recommendations

The batteries and charger should be as close as possible to the rectifier system using the cables. A heavy gauge stranded cable is advised to minimize voltage drop. Examples of the resistance of some heavy gauge wire is:

Table 3-2 Heavy Gauge Wire Resistance Examples

Gauge	Resistance
#6 gauge	0.3951 /1000 ft
#4 gauge	0.2485 /1000 ft
#2 gauge	0.1563 /1000 ft

The maximum voltage drop can be calculated by knowing the peak current drawn by the radio system. Use the following formula:

Total Voltage drop = $[\Omega/1000 \text{ ft}] \times [\text{total loop length (ft)}] \times [I_{\text{peak}} \text{ (A)}] + [\text{connector(s) voltage drop(s)}]$

See [3.4.3.2 DC Power Connection Wire Gauge Calculations for Integrated Voice and Data, page 3-19](#) and [3.4.3.3 DC Power Connection Wire Gauge Calculations for HPD, page 3-19](#) for additional guidelines on cable sizing.

3.3.9 General Electrostatic Discharge Recommendations

Electronic components, such as circuit boards and memory modules, can be extremely sensitive to electrostatic discharge (ESD). Motorola recommends that an antistatic wrist strap and a conductive foam pad be used when installing or upgrading the system.

If an ESD station is not available, wear an antistatic wrist strap. Wrap the strap around the wrist and attach the ground end (usually a piece of copper foil or an alligator clip) to an electrical ground. An electrical ground can be a piece of metal that literally runs into the ground (such as an unpainted metal pipe) or the metal part of a grounded electrical appliance. An appliance is grounded if it has a three-prong plug and is plugged into a three-prong grounded outlet.



NOTE

Do not use a computer as a ground, because it is not plugged in during installation.

3.3.10 FCC Requirements

Radio frequency (RF) transmitters installed at sites within the US must be in compliance with the following FCC regulations:

- The station licensee shall be responsible for the proper operation of the station at all times and is expected to provide observations, servicing, and maintenance as often as may be necessary to ensure proper operation.
- The transmitter ERP shall not exceed the maximum power specified on the current station authorization.
- The frequency of the transmitter must be checked during initial installation of the transmitter, when replacing modules, or when making adjustments that affect the carrier frequency or modulation characteristics.

This equipment has been tested and found to comply with the limits for a Class A digital device, according to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference to radio communications when the equipment is operated in a commercial environment.

This equipment generates, uses, and can radiate radio frequency energy. If not installed properly and used in accordance with the instruction manuals, the equipment may cause harmful interference to radio communications. Operation of some compliant equipment in a residential area may cause harmful interference to radio communications, in which case the user is required to correct the interference.

3.3.11 Networking Tools

The following is a list of recommended networking tools for installing and servicing the network:

- Fluke® OneTouch Assistant LAN tester
- Ni-MH rechargeable battery for Fluke
- T1/E1 or E1 test set (such as the Hewlett-Packard® HP37702A)
- Serialtest® software with ComProbe® and SerialBERT option

3.3.12 General Installation/Troubleshooting Tools

If information is needed regarding where to obtain any of the equipment and tools listed, contact the Motorola System Support Center (SSC). See [8.5 Using Motorola System Support Center \(SSC\)](#), page 8-8.

3.3.12.1 General Tools

The following is a list of general tools needed to install, optimize, and service equipment in the system:

- 150 MHz 4 Channel Digital Storage Oscilloscope
- Transmission Test Set (TIMS Set)
- Aeroflex 3900 Series Service Monitor
- 50 Ohm Terminated Load
- Digital Multimeter (DMM)
- Terminal Emulation Software
- DB-9 Straight through serial cable
- RS-232 Cables with Connectors
- Punch Block Impact Tool
- MODAPT — RJ-45 Breakout Box
- Remote RJ-11/ RJ-45 Cable Tester (1200 ft. length maximum)
- PC Cable Tester (RG-58, 59, 62, BNC, RJ-45, RJ-11, DB-9, DB-15, DB-25, Centronics 36-pin connectors)
- ESD field service kit
- Amprobe Instruments GP-1 Earth Tester
- AEMC 3730 Clamp-on Ground Resistance Tester

3.3.12.2 Rack Tools

The following is a list of tools needed to install, optimize and service the equipment:

- Service Monitor: Aeroflex 3900 Series Service Monitor with P25 Options installed (plus HPD & TDMA options as required)
- Personal Computer meeting the following specifications:
 - Operating Systems:
 - ◆ Windows® XP Home Edition
 - ◆ Windows XP Professional
 - ◆ Windows Vista® (all editions)

- ◆ Windows 7 (all editions)
- Hardware Requirements:
 - Processor:
 - ◆ 1 GHz or higher Pentium grade
 - Processor Memory:
 - ◆ 1 GB RAM recommended for Windows XP
 - ◆ 2 GB RAM recommended for Windows Vista and Windows 7
 - Hard Disk Space:
 - ◆ 300 MB minimum free space (for a Typical Installation, including Help Text and Software Download Manager) or 100 MB minimum free space (for a Compact Installation)
 - Peripherals:
 - ◆ Microsoft® Windows® supported Mouse or Trackball
 - ◆ Microsoft Windows supported Serial Port for product communication
 - ◆ Microsoft Windows supported Ethernet Port for product communication
 - ◆ Microsoft Windows supported Printer Port for report printing
 - ◆ CD-ROM for software installation
- Configuration/Service Software (CSS) DLN6455
- CSS Serial Programming Cable
- Ethernet Cable
- Antenna tester
- 50 Ohm Terminated Load
- Rohde&Schwarz NRT-Z14 Directional Power Sensor 25-1000 GHz 0.1-120W. Recommended for all uses when a service monitor is not available.

3.3.13 Technical Support for Installation

Technical support is available from the site-specific documents provided by the Field Engineer or Motorola Field Representative for the system, one of the Motorola System Support Center (SSC), or qualified subcontractors.

- Motorola System Support Center (SSC) can help technicians and engineers resolve system problems and ensure that warranty requirements are met. Check your contract for specific warranty information. See [8.5 Using Motorola System Support Center \(SSC\)](#), page 8-8.
- The Motorola System Service Subcontractor Assessment program ensures that service people contracted by Motorola meet strict minimum requirements before they can work on any system. For more information on this program, contact the Motorola representative.

3.3.13.1 Site-Specific Information

When systems are staged by the Motorola Center for Customer Solution Integration (CCSI), site-specific system documentation is created to document how the system was staged. The Field Engineer assigned to the system creates all of the site-specific information including the following:

- Site design drawings showing the location of racks, cabinets, cable trays, and other components
- Rack drawings showing the location of the equipment in each rack
- Cable matrix in a table format that shows each cable and its connections
- Interconnect wiring diagrams to show the cable connections between devices
- Pre-programmed parameters of each site component
- Templates used to program each device
- All firmware and software revisions of each site component
- Test data from each device that requires operational verification
- Optimization requirements and settings of each electrical path
- Acceptance Test Plan for the site components



NOTE

This site-specific information must be maintained to reflect the current site configuration and layout for the system.

3.4 GTR 8000 Base Radio Hardware Installation

The following is information specific to GTR 8000 Base Radios.

3.4.1 Placement and Spacing

Cabinet and racks allow equipment to be added to a site. Always consider room for expansion when setting up a site. Cabinets or racks may be installed adjacent to each other or to other equipment. However, all cabinets and racks must have sufficient floor space to permit access for installation and service.

Recommended clearance for service and installation is at least 2 feet in the front and rear.

Front access:

- At least 2 feet floor access in front of the cabinet or rack.

Side and rear access:

- At least 2 feet floor access at the rear of the cabinet or rack, or
- At least 2 feet access on at least one side of the cabinet or rack, plus 6 inches at the rear of the cabinet or rack.

To maintain this clearance, the following is recommended:

- If there will be less than 2 feet rear access, do not install more than 2 cabinets or racks side by side, and allow at least 2 feet access on at least one side of each cabinet or rack.
- For the cabinet version, if there will be less than 2 feet rear access, do not install the optional rear door on the cabinet.


**NOTE**

For the cabinet version, in the event that an eye nut needs to be replaced, at least 2 feet access to both sides of the cabinet is preferable, so that both side panels can be removed.

3.4.2 Rack Mounting The GTR 8000 Base Radio

The base radio/receiver housing mounts in a rack that has been secured to the floor. For open racks, two brackets are required to distribute the weight. Without brackets, the center of gravity of the system shifts to the back, potentially causing structural issues with the rack. The brackets come with the required number of screws.

Figure 3-4 Base Radio/Receiver Mounted in Rack

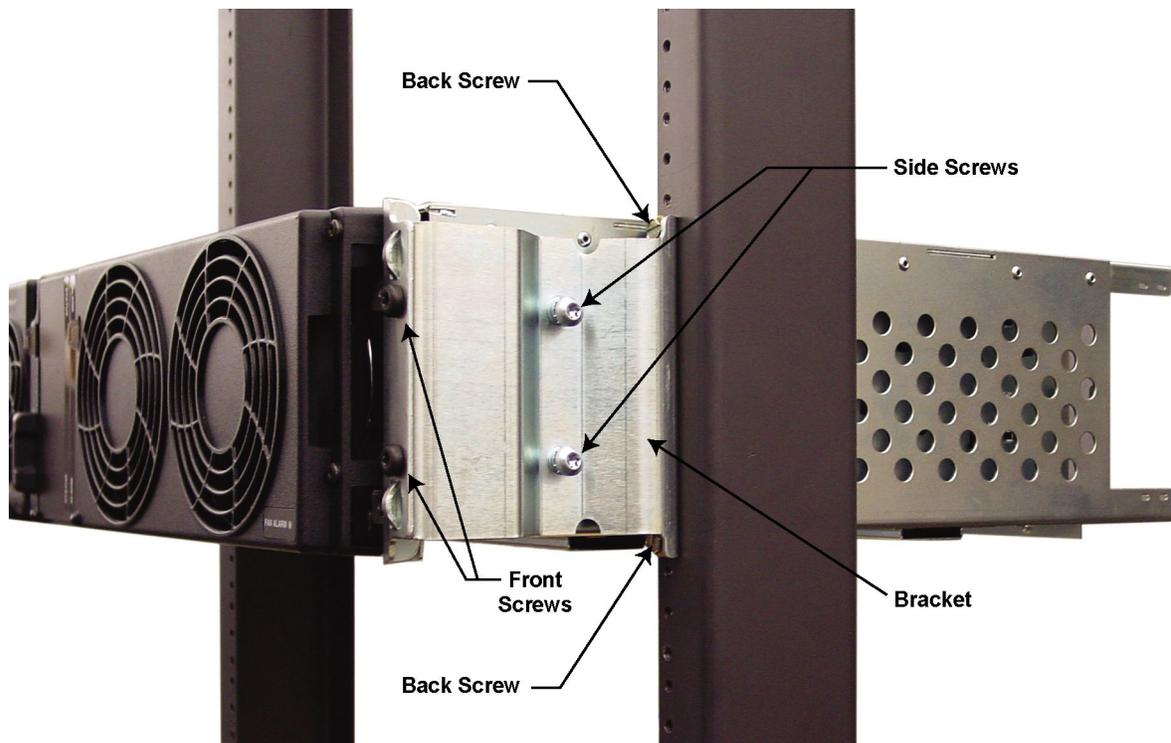

HPD_SASC_SABR_bracket_install

**NOTE**

It is suggested that two people perform this installation so that one person can hold the base radio/receiver in place while the other person attaches the brackets to the rack.

3.4.2.1 How to Mount the Base Radio/Receiver

Procedure Steps

- 1 Determine where on the rack you will mount the device and mark the location. The brackets are useful in making this determination, and the pin on the back of the bracket helps in finding the exact location on the rack.

- 2 Attach the brackets to the sides of the chassis:
 - a. Use M6x1x13 machine screws with a captive washer (zinc plated).
 - b. Screw one bracket into the clinch nuts on the side of the chassis.
 - c. Screw the second bracket it into the clinch nuts on the other side of the chassis.

- 3 Lift the base radio/receiver into place on the rack using the pins on the brackets to properly line up the device.

- 4 Attach the two brackets to the rack:
 - a. For a Motorola modular rack, use M6x1x10 thread forming screws with black finish.
 - b. For a Motorola open rack, use 1224x5/8 thread forming screws (zinc plated).
 - c. For your own rack, use hardware appropriate for the rack.
 - d. Attach the brackets to both sides of the rack through the upper back openings on the brackets.
 - e. Attach the brackets to the rack on both sides through the lower back openings.

- 5 In the front, attach the chassis to the brackets:
 - a. Screw two M6x1x10 thread forming screws (black finish) through the front holes on one side of the chassis and into the bracket.
 - b. Screw two M6x1x10 thread forming screws (black finish) through the front holes on the other side of the chassis and into the bracket.

3.4.3 Connecting Power

This section covers topics on connecting power cables to the base radio and calculating the length of wire for various gauges, and mounting the battery temperature sensor.

3.4.3.1 Connecting Power Cables to a GTR 8000 Base Radio

For standalone base radios, AC and DC inputs, provided by your organization, connect to the power supply through the backplane of the base radio. See [3.4.5 Connections – Rear \(Integrated Voice and Data\)](#), page 3-23, [3.4.6 Connections – Rear \(HPD\)](#), page 3-26, and [3.4.7 Connections – Front](#), page 3-27.

3.4.3.2 DC Power Connection Wire Gauge Calculations for Integrated Voice and Data

Since the power supply disconnects itself from the DC input when it senses that DC voltage has dropped to 42 VDC, it is important to minimize the voltage drop in the DC power supply loop (the total length of the 48 VDC hot wire and the DC return wire) to no more than 1 V total. This ensures that the maximum energy is removed from the battery prior to disconnecting the power supply from the DC input line.

A base radio transmitting at 100 W will draw up to 10 A* current when operating from a 54 V source (nominal 48 VDC system). As voltage decreases (due to the standby battery discharging) the current will increase proportionally (since the base radio appears to be a constant power load). At the low voltage disconnect point (42 V for a nominal 48 VDC system), the current will be up to 13 A*. If a single pair of 2 AWG wire is used to connect the battery to the back panel, the maximum length of a single conductor would be 75m (245 ft). Use of smaller gauge wire would reduce this length depending on the resistance of the wire.

* = The actual current value can be calculated from the power consumption value in the specifications tables. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#).

To determine the maximum length of wire for wire other than 2 AWG, the following relationship can be used:

- Length (meter/feet) = $V/I/R$

where:

- V = voltage drop in one leg of the loop (max = 0.5V)
- I = current drawn by the base radio during DC operation
- R = resistance of the wire being considered (in Ohms per foot)

For common wire sizes, the maximum distances shown in [Table 3-3](#) apply.

Table 3-3 DC Power Connection Wire Gauge Maximum Distances for Integrated Voice & Data

AWG	Resistance (ohm/304.8 meter/ 1000 ft)	Maximum Distance (for 13A)
2	0.1563	75m (245 ft)
3	0.1970	60m (195 ft)
4	0.2485	47m (155 ft)
5	0.3133	37m (120 ft)
6	0.3951	30m (95 ft)

3.4.3.3 DC Power Connection Wire Gauge Calculations for HPD

Since the power supply disconnects itself from the DC input when it senses that DC voltage has dropped to 42 VDC, it is important to minimize the voltage drop in the DC power supply loop (the total length of the 48 VDC hot wire and the DC return wire) to no more than 1 V total. This ensures that the maximum energy is removed from the battery prior to disconnecting the power supply from the DC input line.

A base radio transmitting at 50 W will draw up to 7.4 A current when operating from a 54 V source (nominal 48 VDC system). As voltage decreases (due to the standby battery discharging) the current will increase proportionally (since the base radio appears to be a constant power load). At the low voltage disconnect point (42 V for a nominal

48 VDC system), the current will be up to 9.5 A. Use of smaller gauge wire would reduce this length depending on the resistance of the wire. To determine the maximum length of wire for wire other than 2 AWG, the following relationship can be used:

- Length (feet) = $V/I/R$

where:

- V = voltage drop in one leg of the loop (max = 0.5V)
- I = current drawn by the base radio during DC operation (9.5A)
- R = resistance of the wire being considered (in Ohms per foot)

For common wire sizes, the maximum distances shown in [Table 3-4](#) apply.

Table 3-4 Power Connection Wire Gauge Maximum Distances for HPD

AWG	Resistance (ohm/1000 ft)	Maximum Distance
2	0.1563	102m (335 ft)
3	0.1970	81m (265 ft)
4	0.2485	64m (210 ft)
5	0.3133	51m (165 ft)
6	0.3951	40m (130 ft)

3.4.3.4 Mounting the Battery Temperature Sensor


A 40-foot battery temperature sensor cable is shipped with your device. This three-wire cable carries a voltage signal to the power supply from a sensor element which needs to be mounted in close proximity to the storage battery. Voltage is proportional to the battery temperature and is used by diagnostic circuitry in the power supply module. The 40-foot cable can be extended to a total length of 190 feet using 50-foot extensions (Motorola part number 3084827Y04. See [8.5 Using Motorola System Support Center \(SSC\)](#), page 8-8.

The sensing element of the temperature sensor needs to be mounted so that it detects the actual battery temperature (or the ambient temperature as close as possible to the batteries being charged). There are two examples of mounting:

Example 1

Use cable ties to attach the sensing cable to the positive (or negative) power cable. A minimum of two cable ties should be used (spaced 6 inches apart), with one of the cable ties not more than 2 inches from the sensing element. The sensing element itself should be not more than 2 inches from the battery post where the power cable connects. See [Figure 3-5](#).

Figure 3-5 Battery Temperature Sensor Example 1

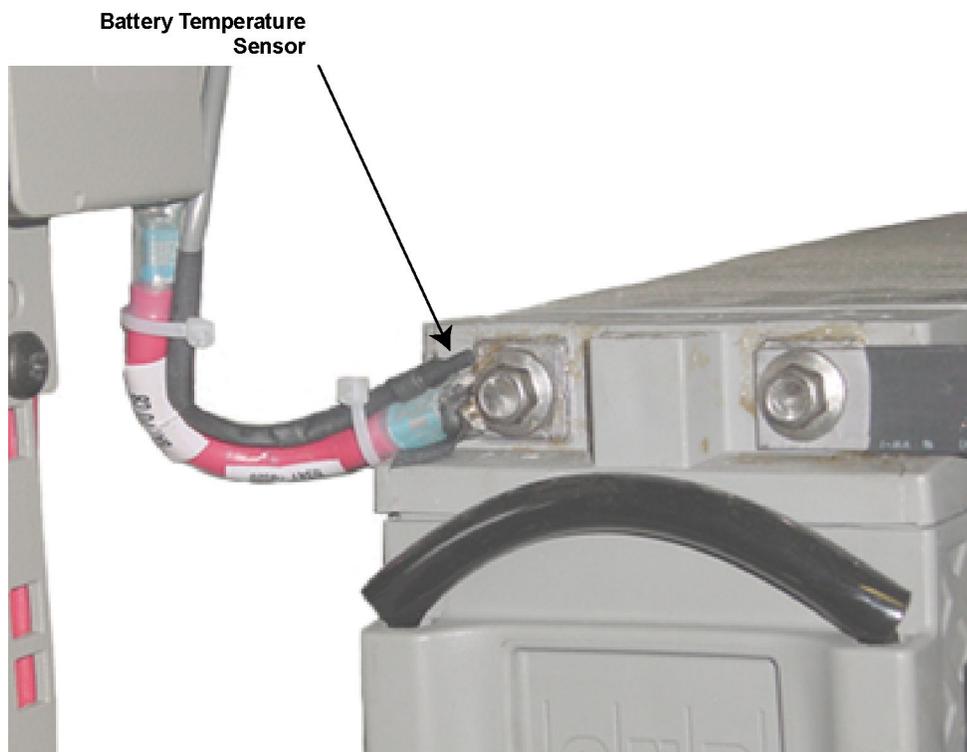

GTR8000_Battery_Temperature_Sensor_1

Example 2

Attach the sensing cable to an existing battery tray support bracket using cable ties or nylon loop straps of the proper size. The sensing element should be placed so that it is not more than 2 inches from the surface of the batteries being monitored. A minimum of two cable ties and/or loop straps should be used to secure the sensing cable to the bracket. The cable ties/ loop straps should be placed no more than 6 inches apart with one placed no more than 2 inches from the sensing element. See [Figure 3-6](#).

Figure 3-6 Battery Temperature Sensor Example 2

3.4.4 Grounding The GTR 8000 Base Radio

Detailed grounding information is beyond the scope of this manual. See the *Standards and Guidelines for Communication Sites* manual for detailed information about grounding and lightning protection.



IMPORTANT

You must ground the battery system, either positive or negative, at the battery. The DC input (battery charger output) of the power supply is floating with respect to earth ground. The power supply can therefore be used in either positive ground or negative ground DC systems. The appropriate terminal (+ or -) of the DC system should be connected to protective earth at the battery.


These instructions assume that all telephone lines, antenna cables, and AC or DC power cables have been properly grounded and lightning-protected.

When rack installations have a primary rack and one or more expansion racks, all these racks must be connected to the same Sub System Ground Bus Bar (SSGB) (and no other rack connected to the SSGB). This is to ensure surge events do not produce ground potential differences that will affect signals between the racks.

The base radio/receiver backplane has a double lug with two lock nuts on the rear panel where the ground wire connects to the base radio backplane on one end, and to the rack grounding bar on the other. The rack grounding bar is connected to the master ground bus bar.

To use the grounding lugs, you need a length of #6 AWG wire with UL-listed ring lugs on both ends. This wire is shipped with the base radio.

Figure 3-7 Rack Grounding

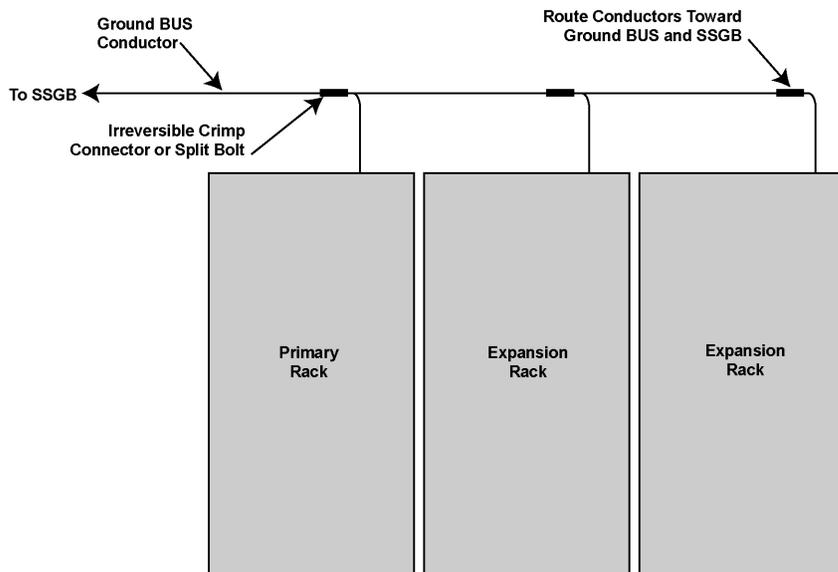

GTR8000_rack_grounding

3.4.4.1 How to Ground Base Radio/Receiver


Procedure Steps

- 1 Take the ground wire already attached to the two grounding lugs at the rear of the base radio/receiver, and connect the other end to the rack grounding bar.
- 2 Tighten the ground lock nut to 60 inch-pounds (6.94 newton-meters).

3.4.5 Connections – Rear (Integrated Voice and Data)

The base radio/receiver connects to a site LAN switch port for this channel and to the transmit and receive paths.

Figure 3-8 Base Radio/Receiver Integrated Voice & Data Backplane

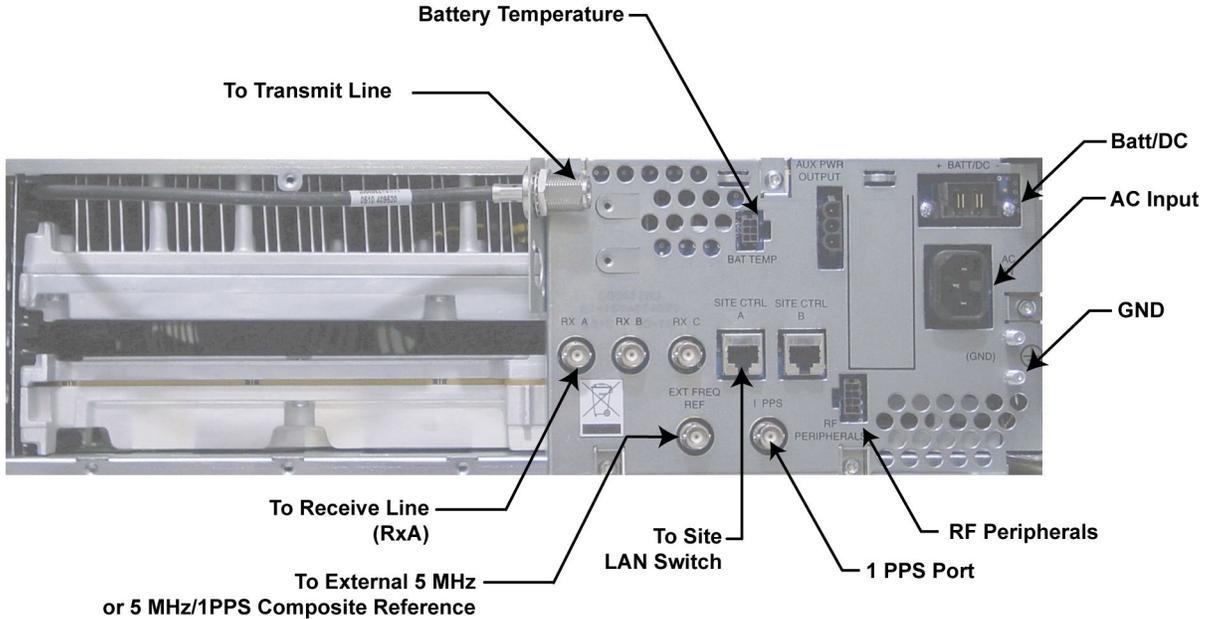

GTR8000_base_radio_rear3

Table 3-5 Base Radio/Receiver Backplane Connections for Integrated Voice & Data

Port / Type	Device it connects to:	Port / Type	Description
SC-A port, RJ-45	Site LAN switch	Base radio port, RJ-45	IP interface connection to the site LAN switch port for this channel. An optional MOSCAD device connects to the site LAN switch that is connected to this port.
SC-B port, RJ-45			Not in use.
Rx-A, BNC	Receive line A	BNC	RF coax to receive path for antenna A.
Rx-B, BNC	Receive line B	BNC	RF coax to receive path for antenna B. This port is used for dual diversity for TDMA.
Rx-C			Not in use.
Transmit port, N-type	Transmit line	N-type	RF coax to transmit antenna.
Aux Pwr Output	Comparator	Aux Pwr Input	Connection to a conventional comparator for a conventional base radio.
Bat Temp, 6-pin	Battery temperature sensor		Connection to temperature sensor, allowing for temperature compensated battery charging.
RF Peripherals	RF peripheral sensor ports		Antenna relay and presence detect, external circulator load temperature (external wattmeter not supported).

Table 3-5 Base Radio/Receiver Backplane Connections for Integrated Voice & Data (cont'd.)

Port / Type	Device it connects to:	Port / Type	Description
Batt/DC	DC power supply or battery	Batt/DC	<p>Input from and output to a 48 VDC power supply or backup battery. When AC power is not available, the device switches to operate from a DC source if the optional DC power (8AWG; length 9 ft), CA01400AA is ordered and installed. One end connects into the Batt/DC port and the other end connects into the DC source. The contacts are 39-83503N02 (AMP #53880-2), the receptacle housings are 15-83502N01 (AMP #53884-1) and the mounting ears are 07-83504N01 (AMP #53887-1).</p> <p>3084869Y06 cable is used for a positive ground system. 3084869Y02 cable is used for a negative ground system.</p>
AC	120/240 VAC power source.		Input from 120/240 VAC nominal power source.
EXT FREQ REF*	TRAK 9100	BNC	<ol style="list-style-type: none"> 1. In an Analog or ASTRO® 25 simulcast configuration, this input is connected to an external reference signal source to drive an internal oscillator for precise frequency stability. The source can be 5 MHz or 10 MHz. 2. In an ASTRO® 25 simulcast configuration, it is used as an input connected to an external reference, which provides a composite 5 MHz + 1 PPS signal source to drive an internal oscillator for precise frequency stability and provides a time reference for precisely launching ASTRO® 25 simulcast over the air.
1 PPS*	TRAK 9100	BNC	This input is used when a composite 5 MHz + 1PPS signal source is not used. It is connected to an external 1 PPS time reference source to provide an accurate time source used for precisely launching ASTRO® 25 simulcast over the air. This input is used in conjunction with EXT FREQ REF option 1.

* See 5.1.1 GTR 8000 Base Radio Time and Frequency Inputs, page 5-2.




NOTE

The EXT FREQ REF input on the rear of the device is high impedance. An external termination is needed to properly terminate the cable connected to the input. It is recommended that a BNC "T" and a 50 Ohm BNC termination be connected to the input to terminate the cable. If the cable is daisy chained (multiple base radios connected together and driven by one TRAK/PSC output), only the last base radio in the chain has the termination.

3.4.6 Connections – Rear (HPD)

The base radio connects with each of the site controllers and to the transmit and receive paths.

Figure 3-9 Base Radio – HPD Backplane

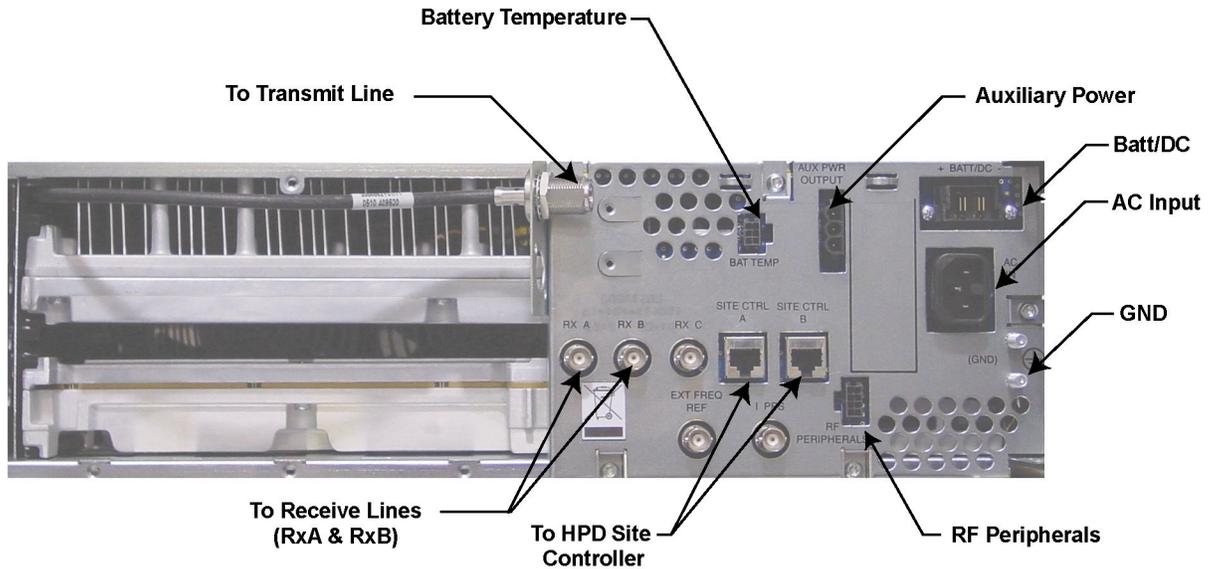

HPD_GTR8000_base_radio_rear1

Table 3-6 Base Radio Backplane Connections for HPD

Port / Type	Device it connects to:	Port / Type	Description
SC A port, RJ-45	Site Controller module A	Base radio port, RJ-45	Connects to site controller A base radio port for this channel.
SC B port, RJ-45	Site Controller module B	Base radio port, RJ-45	Connects to site controller B base radio port for this channel.



NOTE

The length of the cable between the site controller and the base radio should be no greater than 30 feet.


Table 3-6 Base Radio Backplane Connections for HPD (cont'd.)

Port / Type	Device it connects to:	Port / Type	Description
Rx-A, BNC	Receive line A	BNC	RF coax to receive path for Rx antenna.
Rx-B, BNC	Receive line B	BNC	RF coax to receive path for antenna B.
Rx-C, BNC			Not in use
Transmit port, N-type	Transmit line	N-type	RF coax to transmit antenna.
Aux Pwr Output	Site Controller or RMC/LNA	Aux Pwr Input	The auxiliary output power can be used to provide secondary power to the site controller or receive multicouplers (Site RMCs/LNAs).
Bat Temp, 6-pin	Battery temperature sensor		Connection to temperature sensor, allowing for temperature compensated battery charging.
RF Peripherals			Not in use
Batt/DC	DC power supply or battery	Batt/DC	Input from and output to a 48 VDC power supply or backup battery. Input from and output to a 48 VDC power supply or backup battery. When AC power is not available, the device switches to operate from a DC source if the optional DC power (8AWG; length 9 ft), CA01400AA is ordered and installed. One end connects into the Batt/DC port and the other end connects into the DC source. The contacts are 39-83503N02 (AMP #53880-2), the receptacle housings are 15-83502N01 (AMP #53884-1) and the mounting ears are 07-83504N01 (AMP #53887-1). 3084869Y06 cable is used for a positive ground system. 3084869Y02 cable is used for a negative ground system.
AC	120/240 VAC power source.		Input from 120/240 VAC nominal power source.
EXT FREQ REF			Not in use
1 PPS			Not in use

3.4.7 Connections – Front

Two service ports are accessible through a drop-down door to the left of the fans. The remainder of the ports are behind the fan module.

Figure 3-10 Base Radio/Receiver – Front

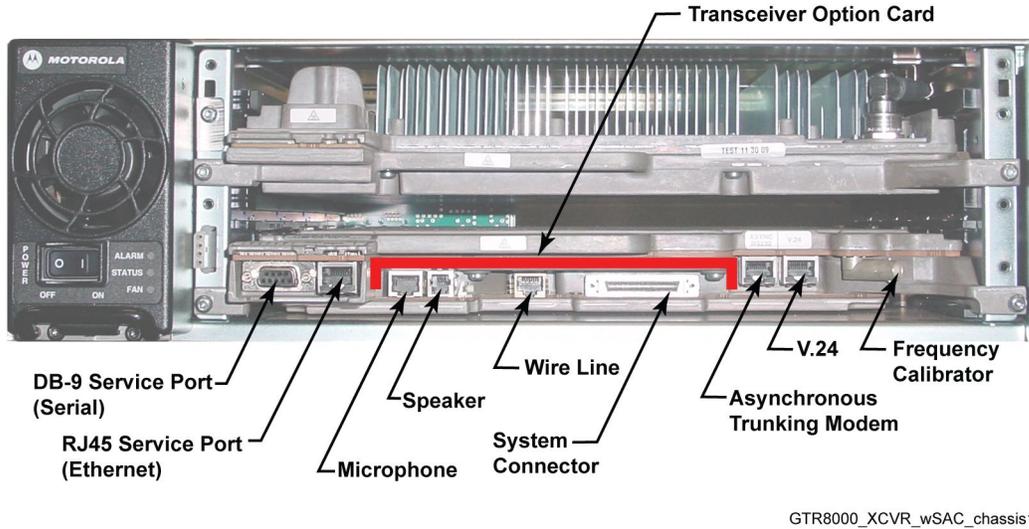

NOTE

The Transceiver Option Card is an optional board that attaches to the control board of a base radio or receiver. The board provides an internal 10 MHz frequency reference. For conventional base radio/receiver operation, it provides the analog interfaces and wild card I/Os.

Table 3-7 Transceiver Connections - Front

XCVR Port / Type	Connects to This Device/Port	Description
Ethernet service port, RJ-45	Service PC, LAN port	Ethernet service port for local access using Configuration/Service Software (CSS). Also may be used for localized software downloads.
Serial service port, DB-9	Service PC, RS-232 port	Serial service port for initial configuration of the base radio IP address.

NOTE

Supports only 10 Mb half duplex operation.

Table 3-7 Transceiver Connections - Front (cont'd.)

XCVR Port / Type	Connects to This Device/Port	Description
Microphone port, RJ-45	Microphone, RJ-45 port	Used to connect to a microphone with PTT button.  NOTE Use microphone kit GMMN4063B.
Speaker port, RJ-9	External Speaker, RJ-9 port	Used to connect to an amplified (DC powered) external speaker. Audio volume level is set from the CSS.  CAUTION To prevent damage to the base radio, use speaker kits HSN1006A and cable part no. 0185180U01.
Wireline port, RJ-45	Landline equipment, RJ-45 port	Connection between telephone lines and the analog conventional base radio. The wireline processes and routes all wireline audio signals between the base radio and landline equipment (such as consoles or modems).
	MLC 8000, RJ-45 port	E&M interface for 4-wire connections for analog operation.
System Connector, mini SCSI	50-pin Telco Connector	Connection for a conventional base radio/receiver. Provides the Wild Card I/Os and supplementary Analog I/Os for analog simulcast and special applications. Editing of Wildcard configurations is permitted only through CSS.
Asynchronous port, RS232, RJ-45		Not in Use

Table 3-7 Transceiver Connections - Front (cont'd.)

XCVR Port / Type	Connects to This Device/Port	Description
V.24 port	Channel Bank, RJ-45	Connection port when the base radio is part of a conventional circuit-based site, mixed mode or digital only.
	Digital Interface Unit, ASTRO-TAC 3000 Comparator, MLC 8000, or Conventional Channel Interface GGM 8000, RJ-45 port	V.24 interface connection port for a conventional base radio.
Reference frequency input, BNC*	Service monitor	Connection port to service monitor for frequency calibration.

* See 5.1.1 GTR 8000 Base Radio Time and Frequency Inputs, page 5-2.

**NOTE**

For information about conventional functions and topologies supported by the base radio/receiver, see the *Conventional Operations* manual. Note that the base radio/receiver can be IP managed while using the 2- or 4-wire/V.24 interface for channel traffic.

3.4.7.1 System Connector Ports (Conventional)

The system connector is a 50-pin Mini SCSI connector. It is used for the Wildcard inputs, outputs, and the analog audio paths not routed to their own connector.

Table 3-8 50-Pin System Connector Pin-Outs (Conventional)

Pin #	Signal	Type	Function	Note
1	Aux In 2	Input	Main Standby - External handshaking	Pull To Ground To Activate
2	Aux In 4	Input	Main Standby- Status of other side	Pull To Ground To Activate
3	Aux In 6	Input	In-Cabinet Repeat*	Pull To Ground To Activate
4	Aux In 8	Input	Main Standby - Connectivity other Station	Pull To Ground To Activate
5	Aux In 9 –	Input	Phone Patch - PL Strip	Opto-Isolated In - Current flow to Activate
6	Aux In 10 –	Input	Phone Patch - Monitor	Opto-Isolated In - Current flow to Activate
7	Aux In 11 –	Input		Opto-Isolated In - Current flow to Activate

Table 3-8 50-Pin System Connector Pin-Outs (Conventional) (cont'd.)


Pin #	Signal	Type	Function	Note
8	Aux In 12 –	Input		Opto-Isolated In - Current flow to Activate
9	Aux In 13	Input	For future use	Pull To Ground To Activate
10	Aux Out 12	Output		Low Impedance to Ground When Active
11	Aux Out 2	Output	Phone Patch - Rx Carrier	Low Impedance to Ground When Active
12	Aux Out 4	Output	Main Standby - Station Status	Low Impedance to Ground When Active
13	Aux Out 6	Output		Low Impedance to Ground When Active
14	Aux Out Relay 7 Com	Output	RD STAT - Receiver Active	Form Relay A Closed When Active
15	Aux Out Relay 8 Com	Output	Main Standby - Antenna Relay	Form Relay A Closed When Active
16	Aux Out Relay 9 Com	Output		Form Relay A Closed When Active
17	Aux Out Relay 10 Com	Output		Form Relay A Closed When Active
18	Aux Out 11	Output		Low Impedance to Ground When Active
19	External_Reset	Input	Reset	Buffered Input Pull To Ground To Activate
20	TSTAT	Output	For future use	0 Volts When Inactive / +5 Volts when Active
21	AUX RX	Output	Aux Rx	Analog Signal – Unbalanced
22	TX DATA –	Input	For future use	Analog Signal – 600 Ohm Balanced
23	AUX TX	Input/Output	Aux Tx	Analog Signal – 600 Ohm Unbalanced
24	PL -	Input	PL(-) In	Analog Signal – 600 Ohm Balanced
25	Gen TX –	Input	Gen TX Data-	Analog Signal – 600 Ohm Balanced
26	Aux In 1	Input	Phone Patch - Call Request	Pull To Ground To Activate
27	Aux In 3	Input	Tx Inhibit	Pull To Ground To Activate
28	Aux In 5	Input	External PTT	Pull To Ground To Activate
29	Aux In 7	Input	Rx Inhibit	Pull To Ground To Activate
30	Aux In 9 +	Input	Phone Patch - PL Strip	Opto-Isolated In - Current flow to Activate
31	Aux In 10 +	Input	Phone Patch - Monitor	Opto-Isolated In - Current flow to Activate

Table 3-8 50-Pin System Connector Pin-Outs (Conventional) (cont'd.)

Pin #	Signal	Type	Function	Note
32	Aux In 11 +	Input		Opto-Isolated In - Current flow to Activate
33	Aux In 12 +	Input		Opto-Isolated In - Current flow to Activate
34	GND		GND	
35	Aux In 14	Input	For future use	Pull To Ground To Activate
36	Aux Out 1	Output	Phone Patch - Inhibit / Enable	Low Impedance to Ground When Active
37	Aux Out 3	Output		Low Impedance to Ground When Active
38	Aux Out 5	Output		Low Impedance to Ground When Active
39	Aux Out Relay 7 N.O.	Output	RD STAT - Receiver Active	Form Relay A Closed When Active
40	Aux Out Relay 8 N.O.	Output	Main Standby - Antenna Relay	Form Relay A Closed When Active
41	Aux Out Relay 9 N.O.	Output		Form Relay A Closed When Active
42	Aux Out Relay 10 N.O.	Output		Form Relay A Closed When Active
43	GND		GND	
44	GND		GND	
45	RSTAT	Output	For future use	0 Volts When Inactive / +5 Volts when Active
46	GND		GND	
47	TX DATA +	Input	For future use	Analog Signal – 600 Ohm Balanced
48	GND		GND	
49	PL +	Input	PL(+) In	Analog Signal – 600 Ohm Balanced
50	Gen TX +	Input	Gen TX DATA +	Analog Signal – 600 Ohm Balanced

* For detailed information on the differences between the automatic **Fallback In-Cabinet Repeat** and the externally-wired **In-Cabinet Repeat** functions, see the *Conventional Operations* manual.

Figure 3-11 50-Pin System Connector Pin-Outs (Conventional)

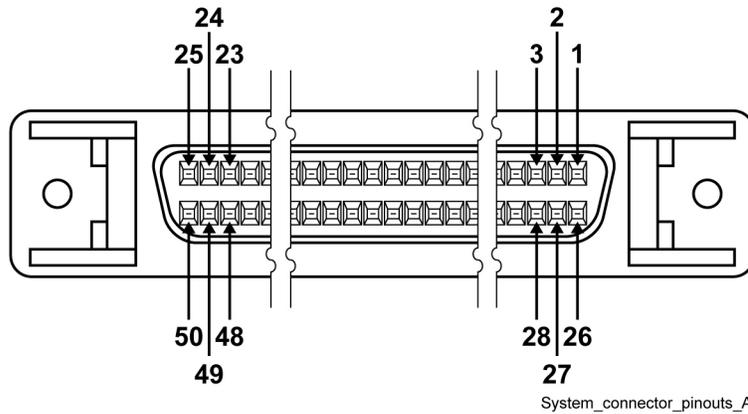


3.4.7.2 Wireline Port Pin-Outs

The Wireline port is an RJ-45 connector and can accommodate up to 8 pins.

Table 3-9 Wireline Port Pin-Outs

Signal Name	Pin #	2-Wire Connection	4-Wire Connection	Auxiliary 4-Wire Connection
Line2 ₊	1	Input/Output	Output	
Line2 ₋	2	Input/Output	Output	
Line3 ₊	3			Input
Line1 ₋	4		Input	
Line1 ₊	5		Input	
Line3 ₋	6			Input
Line4 ₊	7			Output
Line4 ₋	8			Output

Figure 3-12 Wireline Port Pin-Outs

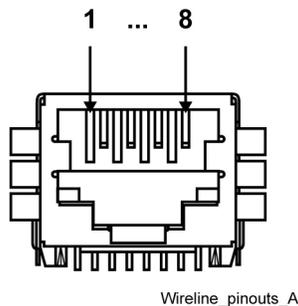


3.4.7.3 Microphone Port Pin-Outs

The Microphone port is an RJ-45 connector that provides the interface for a microphone.

Table 3-10 Microphone Port Pin-Outs

Signal Name	Pin #
Reserved	1
Reserved	2
MIC_PTT	3
MIC_AUDIO	4
GND	5
Reserved	6
Reserved	7
Reserved	8

Figure 3-13 Microphone Port Pin-Outs

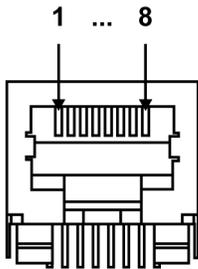

Mic_pinouts_A

3.4.7.4 Speaker Port Pin-Outs

The Speaker port is an RJ-9 connector that provides the interface to an external speaker.




CAUTION

To prevent damage to the base radio, use HSN1006A speaker with 0185180U01 cable.

Table 3-11 Speaker Port Pin-Outs

Signal Name	Pin #
GND	1
+12 V	2
GND	3
Speaker Out	4

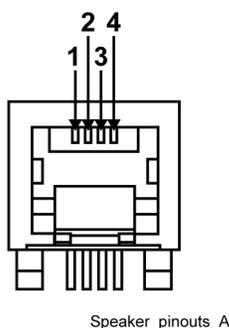Figure 3-14 Speaker Port Pin-Outs

3.4.7.5 V.24 Port Pin-Outs

The V.24 port is an RJ-45 connector that provides the interface to a Digital Interface Unit, Conventional Channel Interface, CCGW, ASTRO-TAC 3000, or Channel Bank.

Table 3-12 V.24 Port Pin-Outs

Signal Name	Pin #	Type
RCLK	1	Input
Rx Line Det	2	Input
TCLK	3	Input/Output
GND	4	GND
Data Rx	5	Input
Data Tx	6	Output
CTS	7	Input
RTS	8	Output

3.4.7.6 GTR 8000 Base Radio – Part 68 Information

This section applies when the base radio/receiver is equipped with the optional wireline interface circuitry contained on the OCXO Transceiver Option Card (Option CA01506AA or TCXO Transceiver Option Card (Option CA01953).



NOTE

The TCXO Transceiver Option Card is used in base radios for the Power Efficiency Package option.

This equipment complies with Part 68 of the FCC rules and the requirements adopted by the ACTA. On the rear of this equipment is a label that contains, among other information, the registration number:

- US: ABZNINANT7039

If requested, this number must be provided to the telephone company.

The connector used to connect this equipment to the premises wiring and telephone network must comply with the applicable FCC Part 68 rules and requirements adopted by the ACTA. A compliant connector is provided with this product. See installation instructions for details.

REN: N/A

Connector: RJ-48

Authorized Network Port: 04NO2Service Order Code: 7.0Y

If the equipment causes harm to the telephone network, the telephone company will notify your organization in advance that temporary discontinuance of service may be required. If advance notice is not practical, the telephone company will notify your organization as soon as possible. Also, your organization will be advised of the right to file a complaint with the FCC if it is necessary.

The telephone company may make changes in its facilities, equipment, operations, or procedures that could affect the operation of the equipment. If this happens, the telephone company will provide advance notice in order for your organization to make necessary modifications to maintain uninterrupted service.

If your organization experiences trouble with this equipment, see [8.5 Using Motorola System Support Center \(SSC\), page 8-8](#) for repair and warranty information. If the equipment is causing harm to the telephone network, the telephone company may request that your organization disconnect the equipment until the problem is resolved.

None of the circuit boards in this equipment are field repairable. For assistance in sending the boards back for repair, see [8.5 Using Motorola System Support Center \(SSC\), page 8-8](#).

This equipment cannot be used on public coin phone service provided by the telephone company. Connection to party line service is subject to state tariffs. Contact the state public utility commission, public service commission or corporation commission for information.

3.5 Installation/Troubleshooting Tools

In addition to the general tools needed for site installation activities, a service monitor is used specifically for testing the base radio.

To place an order, contact Motorola at:

Phone: 1-800-422-4210 ext. 6883

TTY Phone: 1-866-522-5210

Motorola Online users: Web: <http://www.motorola.com/businessonline>

Fax: 1-800-622-6210

3.5.1 Quick Connect RF Coaxial Adapters for GTR 8000 Base Radio Support

The GTR 8000 Base Radio employs a number of "QN" & "QMA" Quick Connect RF connectors in its design. The following RF adapters are available from Motorola and can be used to connect test equipment to the various station devices for troubleshooting purposes.

Table 3-13 Quick Connect RF Coaxial Adapters for GTR 8000 Base Radio Support

Type	Adapter / Connector description	Motorola Part Number
"N"/QN	Female "N" to Male QN	5886055Y01
"N"/QN	Female "N" to Female QN	5886055Y10
"N"/QN	Male "N" to Male "QN"	5886055Y05

Table 3-13 Quick Connect RF Coaxial Adapters for GTR 8000 Base Radio Support (cont'd.)

Type	Adapter / Connector description	Motorola Part Number
QN	Right Angle Male QN cable plug for RG-400 coax	2871002H01
QN	Right Angle Male QN cable plug for RG-213 coax	2886067Y01
N/QMA	Female "N" to Male QMA	5886055Y06
N/QMA	Female "N" to Female QMA	5886055Y07
QMA/QMA	Female QMA to Female QMA	5886055Y08
QMA/QMA	Male QMA to Male QMA	5886055Y09
7/16/QN	Female 7/16 to male QN	5886055Y03
7/16/QN	Male 7/16 to Male QN	5886055Y02
7/16/QN	"Female 7/16 to female QN Intermod test adaptor"	5886055Y04
7/16/QN	"Male 7/16 to female QN Intermod test adaptor"	5886055Y11

3.6 Device Software Installation Prerequisites

When and where to use:

This process provides a list of items you need to have access to before you can complete the device software installation and begin the configuration procedures in the Configuration chapter.

Process Steps

- 1 Transfer and install new software to a comparator using Software Download Manager. See [3.7 Using Software Download, page 3-39](#).
- 2 Make sure that the ASTRO® 25 system CDs and DVDs are available to you. Specifically, you need the Motorola Device OS Image CDs. See [3.8.2 Loading Device OS Images to the UNC, page 3-44](#).
- 3 Make sure that you have the user names, passwords and procedures you need to access the devices on the network. For specific user names and passwords to access devices on the network, contact your system administrator.

Set up the users in the IT Admin group in Active Directory Users and Computers. See the *Authentication Services* manual.

4 Obtain the following values from the system administrator:

- line interface number
- ZC site link path 1 IP address
- ZC site link path 2 IP address
- Host name to access the UNC server application using SSH (username>@IP address> format)
- Site ID number
- IP address 1 and 2
- Primary and secondary NTP IP addresses



NOTE

The following bullets are applicable to systems with AAA Servers, Domain Controllers, or Syslog Servers.

- Primary, secondary, and tertiary DNS IP addresses
- Requested DNS Domain Name
- Requested DNS Host Name
- System Name
- Primary SYSLOG Service Name (Fully Qualified Domain Name (FQDN))
- Backup SYSLOG Service Name (Fully Qualified Domain Name (FQDN))
- RADIUS FQDN parameter value
- RADIUS Row Status parameter value
- RADIUS Service Time Out (sec) parameter value
- RADIUS Service Retransmits Attempts parameter value
- RADIUS Service Dead Timer (min) parameter value
- RADIUS Specific Key parameter value
- RADIUS Service Global Key parameter value

5 Ensure that you have the default credentials (local accounts, central authentication, and SNMPv3) for the device being installed, as well as updated passwords for those types of accounts (so that you can change the password once you install the device). Contact your system administrator, if you do not have this information. See the *SNMPv3* manual or see [8.2.4.2 Resetting Passwords and SNMPv3 Passphrases](#), page 8-6 for more information.

-
- 6 Ensure that the device is configured as a Remote Authentication Dial-In User Service (RADIUS) client on the RADIUS server. When these devices are configured with a RADIUS key that matches a shared secret for that device in Microsoft® Windows® Internet Authentication Service (IAS), they become RADIUS clients. They do not join the Active Directory domain. See the *Authentication Services* manual for more information.
-

7

**NOTE**

This step is applicable to systems with AAA Servers, Domain Controllers, or Syslog Servers.

To use the VoyenceControl component of Motorola's centralized configuration application for any of the site device procedures, you need to set up the Unified Network Configurator (UNC). Depending on your organization's policies, you may also need to implement a secure protocol between the UNC and the site device. Before performing any procedures using VoyenceControl, the device must be discovered in VoyenceControl and their configurations need to be recently pulled to the Unified Network Configurator's database. See the following ASTRO® 25 system documentation:

- *Unified Network Configurator* manual
 - *Securing Protocols with SSH* manual
-

3.7 Using Software Download

The Software Download (SWDL) is an application that can **transfer only**, **install only**, or **transfer and install** new software to devices. The new software can be installed either locally at a site or on the Network Management subsystem. Individual devices not connected to the system can be downloaded using single device mode.

Data transfer can be performed by:

- Clear SWDL – transfer operations without security, based on the File-Transfer Protocol (FTP)
- Secure SWDL – transfer operations are encrypted, based on the Secure File-Transfer Protocol (SFTP)

**NOTE**

SWDL provisions the credentials for Secure SWDL as part of initiating the SWDL operation. No user intervention is required. For a single device, Secure or Clear SWDL is configured by the user based on the SWDL Transfer Mode configuration within the CSS. Unified Network Configurator (UNC) can be used to schedule and configure all devices in the system at once.

**IMPORTANT**

Before initiating transfer, SWDL connects to the site in the zone to discover all devices. The transfer mode of all devices is displayed in the SWDL window. It is important that all devices have the same SWDL transfer mode. Otherwise, the SWDL flags a mismatch of the SWDL transfer modes across site devices.

For information on how to configure the secure or clear SWDL transfer mode, see the *Unified Network Configurator* manual and “Device Security Configuration” in the *CSS Online Help*.

Software Download can be accomplished in two ways:

- **Centralized Software Download** is a Network Management application that allows you to transfer and install application software from a centralized location. The software download application resides on the Network Management Client PC and a PC loaded with the Configuration Service Software (CSS) application. From either of the PCs, you can select device types to which to download software. Centralized Software Download allows you to select the zone, site, device types, and software download operation to perform.
- **Offline Software Download** allows you to transfer and install software to a single instance of a device (such as one base radio) that has been disconnected from the radio network. This feature gives self-maintained organizations the ability to install different versions of software. Your organization can also test alignment and field-replaceable units (FRUs) on a device that is not a part of the radio network. Single device software download is done from a PC loaded with the CSS application.



NOTE

Conventional devices are supported only in the single device mode.

SWDL transfers and installs software to the GCP 8000 Site Controllers through a direct connection to the Ethernet service port. For the GCM 8000 Comparator, SWDL transfers and installs software only through the network LAN switch. When SWDL is connected from a central remote location, SWDL performs a centralized software download to the site controllers or RDMs, then to the comparators and base radios installed at the site. Both active and standby site controller or RDM modules have two memory banks for loading and running software. One bank is active while the other bank is inactive. The transfer of the software using SWDL is a background process that loads the software into the inactive bank. The site controller or RDM executes the software in one bank, while software is simultaneously downloaded to the inactive bank. This is done in the background without interruption of services at the site. An install causes the site controller to reset and activates the bank to run with the new software.



NOTE

- When performing a centralized software download, the site controller or RDM coordinates the software transfer and installs the software to all base radios and comparators installed at the site.
- A centralized software download can only be performed on a trunked system.

SWDL communicates with the site controller or RDM to determine the number of existing remote sites and the number of channels. SWDL considers a channel or remote site to be accessible if its status is “Not Unconfigured.” This means that the site must be set up with a PC with CSS or a network management client before software download is performed on the site.

The system downloads software to the site controllers or RDMs, comparators, and base radios as a unit. Use SWDL to transfer software to each device type, then perform an install operation. During the transfer, the operation designates a proxy for each device type at each LAN. Site controllers or RDMs proxy for comparators and base radios proxy for each other. The proxy cross-transfers the software to other devices on the LAN. Using proxies minimizes system downtime. Transfers to the LAN are done simultaneously except for the site controller and comparators.

Software installation is done on a channel by channel basis, starting with the highest number channel. When a channel software download occurs, the base radio which incorporates that channel is processed along with the comparator for that channel. For example, if channel 3 was being downloaded, then comparator 3 and the base radios for channel 3 at each of the remote sites would be installed simultaneously.

SWDL operation can be fault managed through UEM, syslog, local SWDL log files, user messages, and device reports.

For further information on SWDL, see the *Software Download* manual.

**NOTE**

The operating software can also be loaded using the UNC. See the *Unified Network Configurator* manual to perform single device software downloads (ruthless download) to the devices.

3.8 Device Installation Using the UNC

When and where to use:

The Unified Network Configurator (UNC) is the Network Manager used to discover a device and load Operating System images. This process lists the basic steps involved using the UNC on the base radio.

**NOTE**

UNC is not applicable for K1/K2 or non-networked sites.

Process Steps

- 1 Discover the device in the UNC. See [3.8.1 Discovering a Device with the UNC, page 3-42](#).
 - 2 Logging in to the UNC Server Application Using PuTTY. See the *Securing Protocols with SSH* manual.
 - 3 Load the Operating System images to the UNC. See [3.8.2 Loading Device OS Images to the UNC, page 3-44](#).
 - 4 Enable FTP services on the UNC. See [3.8.3.1 Enabling FTP Service, page 3-46](#).
 - 5 Transfer and install the OS image to the device. See [3.8.3.2 Transferring and Installing the OS Image, page 3-46](#).
 - 6 Inspect the device properties for the transferred and installed software. See [3.8.3.3 Inspecting Device Properties for Transferred and Installed Software, page 3-50](#).
 - 7 Disable FTP services for the UNC. See [3.8.3.4 Disabling FTP Service, page 3-51](#).
-

3.8.1 Discovering a Device with the UNC

When and where to use:

The discovery process allows site devices to be managed by the Unified Network Configurator (UNC). Once the device is installed, configured through the CSS, and security parameters are enabled, follow this procedure to discover the device. The configuration information can then be updated using this configuration management application.

The UNC network management solution consists of two applications. Both the UNC Wizard and the VoyenceControl applications are used in this procedure.



The names EMC Ionix Network Configuration Manager and VoyenceControl are used interchangeably for this product.

Once the device is discovered in the UNC, the OS images and CSS configuration files can be loaded to add a device to a site, which then connects the site to the current ASTRO® 25 zone core.

Procedure Steps

- 1 Ensure that DNS is functional on your system. DNS is supplied by a specific server application, which also needs to be operational before you can discover the base radio.
 - 2 Log on to the UNC Wizard from the NM client, by double-clicking the **Internet Explorer** icon on the desktop.
Step result: The Internet Explorer browser opens.
-

-
- 3 Enter: **http://ucs-unc0<Y>.ucs:9443/UNCW** in the Address field.
Where <Y> is the number of the UNC server (01 for primary core UNC server, and 02 for backup core UNC server).
Step result: The UNC Wizard launches and a login dialog box appears.
-
- 4 Type the administrative username and password. Click **OK**.
Step result: The UNC Wizard appears.
-
- 5 From the list of available wizards on the left side, select **Subnet Discovery**.
Step result: The right side of the window is updated with the Subnet Discovery form.
-
- 6 Select **RF Site** by clicking on the Discovery Type drop-down list.
-
- 7 Enter the **Zone ID**, **Site ID**, and then click **Submit**.
Step result: An auto-discovery job is created in the UNC Schedule Manager.
-
- 8 Log on to the UNC from the NM client by entering:
http://ucs-unc0<Y>.ucs
where <Y> is the number of the UNC server (01 for primary core UNC server, and 02 for backup core UNC server).
Step result: The UNC client launches and a login dialog box appears.
-
- 9 Type the administrative username and password. Click **OK**.
Step result: VoyenceControl launches.
-
- NOTE**
- The names EMC Ionix Network Configuration Manager and VoyenceControl are used interchangeably for this product.
-
- 10 Press **F7** (Schedule Manager).
Step result: The Schedule Manager window appears in the UNC with the discovery jobs.
-
- 11 Verify that the **Zone** and **Site** containers include device(s) just discovered.
-
- NOTE**
- No site devices should be in the Lost and Found folder. If there are, see the *Unified Network Configurator* manual for troubleshooting guidance.
-
- 12 In the UNC Wizard, select **RF Site Level Configuration**, **Channel** to verify the device(s). Choose **Zone**, if multiple zones exist.

Step result: The device sites are listed, which means they are available for channel configuration.

3.8.2 Loading Device OS Images to the UNC

Prerequisites:

This procedure requires the Motorola device OS Image CDs. Locate the Transport OS Image media that is packaged with the Network Management DVDs.

When and where to use:

This procedure loads the Operating System (OS) images for the devices for distribution through the Unified Network Configurator (UNC). Once OS images are distributed to the UNC, you can update the device's CSS configuration files to the UNC.

Procedure Steps

- 1 Launch an SSH terminal server session in PuTTY to access the UNC Server Administration menu. See the *Securing Protocols with SSH* manual.
Step result: The UNC Server Administration menu appears.

 - 2 Select **OS Images Administration** from the menu. Press ENTER.
Step result: The OS Images Administration menu appears.

 - 3 Select **Load new OS images** from the menu. Press ENTER.
Step result: A message appears indicating there are two methods for loading OS Images.

 - 4 Insert the **Motorola Device OS Images** CD into the CD/DVD-ROM drive of the server.
Step result: The drive light starts blinking on the server.

 - 5 When the drive light stops blinking, press ENTER.
Step result: The OS images load on the UNC.

 - 6 Select **View OS Images** from the menu. Press ENTER.
Step result: The device software image appears.

 - 7 Select **Eject CD** from the menu. Press ENTER.
Step result: The media ejects from the drive on server.

 - 8 Remove the OS Image CD from the CD/DVD-ROM drive of the server.

 - 9 To log out of the server. Press ENTER.
Step result: The User Configuration Server Administration menu appears.

 - 10 Press ENTER again.
Step result: The prompt appears.
-

3.8.3 Loading Software to a Device



NOTE

These procedures are for a single device download. For a site download, see [3.7 Using Software Download](#), page 3-39.

The following procedures describe how to load software images onto UNC and download and install this software to the device. However, before installing the software, FTP service must be enabled.

3.8.3.1 Enabling FTP Service

Prerequisites:

Prior to installing the OS software, FTP services must be enabled.

Procedure Steps

- 1 Launch an SSH terminal server session in PuTTY to access the UNC Server Administration menu. See the *Securing Protocols with SSH* manual.

Step result: The UNC Server Administration menu appears.

- 2 Select **Unix Administration** from the menu. Press ENTER.

Step result: The Unix Administration menu appears.

- 3 Select **FTP Services** from the menu. Press ENTER.

Step result: The FTP Services menu appears.

- 4 Select **Enable FTP service** from the menu. Press ENTER.

Step result: The FTP Services are enabled and available for software transfer and install operations.

3.8.3.2 Transferring and Installing the OS Image

When and where to use:

This procedure describes how to download the OS from the UNC to the device.

Procedure Steps


- 1 On the PNM client where you set up VoyenceControl, double-click the UNC shortcut on the desktop.

**NOTE**

You can also paste the following address into IE web browser: **http://ucs-unc0<Y>.ucs**, where <Y> is the number of the UNC server (01 for primary core UNC server, and 02 for backup core UNC server).

Step result: Internet Explorer opens to the URL of the application server, and a VoyenceControl client session launches with the welcome page.

Figure 3-15 VoyenceControl Welcome Page

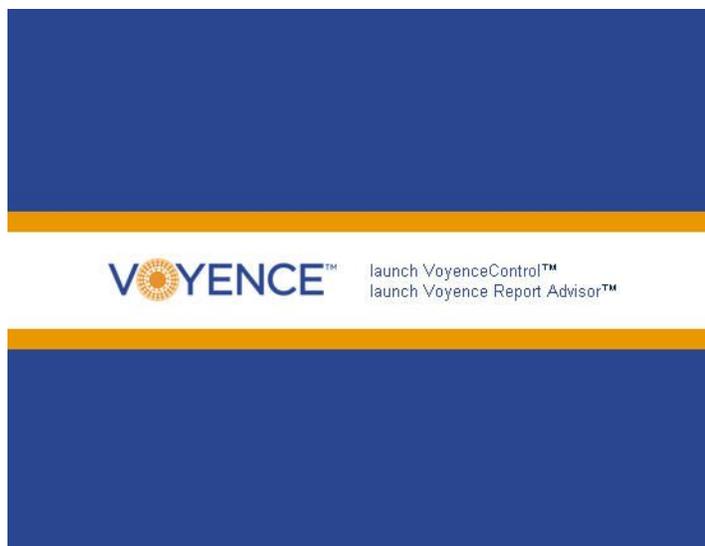**NOTE**

The names EMC Ionic Network Configuration Manager and VoyenceControl are used interchangeably for this product.

- 2 Click the **launch VoyenceControl™** link.

Step result: VoyenceControl client session launches with the login window.


Figure 3-16 VoyenceControl Login Window



- 3 Enter the User ID and Password. Click **OK**.

Step result: The VoyenceControl Dashboard appears.

Figure 3-17 VoyenceControl Dashboard

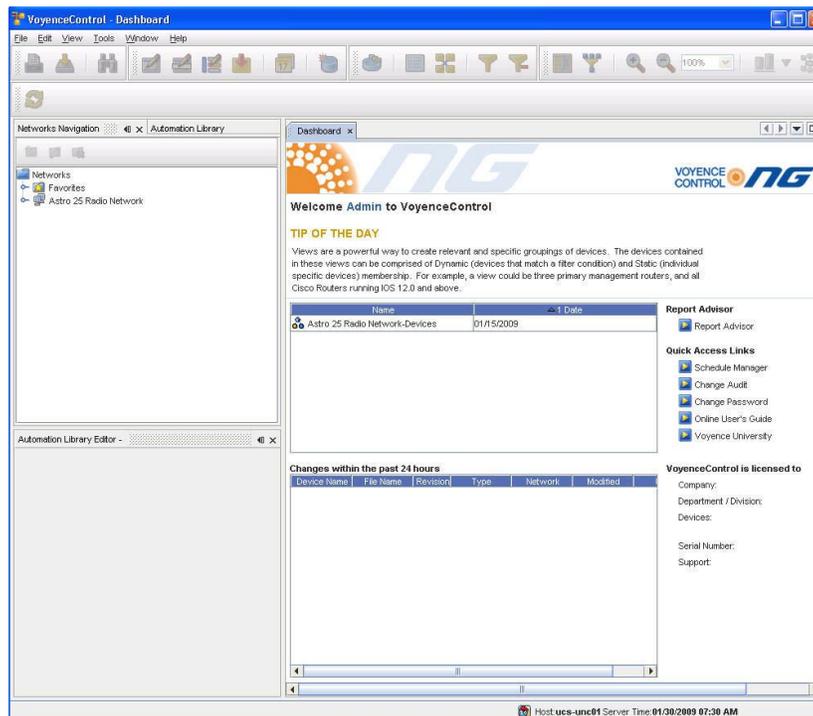

- 4 In the left navigation pane, expand **Networks**, **ASTRO 25 Radio Network**, then **Views**.

Step result: The list of options expands.

-
- 5 Double click **Motorola <device>** from the navigation pane.

Step result: The view opens and all currently discovered devices appear.

- 6 Select **Tools** → **OS Inventory** from the menu.

**NOTE**

You can also press **F9** to select the OS Inventory.

Step result: A list of the OS images appears.

- 7 Verify OS images loaded on the UNC server appear in the OS inventory.

**NOTE**

These images were automatically created during the [3.8.2 Loading Device OS Images to the UNC, page 3-44](#) procedure.

- 8 Under **Networks** in the navigation pane, select one or more devices from the same device class, right click the selections, then choose **Update OS Image** from the menu.

Step result: The Select OS Image window appears.

- 9 Select **Software Image**. Click **Next**.

Step result: The Update OS Image window appears.

- 10 Select each device that appears in the Selected Devices section.

Step result: This associates a version to a device instance.

**NOTE**

In most cases, the “summary of device partitions” are already set up and you just need to verify the values in step 10 through step 13.

- 11 Select **nvm partition** from the Manage Partition for Device section.

Step result: This defines where the OS image is transferred.

**NOTE**

This is the only choice for the device.

- 12 Select the image for this device from the **Selected Image** section.

**NOTE**

You can ignore the Install and Copy check boxes.

Step result: This populates the Image Info tab and informs the application which image to use.

- 13 Click **Add**.

Step result: This populates the Summary of Device Partitions for Device and confirms the proper setup.

- 14 Select the **Device Options** section, **Software Operations**, then choose **transfer**, **install**, or **both**.

Step result: This indicates which operations occur when the job is executed.

**NOTE**

If you choose transfer, you must select the install option later to complete the installation. If you choose both, the software is transferred and then installed. There are up to two resets of the device during installation.

- 15 Click **Schedule**.

Step result: The Schedule Push Job window appears.

- 16 Configure the schedule information. Click **Approve and Submit**.

Step result: This approves the job and you can view it in the Schedule Manager window.

**NOTE**

If you choose Submit, you are asked to approve the job later.

- 17 Verify the job status by pressing **F7** (Schedule Manager).

Step result: The Schedule Manager window appears in the UNC with the discovery jobs.

3.8.3.3 Inspecting Device Properties for Transferred and Installed Software

When and where to use:

Once the software has been transferred and installed, follow this procedure to inspect the device properties before assuming the installation was a success and disabling FTP service

Procedure Steps

- 1 From the **Device** view, right click the device, select **Pull**, then **Pull Hardware Spec**.

Step result: The current software version information is updated in the UNC.



NOTE

Skip this step if a Pull All or Pull Hardware Spec has already occurred.

- 2 From the **Device** view, right click on the device, then choose **Properties**.

Step result: The Device Properties window appears.



NOTE

Select the Properties icon to view the device properties appear directly within the Device view.

- 3 Choose the **Configuration** tab, then the **Hardware** tab.

- 4 Double click the **Chassis** object from the **Physical Hardware** properties.

Step result: The Chassis property tree expands.

- 5 View the following properties and their values:

- **Bnk1:<device>**: Transferred software in bank 1.
- **Bnk2:<device>**: Transferred software in bank 2.
- **<device>**: Installed and Running Software.



NOTE

The Table format can be used (instead of the Diagram format) to view the Installed and Running Software in the Device view.

3.8.3.4 Disabling FTP Service

When and where to use:

After the transfer and installation of the software, the FTP service must be disabled.

Procedure Steps

- 1** Launch an SSH terminal server session in PuTTY to access the UNC Server Administration menu. See the *Securing Protocols with SSH* manual.
Step result: The UNC Server Administration menu appears.

- 2** Select **Unix Administration** from the menu. Press ENTER.
Step result: The Unix Administration menu appears.

- 3** Select **FTP Services** from the menu. Press ENTER.
Step result: The FTP Services menu appears.

- 4** Select **Disable FTP service** from the menu. Press ENTER.
Step result: The FTP Services are disabled and unavailable for software transfer and install operations.

- 5** Back out of the menus by pressing **q** three times.

- 6** At the prompt, enter: **exit** to return to the previous menu.

- 7** Enter: **exit** again.
Step result: You have successfully logged out of the application.

- 8** Close the PuTTY connection.

4 GTR 8000 Base Radio Configuration

Proper software/hardware configuration for the GTR 8000 Base Radios and subsystems require the following activities:

- Updating factory-installed base radio application software
- Setting parameters in a configuration file stored on the GTR 8000 Base Radio that impacts both base radio and RF Distribution System (RFDS) functionality.

This chapter details configuration procedures relating to the base radio.

4.1 Configuration Software

Configuring a device requires two software applications to be loaded on the service PC: Configuration/Service Software (CSS) and Unified Network Configurator (UNC).

- **CSS** is used to configure the parameters on the device. CSS can access devices remotely over the network, or locally through an Ethernet/serial connection to the service port on the device or through a LAN switch. CSS also can be used to view status information, equalize batteries, and check internal logs of the equipment at the site. See the *CSS Online Help* for configuration details.
- **UNC Wizard** is a component of UNC and is used to configure the parameters of a site, subsite, and channel. See the *UNC Wizard Online Help* for configuration details.
- **VoyenceControl** is a component of UNC and can be used to pull and push configurations and configure the parameters of the device. See the *Unified Network Configurator* manual for general information about using VoyenceControl functions.



NOTE

While it is possible to configure a conventional device using UNC, it is preferable to use CSS since configuration dependencies are enforced.

All parameters are programmed locally when the site is installed but not linked to a network. All parameters should be tested prior to making the site available. The ability to program locally provides the means to test the site prior to making it available for system operation.

4.2 Discovering Devices in the UNC

When and where to use:

These are high-level steps to discover the devices in the UNC. See the *Unified Network Configurator* manual for details on discovering devices.

Process Steps

- 1 Use the Unified Network Configurator Discovery Wizard to:
 - Discover the devices.
 - Upload configurations for the devices.
 - Generate changes for non-compliant devices.
 - 2 Approve jobs (if any).
-

4.3 Security/Authentication Services

If the device supports SNMPv3 protocol, a pop-up dialog box appears displaying the SNMPv3 Password Prompt when logging into a device through Configuration/Service Software (CSS) using an Ethernet connection. Enter your Authentication Password and Encryption Password if the chosen security level requires inserting these credentials. If Authentication Services are not enabled on a device, click **OK** when the pop up window appears. For configuration details, see the *Information Assurance Features Overview*, *Software Download*, and *SNMPv3* manuals. See [Figure 4-1](#).

Figure 4-1 SNMPv3 Security Level Option Prompt



A pop-up window appears displaying the File Transfer Access Services for Configuration/Service Software (CSS). This logon is used when communicating to a device through CSS using either an Ethernet or DB-9 Serial Port connection. If Authentication Services are enabled on a device, enter your Username, Password, and Elevated Privileges Password, if the chosen security level requires inserting these credentials. If Authentication Services are not enabled on a device, type any alphanumeric characters to populate the [Username, Password, and Elevated Privileges Password] fields, as they cannot be left blank. See [Figure 4-2](#).

Figure 4-2 CSS Login Banner

The screenshot shows a window titled "Serial Login" with a close button (X) in the top right corner. Inside the window, there is a "Login Banner" section containing the following text:

```

- NOTICE -
Illegal and/or unauthorized use of this device and any related service
is strictly prohibited and appropriate legal action will be taken,
including without limitation civil, criminal and injunctive redress.
Your use of this device and any related service constitutes your consent
to be bound by all terms, conditions, and notices associated with its
use including consent to all monitoring and disclosure provisions.

```

Below the banner are three input fields:

- Username:
- Password:
- Elevated Privileges Password:

At the bottom of the input fields are two buttons: "OK" and "Cancel". At the very bottom of the window, there is a status bar that says "Provide login user name."

4.4 Configuring a Device Using CSS

This section covers configuration of a device using the Configuration/Service Software (CSS).



NOTE

If you do not know the IP address for the device, it is available through a serial port connection in the **Tools** → **Set IP Address** from the CSS menu.

4.4.1 Initial Configuration of a Device Using CSS

Process Steps

- 1 Perform the following configuration steps that require a serial connection. See [4.4.2 Connecting Through a Serial Port Link](#), page 4-4.
 - a. Set the IP address and pairing number of the device. See [4.4.3.1 Setting the Device IP Address and Pairing Number Using CSS](#), page 4-7.
 - b. Set the serial security services. See [4.4.3.3.1 Setting the Serial Security Services Using CSS](#), page 4-9.

- 2 Perform the following configuration steps that require an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
 - a. Set the pairing number of the device. See [4.4.5.1 Setting the BR/CM Pairing Number Using CSS](#), page 4-14.
 - b. Set the current date and time in CSS. See [4.4.5.2 Setting the Date and Time Using CSS](#), page 4-15.
 - c. Change the SNMPv3 configuration and user credentials from CSS on a selected device in the site. See [4.4.5.3 Changing SNMPv3 Configuration and User Credentials Using CSS](#), page 4-15.
 - d. Create, update, or delete an SNMPv3 user. See [4.4.5.3.1 Adding or Modifying an SNMPv3 User Using CSS](#), page 4-18.
 - e. Verify the SNMPv3 credentials. See [4.4.5.3.2 Performing an SNMPv3 Connection Verification Using CSS](#), page 4-19.
 - f. Configure DNS for a conventional base radio using the CSS. See [4.4.5.4.1 How to Configure DNS Using CSS](#), page 4-21.
 - g. Set the SWDL transfer mode. See [4.4.5.6 Setting the SWDL Transfer Mode Using CSS](#), page 4-23.
 - h. Configure for SSH. See Chapter 4, “Configuring SSH for RF Site Devices and VPMs Using CSS” in the *Securing Protocols with SSH* manual.
 - i. Enable RADIUS Authentication using the CSS. See Chapter 7, “Configuring RADIUS Sources and Parameters Using CSS” in the *Authentication Services* manual. Make sure that the base radios have been added to the RADIUS servers on the domain controllers as RADIUS clients.
 - j. Enable Centralized Authentication using the CSS. See Chapter 7, “Enabling/Disabling Centralized Authentication Using CSS” in the *Authentication Services* manual.
 - k. Set the Local Cache Size for Centralized Authentication using the CSS. See Chapter 7, “Setting the Local Cache Size for Central Authentication Using CSS” in the *Authentication Services* manual.
 - l. Customize the login banner text using CSS (optional). See [4.4.5.5 Customizing the Login Banner Using CSS](#), page 4-22.
 - m. Enable Centralized Event Logging using the CSS (optional). See Chapter 6, “Enabling/Disabling Centralized Event Logging on Devices Using CSS” in the *Centralized Event Logging* manual.
 - n. Set the NTP Server Settings. See [4.4.5.7 Setting the NTP Server Settings](#), page 4-24.

 - 3 Set up the local Password Configuration using the CSS (optional). See [4.4.5.8 Setting Up the Local Password Configuration Using the CSS](#), page 4-25.

 - 4 Continue to one of the following depending on the type of device you are configuring:
 - [4.4.6 CSS Configuration Parameters for the GTR 8000 Base Radio \(Trunked Simulcast\)](#), page 4-26
 - [4.4.7 CSS Configuration Parameters for the GTR 8000 Base Radio \(Trunked Repeater\)](#), page 4-27.
 - [4.4.8 CSS Configuration Parameters for the GTR 8000 Base Radio \(HPD\)](#), page 4-28.
 - [4.4.9 CSS Configuration Parameters for the GTR 8000 Base Radio \(Conventional\)](#), page 4-30.
-

4.4.2 Connecting Through a Serial Port Link

Prerequisites:

This procedure assumes CSS is loaded on your computer. See the *Private Network Management Client* manual if necessary. This procedure describes the steps required to perform a serial connection.

When and where to use:

Connecting through a serial port link is used to set the IP address of the device and to set the serial security services. All other device function and feature configurations are performed via an Ethernet port connection in the CSS.


Procedure Steps

- 1 Connect a serial cable to a laptop or PC running the CSS application, and the serial connector located on the device's module. The serial cable is an **RS232** cable. This is a DB-9 straight through serial cable (**female DB-9 to male DB-9**). If the laptop does not have a serial port, use a USB to serial converter external device.
- 2 Open the CSS application.
- 3 Select **Tools** → **Connection Configuration** from the menu.
Step result: The Connection Screen dialog box appears.
- 4 Select **Serial** on the Connection Type field.
Step result: The Serial Settings on the dialog box become enabled.
- 5 Select the communication port in the Serial Port field that matches the one selected on the PC.
- 6 In the Baud Rate field, select the baud rate with which you want to communicate with the device.
 - Baud Rate 19200
- 7 Click **Connect**.

**NOTE**

A login/password prompt screen opens. Provide the required credentials as follows. Click **OK**. When accessing the device, if the default passwords do not work, the passwords may have been set to default values by a different system release of software. See "Resetting Device Passwords" in the *CSS Online Help* to reset the passwords to the current software release defaults. If Authentication Services are not enabled on a device, type any alphanumeric characters to populate the [Username, Password, and Elevated Privileges Password] fields, as they cannot be left blank.

Figure 4-3 CSS Login Banner

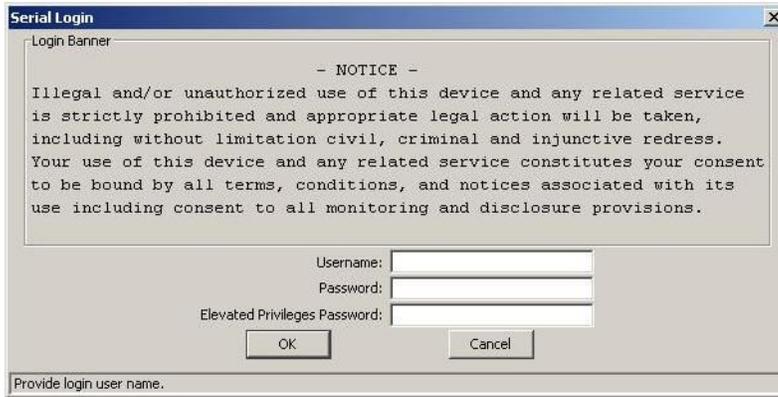

If...	Then...
If a domain controller is available on the network...	Type the Username and Password for your RADIUS service user account that is assigned to the netwadm group in Active Directory. (The default user is serviceuser.)
If a domain controller is not available on the network...	Type the Username and Password for the local bts_service account.
If the Elevated Privileges Password field is active...	Type the Elevated Privileges Password that was set up for this device.



See [4.4.3.3.1 Setting the Serial Security Services Using CSS, page 4-9](#) to configure Authentication Services on the device.

- Click **OK** to close the dialog box.
Step result: The blank CSS main window appears.



The **Service** menu is not available until you read the configuration file from the device using an Ethernet connection.

4.4.3 Serial Connection Configurations

The following procedures are configuration parameters in the CSS using a serial connection.

4.4.3.1 Setting the Device IP Address and Pairing Number Using CSS

Prerequisites:

Ensure that you have the required credentials information (local service account password and elevated privileges password) to configure the site devices before proceeding. The user credentials information includes both the current and new credentials. Without the current credentials, you cannot access the device and cannot change the user credentials. See [8.2.4.2 Resetting Passwords and SNMPv3 Passphrases, page 8-6](#).

**NOTE**

Setting or changing the device's IP Address causes the SNMPv3 configuration and user credentials to automatically reset.

Procedure Steps

1 Connect to the device using Configuration/Service Software (CSS) through a serial port link. See [4.4.2 Connecting Through a Serial Port Link](#), page 4-4.

2 Select **Tools** → **Set IP Address/BR_CM Pairing Number** from the menu.



NOTE

If the device is not in a voting or simulcast IP only topology, the menu item is shown as **Set IP Address/Box Number**.

Step result: The Set IP Address and BR_CM Pairing Number dialog box appears or the Set IP Address and Box Number dialog box appears..

3 Enter the devices IP address in the **Device IP Address** field. Click **Set Device IP Address**.

4 In a voting or simulcast IP only topology, enter the devices pairing number. Click **Set BR/CM Pairing Number**.

5 Click **OK** to close the dialog box.

6 Click **Reset** to initiate a hardware restart.

Step result: SNMPv3 user credentials reset to their factory default values.

7 Click **Close** to close the dialog box.

8 Proceed to [4.4.5.3 Changing SNMPv3 Configuration and User Credentials Using CSS](#), page 4-15 to reconfigure the SNMPv3 user credentials.

4.4.3.2 Pairing To a Comparator

When operating in a voting, multicast, or IP simulcast configuration, base radios and receivers must be paired to comparators using the BR_CM Pairing Number. The BR_CM Pairing Number for both the base radio/receiver and comparator is used to create an IP multicast group that allows the base radio/receiver and comparator to talk to each other. The base radio/receiver listens for messages that the comparator sends in order to establish an IP connection with all the paired base radios/receivers. When the base radio/receiver receives the message from the comparator, it extracts the comparator's IP address from the message and uses it to send received voice and data back to the comparator.

Communication from the comparator to the paired base radios/receivers always uses a multicast IP address. Communication between the paired base radios/receivers to the comparator always uses a unicast IP address.

The multicast IP address is calculated based on the base radio/receiver and comparator pairing number and the formula as follows:

For Conventional Systems:

224.10.100.nnn, where nnn is: $(2 * \text{channel number}) - 1$ for channel number between [1, 127]

224.10.101.nnn, where nnn is: $(2 * (\text{channel number} - 127) - 1)$ for channel number between [128, 200]

For Trunking Multi Site Systems:

224.100.102.nnn, where nnn is: $100 + (2 * \text{channel number}) - 1$



NOTE

The Base Radio/Comparator Pairing Number is not used for circuit (V.24 or 4-wire/V.24 hybrid link) configurations.

See [4.4.3.1 Setting the Device IP Address and Pairing Number Using CSS, page 4-7](#) on how to set the pairing number. The pairing number can also be performed using an Ethernet connection. See [4.4.5.1 Setting the BR/CM Pairing Number Using CSS, page 4-14](#).

4.4.3.3 Serial Security Services Using CSS

This section describes how to enable the secure services and change the device password. Perform these steps before changing the SNMPv3 configuration and user credentials from CSS on a selected device in the site.

Prior to enabling this parameter, any login and password may be used on the File Transfer Access Services login window to access a device. After Authentication Services are enabled, the login and password provided is checked against the following authentication sources:

- **Stored password**—RF site devices support a configurable password for the Local Service and Elevated Privileges accounts. The password is verified against the stored password for these accounts.
- **Built-in logins and passwords**—RF site devices support built-in login/password combinations for login by services such as Software Downloads (SWDL). Only certain SWDL login names are authenticated in this way.
- **Centralized Authentication**—For authentication through centralized accounts instead of Local Service, Elevated Privileges, and built-in user accounts, you need to Configure the Centralized Authentication parameter in CSS for the CHAP protocol. See Chapter 7, “Enabling/Disabling Centralized Authentication Using CSS” in the *Authentication Services* manual. Note that this procedure requires an Ethernet connection to the device being configured.

4.4.3.3.1 Setting the Serial Security Services Using CSS

Prerequisites:

Ensure the required credentials information (local service account password and elevated privileges password) to configure the site devices before proceeding. The user credentials information includes both the current and new credentials. Without the current credentials, you cannot access the device and cannot change the user credentials. See [8.2.4.2 Resetting Passwords and SNMPv3 Passphrases, page 8-6](#). Changing to the incorrect user credentials may lead to not being able to access the device through CSS or SSH.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through a serial port link. See [4.4.2 Connecting Through a Serial Port Link](#), page 4-4.

 - 2 Select **Security** → **Device Security Configuration** → **Security Services (Serial)** from the menu.
Step result: The Security Services Configuration dialog box opens.

 - 3 Set the **Test Application Configuration** field according to your organization's policies. The recommended secure configuration is **Disabled**.

 - 4 Set the **Authentication Services** field to **Enabled**. This field enables local authentication services and must be enabled as a prerequisite for centralized authentication.

 - 5 Set the **Password Reset Mechanism** field. This field allows a user to reset the passwords for two built-in device accounts to their default values.

 - 6 To update the password for the device, select either **Service Account** or **Elevated Privilege** from the drop-down list and click **Update password**.
Step result: A Change Account Password dialog box opens.

 - 7 Enter the old password, then enter a new password and confirm the new password before clicking **Change Password**.

 - 8 Click **OK** to save the new password.
Step result: The Change Account Password dialog box closes.
-

4.4.3.4 Resetting SNMPv3 User Credentials to Factory Defaults Using CSS

Prerequisites:

Ensure the required credentials information (local service account password and elevated privileges password) to configure the site devices are available before proceeding. The user credentials information includes both the current and new credentials. Without the current credentials, you cannot access the device and cannot change the user credentials. To obtain the keys for resetting either password or SNMPv3 passphrases for the device, contact Motorola Solutions Customer Support. Changing to the incorrect user credentials may lead to not being able to access the device through CSS or SSH.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through a serial port link. See [4.4.2 Connecting Through a Serial Port Link, page 4-4](#).

- 2 Select **Security** → **SNMPv3 Configuration** → **Reset SNMPv3 Configuration (Serial)** from the menu.
Step result: The Reset SNMPv3 Configuration dialog box opens.

- 3 Click **Reset SMPv3 Configuration**.
Step result: The SNMPv3 configuration is reset to factory defaults in the device.

- 4 Click **Exit**.
Step result: The Reset SNMPv3 Configuration dialog box closes.

- 5 To reboot the device for the SNMPv3 user credentials to take affect:
 - a. Select **Tools** → **Set IP Address/Box Number** or **Set IP Address/BR_CM Pairing Number** from the menu.
Step result: The dialog box appears.
 - b. Click **Reset**.
Step result: The device reboots.

- 6 Proceed to [4.4.5.3 Changing SNMPv3 Configuration and User Credentials Using CSS, page 4-15](#).

4.4.4 Connecting Through an Ethernet Port Link

Prerequisites:

This procedure assumes CSS is loaded on the computer. See the *Private Network Management Client* manual if necessary or see the instructions in the CSS CD-ROM jewel box for instructions on loading the CSS on the laptop or computer.

When and where to use:

Use the Ethernet port link to configure All CSS parameters for the device.

Procedure Steps

- 1 Connect a computer (either laptop or desktop) to a device:
 - a. Connect an Ethernet straight through cable between the Ethernet port on the computer and the appropriate LAN switch either locally at a site or remotely through the network.
 - For a base radio, the IP address of the laptop must be set to the 192.168.1.x subnet (where x is any number between 2 and 253). Configure the Speed/Duplex setting of the PC's Ethernet interface to 10 Mb Half Duplex.
 - For a site controller or comparator, the IP address of the laptop must be set to an address on the subnet of the local site, which varies depending on the site and zone numbers.
 - For a comparator, the 10/100Base-T LAN is not the default Ethernet port setting. To set the correct port speed and duplex, see the *CSS Online Help*.



NOTE

Normally the computer is connected to the appropriate LAN switch either locally or remotely through the network. Do not connect directly to a device unless downloading the software individually to that device.

b. Start the computer.

2 Open the CSS application.

3 Select **Tools** → **Connection Configuration** from the menu.

Step result: The Connection Screen appears.

4 Verify that **Ethernet** is selected in the **Connection Type** area.

5 If connected through the LAN switch, specify the IP address for the device in the Ethernet Settings area. Do the following:

If...	Then...
Know the IP address for the device.	<ol style="list-style-type: none"> 1. Enter the IP address for the device in the Device IP Address field. 2. Continue with step 6.
<p>Trunked Device: Do not know the IP address, but know the system identification of the device (the zone, site, subsite, and device ID of the device).</p>	<ol style="list-style-type: none"> 1. Click Fetch DNS Entry to open the DNS IP Address Calculation Screen dialog box. 2. Select the desired device type from the Device list box. 3. Enter the proper values in the Zone, Site, Subsite, and Device ID fields. <div data-bbox="1019 1346 1096 1432" data-label="Image"> </div> <div data-bbox="1154 1365 1243 1398" data-label="Section-Header"> <p>NOTE</p> </div> <div data-bbox="1010 1428 1401 1518" data-label="Text"> <p>Some fields, such as Subsite, do not allow entries for some devices. Therefore, select the device first.</p> </div> <ol style="list-style-type: none"> 4. Click OK. Step result: The DNS information of the device automatically appears in the Device IP Address field. 5. Continue with step 6.
<p>Conventional Device: Do not know the IP address.</p>	<ol style="list-style-type: none"> 1. Establish a serial connection to the device. See 4.4.2 Connecting Through a Serial Port Link, page 4-4. 2. For a base radio or comparator, select Tools → Set IP Address/BR_CM Pairing Number.

If...	Then...
	<p>For a site controller or RDM, select Set IP Address/Box Number.</p> <ol style="list-style-type: none"> 3. Read the IP address from the Device IP Address field. 4. Re-establish an Ethernet connection and repeat steps 1 through 4. 5. Enter the IP address for the device in the Device IP Address field. 6. Continue with step 6.

6 If connected directly to the Ethernet service port of the device, click **Front Panel Ethernet**.

7 Click **Connect** to make the connection.

Step result: If this is an SNMPv3-capable device, a Passphrase Prompt screen opens. Skip to step 9.

Figure 4-4 SNMPv3 Security Level Option Prompt




NOTE

For Windows XP computers: If after clicking Connect, a "comm.Error" is encountered when connecting to the front panel Ethernet port on a base radio, follow the procedure in step 8 to repair the local area connection (LAN) or high-speed Internet connection.

- 8 The front panel Ethernet port on GTR 8000 Base Radios have a fixed IP address (192.168.1.1). However the Ethernet MAC ID for each front panel connection is unique to each base radio. A communication error can occur when configuring multiple base radios through the front panel Ethernet port. When connected to the initial base radio, Windows XP associates the fixed IP address of the front panel port with the front panel's Ethernet MAC ID. When connecting to the next base radio, the Address Resolution Protocol (ARP) cache is not cleared and causes a communication error. This procedure clears the ARP cache and allows for a new Ethernet MAC ID to be associated with the base radio's fixed IP address.
- In Windows XP, from the Start menu, select **Settings** → **Network Connections** → **Local Area Connection**
 - Click the **Support** tab and select **Repair**.
Step result: The Repair Local Area Connection window opens and displays the different cache that are cleared.
 - Reconnect the Ethernet cable to the front panel Ethernet port, if not connected.
-
- 9 In the SNMPv3 Security Level Option Prompt, enter the User Information and Passphrase Information. Click **OK**. If Authentication Services are not enabled on a device, click **OK** when the window appears.

**NOTE**

See [4.4.5.3 Changing SNMPv3 Configuration and User Credentials Using CSS, page 4-15](#) to configure or change SNMPv3 configuration and user credentials on the device.

- 10 Select **File** → **Read Configuration From Device** from the menu.

Step result: The parameters download from the device to the computer. When the download is complete, the CSS Main window opens. Use the map on the left side of the screen to view configuration information for the device.

4.4.5 Ethernet Connection Configurations

The following procedures are configuration parameters in the CSS using an Ethernet connection.

4.4.5.1 Setting the BR/CM Pairing Number Using CSS

When and where to use:

Set the pairing number for the base radio and comparator when operating in a voting, multicast, or simulcast IP configuration using an Ethernet connection.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - 2 Select **Service** → **BR/CM Pairing Number** from the menu.
 - 3 Enter the pairing number. Click **OK**.
Step result: The pairing number is set.
-

4.4.5.2 Setting the Date and Time Using CSS

This procedure provides the date and time to the device.

When and where to use:

During installation this is done through an Ethernet cable connected directly to the Ethernet port of the device. After installation this procedure may be performed from a remote CSS.



NOTE

In the event of a power outage, the device does not retain the date and time settings.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - 2 Select **Tools** → **Set Device Date and Time** from the menu.
 - 3 Enter the current date and time. Click **OK**.
Step result: The date and time is set.
-

4.4.5.3 Changing SNMPv3 Configuration and User Credentials Using CSS

Prerequisites:

Ensure that you have the required SNMPv3 credentials information (Authentication passphrase, Encryption passphrase, and Authoritative Engine ID) to configure the device before proceeding. The user credentials information includes both the current and new credentials. Without the current credentials, you cannot access the device and cannot change the user credentials. See [8.2.4.2 Resetting Passwords and SNMPv3 Passphrases, page 8-6](#). Changing to the incorrect user credentials may lead to not being able to access the device from the UNC or for the device to not be able to send alarms to the Unified Event Manager (for fault management).

When and where to use:

This procedure changes the SNMPv3 configuration and user credentials from CSS on a selected device in the site. For more information on this feature, see the *SNMPv3* manual.



During installation this is done through an Ethernet cable connected directly to the Ethernet port of the device. After installation this procedure may be performed from a remote CSS.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

- 2 Select **Security** → **SNMPv3 Configuration** → **Configure SNMPv3 Users (Ethernet)** from the menu.

Step result: The SNMPv3 Login/Connection dialog box appears with MotoAdmin as the selected SNMPv3 user.

- 3 Enter the appropriate Authentication and Encryption Passphrases in the fields.



When accessing the device for the first time, if the default passphrases do not work, the passphrases may have been set to default values by a different system release of software. See the "Reset SNMPv3 Configuration (Serial)" screen in the *CSS Online Help* to reset the passphrases to the current software release defaults

- 4 If connecting remotely through the network to a different device, enter the Device IP Address field, as follows. Otherwise, continue to Step 5.

If...	Then...
Know the IP address for the device.	<ol style="list-style-type: none"> 1. Enter the IP address for the device in the Device IP Address field. 2. Continue with step 5.
Do not know the IP address, but know the system identification of the device (the zone, site, subsite, and device ID of the device)	<ol style="list-style-type: none"> 1. Click Fetch DNS Entry to open the DNS IP Address Calculation Screen dialog box. 2. Select the desired device type from the Device list box. 3. Enter the proper values in the Zone, Site, Subsite, and Device ID fields. <div data-bbox="1019 1717 1291 1797" data-label="Image"> </div> <p data-bbox="1019 1808 1396 1892">Some fields, such as Subsite, do not allow entries for some devices. Therefore, select the device first.</p>

If...	Then...
	4. Click OK . Step result: The DNS information of the device automatically appears in the Device IP Address field. 5. Continue with step 5.

5 Click **OK**.

Step result: A connection is made with the selected device, and the entered SNMPv3 admin passphrases are authenticated and the Configure SNMPv3 Users dialog box appears. If the connection fails, a message appears.

6 To choose the SNMPv3 user whose credentials are to be updated, select **Username** from the Username list in the User Information form of the Configure SNMPv3 Users dialog box.

Step result: The CSS retrieves the current credentials from the device for the selected user.



NOTE

Depending on the user selected, some fields on this dialog box become Read-Only or disabled. Click **Cancel** on the Configure SNMPv3 Users dialog box at any time to discard changes made to the selected user.

7 To change or update the SNMPv3 security level for the selected user, select the security level from the Security Level list in the User Information form of the Configure SNMPv3 Users dialog box. The security level options are:

- **NoAuthNoPriv:** Neither the Authentication Passphrase nor Encryption Passphrase is needed for communicating with the device.
- **AuthNoPriv:** Authentication Passphrase is needed; but no Encryption Passphrase is needed for communicating with the device.
- **AuthPriv:** Both Authentication Passphrase and Encryption Passphrase are needed for communicating with the device.

Step result: The security level of the selected user is set.



NOTE

The User Status field on the Configure SNMPv3 Users dialog box reflects the current operational status of the selected SNMPv3 User. The Status Types include:

- **Active:** User configured on device; Update and Delete buttons are enabled.
- **Not in service:** User configured on device; Update and Delete buttons are enabled.
- **Not ready:** User configured on device; Update and Delete buttons are enabled.
- **Not present:** Not present on the device; Create button is enabled.

- To change the Authentication Passphrase for the selected SNMPv3 user (if applicable to the selected security level), type the password into the **Old Passphrase Field** in the Authentication Passphrase form of the Configure SNMPv3 Users dialog box.

**NOTE**

If you do not know the passphrase, click the **I do not remember old passphrase** check box.

- Type the new passphrase into the **New Passphrase** field.

**NOTE**

Passphrase must be between 8 and 64 characters in length and passphrase must consist of upper or lowercase alphanumeric characters (excluding the @ # \$ ^ or _ characters).

- Type the same new passphrase into the **Confirm New Passphrase** field.

- To change the encryption passphrase for the selected SNMPv3 user (if applicable to the selected security level), type the old passphrase into the **Old Passphrase Field** in the Encryption Passphrase form of the Configure SNMPv3 Users dialog box.

**NOTE**

If you do not know the passphrase, click the **I do not remember old passphrase** check box.

- Type the new passphrase into the **New Passphrase** field, then type the same new passphrase into the **Confirm New Passphrase** field.

- To change the Authoritative Engine Identifier (applicable to MotoInformA and MotorInformB users only), select the desired current engine ID from the **Current Engine ID List** in the **Authoritative Engine ID Section** of the Configure SNMPv3 Users dialog box.

- Type the new engine ID into the **New Engine ID** field.

**NOTE**

The new engine ID must be between 1 and 27 characters and comply with the Engine ID Domain Name Syntax.

Step result: The authoritative engine ID is assigned.

- To create, update, or delete SNMPv3 users, continue on with [4.4.5.3.1 Adding or Modifying an SNMPv3 User Using CSS](#), page 4-18.

4.4.5.3.1 Adding or Modifying an SNMPv3 User Using CSS

This procedure describes how to create, update, or delete an SNMPv3 user from the Configure SNMPv3 Users Screen dialog box.

Procedure Steps

- 1 In the CSS, log in using the appropriate credentials.

Step result: The Configure SNMPv3 Users dialog box appears.

- 2 To create, delete, or update the selected SNMPv3 user, use one of the following steps:

If...	Then...
You want to create a user when the status is Not Present	Click Create .
You want to update an existing user	Click Update .
You want to remove an existing user	Click Delete .

Step result: A Confirmation dialog box appears and asks if you want to continue.

- 3 Click **Yes**.

Step result: The Processing Requests dialog box appears and processes the request. A green square indicates OK and a red square indicates failure.

- 4 After reviewing the processing status, click **OK**.



NOTE

If you encounter any errors, go back to the appropriate step and correct the information entered.

- 5 Repeat these steps for any SNMPv3 users you wish to create, update, or delete.

- 6 Click **Cancel** to exit the Configure SNMPv3 Users dialog box.

Step result: The Configure SNMPv3 Users dialog box closes, and the CSS main window returns.

4.4.5.3.2 Performing an SNMPv3 Connection Verification Using CSS

When and where to use:

Once the SNMPv3 user credentials have been created, modified, or deleted, you can perform a sanity check to ensure the device is properly configured for SNMPv3. Follow this procedure to verify the SNMPv3 connection.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
- 2 When the passphrase prompt screen opens, select configured security level and enter the required passphrases.
- 3 Click **OK** if the connection was successful. This indicates your SNMPv3 configuration is valid.

4.4.5.4 Configuring DNS Using CSS



NOTE

This is not applicable for a K1/K2 site.

The Network Services Configuration window allows you to configure the network DNS services for this device, if part of a secure network.

[4.4.5.4.1 How to Configure DNS Using CSS](#), page 4-21 describes the steps for configuring DNS for a device using Configuration/Service Software (CSS). Configuring DNS is required before entering the Fully Qualified Domain Name (FQDN) for server(s) on the Network Security Configuration window in CSS.

Using [Table 4-1](#), enter the IP addresses for the primary, secondary, and tertiary DNS servers for this device. [Table 4-2](#) is used only when configuring a conventional device.

Table 4-1 DNS Nameservers for Devices in Dynamic System Resilience and Non-Dynamic System Resilience Sites

To configure on a device:	When device is located in a remote site with no Dynamic System Resilience	When device is located in a Dynamic System Resilience remote site
Primary DNS server	<code>zzzz>dns01.zonez></code>	<code>zzzz>dns01.zonez></code>
Secondary DNS server	<code>ucs-dns01.ucs</code>	<code>zzzz>dns04.zonez></code>
Tertiary DNS server	N/A	<code>ucs-dns01.ucs</code>

where `zzz>` and `z>` indicate the zone to which the device belongs.

Table 4-2 Conventional Comparator System Name Variables

Variable	Description
[hostname]	The character string entered in the Requested DNS Host Name field.
chanWWW	The channel number, where WWW is a number between 1 and 200.

Table 4-2 Conventional Comparator System Name Variables (cont'd.)


Variable	Description
siteXXXX	The logical Site ID (as configured on the Site configuration screen), where XXXX is a number between 2000 and 2255.
csubYY	The number of the Conventional Subsystem, where YY is a number between 1 and 47.
zoneZ	The number of the zone, where Z is a number between 1 and 7.

For information on DNS-related failures that may occur during or after DNS configuration, see the “AD/DNS Troubleshooting” chapter in the *Authentication Services* manual.

4.4.5.4.1 How to Configure DNS Using CSS

Procedure Steps

- 1 Verify that you have IP addresses for a Primary, Secondary and/or Tertiary DNS Server IP. Contact your system administrator for this information if you do not have it before continuing to step 2.
- 2 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
- 3 On the navigation pane, select **Network Services Configuration**.
- 4 In the Network Services Configuration window, select the **DNS Configuration** tab.

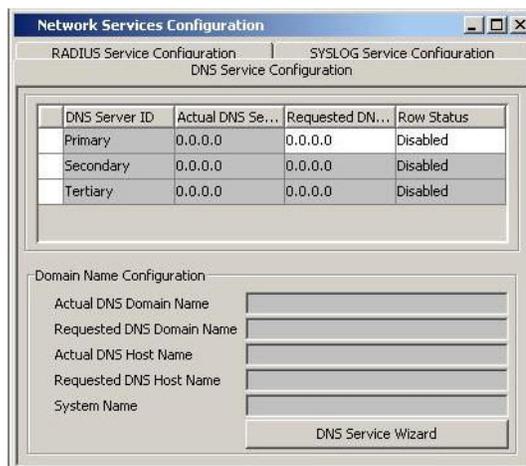Figure 4-5 CSS Network Services Configuration – DNS Tab

- 5 Enter the **Requested DNS Server IP** address for the Primary, Secondary, and Tertiary DNS servers.

**NOTE**

The Primary Row Status must be enabled before the Secondary row is ungrayed. The secondary row status must be enabled before the Tertiary row is ungrayed. See [Table 4-1](#).

- 6 In the **Row Status** field, select whether the IP address for the Primary, Secondary, or Tertiary DNS Server is **Enabled** or **Disabled**. Choose **Enabled** to use the DNS Server IP address.

- 7 In the **Requested DNS Domain Name** field, enter up to 191 alphanumeric characters. The Primary Row Status must be set to **Enabled** for this field to be active.

**NOTE**

Domain names for site devices should be based on the site ID and zone ID (such as siteXzoneZ). See [Table 4-1](#).

For assistance in completing the Requested DNS Domain Name, click **DNS Service Wizard**.

- 8 In the **Requested DNS Host Name** field, enter up to 63 alphanumeric characters for the network in which this device resides. A Requested DNS Domain Name must be entered for this field to be active.

**NOTE**

This field is available only when configuring a conventional device AND a Requested DNS Domain Name has been entered.

For assistance in completing the Requested DNS Host Name, click **DNS Service Wizard**.

- 9 The **System Name** field is not user editable and is only filled after using the DNS Service Wizard.

**NOTE**

This field is used only when configuring a conventional device.

- 10 Click **DNS Service Wizard** for assistance in completing the fields in the DNS Service Configuration screen. See the *CSS Online Help* for configuration details.

4.4.5.5 Customizing the Login Banner Using CSS

This procedure describes how to edit the login banner's security notice.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

- 2 Select **Security** → **Device Security Configuration** → **Remote Access/Login Banner (Ethernet)** from the menu.
Step result: The Remote Access/Login Banner screen appears displaying the Remote Access Configuration tab.

- 3 Click on the **Login Banner** tab.

- 4 Edit the text of the banner.

- 5 Click one of the following:
 - **Refresh:** To re-read the original Login Banner text.
 - **Apply:** To save your changes and keep the screen open .
 - **OK:** To save your changes and close the screen.
 - **Cancel:** To close the screen without saving your changes.

4.4.5.6 Setting the SWDL Transfer Mode Using CSS

Sets the SWDL transfer mode prior to performing a Software Download on the device.

When and where to use:

Follow this procedure to set the SWDL transfer mode to FTP (clear) or SFTP (secure) for the device.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

- 2 Select **Security** → **Device Security Configuration** → **Remote Access/Login Banner (Ethernet)** from the menu.

Step result: The Remote Access/Login Banner screen appears displaying the Remote Access Configuration tab.

Figure 4-6 Remote Access Configuration Tab

- 3 In the **Software Download Transfer Mode (Requested)** field, choose either Ftp (clear) or Sftp (secure). Click **OK**.



NOTE

Secure Shell Service and Secure FTP services are automatically set to Enabled and grayed out when you choose Sftp.

4.4.5.7 Setting the NTP Server Settings

Network Time Protocol (NTP) provides a clock synchronization mechanism for various Network devices and computers. To allow the NTP server to provide date and time synchronization for a particular device, the NTP server's IP address must be entered on the Manager / NTP Definition Screen.

For security purposes, the base radio can restrict NTP messages to only those from the site controller. This is done by configuring two site controller IP addresses into the NTP Server IP Address fields on the base radio.

See the NTP Server Settings in the *CSS On-line Help* for defining, editing, and removing these settings.

**NOTE**

When the IP addresses exceeds the total, removing IP addresses allows the UEM to be identified as the current manager and can handle traps for the device.

4.4.5.8 Setting Up the Local Password Configuration Using the CSS

When and where to use:

This procedure describes how to set the complexity requirements and controls for the local service account password. The updated password criteria is enforced on the next password change for the device's local service account. Password Configuration is an optional feature. For information, see "Password Configuration" in the *CSS Online Help*.

Procedure Steps

- 1 Connect to the device using Configuration/Service Software (CSS) through an Ethernet port link. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

- 2 In the navigation pane, click the **Password Configuration** element.

Step result: The Password Configuration window appears.

Figure 4-7 Password Configuration Window

- 3 Complete the following fields:

- **Minimum Password Length**—This field allows you to enter a value as the minimum length for the Password. The minimum can be between 8 and 255 characters, with a default of 10 characters.
- **Number of Required Special Characters**—This field allows you to enter a value for the required number of special characters which must be included in the Password. The value can be between 0 and 255, with a default of 1.
- **Number of Required Numeric Characters**—This field allows you to enter a value for the required number of numeric characters which must be included in the Password. The value can be between 0 and 255, with a default of 2.
- **Number of Required Uppercase Characters**—This field allows you to enter a value for the required number of uppercase alphabetic characters which must be included in the Password. The value can be between 0 and 255, with a default of 2.

- **Number of Required Lowercase Characters** —This field allows you to enter a value for the required number of lowercase alphabetic characters which must be included in the Password. The value can be between 0 and 255, with a default of 2.
 - **Number of Consecutive Characters** —This field allows you to enter the maximum number of consecutive repeated characters that are permitted in the password.
 - **Set Values to Default** —This returns all above fields to their system default values.
 - **Password Aging Time [days]** —This field allows you to enter a value between 0 and 65535 for the maximum number of days a device's local password will be valid. After the Password Aging Time has elapsed, the device's password must be changed. The default value is 0.
 - **Change Interval Limit [days]**—This field allows you to enter a value between 0 and 65535 for the number of days which must elapse before a device's local password can be changed. The default value is 1.
-

4.4.6 CSS Configuration Parameters for the GTR 8000 Base Radio (Trunked Simulcast)

Prerequisites:

Before proceeding with this process, complete the initial configuration of the device in [4.4.1 Initial Configuration of a Device Using CSS, page 4-3](#).

For configuration parameters on each field for a trunked simulcast GTR 8000 Base Radio, see "Multi-Site or Simulcast Subsystem" in the *CSS Online Help*.

Process Steps

- 1 Connect to the base radio through an Ethernet port link and then read the configuration file from the base radio. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - 2 Click **System** in the System tree and complete the fields.
 - 3 Click **Site** in the System tree and complete the fields.
 - 4 Click **Channel** in the System tree and complete the fields.
 - 5 Click **Subsite** in the System tree and complete the fields.
 - 6 Click **Configuration** in the System tree and complete the fields on all four tabs.
-



NOTE

As part of RMC configuration, set the DIP switches on the RMC/LNA modules. See [4.4.11 Setting RMC System Gain, page 4-32](#).

- 7 Click **Network Services Configuration** in the System tree and complete the fields on the three tabs.

**NOTE**

For configuration details for DNS and RADIUS Services, see the *Authentication Services* manual. For configuration details for SYSLOG Services, see the *Centralized Event Logging*, manual.

- 8 Click **Password Configuration** in the System tree and complete the fields.

**NOTE**

Password Configuration is only required if you have passwords entered for local accounts. This sets the password complexity and controls. For details on password complexity and controls see “Password Configuration” in *CSS Online Help*.

- 9 Select **File** → **Save As** from the menu to save the configuration data to a new archive file or select **File** → **Save** from the menu to overwrite the existing archive file.

**IMPORTANT**

Be sure to save any configuration changes to a local or network drive so that if the base radios transceiver module fails, you can load your settings to a replacement base radio transceiver. If the configuration file is not saved to a local or network drive, you will need to repeat the setup steps after replacing a transceiver module.

- 10 Write the configuration data to the base radio, as follows:

- Select **File** → **Write Configuration to Device** from the menu.

4.4.7 CSS Configuration Parameters for the GTR 8000 Base Radio (Trunked Repeater)

Prerequisites:

Before proceeding with this process, complete the initial configuration of the device in .

For configuration parameters for a trunked Repeater GTR 8000 Base Radio, see "Repeater Site Subsystem" in the *CSS Online Help*.

Process Steps

- 1 Connect to the base radio through an Ethernet port link and then read the configuration file from the base radio. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
- 2 Click **System** in the System tree and complete the fields.
- 3 Click **Site** in the System tree and complete the fields.

4 Click **Channel** in the System tree and complete the fields.

5 Click **Configuration** in the System tree and complete the fields on all four tabs.

**NOTE**

As part of RMC configuration, you will need to set the DIP switches on the RMC/LNA modules. See [4.4.11 Setting RMC System Gain, page 4-32](#).

6 Click **Network Services Configuration** in the System tree and complete the fields on the three tabs.

**NOTE**

For configuration details for DNS and RADIUS Services, see the *Authentication Services* manual. For configuration details for SYSLOG Services, see the *Centralized Event Logging*, manual.

7 Click **Password Configuration** in the System tree and complete the fields.

**NOTE**

Password Configuration is only required if you have passwords entered for local accounts. This sets the password complexity and controls. For details on password complexity and controls see "Password Configuration" in *CSS Online Help*.

8 Select **File** → **Save As** from the menu to save the configuration data to a new archive file or select **File** → **Save** from the menu to overwrite the existing archive file.

**IMPORTANT**

Be sure to save any configuration changes to a local or network drive so that if the base radios transceiver module fails, you can load your settings to a replacement base radio transceiver. If the configuration file is not saved to a local or network drive, you will need to repeat the setup steps after replacing a transceiver module.

9 Write the configuration data to the base radio, as follows:

- Select **File** → **Write Configuration to Device** from the menu.
-

4.4.8 CSS Configuration Parameters for the GTR 8000 Base Radio (HPD)

Prerequisites:

Before proceeding with this process, complete the initial configuration of the device in .

For configuration parameters for an HPD GTR 8000 Base Radio, see "HPD Remote/Expandable Site" in the *CSS Online Help*.

Process Steps

1 Connect to the base radio through an Ethernet port link and then read the configuration file from the base radio. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

2 Click **System** in the System tree complete the field.

3 Click **Site** in the System tree and complete the fields.

4 Click **Channel** in the System tree and complete the fields.

5 Click **Configuration** in the System tree and complete the fields on all four tabs.

**NOTE**

As part of RMC configuration, you will need to set the DIP switches on the RMC/LNA modules. See [4.4.11 Setting RMC System Gain, page 4-32](#).

6 Click **Network Services Configuration** in the System tree and complete the fields on the three tabs.

**NOTE**

For configuration details for DNS and RADIUS Services, see the *Authentication Services* manual. For configuration details for SYSLOG Services, see the *Centralized Event Logging*, manual.

7 Click **Password Configuration** in the System tree and complete the fields.

**NOTE**

Password Configuration is only required if you have passwords entered for local accounts. This sets the password complexity and controls. For details on password complexity and controls see “Password Configuration” in *CSS Online Help*.

8 Select **File** → **Save As** from the menu to save the configuration data to a new archive file or select **File** → **Save** from the menu to overwrite the existing archive file.

**IMPORTANT**

Be sure to save any configuration changes to a local or network drive so that if the base radio fails, you can load your settings to a replacement base radio. If the configuration file is not saved to a local or network drive, you will need to repeat the setup steps after replacing a base radio.

9 Write the configuration data to the base radio, as follows:

- Select **File** → **Write Configuration to Device** from the menu.
-

4.4.9 CSS Configuration Parameters for the GTR 8000 Base Radio (Conventional)

Prerequisites:

**NOTE**

The Ethernet Type field for a standalone conventional base radio must be set to 10Mbit, half-duplex.

Before proceeding with this process, complete the initial configuration of the device in .

For configuration parameters for a conventional GTR 8000 Base Radio, see the following in the *CSS Online Help*:

- **Analog-only, Digital-only, or Mixed Mode GTR 8000 Base Radio:** Conventional Site - ASTRO 7.12 and Later
- **Digital-only GTR 8000 Badio:** Conventional Site - ASTRO 7.11 and Earlier

Process Steps

1 Connect to the base radio through an Ethernet port link and then read the configuration file from the base radio. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

2 Click **Site** in the System tree and complete the fields.

3 Click **Hardware Configuration** in the System tree and complete the fields on the two tabs.

**NOTE**

As part of RMC configuration, you will need to set the DIP switches on the RMC/LNA modules. See [4.4.11 Setting RMC System Gain, page 4-32](#).

4 Click **Options** in the System tree and complete the fields.

5 Click **Infrastructure Interface** in the System tree and complete the fields on the three tabs.

6 Click **Channel Configuration** in the System tree and complete the fields.

7 Click **Repeater Configuration** in the System tree and complete the fields.

8 Click **Receiver Scan** in the System tree and complete the fields.

9 Click **Repeater Access** in the System tree and complete the fields.

10 Click **WildCard Tables** in the System tree and complete the fields on the three tabs.

- 11 Click **Network Services Configuration** in the System tree and complete the fields on the three tabs.

**NOTE**

For configuration details for RADIUS Services, see the *Authentication Services* manual. For configuration details for SYSLOG Services, see the *Centralized Event Logging*, manual.

- 12 Click **Password Configuration** in the System tree and complete the fields.

**NOTE**

Password Configuration is only required if you have passwords entered for local accounts. This sets the password complexity and controls. For details on password complexity and controls see “Password Configuration” in *CSS Online Help*.

- 13 Select **File** → **Save As** from the menu to save the configuration data to a new archive file or select **File** → **Save** from the menu to overwrite the existing archive file.

**IMPORTANT**

Be sure to save any configuration changes to a local or network drive so that if the base radio fails, you can load your settings to a replacement base radio. If the configuration file is not saved to a local or network drive, you will need to repeat the setup steps after replacing a base radio.

- 14 Write the configuration data to the base radio, as follows:

- Select **File** → **Write Configuration to Device** from the menu.

4.4.10 Configuring Tx Power Values and Battery Type

When and where to use:

As part of the site configuration process, the Battery Type, Tx Power Level (Battery Backup), and Tx Power Out on the Hardware Configuration tab in Configuration/Service Software (CSS) need to be configured.

Procedure Steps

- 1 Open Configuration/Service Software (CSS).

- 2 Connect to the device through an Ethernet port link and then read the configuration file from the device. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

- 3 Select **Configuration** from the navigation tree in the left pane.
Step result: The Configuration window appears.

- 4 Select the **Hardware Configuration** tab.

- 5 Enter a value in the field labelled **Tx Power Out (Watts)**.

- 6 Enter a value in the field labelled **Tx Power Level Battery Backup (Watts)**.

- 7 Select the Battery Type (manufacturer and model, or select the generic listing for the class of battery).

- 8 Select **File** → **Save** or **File** → **Save As** from the menu to save the configuration to an archive on your local or network drive.

- 9 Select **File** → **Write Configuration to Device** from the menu to write the configuration to the device.

4.4.11 Setting RMC System Gain

When and where to use:

The RMC system gain must be set up according to your organizations GTR 8000 Base Radio configuration.



NOTE

For standalone base radios, calculate and enter a value for system gain. Calculate the system gain from the receiver multicoupler input to the base radio Rx input. If there is no multicoupler, enter zero.

Procedure Steps

- 1 Open Configuration/Service Software (CSS).

 - 2 Connect to the device through an Ethernet port link and then read the configuration file from the device. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

 - 3 Select **File** → **Read Configuration from Device** from the menu.

 - 4 Select **Configuration** from the navigation tree in the left pane.

 - 5 Select the **Receive Multicoupler (RMC) Configuration** tab.

 - 6 In the GTR 8000 Configuration field, select **GTR 8000 Base Radio Standalone**.

 - 7 Enter a dB value in the System Gain field.

 - 8 Save your RMC configuration to an archive on your local or network drive by selecting **File** → **Save** or **File** → **Save As** from the menu.

 - 9 Write the configuration data to the base radio by selecting **File** → **Write Configuration to Device** from the menu.
Step result: The resulting system gain is automatically used by the RMCs. In addition, an appropriate transceiver attenuation is automatically calculated and saved in the configuration file.
-

4.5 Using VoyenceControl to Configure Centralized Authentication on Devices

When and where to use:

This process provides the procedures for configuring centralized authentication on devices using the VoyenceControl component of Motorola's Unified Network Configurator (UNC) application.



NOTE

This does not apply for a K1/K2 or non-networked site.

Process Steps

- 1 Configure Domain Name Service (DNS) on the device. See Chapter 7, “Configuring DNS on RF Site and VPM Devices Using VoyenceControl” in the *Authentication Services* manual.

- 2 Configure Authentication Sources for the device. See Chapter 7, “Configuring Authentication Sources for RF Site and VPM Devices Using VoyenceControl” in the *Authentication Services* manual.

- 3 Configure RADIUS parameters for the device. See Chapter 7, “Configuring Radius Parameters for RF Site and VPM Devices Using VoyenceControl” in the *Authentication Services* manual.

- 4 Set the Local Cache Size for Centralized Authentication for the device. See Chapter 7, “Setting the Local Cache Size for Central Authentication on RF Site and VPM Devices Using VoyenceControl” in the *Authentication Services* manual.

- 5 Enable/Disable Centralized Authentication for the device. See Chapter 7, “Enabling/Disabling Centralized Authentication on RF Site and VPM Devices Using VoyenceControl” in the *Authentication Services* manual.

- 6 Enable/Disable Centralized Event Logging for the device. See Chapter 6, “Enabling/Disabling Centralized Event Logging on RF Site Devices and VPM's Using VoyenceControl” in the *Centralized Event Logging* manual.

5 GTR 8000 Base Radio Optimization

Your Motorola Field Representative or Motorola System Support Center (SSC) can advise you on optimization activities required for your system, if any. See [8.5 Using Motorola System Support Center \(SSC\)](#), page 8-8.

This chapter contains optimization procedures and recommended settings relating to GTR 8000 Base Radio.

5.1 Aligning the Internal Frequency Reference Oscillator

The transceiver option card within a base radio or receiver provides an internal 10 MHz frequency reference which can be used as the primary or backup frequency reference source for the device. For conventional base radio/receiver operation, it also provides the analog interfaces and wildcard I/Os.

After a base radio or receiver is installed or after the transceiver option card is replaced, the internal frequency reference oscillator must be aligned.

The transceiver option card internal frequency reference oscillator must be aligned to within 1 ppb (parts per billion). The measuring equipment used to make this alignment should be accurate to within 1 ppb. This accuracy typically requires test equipment with a double oven or a Rubidium reference oscillator.



NOTE

The base radio or receiver must be turned on for at least one week before the internal frequency reference oscillator is aligned.

The internal frequency reference oscillator for an OCXO transceiver option card must be aligned:

- Upon installation of the base radio or receiver for all bands.
- Once every two years after installation for 700/800 MHz systems.
- Once every five years after installation for UHF systems.
- VHF systems do not require alignment after initial installation.

The internal frequency reference oscillator for a TCXO transceiver option card must be aligned:

- Upon installation of the base radio or receiver for UHF.
- Every year after installation for UHF.

The internal frequency reference oscillator can be aligned using two methods: manual alignment or auto alignment.



NOTE

The internal frequency reference oscillator can only be aligned on a GPW 8000 Receiver using the auto alignment procedure.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

5.1.1 GTR 8000 Base Radio Time and Frequency Inputs

A variety of external time and frequency inputs can be provided to the base station for normal operation or for Internal Frequency Reference Oscillator alignment. The following table provides a list of acceptable input signal types and levels for each base radio input port.

Table 5-1 Base Radio Time and Frequency Inputs

Input Port	Frequency	Waveform	Level	Impedance	Note
Ext Freq Ref	5 MHz	Sine	2.6–5.3 Vpp	100 kohms	AC coupled
Ext Freq Ref	5 MHz	Square	45–55% duty cycle	100 kohms	AC coupled
Ext Freq Ref	10 MHz	Sine	2.6–5.3 Vpp	100 kohms	AC coupled
Ext Freq Ref	10 MHz	Square	45–55% duty cycle	100 kohms	AC coupled
Ext Freq Ref	20 MHz	Sine	2.6–5.3 Vpp	100 kohms	AC coupled
Ext Freq Ref	20 MHz	Square	45–55% duty cycle	100 kohms	AC coupled
Ext Freq Ref	5 MHz/1PPS*	Square	2.6–5.3 Vpp	100 kohms	AC coupled; 25% modulation 1pps arrives on 75% duty cycle
1 PPS	1 PPS	Pulse	2.6–5.3 Vpp	100 kohms	DC coupled
Front Panel Ext Freq Ref	5 MHz	Sine	2–5 Vpp; 10–18 dBm	50 ohms	AC coupled
Front Panel Ext Freq Ref	5 MHz	Square	45–55% duty cycle	50 ohms	AC coupled
Front Panel Ext Freq Ref	10 MHz	Sine	2–5 Vpp; 10–18 dBm	50 ohms	AC coupled
Front Panel Ext Freq Ref	10 MHz	Square	45–55% duty cycle	50 ohms	AC coupled
Front Panel Ext Freq Ref	5 MHz/1PPS*	Square	2.6–5.3 Vpp	50 ohms	AC coupled; 25% modulation 1pps arrives on 75% duty cycle

* 25% modulation, 1 PPS arrives on 75% duty cycle.



NOTE

The Front Panel EXT FREQ REF connection is the Frequency Calibrator (BNC connector) on the transceiver module.

5.2 Equalizing the Battery

Battery Equalization configures the power supply to set the proper charge and capacity for the storage batteries connected to the base radio. Sites equipped with storage batteries that provide base radio power in case of primary power failure require the battery cells to be equalized periodically.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

**NOTE**

Some batteries do not require equalization. See the battery manufacturer recommendations.

5.3 Aligning ASTRO Simulcast (Trunked Operation)

ASTRO® 25 Simulcast Alignment is used to enter a Launch Time Offset value (range 0.0 to 1000.0 usec), store the value in the base radio, and initiate a simulcast test pattern.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

5.4 Aligning ASTRO/Analog Simulcast (Conventional Operation)

In an ASTRO® 25 simulcast subsystem, all station transmitters are synchronized to a 1 pulse per second (pps) signal from a global positioning satellite (GPS) receiver. The 1 pps signal provides a common time reference for each of the transmitters. The ASTRO® 25 signaling information arriving at the station transmitter includes timestamps that specify the transmit offset delay for the voice and data transmissions.

To allow the user to adjust the overlap coverage areas, the ASTRO/Analog Alignment screen is provided to allow the user to specify a launch time offset value, with a 0.1 μ s resolution. This value is added to the arriving launch time value to provide an adjusted launch time. The specified ASTRO® 25 simulcast transmit offset delay value applies only to ASTRO® 25 simulcast subsystems and is considered optional. The default offset value is 0 (zero), causing no adjustment to the launch time specified by the arriving timestamp value.

For Analog Simulcast, the Transmit Offset Delay merely delays the Analog Simulcast Audio to provide the adjustment in the overlap coverage areas.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

5.5 Aligning Carrier Squelch

A Carrier Squelch (CSQ) Alignment is typically performed at an RF level which corresponds to 12 dB SINAD, or an RF level which corresponds to 20 dB quieting, or any other RF level selected by the user.

The CSQ Alignment screen facilitates the measurement of 12 dB SINAD for the base radio under test by allowing the Rx Qualifiers to be set to Open. When the Rx Qualifiers are set to Open, receive audio is gated to the WL2 wireline port or to the speaker, regardless of the RF input level. The preferred SINAD measurement port is the WL2 wireline port; however, the speaker can also be used.

When measuring SINAD, the pre-emphasis and High Pass filters are set as they would be for analog voice operation. Since the channel characteristics are different, this procedure allows for CSQ Alignment to be done for both 12.5 kHz and 25 kHz channel bandwidth. If the station is configured for only one channel bandwidth, there is no need to perform a CSQ Alignment for the other bandwidth.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

5.6 Aligning Tx Wireline

Tx Wireline Alignment is used to set the levels which will result in 60% system deviation for both Wireline Level Line 1(WL1) and Wireline Level Line 3 (WL3) and for setting the Wireline Squelch levels.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

5.7 Aligning Rx Wireline

Rx Wireline Alignment is only used for a base radio that processes analog receive audio and is connected with a 2- or 4-wire link to a console or a comparator in an analog only topology or an ASTRO® 25 Analog/Mixed mode topology.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

5.8 Tuning a Preselector

The optional VHF or UHF preselector assembly is mounted on the back of a base radio or base receiver. The preselector assembly is a 3-pole (UHF) or a 5-pole (VHF) bandpass filter equipped with tuning slugs to adjust the passband corresponding to the operating frequency(s) of the base radio. The preselector assembly must be field tuned if replaced in the field or if the base radio operating frequency(s) are modified.



IMPORTANT

Tuning for best SINAD or BER response DOES NOT result in optimum tuning of the preselector assembly. You must use this field tuning procedure to obtain optimum preselector performance.

The following test equipment is required to properly tune the preselector assembly:

- RF Signal Generator - Aeroflex 3900 Series Service Monitor
- Dip/peak Monitor - HP435B Power Meter (or equivalent) with HP8484A sensitive power head, Boonton Model 92E with BNC input, or Aeroflex 3900 Series Service Monitor using the spectrum analyzer function
- Torque driver capable of delivering 12 in -lbs of torque and 10 mm deep well socket
- Tuning probe - Motorola Part No. 3082059X01, p/o TRN4083A tuning kit
- Flat-blade screwdriver



NOTE

An R2600 Communications Analyzer can both generate and measure simultaneously. A service monitor may be used for either the generator or the monitor function, but not both simultaneously. When using service monitor as the signal generator, RF signal must be taken from the Antenna port.

5.8.1 VHF Tuning Procedures

5.8.1.1 Calculating Proper VHF Alignment Frequency

Use either [5.8.1.1.1 Calculating The VHF Alignment Frequency For a Single Receive Frequency, page 5-5](#) or [5.8.1.1.2 Calculating The VHF Alignment Frequency for Multi Receive Frequencies, page 5-5](#) to calculate the VHF alignment frequency to be generated by the signal generator.

5.8.1.1.1 Calculating The VHF Alignment Frequency For a Single Receive Frequency

When and where to use:

For base radios with a single receive frequency, calculate the frequency of the alignment signal as follows:

Procedure Steps

- 1 From the site documentation or the CSS, determine the base radio receive frequency.

- 2 If the frequency is ≤ 148 MHz or ≥ 156 MHz, subtract 250 kHz. Otherwise, note the actual frequency.
Step example: If the base radio receive frequency is 138.575 MHz, subtract 250 kHz because the frequency is less than 148 MHz: $138.575 \text{ MHz} - 250 \text{ kHz} = 138.325 \text{ MHz}$

- 3 If the preselector is Range 1 (136–154 MHz), determine the alignment frequency as follows:
If frequency (from Step 2) is > 152 MHz, then alignment frequency = 152 MHz.
Otherwise, use actual frequency from Step 2.

- 4 If the preselector is Range 2 (150–174 MHz), determine the alignment frequency as follows:
If the frequency (from Step 2) is < 152 MHz, then alignment frequency = 151.75 MHz.
If frequency (from Step 2) is > 172 MHz, then alignment frequency = 172 MHz.
Otherwise, use actual frequency from Step 2.

5.8.1.1.2 Calculating The VHF Alignment Frequency for Multi Receive Frequencies

When and where to use:

For base radios/receivers with multiple receive frequencies, calculate the frequency of the alignment signal as follows:

Procedure Steps

- 1 From the site documentation or the CSS, note the receive frequency for each channel supported by the base radio/receiver.

- 2 Calculate a midpoint frequency as follows:
$$F_{\text{mid}} = (F_{\text{highest}} + F_{\text{lowest}}) \div 2$$

- 3 Using F_{mid} in place of the base radio/receiver receive frequency, perform steps 3 and 4 from [5.8.1.1.1 Calculating The VHF Alignment Frequency For a Single Receive Frequency, page 5-5](#).

5.8.1.2 Preparing The Equipment For VHF Alignment

Procedure Steps

- 1 Make sure the base radio/receiver (with preselector assembly) is installed in a functional station cage equipped with a power supply module.

- 2 Detune the preselector as follows:
 - a. If the alignment frequency (calculated in [5.8.1.1.1 Calculating The VHF Alignment Frequency For a Single Receive Frequency, page 5-5](#) or [5.8.1.1.2 Calculating The VHF Alignment Frequency for Multi Receive Frequencies, page 5-5](#)) is greater than 148 MHz (Range 1) or 156 MHz (Range 2), turn the five tuning screws clockwise until 1/8" protrudes past each of the tension nuts.
 - b. If the alignment frequency is less than or equal to 148 MHz (Range 1) or 156 MHz (Range 2), turn the five tuning screws counterclockwise until 3/4" protrudes past each of the tension nuts.

- 3 Using the torque driver and deep well socket, tighten the five tension nuts on the adjustment screws to 6 in-lbs.

- 4 See [Figure 5-1](#).

5.8.1.3 VHF Tuning Procedure


See [Figure 5-1](#) for the location of the tuning screws and cavity probe holes.



IMPORTANT

When tuning for peak or dip, turn the tuning screw 1/2 turn past the peak or dip to verify that you have obtained a true peak or dip. After ensuring you have found true peak or dip, turn the screw back to the location of the original peak or dip.

Figure 5-1 Preselector Tuning — VHF

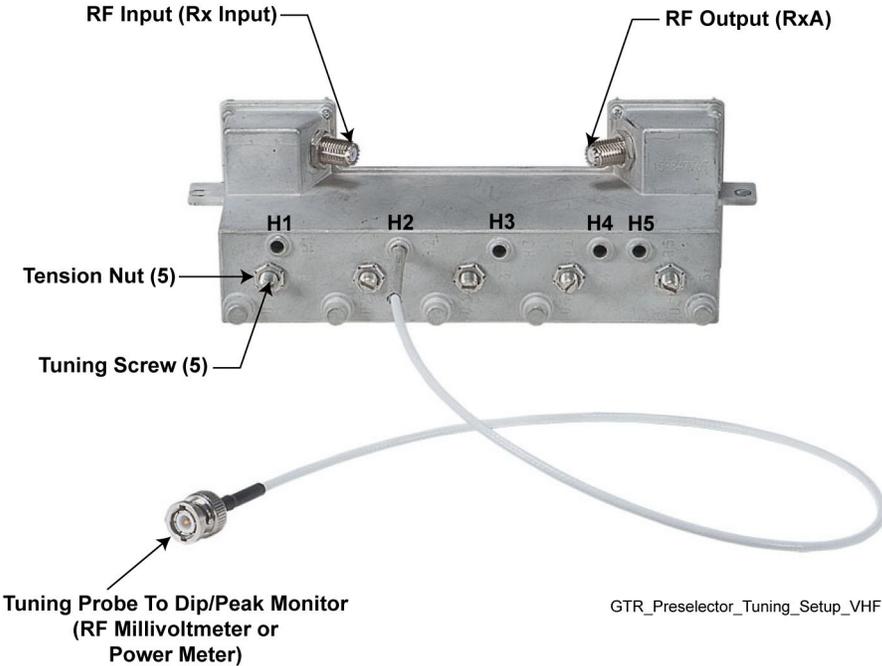

5.8.1.3.1 Tuning The VHF Preselector

Procedure Steps

- 1 Turn the base radio/receiver power supply ON (to provide a 50 Ohm termination).

 - 2 Adjust the signal generator to the frequency calculated in [5.8.1.1.1 Calculating The VHF Alignment Frequency For a Single Receive Frequency, page 5-5](#) or [5.8.1.1.2 Calculating The VHF Alignment Frequency for Multi Receive Frequencies, page 5-5](#). Set the level to +5 dBm.

 - 3 Insert tuning probe into cavity H1 and adjust tuning screw 1 for a **PEAK**.

 - 4 Leave tuning probe in cavity H1 and adjust tuning screw 2 for a **DIP**.

 - 5 Insert tuning probe into cavity H2 and adjust tuning screw 3 for a **DIP**.

 - 6 Insert tuning probe into cavity H3 and adjust tuning screw 4 for a **DIP**.

 - 7 Insert tuning probe into cavity H4. Decrease output from signal generator to -5 dBm.

 - 8 Adjust tuning screw 5 for a **DIP**. Then turn tuning screw 5 an additional 1/4 turn counterclockwise. (Note that **DIP** will not be as sharp for screw 5 as it was for screws 2 through 4.)
-

5.8.2 UHF Tuning Procedures

5.8.2.1 Calculating Proper UHF Alignment Frequency

Use either [5.8.2.1.1 Calculating The UHF Alignment Frequency For a Single Receive Frequency, page 5-8](#) or [5.8.2.1.2 Calculating The UHF Alignment Frequency For Multi Receive Frequencies, page 5-9](#) to calculate the alignment frequency to be generated by the signal generator.

5.8.2.1.1 Calculating The UHF Alignment Frequency For a Single Receive Frequency

When and where to use:

For base radios with a single receive frequency, calculate the frequency of the alignment signal as follows:

Procedure Steps

- 1 From the site documentation or the CSS, determine the base radio receive frequency. **Add 200 kHz.**

- 2 If base radio/receiver is 380–435 MHz, determine the alignment frequency as follows:
If frequency (from Step 1) is > 431 MHz, then alignment frequency = 431 MHz.
If frequency (from Step 1) is < 382 MHz, then alignment frequency = 382 MHz.
Otherwise, use actual frequency from Step 1.

- 3 If the base radio/receiver is 435–470 MHz, determine the alignment frequency as follows:
If the frequency (from Step 1) is > 468 MHz, then alignment frequency = 468 MHz.
If frequency (from Step 1) is < 440 MHz, then alignment frequency = 440 MHz.
Otherwise, use actual frequency from Step 1.

- 4 If the base radio/receiver is 470–524 MHz, determine the alignment frequency as follows:
If the frequency (from Step 1) is > 518 MHz, then alignment frequency = 518 MHz.
If frequency (from Step 1) is < 472 MHz, then alignment frequency = 472 MHz.
Otherwise, use actual frequency from Step 1.

5.8.2.1.2 Calculating The UHF Alignment Frequency For Multi Receive Frequencies

When and where to use:

For base radios/receivers with multiple receive frequencies, calculate the frequency of the alignment signal as follows:

Procedure Steps

- 1 From the site documentation or the CSS, note the receive frequency for each channel supported by the base radio/receiver.

- 2 Calculate a midpoint frequency as follows:
$$F_{\text{mid}} = (F_{\text{highest}} + F_{\text{lowest}}) \div 2$$

- 3 Using F_{mid} in place of the base radio receive frequency, perform steps 1 through 4 from [5.8.2.1.1 Calculating The UHF Alignment Frequency For a Single Receive Frequency](#), page 5-8.

5.8.2.2 Preparing The Equipment For UHF Alignment

Procedure Steps

- 1 Make sure base radio/receiver (with preselector assembly) is installed in a functional station cage equipped with a power supply module.

- 2 Using the torque driver and deep well socket, loosen the three tension nuts on the adjustment screws.

- 3 Detune the preselector by turning tuning screws **3** and **4** clockwise until they bottom out. Be careful not to apply more than 3 in-lbs of torque to prevent warping preselector cover and housing.

- 4 See [Figure 5-2](#).

5.8.2.3 UHF Tuning Procedure


See [Figure 5-2](#) for the location of the tuning screws and cavity probe holes.



IMPORTANT

When tuning for peak or dip, turn the tuning screw 1/2 turn past the peak or dip to verify that you have obtained a true peak or dip. After ensuring you have found true peak or dip, turn the screw back to the location of the original peak or dip.

Figure 5-2 Preselect Tuning — UHF

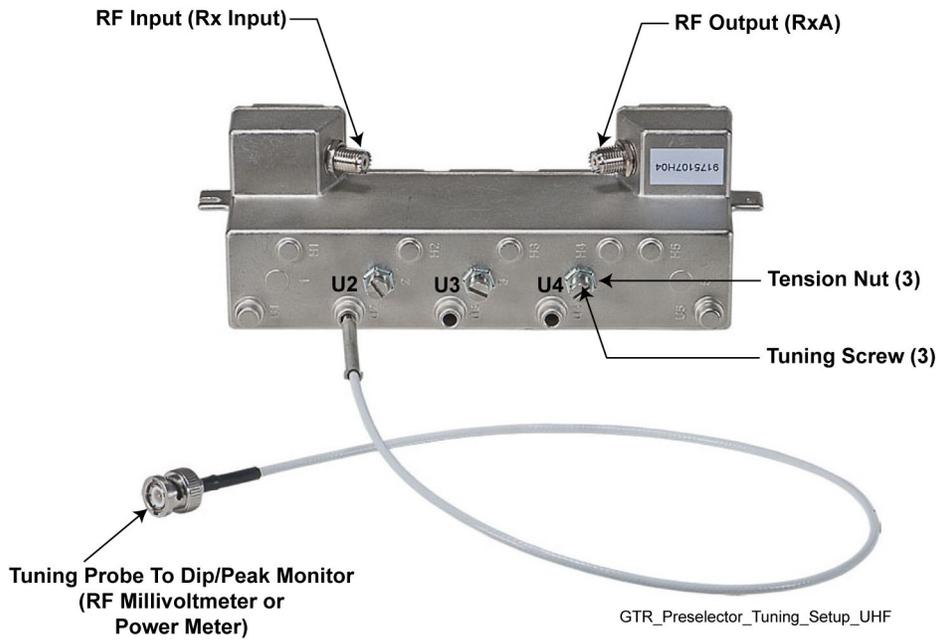

5.8.2.3.1 Tuning The UHF Preselector

Procedure Steps

- 1 Turn the base radio power supply ON (to provide a 50 Ohm termination).

- 2 Adjust the signal generator to the frequency calculated in [5.8.2.1.1 Calculating The UHF Alignment Frequency For a Single Receive Frequency, page 5-8](#) or [5.8.2.1.2 Calculating The UHF Alignment Frequency For Multi Receive Frequencies, page 5-9](#). Set the level to +5 dBm.

- 3 Insert tuning probe into cavity U2 and adjust tuning screw 2 for a **PEAK**.

- 4 Tighten tension nut on tuning screw 2 to at least 12 in-lb and fine tune tuning screw 2 for a **PEAK**.

- 5 Keep tuning probe in cavity U2 and adjust tuning screw 3 for a **DIP**.

- 6 Tighten tension nut on tuning screw 3 to at least 12 in-lb and fine-tune tuning screw 2 for a **DIP**.

- 7 Insert tuning probe into cavity U3. Decrease output from signal generator to -5 dBm.

- 8 Adjust tuning screw 4 for a **DIP**.

- 9 Tighten tension nut on tuning screw 4 to at least 12 in-lb and fine-tune tuning screw 4 for a **DIP**.

5.9 Tuning a Duplexer

Duplexer modules shipped with base radios are tuned at the factory. If a duplexer must be replaced in the field, the unit must be installed and tuned specifically to the transmit and receive frequency pair for the particular base radio.

5.9.1 Field Tuning Overview



NOTE

These tuning procedures are valid for channels with a bandwidth of 200 kHz or less. If bandwidth is more than 200 kHz, the duplexer must be tuned by the service depot.

The duplexer module is comprised of three low-pass/high-notch cavities and three high-pass/low-notch cavities. Each set of three cavities provides bandpass filtering for either the transmit RF signal or the receive RF signal. In general, the duplexer must be tuned so that the transmit cavity set passes the transmit signal and rejects the receive signal; concurrently, the receive cavity set must be tuned to pass the receive signal and reject the transmit signal.

Tuning is performed by injecting RF signals and making tuning adjustments (using the tuning rods and trimmer screws) while monitoring for maximum or minimum readings on the RF millivoltmeter. Field tuning the duplexer module requires the following general adjustments:

- Tune high-pass/low-notch cavities for maximum pass and reject response
- Tune low-pass/high-notch cavities for maximum pass and reject response
- Check high-pass/low-notch and low-pass/high-notch cavities for insertion loss
- Check high-pass/low-notch and low-pass/high-notch cavities for isolation

5.9.2 Required Test Equipment

Tuning of the duplexer module requires the following test equipment:

- RF Signal Generator - Aeroflex 3900 Series Service Monitor
- RF Millivoltmeter (Boonton 92E or equivalent)
- 50 Ohm N-type terminator
- Tuning tool (5/32" x 4" screwdriver) (UHF)
- Male-to-Females N-Type "T" connector (UG-107B/U or equivalent) (VHF)
- Slotted screwdriver (VHF)
- 3/32" Allen wrench (VHF)
- Tuning tool (thin blade) (VHF)
- N-to-N bullet connector (UG29A/U or equivalent)
- 7/16" Nutdriver (UHF)
- 7/16" Open End Wrench (UHF)
- N-to-BNC Adapter (UG349A/U)
- N-to-N Connector (UG57B/U)

5.9.3 Tuning a 700/800 MHz Duplexer

No field tuning is needed on a 700 or 800 MHz duplexer. The duplexers are pre-tuned to operate over the entire sub-band.

5.9.4 Tuning a VHF Duplexer


The following procedures are most easily performed with the duplexer module removed from the rack or cabinet. Know the transmit and receive frequencies for the particular base radio before beginning.

If the duplexer module is tuned according to instructions and does not meet specifications for return loss, insertion loss, and/or isolation, the duplexer must be returned for repair.

5.9.4.1 Setting Up for Tuning a VHF Duplexer

Perform the tasks in [5.9.4.1.1 How To Set Up Tuning The VHF Duplexer](#), page 5-15 prior to tuning the VHF duplexer module. See [Figure 5-3](#).

Figure 5-3 VHF Duplexer Tuning Setup

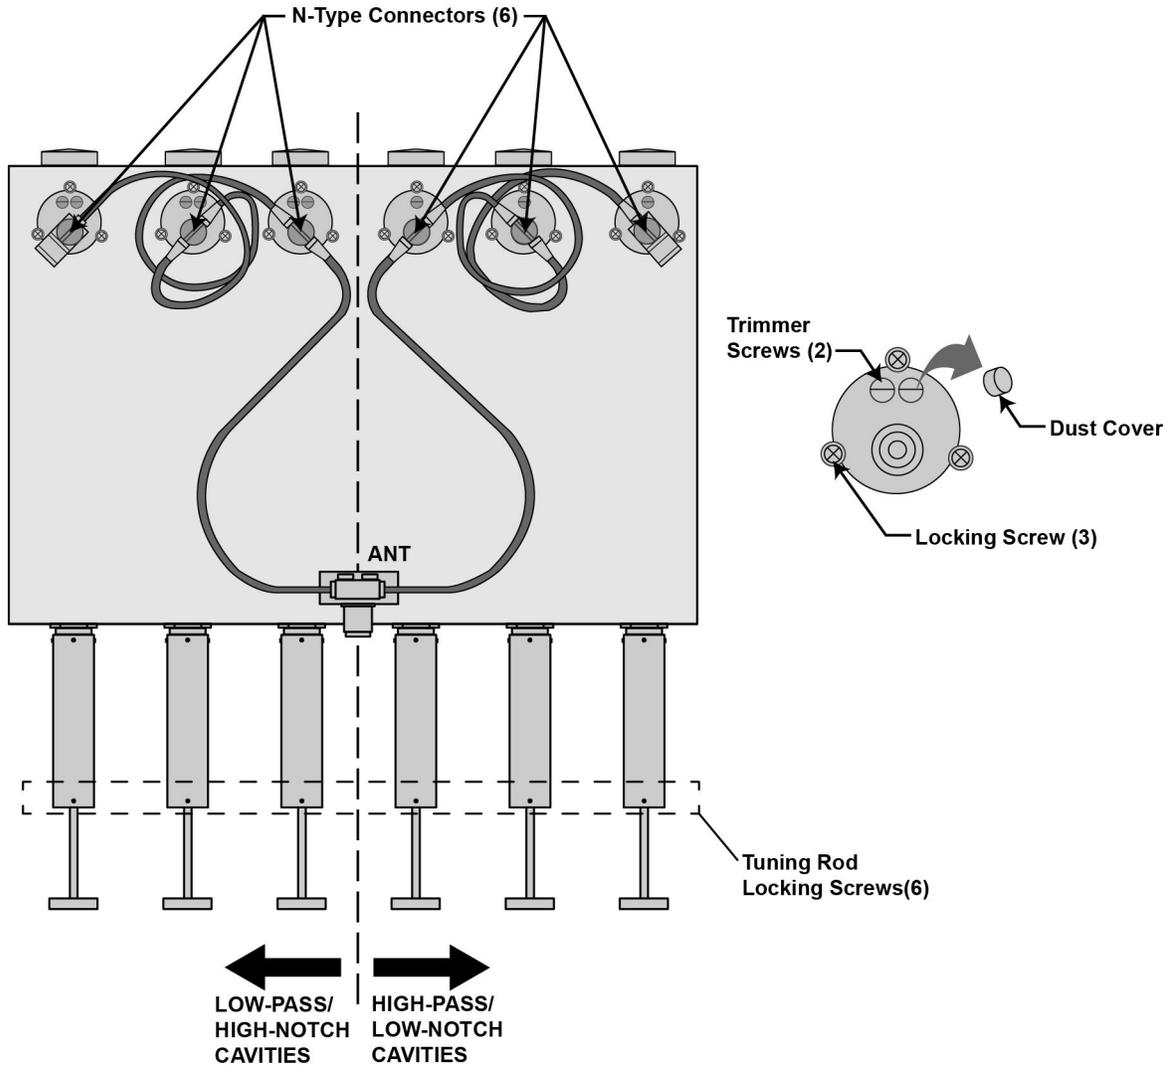

VHF_Setting_Up_Tuning_Duplexer_A


5.9.4.1.1 How To Set Up Tuning The VHF Duplexer

Procedure Steps

- 1 Disconnect the 6 N-type connectors from each cavity.
- 2 For each cavity, unscrew and remove trimmer screw dust covers (9).
- 3 Use an Allen wrench and loosen the tuning rod locking screws (6).

5.9.4.2 Tuning VHF Duplexer Low Pass Resonators

Figure 5-4 Test Equipment Set Up for Tuning VHF Duplexer Low Pass Resonator

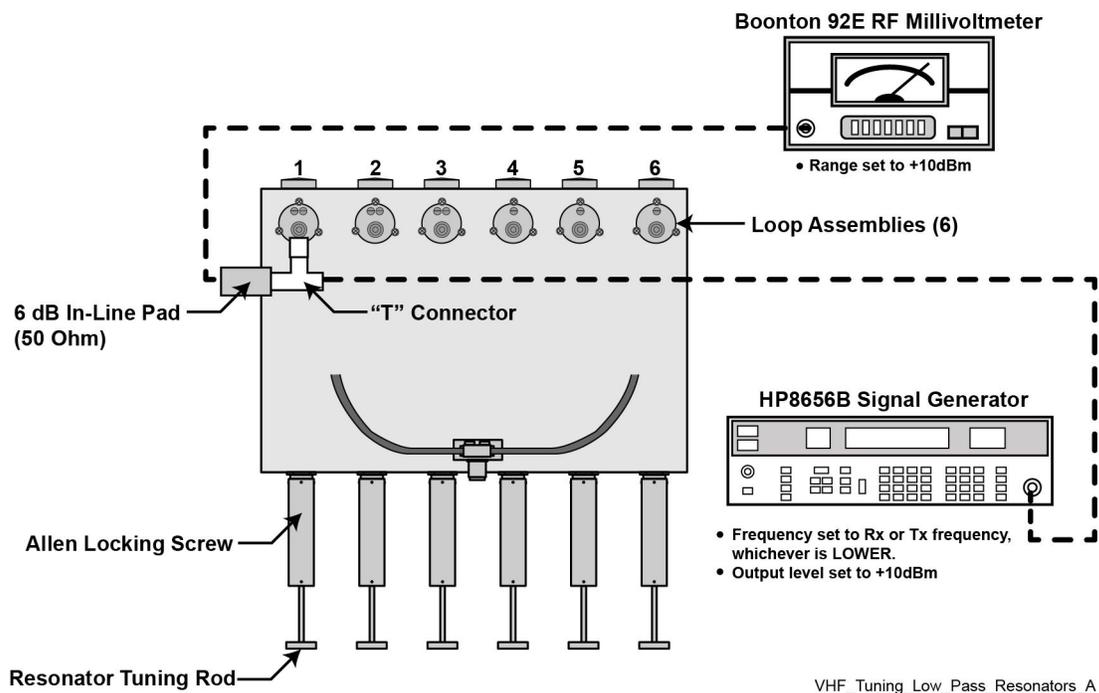


5.9.4.2.1 How To Tune VHF Duplexer Low Pass Resonators

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-4](#).
- 2 Push or pull tuning rod for cavity #1 to obtain a **PEAK** reading on the millivoltmeter
- 3 Use the Allen wrench and tighten locking screw.
- 4 Repeat steps 2 and 3 for cavities 2 and 3.

5.9.4.3 Tuning VHF Duplexer High Pass Resonators

Figure 5-5 Test Equipment Set Up for Tuning VHF Duplexer High Pass Resonator

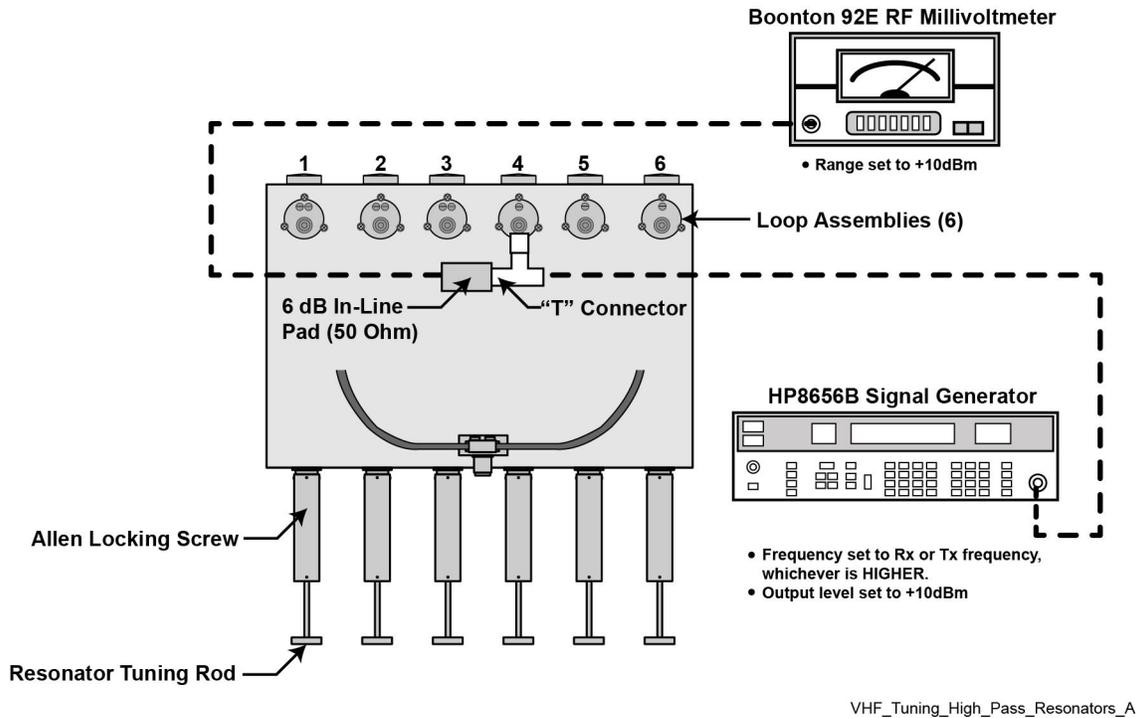


5.9.4.3.1 How To Tune VHF Duplexer High Pass Resonators

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-5](#).
- 2 Push or pull tuning rod for cavity #4 to obtain a **PEAK** reading on the millivoltmeter
- 3 Use the Allen wrench and tighten locking screw.
- 4 Repeat steps 2 and 3 for cavities 5 and 6.

5.9.4.4 Tuning VHF Duplexer High Notch Loop Assemblies

Figure 5-6 Test Equipment Set Up for Tuning VHF Duplexer High Notch Loop Assemblies

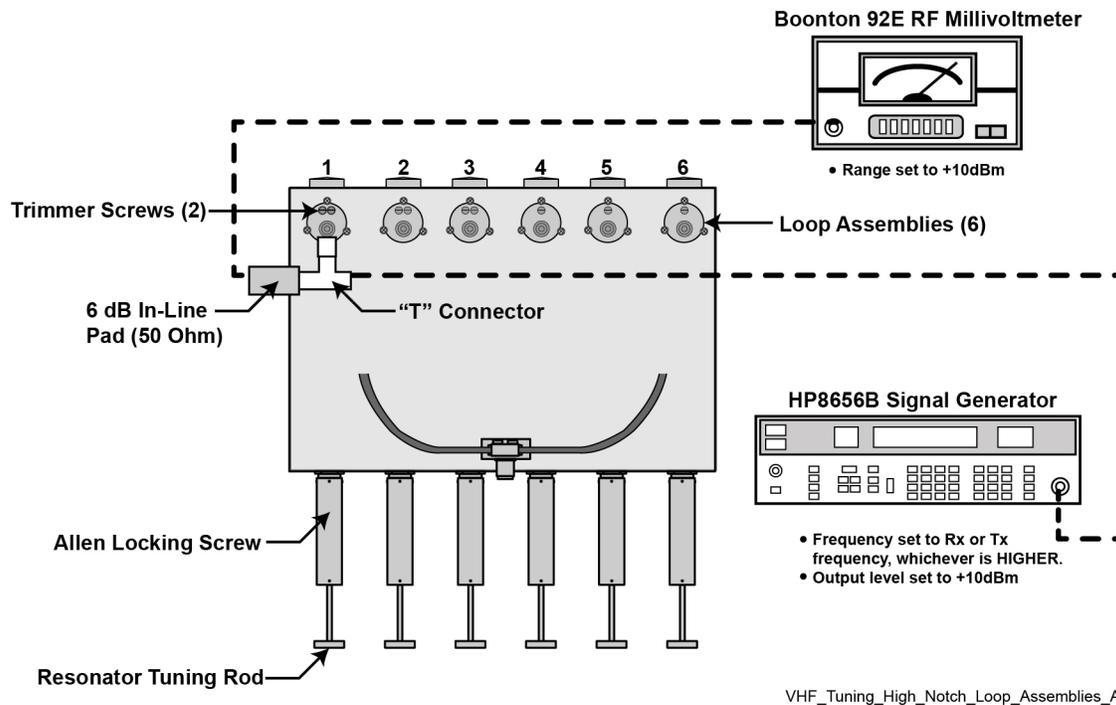


5.9.4.4.1 How To Tune VHF Duplexer High Notch Loop Assemblies

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-6](#).
- 2 Use the tuning tool to adjust trimmer screws for cavity # 1 to obtain **minimum** reading on millivoltmeter. (Adjust trimmer screws equally to obtain minimum. Reduce the range on the millivoltmeter as necessary to reach true minimum reading.)
- 3 Repeat steps 1 and 2 for cavities 2 and 3.

5.9.4.5 Tuning VHF Duplexer Low Notch Loop Assemblies

Figure 5-7 Test Equipment Set Up for Tuning VHF Duplexer Low Notch Loop Assemblies

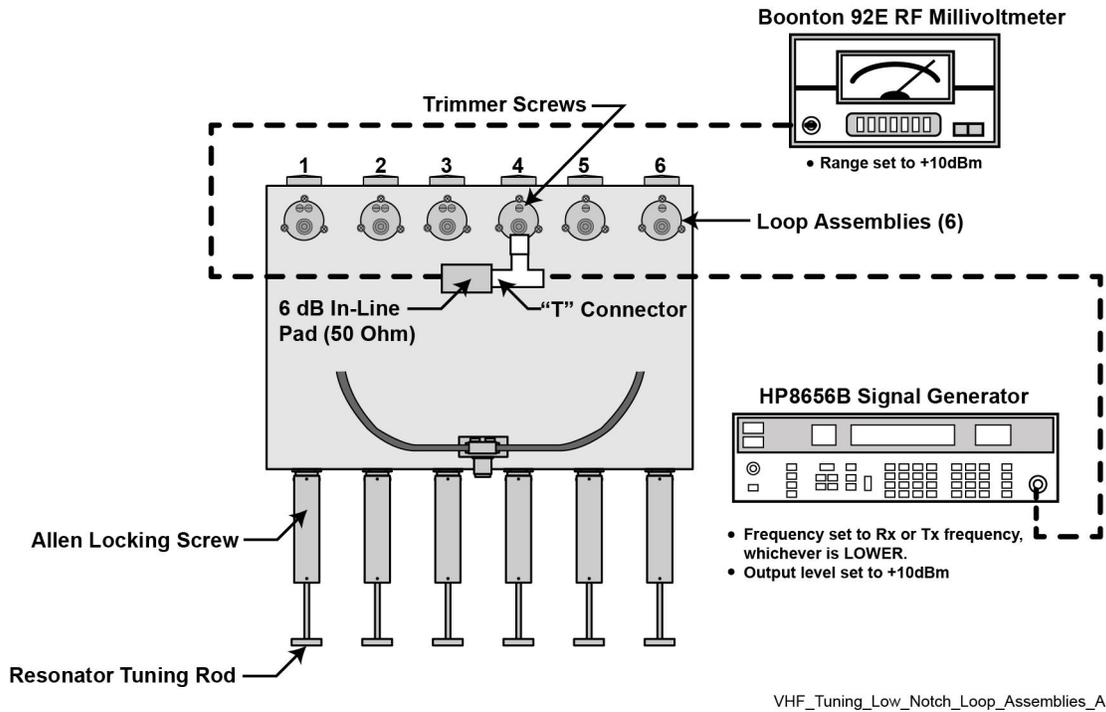


5.9.4.5.1 How To Tune VHF Duplexer Low Notch Loop Assemblies

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-7](#).
- 2 Use the tuning tool to adjust trimmer screws for cavity # 4 to obtain **minimum** reading on millivoltmeter. (Adjust trimmer screw to obtain minimum. Reduce the range on the millivoltmeter as necessary to reach true minimum reading.)
- 3 Repeat steps 1 and 2 for cavities 5 and 6.


5.9.4.6 Verifying VHF Duplexer Insertion Loss

Figure 5-8 Verifying VHF Duplexer Insertion Loss — Connecting Test Equipment

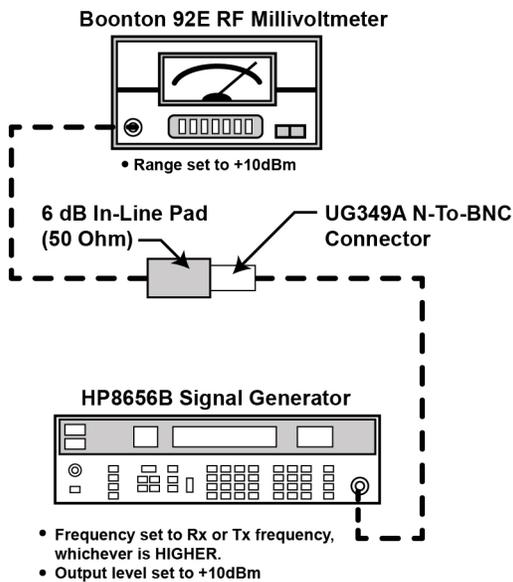

VHF_Verifying_Insertion_Loss_top_A

Figure 5-9 Verifying VHF Duplexer Insertion Loss — Connecting Duplexer Cable Assembly

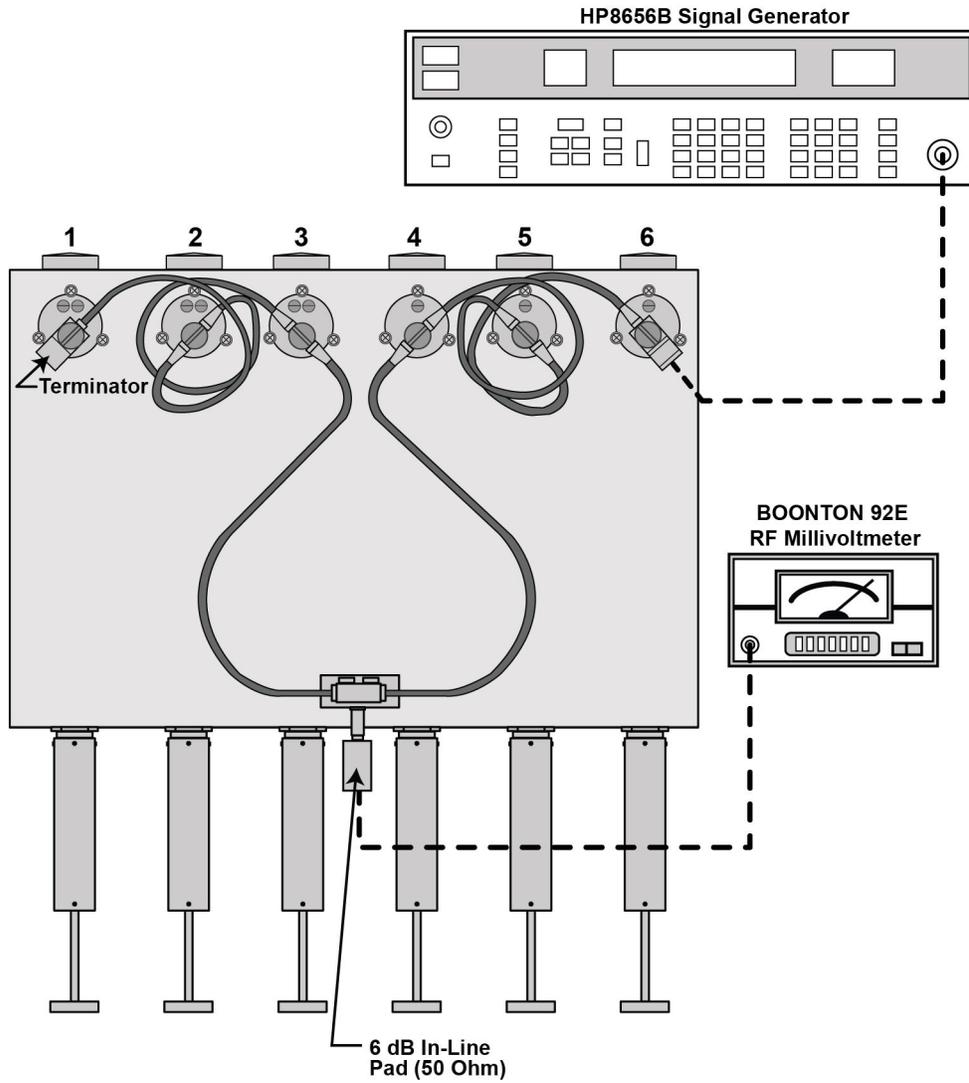

VHF_Verifying_Insertion_Loss_bottom_A


5.9.4.6.1 How To Verify VHF Duplexer Insertion Loss

Procedure Steps

- 1 Connect test equipment as shown in [Figure 5-8](#).
- 2 Observe and note the level in dBm as shown on the millivoltmeter.
- 3 Connect the duplexer cable assembly and test equipment to the duplexer as shown in [Figure 5-9](#).
- 4 Observe and note the level in dBm as shown on the millivoltmeter.
- 5 Subtract the absolute number noted in step 2 from the number noted in step 4. The difference should be less than 1.3 dB to meet specification for Insertion Loss.
- 6 Repeat steps 1 through 5 for Low-Pass/High-Notch cavities with the following exceptions:
 - a. Set the service monitor to Rx or Tx frequency, whichever is **LOWER**
 - b. Connect service monitor to Low Pass duplexer input (cavity # 1)
 - c. Connect terminator to cavity #6.


5.9.4.7 Verifying VHF Duplexer Isolation

Figure 5-10 Verifying VHF Duplexer Isolation — Connecting Test Equipment

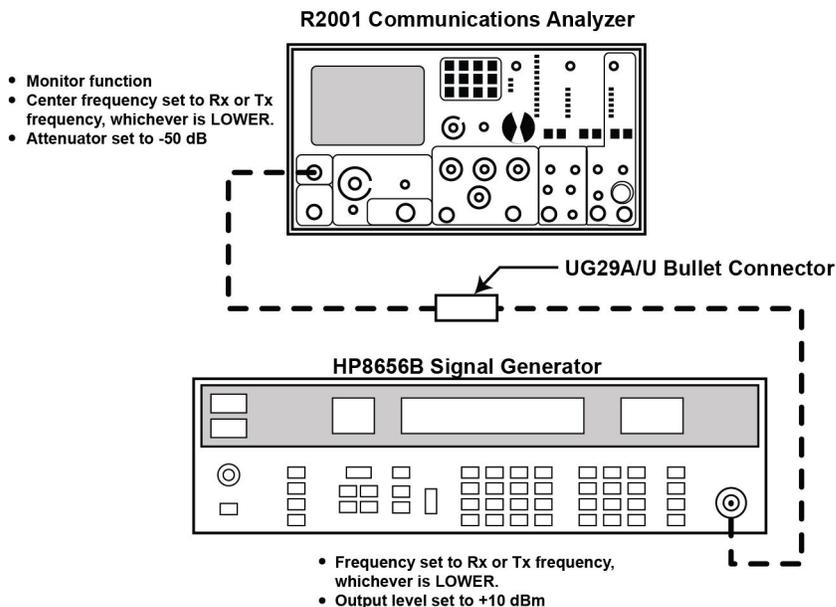

VHF_Verifying_Isolation_top_A

Figure 5-11 Verifying VHF Duplexer Isolation — Connecting Duplexer Cable Assembly

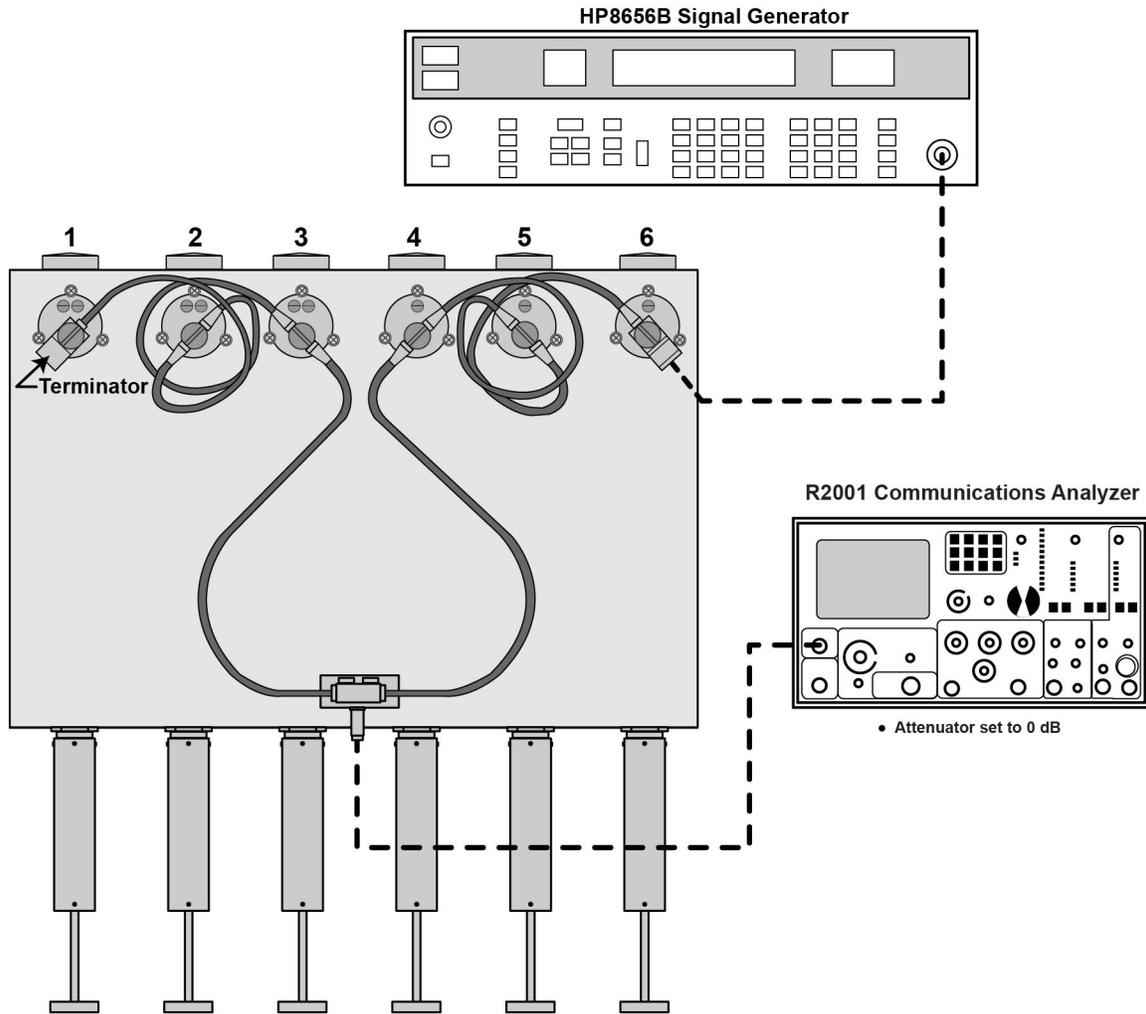

VHF_Verifying_Isolation_bottom_A

5.9.4.7.1 How To Verify VHF Duplexer Isolation

Procedure Steps

- 1 Connect test equipment as shown in [Figure 5-10](#).

- 2 Observe and note the level in dBm as shown on the service monitor.

- 3 Connect the test equipment to the duplexer as shown in [Figure 5-11](#).

- 4 Observe and note the level in dBm as shown on the service monitor. (If no number is displayed, consider isolation to be greater than 105 dB, which exceeds the specification.)

- 5 Subtract the absolute number noted in step 4 from the number noted in step 2. The difference should be less than 75 dB to meet specification for Isolation.

- 6 Repeat steps 1 through 5 for Low-Pass/High-Notch cavities with the following exceptions:
 - a. Set service monitor for Rx or Tx frequency, whichever is **HIGHER**
 - b. Connect service monitor to Low Pass duplexer input (cavity #1)
 - c. Connect terminator to cavity #6.

5.9.4.8 VHF Duplexer Post Tuning Checks

Procedure Steps

- 1 Make sure all locking screws are tight. Re-install dust covers on all trimmer capacitors.

- 2 Make sure all tuning rod locking screws (6) are tight.


5.9.5 Tuning a UHF Duplexer

The following procedures are most easily performed with the duplexer module removed from the rack or cabinet. Be sure to make note of the transmit and receive frequencies for the particular base radio before beginning.

If the duplexer module is tuned according to instructions and does not meet specifications for return loss, insertion loss, and/or isolation, you must return the duplexer for repair.

5.9.5.1 Setting Up for Tuning a UHF Duplexer

Figure 5-12 UHF Duplexer Tuning Setup

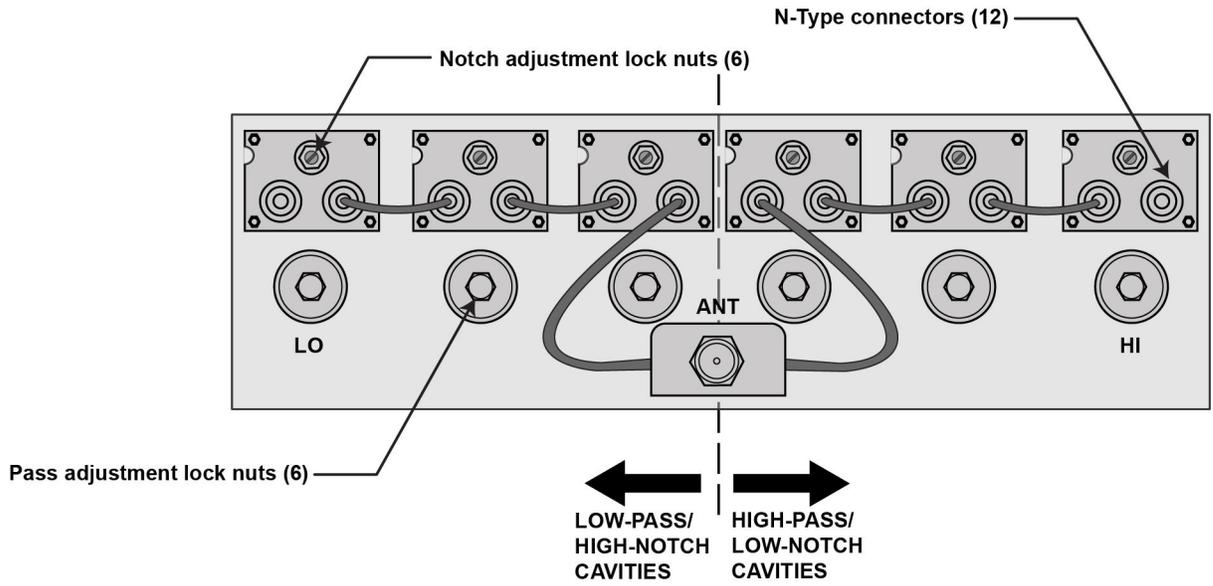

UHF_Setting_Up_Tuning_Duplexer_A


5.9.5.1.1 How To Set Up Tuning the UHF Duplexer

Procedure Steps

- 1 Disconnect N-type connectors (12) and remove cables (6) from cavities. See [Figure 5-12](#).
- 2 For each cavity (6), use open-end wrench and loosen locknuts (2 per cavity).

5.9.5.2 Tuning UHF Duplexer Low Pass Resonators

Figure 5-13 Test Equipment Set Up for Tuning UHF Duplexer Low Pass Resonator

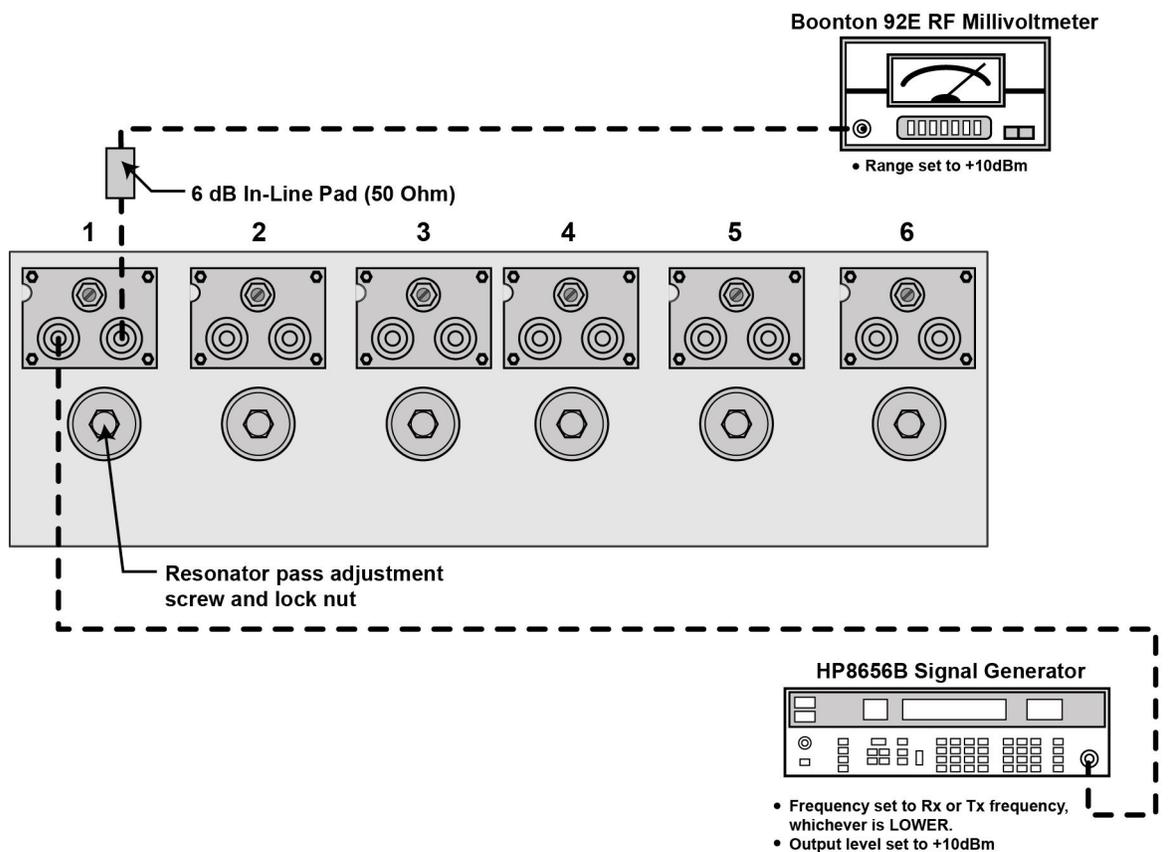

UHF_Tuning_Low_Pass_Resonators_A


5.9.5.2.1 How To Tune UHF Duplexer Low Pass Resonators

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-13](#).
- 2 Use nut driver to adjust pass adjustment screw for cavity # 1 to obtain a **PEAK** reading on the millivoltmeter.
- 3 Use an open-end wrench and tighten lock nut *carefully*, making sure pass adjustment screw does not shift position.
- 4 Repeat steps 2 and 3 for cavities 2 and 3.

5.9.5.3 Tuning UHF Duplexer High Pass Resonators

Figure 5-14 Test Equipment Set Up for Tuning UHF Duplexer High Pass Resonator

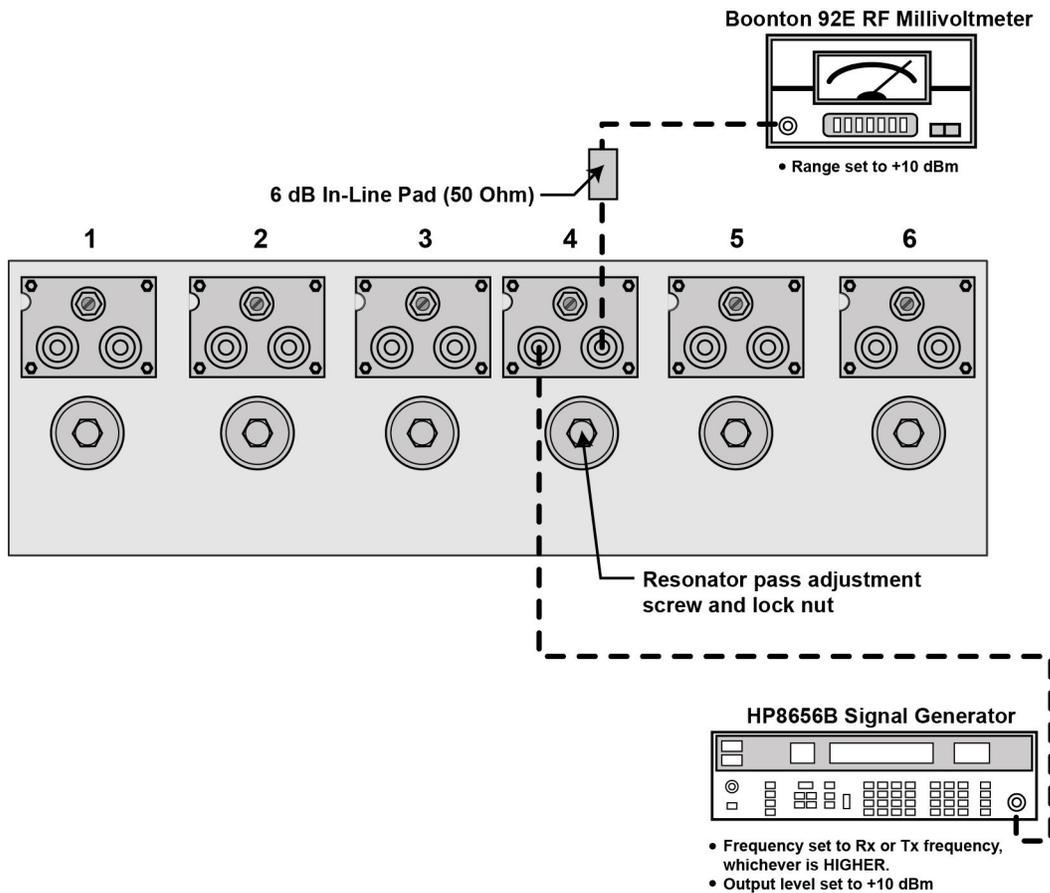

UHF_Tuning_High_Pass_Resonators_A


5.9.5.3.1 How To Tune UHF Duplexer High Pass Resonators

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-14](#).
- 2 Use nut driver to adjust pass adjustment screw for cavity #4 to obtain a **PEAK** reading on the millivoltmeter.
- 3 Use an open-end wrench and tighten lock nut *carefully*, making sure pass adjustment screw does not shift position.
- 4 Repeat steps 2 and 3 for cavities 5 and 6.

5.9.5.4 Tuning UHF Duplexer High Notch Loop Assemblies

Figure 5-15 Test Equipment Set Up for Tuning UHF Duplexer High Notch Loop Assemblies

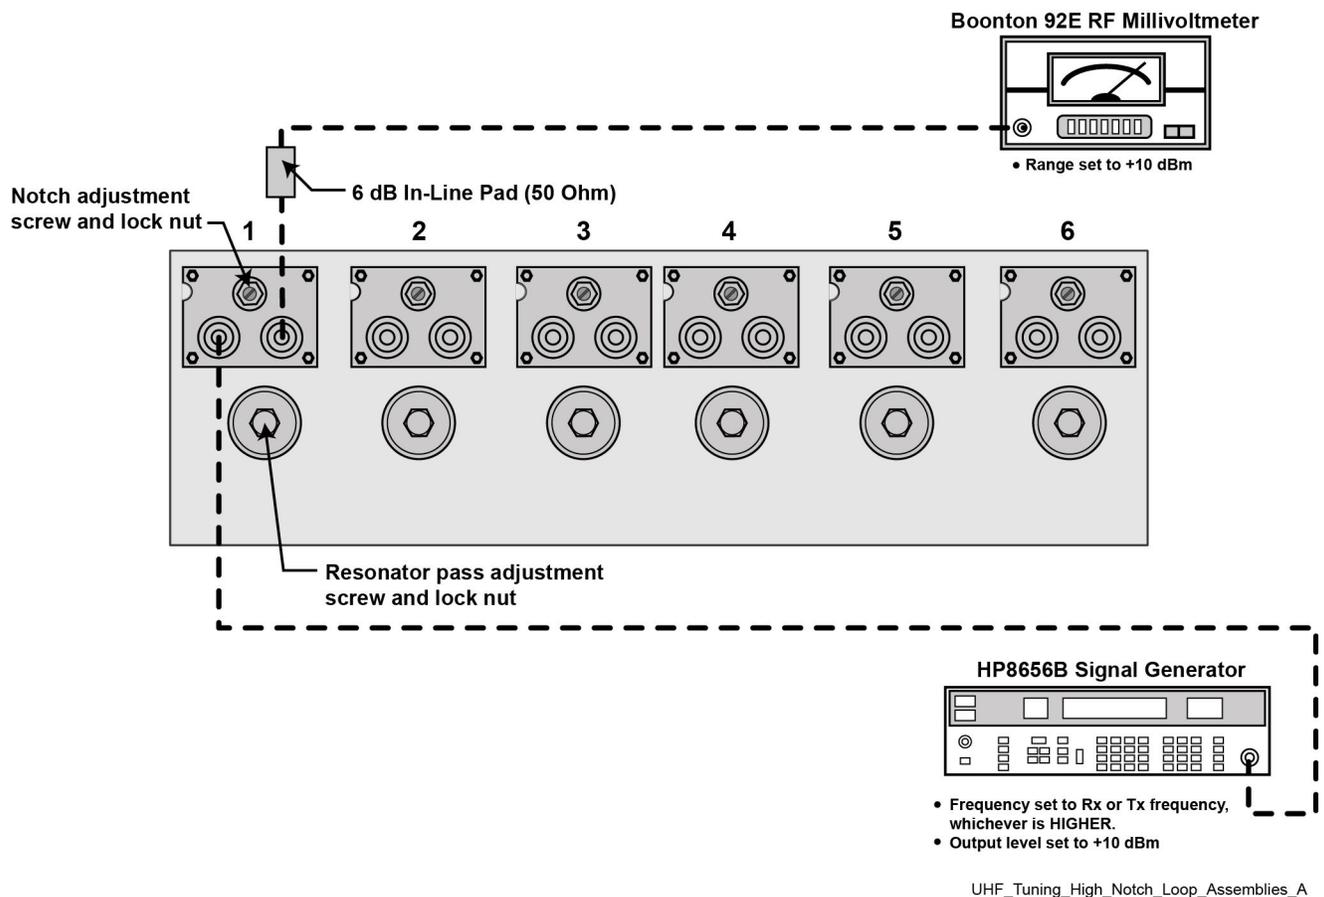


5.9.5.4.1 How To Tune UHF Duplexer High Notch Loop Assemblies

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-15](#).
- 2 Use screwdriver to adjust notch adjustment screw for cavity # 1 to obtain a **minimum** reading on the millivoltmeter. (Reduce the range on the millivoltmeter as necessary to reach true minimum reading.)
- 3 Use an open-end wrench and tighten lock nut *carefully*, making sure notch adjustment screw does not shift position.
- 4 Repeat steps 2 and 3 for cavities 2 and 3.

5.9.5.5 Tuning UHF Duplexer Low Notch Loop Assemblies

Figure 5-16 Test Equipment Set Up for Tuning UHF Duplexer Low Notch Loop Assemblies

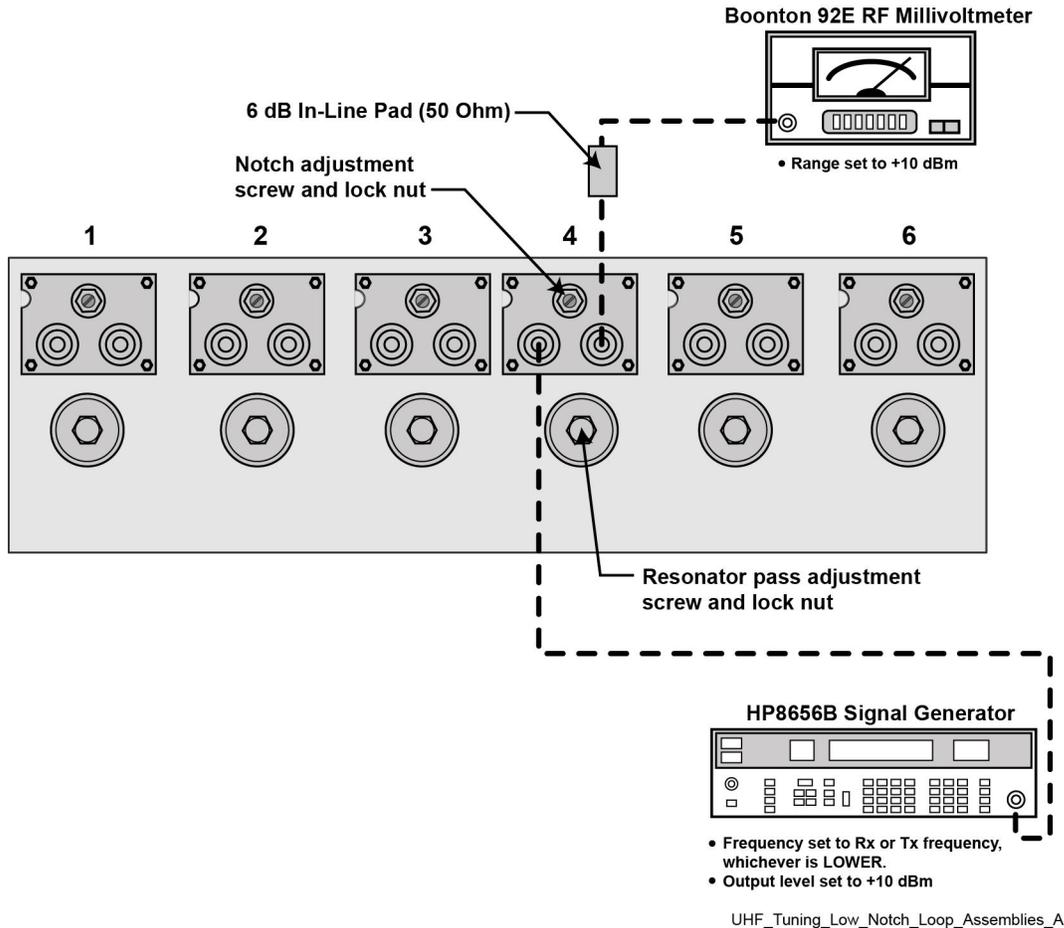

5.9.5.5.1 How To Tune UHF Duplexer Low Notch Loop Assemblies

Procedure Steps

- 1 Set up test equipment as shown in [Figure 5-16](#).
- 2 Use screwdriver to adjust notch adjustment screw for cavity #4 to obtain a **minimum** reading on the millivoltmeter. (Reduce the range on the millivoltmeter as necessary to reach true minimum reading.)
- 3 Use an open-end wrench and tighten lock nut *carefully*, making sure notch adjustment screw does not shift position.
- 4 Repeat steps 2 and 3 for cavities 5 and 6.

5.9.5.6 Verifying UHF Duplexer Insertion Loss

Figure 5-17 Verifying UHF Duplexer Insertion Loss — Connecting Test Equipment


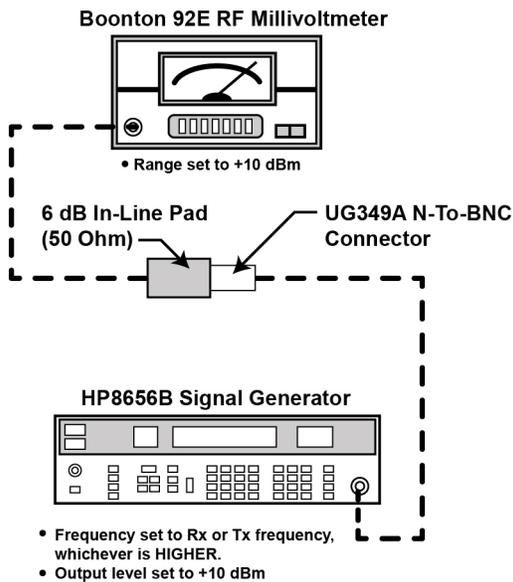


Figure 5-18 Verify UHF Duplexer Insertion Loss — Connecting Duplexer Cable Assembly

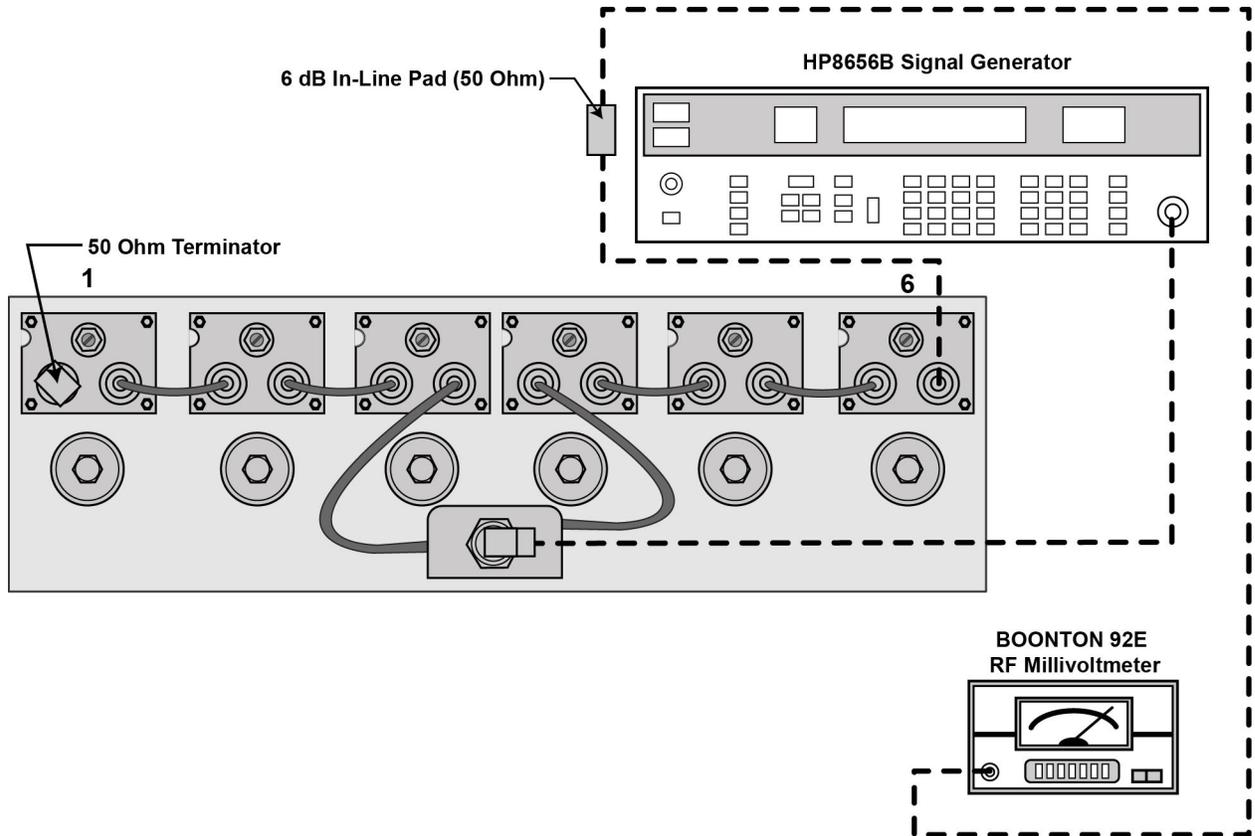

UHF_Verifying_Insertion_Loss_bottom_A


5.9.5.6.1 How To Verify UHF Duplexer Insertion Loss

Procedure Steps

- 1 Connect test equipment as shown in [Figure 5-17](#).
- 2 Observe and note the level in dBm as shown on the millivoltmeter.
- 3 Connect the duplexer cable assembly and test equipment to the duplexer as shown in [Figure 5-18](#).
- 4 Observe and note the level in dBm as shown on the millivoltmeter.
- 5 Subtract the absolute number noted in step 2 from the number noted in step 4. The difference should be less than 1.3 dB to meet specification for Insertion Loss.
- 6 Repeat steps 1 through 5 for Low-Pass/High-Notch cavities with the following exceptions:
 - a. Set service monitor to Rx or Tx frequency, whichever is **LOWER**
 - b. Connect millivoltmeter to Low Pass duplexer input (cavity #1)
 - c. Connect terminator to cavity #6.


5.9.5.7 Verifying UHF Duplexer Isolation

Figure 5-19 Verifying UHF Duplexer Isolation — Connecting Test Equipment

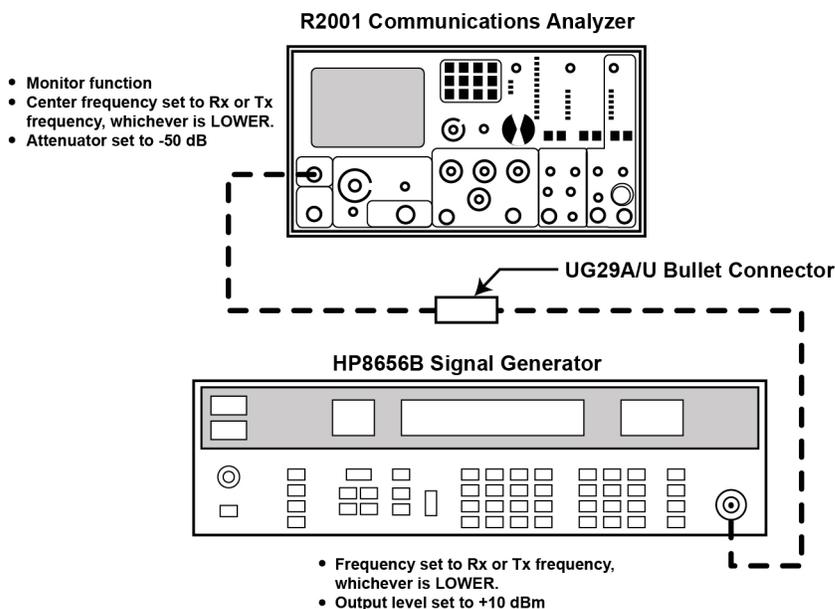

UHF_Verifying_Isolation_top_A

Figure 5-20 Verifying UHF Duplexer Isolation — Connecting Duplexer Cable Assembly

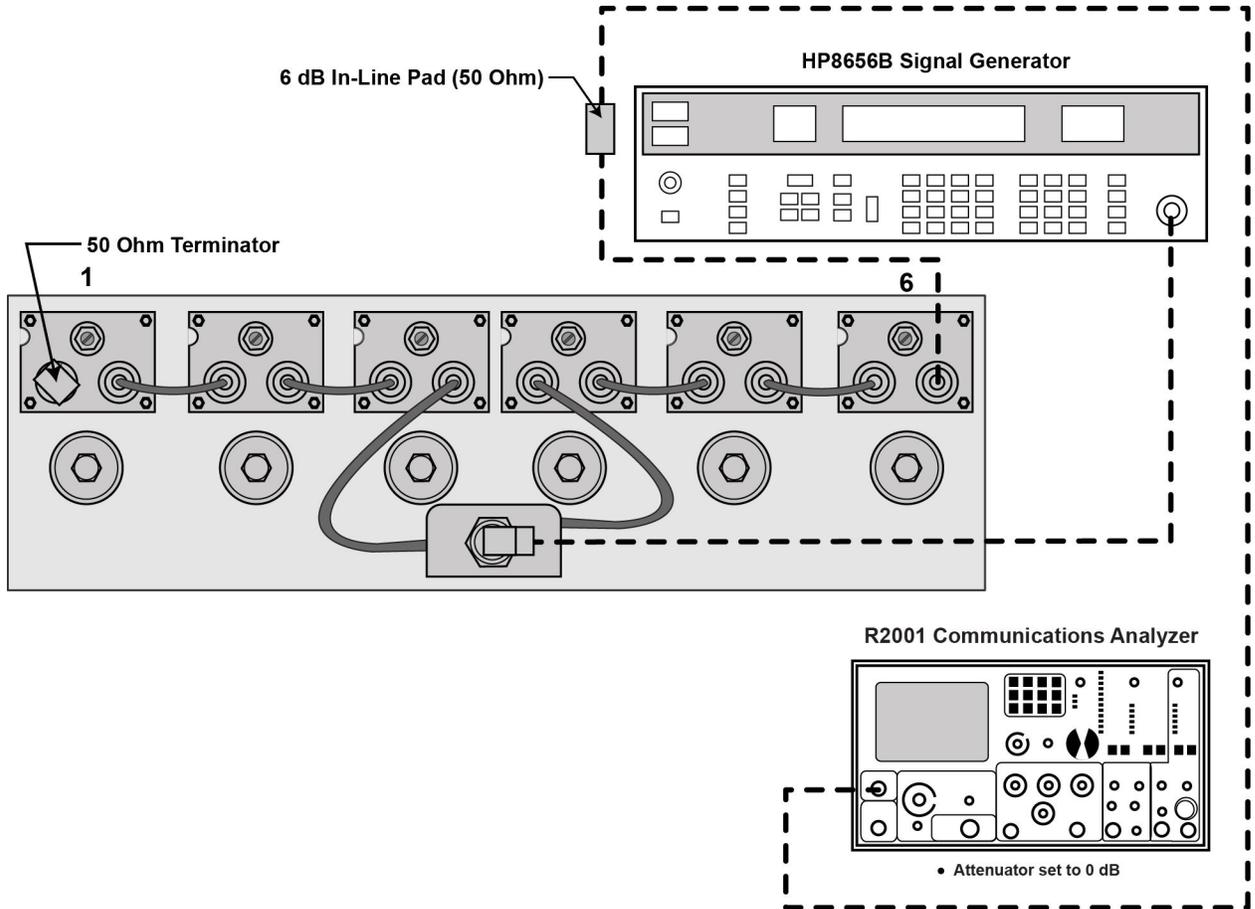

UHF_Verifying_Isolation_bottom_A

5.9.5.7.1 How To Verify UHF Duplexer Isolation

Procedure Steps

- 1 Connect test equipment as shown in [Figure 5-19](#).

 - 2 Observe and note the level in dBm as shown on the service monitor.

 - 3 Connect the test equipment to the duplexer as shown in [Figure 5-20](#).

 - 4 Observe and note the level in dBm as shown on the service monitor. (If no number is displayed, consider isolation to be greater than 105 dB, which exceeds the specification.)

 - 5 Subtract the absolute number noted in step 4 from the number noted in step 2. The difference should be higher than 100 dB to meet specification for Isolation.

 - 6 Repeat steps 1 through 5 for Low-Pass/High-Notch cavities with the following exceptions:
 - a. Set service monitor for Rx or Tx frequency, whichever is **HIGHER**
 - b. Connect service monitor to Low Pass duplexer input (cavity #1)
 - c. Connect terminator to cavity #6.
-

5.9.5.8 UHF Duplexer Post Tuning Checks

Procedure Steps

- 1 Make sure all notch adjustment lock nuts (6) are tight.

 - 2 Make sure all pass adjustment lock nuts (6) are tight.
-

5.10 Testing the GTR 8000 Base Radio/GPW 8000 Receiver Performance with a Service Monitor for Integrated Voice and Data

The service monitor is a tool used to test and measure the transmitter and receiver characteristics of the base radio. The Service Monitor may be connected to a base radio to perform tests and measurements designed to determine whether the equipment is operating within specifications.

The sections that follow contain procedures that are performed when you first set up your system and can also be scheduled on a regular basis as part of the maintenance policies of your organization. Topics covered include:

- [5.10.1 Deviation Standards \(Digital Operation\)](#), page 5-34
- [5.10.2 Monitoring the Power Supply Module](#), page 5-35

- 5.10.3 Verifying Receiver Performance (Digital Operation), page 5-35
- 5.10.4 Verifying Receiver Performance (Analog Operation), page 5-38
- 5.10.5 Checking Receiver Sensitivity (Self-test Method) (IV and D), page 5-39
- 5.10.6 Monitoring the Transmitter Metering Points, page 5-40
- 5.10.7 Verifying Transmitter Performance (Digital Operation), page 5-41
- 5.10.8 Verifying Transmitter Performance (Analog Operation), page 5-43

5.10.1 Deviation Standards (Digital Operation)



NOTE

The specifications in this table allow a spread of $\pm 10\%$. However, the accuracy of the service monitor needs to be taken into account. Since the accuracy of the service monitor is only $\pm 5\%$, the allowable spread in the measured deviation should only be $\pm 5\%$ and not $\pm 10\%$.

Table 5-2 Deviation Standards for ASTRO 25 System Test Patterns

Signal	Minimum Deviation	Nominal Deviation	Maximum Deviation
low signal deviation	0.84 kHz	0.93 kHz	1.02 kHz
slow signal wide pulse deviation	undetermined	1.00 kHz	undetermined
standard deviation	2.55 kHz	2.83 kHz	3.11 kHz
standard wide pulse deviation	undetermined	3.00 kHz	undetermined
V.52 deviation	2.91 kHz	3.23 kHz	3.55 kHz
V.52 wide pulse deviation	undetermined	3.00 kHz	undetermined
C4FM deviation	2.91 kHz	3.23 kHz	3.55 kHz
C4FM wide pulse deviation	undetermined	3.00 kHz	undetermined
GPS test pattern - simulcast	undetermined	3.00 kHz	undetermined
ASTRO® 25 system voice	3.24 kHz	3.60 kHz	3.96 kHz
ASTRO® 25 system wide pulse	undetermined	3.00 kHz	undetermined

5.10.2 Monitoring the Power Supply Module


Procedure Steps

- 1 Connect to the base radio in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

- 2 Select **Service** → **Metering Screens** from the menu.

Step result: The Metering Screen window opens on the Power Supply tab.

Figure 5-21 Metering Screen Window

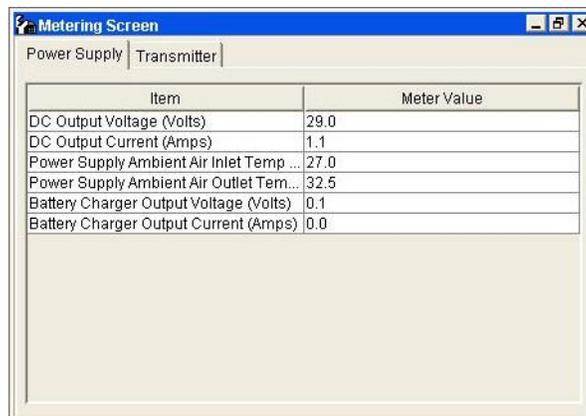

The screenshot shows a window titled "Metering Screen" with two tabs: "Power Supply" (selected) and "Transmitter". Below the tabs is a table with two columns: "Item" and "Meter Value".

Item	Meter Value
DC Output Voltage (Volts)	29.0
DC Output Current (Amps)	1.1
Power Supply Ambient Air Inlet Temp ...	27.0
Power Supply Ambient Air Outlet Tem...	32.5
Battery Charger Output Voltage (Volts)	0.1
Battery Charger Output Current (Amps)	0.0

- 3 Select the **Power Supply** tab.

5.10.3 Verifying Receiver Performance (Digital Operation)

When and where to use:

Use this procedure to verify receiver performance by measuring the Bit Error Rate (BER) and RSSI for digital operation.

Procedure Steps

- 1 Connect to the transceiver module in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

- 2 Select **Service** → **Test and Measurement Screen** from the menu.

- 3 Select the **ASTRO BER RSSI Report** tab.

- 4 Make the following connections to the base radio:
 - a. Disconnect the BNC antenna cable (or N connector if preselector is present) from the Receive Antenna Port.
 - b. Connect the service monitor GEN port to the base radios Antenna Port.

- 5 Set up the service monitor:
 - a. Modulation to Project 25 (C4FM) (with a Standard 1011 or 1031) test pattern.
 - b. Set the service analyzer to generate at the receive frequency.
 - c. Set the RF level an initial value of 50 dBm.

- 6 Set up the test in CSS:
 - a. If the base radio is not already in service mode, click **Change to Service Mode**.
Step result: A confirmation dialog box appears
 - b. Click **OK**.
Step result: The base radio begins a reset sequence to change modes, which takes a few minutes. .
 - c. After the base radio resets, re-open the Test and Measurement Screen as described in [step 2](#)
 - d. Select **Project 25** from the Pattern Type field.
 - e. Enter the number of required seconds from the **Sampling Period (sec)** list box. The time specifies the window over which the BER is calculated.

7 Measure the BER and RSSI:

- a. Click **Start BER Measurement**.

Step result: The Test and Measurement Screen dialog box displays:

- BER results in percentage
- RSSI results expressed in dBm.

**NOTE**

With the initial setting of the service monitor set for a carrier level of 50 dBm, you should expect a BER of 0.0 % and an RSSI level between 48 dBm and 52 dBm. Remember to compensate for the loss of the cable connecting the service monitor to the base radio.

**NOTE**

If the receiver is inhibited, RSSI will display a meaningless value.

- b. Click **Start Log** to create a log file for the BER and RSSI measurement.

Step result: The Log Save As window appears.

- c. Change the RF level and read the BER and RSSI again at the level appropriate for the base radio. The value should be less than 5%. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#) for the appropriate value.
- d. Key the transmitter in the base radio and readjust the generator output level until 5% BER is indicated on the service monitor. Record this level.
- Step result:** Less than 1 dB of degradation should occur due to the transmitters being keyed.
- e. Dekey the transmitter.
- f. Click **Stop BER Measurement** to stop the test.

8 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.

9 Remove and restore the following connections to the base radio:

- Remove the service monitor GEN port connection from the base radio Antenna Port.
 - Restore the Antenna connection to the Receive Antenna Port.
-

5.10.4 Verifying Receiver Performance (Analog Operation)

When and where to use:

Use this procedure to verify receiver performance by measuring the receiver sensitivity (SINAD) for an analog base radio.



NOTE

This procedure uses an internal SINAD in the base radio. If a field technician chooses to use a service monitor as an external SINAD meter, see “SINAD Measurement Procedure (measured by Service Monitor)” within Base Radio Service Help -> Service Screens > Alignment Screens > Carrier Squelch Alignment Tab in the *CSS Online Help*.

Procedure Steps

- 1 Connect to the transceiver module in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

- 2 Select **Service** → **Alignment Screens** from the menu.

- 3 Place the base radio into service mode:
 - a. If the base radio is not already in service mode, click **Change to Service Mode**.
Step result: A confirmation dialog box appears.
 - b. Click **OK**.
Step result: The base radio begins a reset sequence to change modes, which takes a few minutes.
 - c. After the base radio resets, re-open the **Alignment Screen** as described in [step 2](#).

- 4 Select the **Carrier Squelch Alignment** tab.

- 5 Make the following connections to the base radio:
 - a. Disconnect the BNC antenna cable or N connector if a preselector is present from the Receive Antenna Port.
 - b. Connect the service monitor GEN port to the base radios Antenna Port with a BNC connector.

- 6 Set up the service monitor.
 - a. For 25 kHz channels, set the modulation to 1 kHz tone at 3 kHz deviation.
 - b. For 12.5 kHz channels, set the modulation to 1 kHz tone at 1.5 kHz deviation.
 - c. Set the service monitor to generate at the receive frequency.
 - d. Set the RF level an initial value of -80 dBm.

- 7 To measure 25 kHz channel SINAD, click **25 kHz**. To measure 12.5 kHz channel SINAD, click **12.5 kHz**.

- 8 Select the **SINAD measurement** box.

9 Click **Start SINAD Measurement**.

Step result: The SINAD Measurement Value box displays wait, and after 10 seconds starts to display the SINAD results in dB.



NOTE

With the initial setting of the service monitor set for a carrier level of -80 dBm, expect a SINAD of >26 dB. Remember to compensate for the loss of the cable connecting the service monitor to the base radio. If the receiver is inhibited, SINAD will display a meaningless value.

10 Change the service monitors RF level and read the SINAD again until the value is 12 dB.



NOTE

When the SINAD value is close to 12 dB, wait 10 seconds after changing the RF signal generator level. The base radio needs 10 seconds to stabilize the SINAD measurement. Remember to compensate for the loss of the cable connecting the service monitor to the base radio.

11 Record the signal generator RF level. Compare this value to the sensitivity specifications. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#) for the appropriate value.

- a. Key the transmitter in the base radio and readjust the generator output level until 12 dB SINAD is indicated on the service monitor. Record this level.

Step result: Less than 1 dB of degradation should occur due to the transmitters being keyed.

- b. Dekey the transmitter.

12 Click **Stop SINAD measurement** to stop the measurement.

13 Uncheck the **SINAD measurement** box.

14 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.

15 Remove and restore the following connections to the base radio:

- a. Remove the service monitor GEN port connection from the base radio Antenna Port.
- b. Restore the Antenna connection to the Receive Antenna Port.

5.10.5 Checking Receiver Sensitivity (Self-test Method) (IV and D)

When and where to use:

Use this procedure to check the receiver sensitivity for the station without any test equipment. The receiver uses a factory calibrated low-level noise source at the receiver input to check performance. This procedure can be performed remotely.

Procedure Steps

- 1 Connect to the base radios transceiver module in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

 - 2 Select **Service** → **Test and Measurement Screen** from the menu. Select the **ASTRO BER RSSI Report** tab.

 - 3 Place the base radio into service mode:
 - a. If the base radio is not already is service mode, click **Change to Service Mode**.
Step result: A confirmation dialog box appears.
 - b. Click **OK**.
Step result: The base radio begins a reset sequence to change modes, which takes a few minutes.
 - c. After the base radio resets, re-open the **Test and Measurement Screen** as described in [step 2](#).

 - 4 Click **Start Receiver Test**.
Step result: A confirmation dialog box appears indicating tests progress. After a few seconds, the test concludes with a pass or fail message.

 - 5 Click **OK**.

 - 6 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.
-

5.10.6 Monitoring the Transmitter Metering Points

Procedure Steps

- 1 Connect to the base radio in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

- 2 Select **Service** → **Metering Screens** from the menu.
Step result: The Metering Screen dialog box opens.

- 3 Click **Transmitter Test** to briefly key up the transmitter.
Step result: The status bar on the window confirms if the transmitter is operating properly or it has failed.

- 4 The Current column displays the values read for the following:



NOTE

When the base radio is transmitting, the VSWR field on the screen displays a value of 1 or greater; when the base radio is not keyed, 1 is displayed.

Item	Measure
Current Measured Forward Power (Watts)	Forward power of the base radio
Current Measured Reflected Power (Watts)	Reflected power of the base radio
Current Measured VSWR	Voltage Standing Wave Ratio (VSWR) of the base radio
The following readings are for a conventional base radio:	
Current Stored Forward Power (Watts)	Forward power of the base radio at the last keyup
Current Stored Reflected Power (Watts)	Reflected power of the base radio at the last keyup
Current Stored VSWR	Voltage Standing Wave Ratio (VSWR) of the base radio at the last keyup

5.10.7 Verifying Transmitter Performance (Digital Operation)

When and where to use:

Use this procedure to test the transmitter signaling patterns and verify the base radio transmitter meets the ASTRO® 25 system standards by forcing the base radio to transmit a V.52 standard test pattern.

Procedure Steps

- 1 Connect to the base radios transceiver module in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
- 2 Select **Service** → **Test and Measurement Screen** from the menu. Select the **ASTRO Test Pattern** tab.
- 3 If the radio is not already in service mode, click **Change to Service Mode**.
Step result: A confirmation dialog box appears.
- 4 Click **OK**.
Step result: The base radio goes through a reset sequence to change modes. This takes a few minutes.
- 5 After the station resets, re-open the **Test and Measurement Screen**, as described in [step 2](#).

- 6 Connect the service monitor to the base radio:
 - a. Remove the N-Type connector from the Transmitter Antenna Port.
 - b. Connect an N-to-N cable from the Transmitter Antenna Port to the T/R port of the service monitor
 - c. Make the following settings on the service analyzer:
 - Click **Receiver (TX Test)**.
 - Enter the frequency to match that of the base radio TX channel selected.
 - Click **INPUT PORT** and set to T/R.
 - Click **ATTEN** and set to 20 dB.
 - Click **DEMOD** and set to P25.
 - Click **IF BW** and set to 12.5 kHz
 - Click **RF GEN** to turn OFF the Signal Generator Output.
 - d. Click **Options**. Enable and make the following selections in the Spectrum Analyzer, EVM Data, Power Meter, and Modulation Plot, as follows:
 - Expand the Power Meter and set to **AR** (Autorange). If necessary, change to 0. Press **Return**. Verify that Cable Loss is 0. If cable loss is anticipated, expand the Power Meter and enter the cable loss factor.
 - Set the RF Error Meters to **AR** (Autorange).
 - Set the modulation Meter to **AR** (Autorange).

-
- 7 Set up the test in CSS by selecting **V.52** in the **Pattern Type** field.
-

- 1 Connect to the base radio in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

- 2 Select **Service** → **Test and Measurement Screen** from the menu. Select the **ASTRO Test Pattern** tab.

- 3 If the base radio is not already in service mode:
 - a. Click **Change to Service Mode**.
Step result: A confirmation dialog box appears.
 - b. Click **OK**.
Step result: The base radio goes through a reset sequence to change modes. This takes a few minutes.
 - c. After the base radio resets, re-open the **Test and Measurement Screen**, as described in [step 2](#)

- 4 Connect the service monitor to the base radio:
 - a. Remove the N-Type connector from the Transmitter Antenna Port.
 - b. Connect an N-to-N cable from the Transmitter Antenna Port to the T/R port of the service monitor
 - c. Make the following settings on the service analyzer:
 - Configure the service monitor for **Analog Duplex**.
 - Enter the frequency to match that of the base radio TX channel selected.
 - Click **INPUT PORT** and set to T/R.
 - Click **ATTEN** and set to 20 dB.
 - Click **IF BW** and set to 12.5 kHz for narrow channels. Select 25 kHz or 30 kHz for wide channels.
 - Click **DEMOD** and set to FM.
 - Click **RF GEN** to turn OFF the Signal Generator Output.
 - For the power meter, select **W** and **BB** (Broadband).
 - Select **0.3–3 kHz** for the audio filtering bandwidth.


- 5 Set up the test in CSS by selecting **1 kHz Tone at 60% deviation without PL/DPL** from the Pattern to Transmit field.

6 Click **Start Pattern Transmission**.

Step result: The service monitor displays:

- The transmit output power (make sure to account for any cable loss).
- The amount of FM deviation of the carrier.
- The Tx SINAD (measure of Tx distortion) in dB.
- The transmitters carrier frequency error.

Figure 5-23 Configuration for Modulation Fidelity Measurement (Aeroflex 2975 Series Service Monitor)

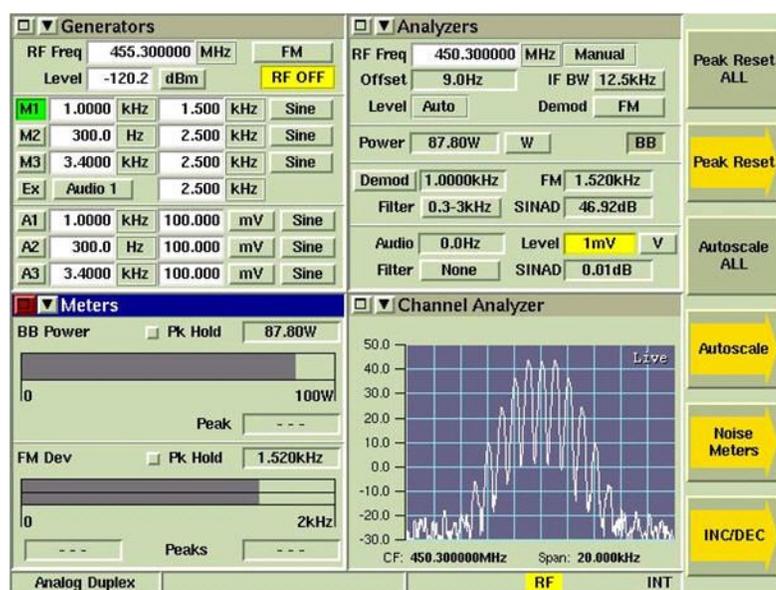


7 Click **Stop Pattern Transmission** to turn off the test tone.

8 Disconnect the service monitor and reconnect the transmit antenna.

9 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.

5.11 Testing the GTR 8000 Base Radio Performance with a Service Monitor for HPD

The HPD Service Monitor is a diagnostic tool that may be used with an HPD base radio or HPD modem to test and measure the transmitter and receiver characteristics. The HPD Service Monitor can generate HPD signaling and can provide diagnostic information for received signaling.

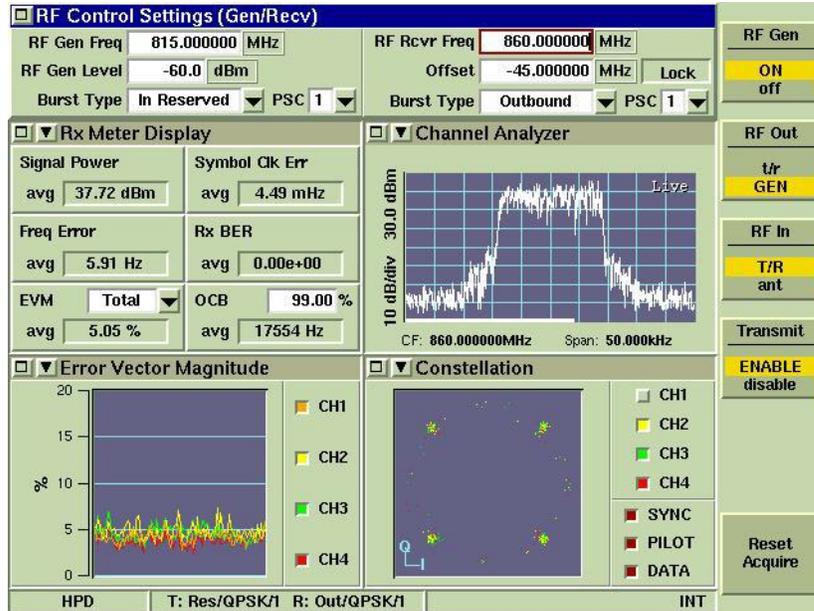Figure 5-24 HPD Service Monitor Test Screen (Aeroflex 3900 Series Service Monitor)

The HPD Service Monitor may be connected with an HPD base radio to perform the following diagnostic tests (for additional tests, see the HPD service monitor manual). These tests are designed to determine whether the equipment is operating within specification. Service may be required on an HPD base radio if it fails to meet specification. Topics cover include:

- [5.11.3 Measuring HPD BR Tx Power, Frequency Accuracy and Tx EVM, page 5-49.](#)
- [5.11.4 Measuring HPD BR Rx Sensitivity and Rx BER, page 5-52.](#)
- [5.11.5 Checking Receiver Sensitivity \(Self-test Method\) \(HPD\), page 5-57](#)

For additional information about using the service monitor, see the HPD Service Monitor manual or online help (accessed through the **Help** button on the front of the service monitor).

5.11.1 Setting Up the HPD Service Monitor for Testing the Base Radio

Procedure Steps

- 1 Plug a power cable into the AC port at the rear of the service monitor.
- 2 Connect a USB mouse to one of the two USB ports in the rear of the service monitor.



NOTE

The following procedures assume a USB mouse is connected. If not, for instructions to click or select you can use the **TAB** and arrow buttons on the front of the service monitor. For instructions to select a soft key on the right side of the screen, use the unlabeled buttons on the front of the service monitor, pressing the button located next to the soft key on the screen.

-
- 3 Configure the Speed/Duplex setting in the PCs Ethernet interface to 10 Mb Half Duplex.

 - 4 Connect to the base radio in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

 - 5 Select **Service** → **Test and Measurement Screen** from the menu.
Step result: The Test and Measurement Screen dialog box appears.

 - 6 Disable the channel that is using the base radio you will test.

**NOTE**

The test procedures require the base radios Rx and Tx cables to be connected to the HPD Service Monitor. Any calls present on the channel associated with the base radio will be dropped from that channel. It is recommended that you disable the channel before performing the test procedures, so that the system does not attribute the loss of channel to a failure.

If the base radio is not already in service mode, click **Change to Service Mode**.

Step result: A confirmation dialog box appears.

-
- 7 Click **OK**.
Step result: The base radio goes through a reset sequence to change modes. This takes a few seconds.

 - 8 After the station resets, re-open the **Test and Measurement Screen**, as described in [step 5](#).

 - 9 If measuring the base radios transmit signal, connect the Tx connector at the rear of the base radio to the T/R (Transmit/Receive) port on the front of the service monitor. (Both are N-type RF connectors.)

 - 10 If measuring the base radios receive signal, connect the Rx-A and Rx-B ports at the rear of the base radio to the GEN port on the front of the service monitor, using a splitter.

 - 11 Press the green power button on the front of the service monitor.

 - 12 If the Test Screen is not displayed (see [Figure 5-24](#)), press the **Test** button on the front of the service monitor.

 - 13 Locate the specifications for the GTR 8000 Base Radio configuration you will be testing. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications](#), page 1-12.

 - 14 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.
-

5.11.2 Performing In-band Power Meter User Calibration

When and where to use:

The Aeroflex 3900 series HPD service monitor has two forms of power measurement:

- Broadband, which is similar to the working of an in-line wattmeter.
- In-band, which is performed after the RF signal is down converted to baseband by a DSP.

If the HPD service monitor runs continuously, it requires periodic calibration. Re-calibration is required only if the User Calibration Threshold is exceeded. The service monitor displays a flag at the bottom indicating that re-calibration is needed to maintain the accuracy indicated in the User Calibration Threshold.

For an HPD signal, only the in-band power meter is available. The in-band power measurement accuracy without a user calibration is ± 1 dB. User calibration improves the accuracy at a specific frequency, bandwidth, and temperature by using the broadband power meter to correct the in-band power measurement. This correction occurs when an in-band user calibration is performed.

Procedure Steps

- 1 Press the **UTILS** button on the service monitor twice.



NOTE

Wait for approximately 1 second or more before pressing the **UTILS** button the second time.

Step result: The Utility Menu screen appears.

- 2 Select **User Calibration** from the drop-down menu.

Step result: The User Calibration screen appears.

- 3 Click the **Run User Calibration** button located at the upper right corner of the User Calibration screen.



NOTE

The default user calibration setting is 1.0 dB. This means the HPD service monitor will not indicate a user re-calibration until the in-band power measurement has a potential of 1.0 dB error in the measurement (same as the basic in-band power meter accuracy). For HPD, a 0.5 dB value or lower is more appropriate. This may require more frequent user re-calibrations, but it provides better performance.

Step result: A User Calibration message box appears asking you to remove all connectors from the ports.

- 4 Remove all connectors from the ports. Click **Continue**.

Step result: A progress bar appears showing the progress of the calibration process. The calibration completes in approximately two minutes.




NOTE

Failure to remove all connectors and cables from the ports causes an inaccurate user calibration. Any connectors present causes a variation on the impedance seen by the instrument during calibration.

5.11.3 Measuring HPD BR Tx Power, Frequency Accuracy and Tx EVM


Procedure Steps

- 1 Perform the service monitor setup steps in [5.11.1 Setting Up the HPD Service Monitor for Testing the Base Radio](#), page 5-46.
- 2 Configure the service monitor T/R port to receive transmissions from the base radio, as follows:
 - Click the **T/R** soft key under **RF In** on the right side of the screen.



- 3 Maximize the RF Control Settings window, by clicking the upper left corner of the window.

Figure 5-25 HPD Service Monitor - RF Control Settings Window (Aeroflex 3900 Series Service Monitor)

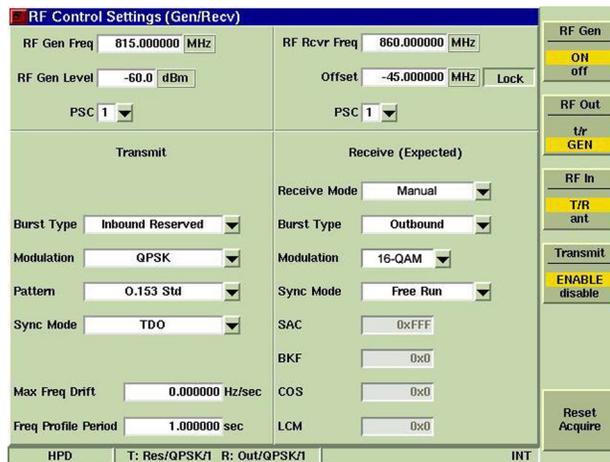

- 4 Set RF Receiver Frequency, as follows:
 - a. Click the **RF Rcvr Freq** field in the upper right quadrant of the RF Control Settings window.
 - b. Press the number buttons on the front of the service monitor to enter a value in the **RF Rcvr Freq** field.
 - c. If **MHz** is not already displayed to the right of the RF Receiver Frequency value you entered, press the unlabeled button on the front of the service monitor next to the **MHz** soft key.

**NOTE**


The value entered should be within the Frequency Range specification for the GTR 8000 Base Radio configuration being tested. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#).

-
- 5 Select **1** from the drop-down list for Pilot Sync Code (**PSC**) in the upper right quadrant of the RF Control Settings window.
-
- 6 Make the following selections in the Receive (Expected) quadrant of the RF Control Settings window:
 - a. Select **Manual** from the drop-down list for **Receive Mode**.
 - b. Select **Outbound** from the drop-down list for **Burst Type**.
 - c. Select **16-QAM** from the drop-down list for **Modulation**.
 - d. Select **Free Run** from the drop-down list for **Sync Mode**.
-
- 7 Minimize the RF Control Settings window, by clicking the upper left corner of the window.

Step result: The minimized RF Control Settings window is visible at the top of the screen as long as all subscreens are minimized. (See [Figure 5-24](#).) Modulation Type is not visible in the minimized RF Control Settings window but displays with Burst Type and PSC at the bottom of the screen.
-
- 8 From CSS, select **Service** → **Test and Measurement Screen** from the menu.
-

- 9 On the **Test and Measurement Screen**:
 - a. Click **Change to Service Mode**.
 - b. Re-open the Test and Measurement Screen.
 - c. Key up the base radio for 16-QAM modulation by selecting **16-QAM** in the Select Pattern to Transmit field.
 - d. Click **Start Pattern Transmission**.


Figure 5-26 CSS Test and Measurement Screen

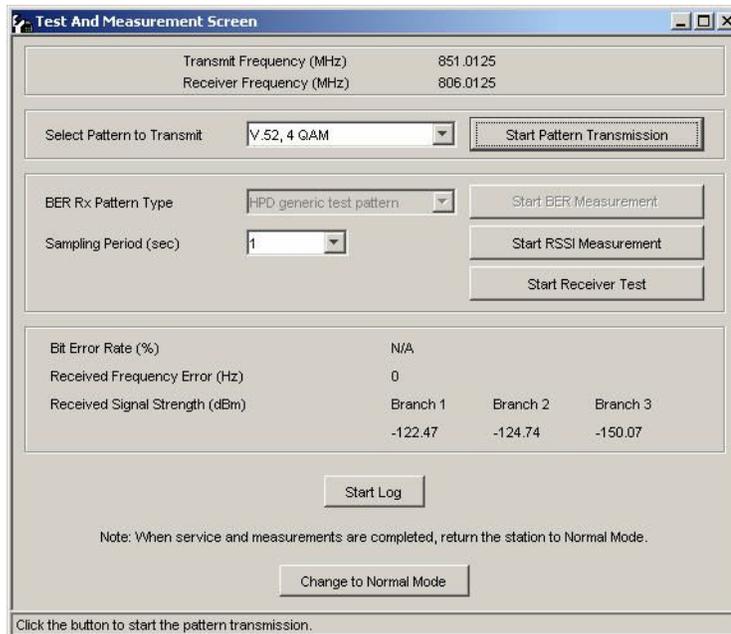

- 10 Display the base radios transmission readings on the service monitors Rx Meter subscreen, as follows: A panel of soft keys displays on the right side of the screen, including two **Reset** keys.
 - a. Click the Rx Meter subscreen.

Step result: A panel of soft keys displays on the right side of the screen, including two **Reset** keys.
 - b. Click the **Reset Acquire** soft key on the right side of the screen. This re-synchronizes the test set with the incoming signal.
 - c. Click the **Reset Meters** soft key on the right side of the screen. This stops, clears, and restarts the acquisition of data for the data display fields.

Figure 5-27 HPD Service Monitor - Rx Meter Subscreen, Reset Soft Keys (Aeroflex 3900 Series Service Monitor)

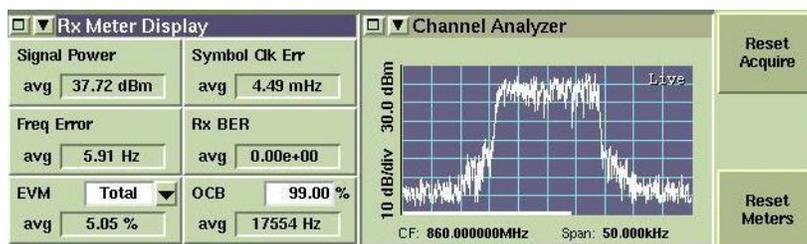

- 11 Compare the value that displays in the **Signal Power** field to the base radio Tx Power Out specification **that matches your base station configuration**. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#).

**NOTE**

Be sure to account for cable loss in this comparison.

**NOTE**

The output power reference plane is the output connector of the power amplifier. The loss of the transmitter output cable (PA output to the back of the base radio) is 4% at 700 and 800 MHz. However, the base radio software allows the transmitter output power to be set at 10% above rated value.

- 12 Note the value that displays in the **Freq. Error** field. Tolerance should be +/- 50 Hz.
 - 13 Note the value that displays in the **EVM avg** field. The value should be less than or equal to 10%.
 - 14 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.
-

5.11.4 Measuring HPD BR Rx Sensitivity and Rx BER

When and where to use:

Follow this procedure to test:

- **Rx Sensitivity:** Does the 1% Bit Error Rate (BER) meet specifications for your GTR 8000 Base Radio configuration?
- **Rx BER:** Does -70 dBm produce a 0.01% Bit Error Rate (BER) or better, as expected?

Procedure Steps

- 1 Perform the service monitor setup steps in [5.11.1 Setting Up the HPD Service Monitor for Testing the Base Radio, page 5-46](#).
-

2 Using the soft keys on the right side of the screen, configure the service monitor GEN port to generate inbound signaling to the base radio, as follows:

a. Click the **ON** soft key under **RF Gen**.



b. Click the **GEN** soft key under **RF Out**.




c. Click the **ENABLE** soft key under **Transmit**.



3 Maximize the RF Control Settings window, by clicking the upper left corner of the window.

Step result: All of the RF Control Settings fields display.

Figure 5-28 HPD Service Monitor - RF Control Settings Window (Aeroflex 3900 Series Service Monitor)

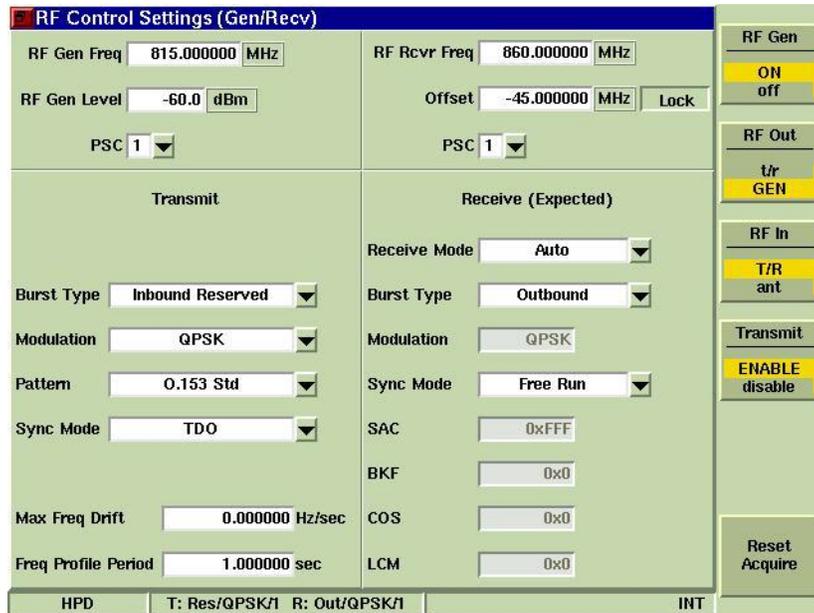

- 4 Select the following values in the Transmit quadrant of the RF Control Settings window:
 - a. Select **Inbound Reserved** for **Burst Type**.
 - b. Select a **Modulation Type**.

**NOTE**

The selection should be a modulation type from HPD Receive Sensitivity 1% BER specifications, which include:

- 64 QAM (Quadrature Amplitude Modulation)
- 16 QAM
- QPSK (Quadrature Phase Shift Keying)

See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#).

- c. Select **TDO** for **Sync Mode**.
 - d. Select **0.153 Std** for **Pattern**.

-
- 5 Select **Free Run** for **Sync Mode** in the Receive (Expected) quadrant of the RF Control Settings window.
-

- 6 Select the following values in the upper left quadrant of the RF Control Settings window:
 - a. Click the **RF Gen Freq** field and use the number buttons on the front of the service monitor to enter a value.

**NOTE**

The value entered should be within the Frequency Range specification for the HPD base radio configuration being tested. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#).

- b. Click the **RF Gen Level** field and enter a dBm value, depending on the length of cable between the service monitor and the base radio.

**NOTE**

The value entered should match the Receive Sensitivity 1% BER specifications for your HPD base radios configuration, for the Modulation Type you selected. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications, page 1-12](#).

- c. Select **1** from the drop-down list for Pilot Sync Code (**PSC**).


-
- 7 Minimize the RF Control Settings window, by clicking the upper left corner of the window.

Step result: The minimized RF Control Settings window is visible at the top of the screen as long as all subscreens are minimized. See [Figure 5-24](#). Modulation Type is not visible in the minimized RF Control Settings window but displays with Burst Type and PSC at the bottom of the screen.

- 8 Connect to the base radios transceiver module in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.

- 9 Select **Service** → **Test and Measurement Screen** from the menu.

Figure 5-29 CSS Test and Measurement Screen

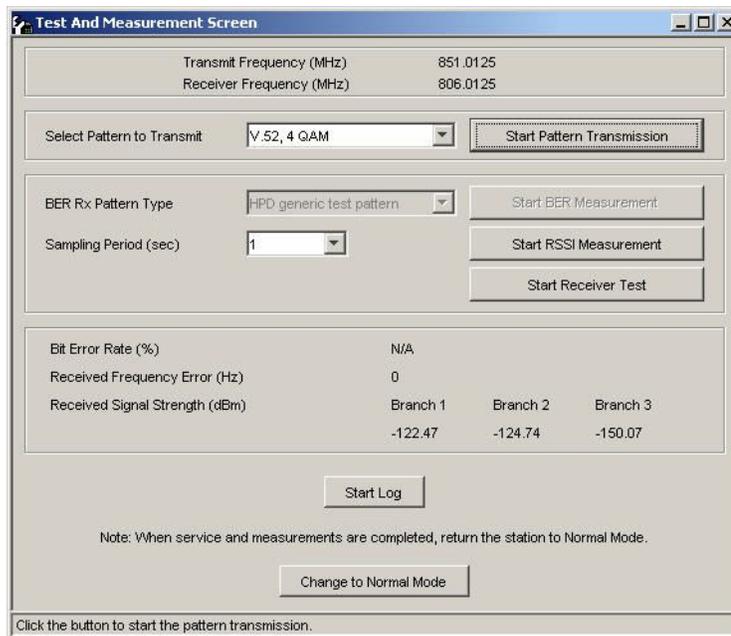

Transmit Frequency (MHz)	851.0125		
Receiver Frequency (MHz)	806.0125		
Select Pattern to Transmit	V.52, 4 QAM		
BER Rx Pattern Type	HPD generic test pattern		
Sampling Period (sec)	1		
Bit Error Rate (%)	N/A		
Received Frequency Error (Hz)	0		
Received Signal Strength (dBm)	Branch 1	Branch 2	Branch 3
	-122.47	-124.74	-150.07

- 10 Set up the CSS Test and Measurement screen to display received BER through Configuration/Service Software (CSS), as follows:
- Click **Change to Service Mode**. This keys up the base radio in service mode.
 - Re-open the **Test and Measurement Screen**.
 - Select a pattern that matches the Modulation Type selection for the RF Control Settings in the service monitor.




NOTE

To match the QPSK Modulation Type on the service monitor screen, select the 4 QAM pattern in CSS.

- Click **Start Pattern Transmission**.
- Click **Start BER Measurement**.

- 11 Display the base radio's transmission readings on the service monitor Rx Meter subscreen, as follows:
 - a. Click the Rx Meter subscreen.
Step result: A panel of soft keys displays on the right side of the screen, including two **Reset** keys.
 - b. Click the **Reset Acquire** soft key on the right side of the screen. This re-synchronizes the test set with the incoming signal.
 - c. Click the **Reset Meters** soft key on the right side of the screen. This stops, clears, and restarts the acquisition of data for the data display fields.

Figure 5-30 HPD Service Monitor - Rx Meter Subscreen and Soft Keys (Aeroflex 3900 Series Service Monitor)

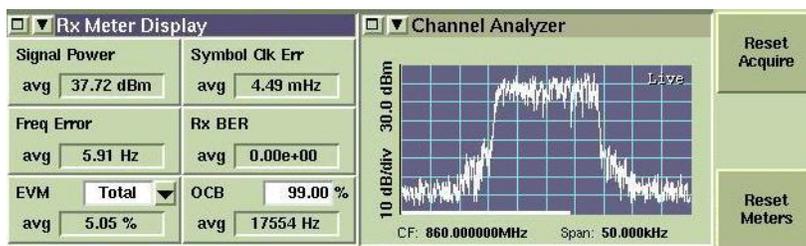

- 12 On the RF Control Settings window of the service monitor, enter lower values in the **RF Gen Level** field until 1% BER is displayed on the CSS Test and Measurement screen. Compare the value in the **RF Gen Level** field to the Receive Sensitivity 1% BER specifications for your HPD base radio configuration. See [1.9 GTR 8000 Base Radio/GPW 8000 Receiver Specifications](#), page 1-12.



NOTE

Be sure to take cable and splitter loss into account.

- 13 Enter -70 dBm in the **RF Gen Level** field.



NOTE

This should produce a 0.01% or better BER on the Test and Measurement screen in CSS. If it does not, contact Motorola System Support Center (SSC). See [8.5 Using Motorola System Support Center \(SSC\)](#), page 8-8.

- 14 When finished testing, perform the following steps on the CSS Test and Measurement screen:
 - a. Click **Stop BER Measurement**.
 - b. Click **Stop Pattern Transmission**.

- 15 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.

5.11.5 Checking Receiver Sensitivity (Self-test Method) (HPD)

When and where to use:

Use this procedure to check the receiver sensitivity for the station without any test equipment. The receiver uses a factory calibrated low-level noise source at the receiver input to check performance. This procedure can be performed remotely.

Procedure Steps

- 1 Connect to the base radio in CSS through an Ethernet connection. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
- 2 Select **Service** → **Test and Measurement Screen** from the menu.

Figure 5-31 CSS Test and Measurement Screen

Transmit Frequency (MHz)	851.0125		
Receiver Frequency (MHz)	806.0125		
Select Pattern to Transmit	V.52, 4 QAM		
BER Rx Pattern Type	HPD generic test pattern		
Sampling Period (sec)	1		
Bit Error Rate (%)	N/A		
Received Frequency Error (Hz)	0		
Received Signal Strength (dBm)	Branch 1	Branch 2	Branch 3
	-122.47	-124.74	-150.07

- 3 Reset the base radio:
 - a. If the base radio is not already in service mode, click **Change to Service Mode**.
Step result: A confirmation dialog box appears.
 - b. Click **OK**.
Step result: The base radio begins a reset sequence to change modes, which takes a few minutes.
 - c. After the base radio resets, re-open the Test and Measurement Screen as described in [step 2](#).
- 4 Select **Start Receiver Test**.
Step result: A confirmation dialog box appears indicating tests progress. After a few seconds, the test concludes with a pass or fail message.
- 5 Click **OK**.
- 6 If no further testing is needed, click **Change to Normal Mode** to return the base radio to normal operation.

6 GTR 8000 Base Radio Maintenance

This chapter describes periodic maintenance procedures relating to the GTR 8000 Base Radio.

6.1 Fan Grill Cleaning Instructions



NOTE

If the station equipment is installed in a dusty environment, precautions must be taken to filter the air used for forced cooling of the station. Excessive dust drawn across and into the device circuit modules by the cooling fans can adversely affect heat dissipation and circuit operation. In such installation, be sure to clean or replace external filtering devices periodically.

If dust has accumulated on the fan grills, cleaning of the fan grills is recommended. When cleaning, care should be taken to prevent dust from being pulled into the modules. It is recommended that a damp cloth be used to wipe the front of the fan grills. When removing the power supply, make sure that the unit is turned off before proceeding.

6.2 Aligning the Internal Frequency Reference Oscillator



NOTE

The base radio or receiver must be turned on for at least one week before the internal frequency reference oscillator is aligned.

See Base Radio Service Help > Service Screens > Alignment Screens in the *CSS Online Help* for the alignment procedures.

7 GTR 8000 Base Radio Operation

This chapter details tasks that you will perform once the GTR 8000 Base Radio is installed and operational on your system.

7.1 Base Radio Operational States for Trunked Simulcast

GTR 8000 Base Radio modules can be in any one of the following four operational states:

- Standby
- Idle
- Assigned
- Isolated

During initialization, the base radio powers up into the **standby** state and waits for a status packet from the comparator. When initial contact with the comparator has been made, the base radio enters **idle** mode. The base radio sends a status message back to the comparator indicating that it is ready for the assignment.

After a base radio has been **assigned**, it can begin to handle inbound/outbound traffic. In the case where the base radio fails to receive status packets from the comparator, the base radio enters **isolated** mode and dekeys. This isolated mode is reported in the Unified Event Manager.

If the base radio becomes operational again, and receives the status packets from the comparator, it again replies with a channel status message. The base radio returns to the idle state and is ready for an assignment from the comparator.

Extended Control Channel

For IP simulcast subsystems with 16 to 32 subsite capacity, the Transport Network requires longer than 1 second to recover following a failure due to greater payload delivery. To compensate for the subscriber unit scatter, the subscriber units are required to remain on the site for a longer duration following a control channel loss. A message is used to instruct the subscriber units to remain on the site for 20 seconds following the loss of a control channel. The base radio automatically transmits this message upon loss of packets from the prime site.

7.2 Base Radio Operational States for Trunked Repeater and HPD

A GTR 8000 Base Radio can be in one of four operational states:

- Standby
- Idle
- Assigned
- Isolated

During initialization, the base radio powers up into the **standby** state and waits for a status packet from the site controller. After initial contact with the site controller has been made, the base radio enters **idle** mode and sends a status message back to the site controller indicating that it is ready for assignment. The site controller responds with a channel grant message, and the base radio enables for service. If the base radio has a greater home channel preference setting than other base radios at the site, then the zone controller assigns the base radio as the home channel at the site.

After a base radio has been **assigned**, it can begin to handle inbound/outbound traffic. In the case where the base radio fails to receive a number of consecutive status packets from the site controller, the base radio enters **isolated** mode and dekeys. This isolated mode is reported in the Unified Event Manager.

If the base radio becomes operational again and receives status packets from the site controller, it replies with a channel status message. The site controller may then respond with a channel grant, and the base radio becomes enabled for service again.

7.3 Base Radio Operational States for Conventional

A GTR 8000 Base Radio can be in one of two operational states:

- Standby/Receiving
- Transmit

During initialization, the base radio powers up into the **standby/receiving** state and is enabled for service. The base radio listens for any received transmissions.

After the base radio has received a transmission, it can then key-up and **transmit**.



NOTE

The GPW 8000 Receiver does not transmit.

7.3.1 Packet Data interactions with Multiple NAC's

If a base radio supports multiple NAC's, such as when using the community base radio feature (F7F/F7E), in addition to a default NAC, inbound data can be received on any incoming NAC and is forwarded to its destination. Outbound data is only transmitted to the default NAC. Outbound data cannot be routed to a selected NAC, it is always sent on the default NAC. Repeated data is only transmitted on the default NAC and does not follow the inbound NAC when community repeater (F7F) is being used.

7.3.2 Supplementary Signaling interactions with Multiple NAC's

If a base radio supports multiple NAC's, such as when using the community base radio feature (F7F/F7E), in addition to a default NAC, inbound supplementary signaling can be received on any incoming NAC and is forwarded to its destination. Outbound supplementary signaling is transmitted on either the default NAC or the currently selected NAC if using F7F/F7E, the same that voice would be transmitted. Outbound supplementary signaling cannot be routed to a selected NAC, it is always sent using either the default NAC or the same NAC that voice would be transmitted on according to F7F/F7E functionality.

7.4 Illegal Carrier Determination Feature (Trunked)

The Illegal Carrier Determination feature allows radio channels to continue operating with system configurable levels of channel interference. In an ASTRO® 25 system, the base radio uses Received Signal Strength Indicator (RSSI), an RF Threshold Value, and the Malfunction Timer Value to implement this feature.

Table 7-1 Illegal Carrier Determination

If the channel receives a...	and is assigned:	and is not assigned:
Valid Network Access Code (NAC)	The base radio does not change since the carrier is considered valid.	If the RF Threshold Value is exceeded, the base radio enters the Illegal Carrier state and the base radio generates an Illegal Carrier message to UEM.
Invalid Network Access Code (NAC) OR Carrier activity without NAC	<p>If the RF Threshold Value level is exceeded, the Malfunction Timer Value is activated. After the timer expires, the base radio enters the Illegal Carrier state and the base radio generates an Illegal Carrier message to UEM.</p> <p>If the illegal carrier disappears or drops below the RF Threshold Value for 12.5%, but not less than 10 seconds of the time period defined by the Malfunction Timer Value, an event is sent to UEM.</p>	

7.5 RF Channel Interference Determination Feature (Conventional)

The RF Channel Interference Determination Feature allows radio channels to detect RF interference and log it to the station log. RF Channel Interference is declared when the Carrier Squelch level is exceeded and none of the receive qualifiers are met. Receive qualifiers are the programmed PL, DPL, or Rx NAC for the currently active channel.

8

GTR 8000 Base Radio Troubleshooting

GTR 8000 Base Radio troubleshooting requires an understanding of hardware-based and software-based diagnostics, as well as testing tools. Support is available from Motorola to assist with all steps in the troubleshooting process.

This chapter provides fault management and troubleshooting information relating to GTR 8000 Base Radio.

8.1 General Troubleshooting

Table 8-1 GTR 8000 Base Radio General Troubleshooting

Problem	Troubleshooting
General connectivity problems	<ol style="list-style-type: none">1. If you have access to the equipment, check the LEDs to verify that each piece of equipment is connected and operational. See 10.1 LEDs, page 10-1.2. In CSS, check the condition of the base radio and all associated devices and links.3. Verify the configuration of the base radio through CSS. Verify that the IP address for the base radio is correct. In CSS, send a diagnostic command to enable the base radio.4. Verify that the DNS Hostname for the base radio is correct. If the DNS Hostname was incorrect and then corrected, further corrections may be needed on the DNS server, UNC, and UEM. See the Troubleshooting chapter in the <i>Authentication Services</i> manual.5. Verify that the physical cabling is firmly connected and in good condition. Check for any sharp bends or kinks in cabling. Test suspected cabling for noise, continuity, attenuation, and crosstalk. Replace the cabling if necessary.6. Run ping, traceroute, pathping, and other network administration commands to identify any link or intermediate devices (switch or routers) with high latency or connection problems.7. If the connection fails to operate normally, send a restart command to the base radio through CSS. Consider cycling power to the base radio if necessary.8. If the base radio still fails to operate properly, create a backup of the current configuration, then reinstall the software and reconfigure the base radio.9. Replace the base radio if necessary.
Device will not power up	<ol style="list-style-type: none">1. If you have access to the equipment, check the LEDs to determine which equipment is connected and operational. See 10.1 LEDs, page 10-1.2. In CSS, check the alarms for the base radio.3. Check the power cabling and verify that the power source for the base radio is supplying the appropriate voltage. Try connecting the base radio to another power source or replace the power cabling if necessary.

Table 8-1 GTR 8000 Base Radio General Troubleshooting (cont'd.)

Problem	Troubleshooting
	 <div style="background-color: #00AEEF; color: white; padding: 2px 5px; display: inline-block; font-weight: bold; margin-left: 10px;">NOTE</div>
	<p style="text-align: center;">Check all power sources as there may be more than one.</p> <ol style="list-style-type: none"> 4. Check for any physical damage to the modules and check whether the modules were properly grounded. 5. Replace any defective modules.
Device is in a continuous reset state	Assure reference inputs are connected to the appropriate input.
Exciter Failure	Verify that an antenna relay that is Enabled either in the UNC or CSS may have been disconnected. This causes the base radio to generate an exciter failure because the antenna relay is controlled and monitored through the exciter module. However, the exciter failure should be ignored until after the antenna relay failure is corrected.
Analog (4-wire) Portion of V.24 Hybrid Link Failure	<p>In a mixed mode configuration, with hybrid links, and when analog link monitor tone is enabled (Analog Link Idle Check is enabled in the CSS), the base radio detects a link failure when the analog link monitor tone and call activity are absent on the receive line (WL1). Analog Idle Link Check in the CSS should be disabled when comparator type is ASTRO-TAC with DIGI-TAC or ASTRO-TAC with MLC 8000. When these failure conditions are met, the base radio will:</p> <ol style="list-style-type: none"> 1. Log an occurrence of the failure in the base radios local event log, which is retrievable through the configuration interface. 2. If connected to centralized fault management equipment (optional) then the base radio transmits an alarm indication to the fault manager to alert the system administrator of the failure. 3. A local visual indication is active due to this failure. <p>Recovery of the link failure results in a similar set of actions to indicate that the failure event cleared. Note that a failure of the transport line or a failure of the opposing host on the wireline link will both appear to the base radio as a link failure. The base radio cannot distinguish between these two cases.</p>
V.24 Portion of Hybrid Link Fails	<p>In a mixed mode configuration, with hybrid links, the base radio detects a V.24 link failure when packet activity is absent for a period of time on the outbound transmit line. When these failure conditions are met, the base radio will:</p> <ol style="list-style-type: none"> 1. Log an occurrence of the failure in the base radios local event log, which is retrievable through the configuration interface. 2. If connected to centralized fault management equipment (optional) then the base radio transmits an alarm indication to the fault manager to alert the system administrator of the failure. 3. A local visual indication is active due to this failure. 4. Invoke a failure announcement for the 4-wire link because the activity on the 4-wire link is driven by control signaling on the V.24 link. 4-wire link cannot be used when the V.24 link is down.

Table 8-1 GTR 8000 Base Radio General Troubleshooting (cont'd.)

Problem	Troubleshooting
	Recovery of the link failure results in a similar set of actions to indicate that the failure event cleared. Note that a failure of the transport line or a failure of the opposing host on the wireline link will both appear to the base radio as a link failure. The base radio cannot distinguish between these two cases.
Transceiver Option Card Hardware Malfunction	<p>In the event the base radio detects a hardware issue with the transceiver option card, when used for analog and mixed mode operation, it will:</p> <ol style="list-style-type: none"> 1. Log an occurrence of the failure in the base radios local event log, which is retrievable through the configuration interface. 2. If connected to centralized fault management equipment (optional), then the base radio transmits an alarm indication to the fault manager to alert the system administrator of the failure. The alarm will be associated with the base radios control module. 3. A local visual indication is active due to this failure.
Front Fan Malfunction	<p>In the event the fan assembly malfunctions, the base radio will:</p> <ol style="list-style-type: none"> 1. Log an occurrence of the failure in the base radios local event log, which is retrievable through the configuration interface 2. If connected to centralized fault management equipment (optional), then the base radio transmits an alarm indication of “warning” severity to the fault manager to alert the system administrator of the failure. The alarm will be associated with the base radios control module. 3. The base radio provides a local visual indication associated with the failure. 4. In the event the base radio detects the maximum operable temperature has been exceeded, then the base radio transitions to a critical malfunction state, log the state change, and generate a fault indication if connected to the UEM.
Power Consumption is greater than 35 W with power efficiency package	<p>The following conditions must be met to obtain a power consumption of less than or equal to 35 W:</p> <ul style="list-style-type: none"> • DC source only • Speaker turned OFF (if equipped with a transceiver option card) • No activation of Aux Out Relays (if equipped with a transceiver option card) • No 29 V AUX loads. For example, active draws by a site controller. • CSS configured for applications not requiring receiver diversity • CSS Fan Holdover configured to “short” (length of time the base radio fan stays ON after transmission) • Ambient temperature of 104 °F (40 °C) or less (single fan operation – disabling one of the fans within the fan module. See 9.3 Replacing the Fan Assembly, page 9-10 for instructions on how to disable the fan.)

**NOTE**

Table 8-1 GTR 8000 Base Radio General Troubleshooting (cont'd.)

Problem	Troubleshooting
	<p>To validate the 35 W standby power consumption specification, wait for the main fans to turn off after the transmitter dekeys. The turn off delay of the main fans is controlled by the fan holdover configuration in the CSS. Single fan operation requires the Tx Power Out in the CSS to be limited to 50 W.</p> <ul style="list-style-type: none"> • Transceiver, power amplifier, power supply, fan, and optional TCXO transceiver option card are all power efficiency package versions

8.2 Troubleshooting Tools

Several tools are available for viewing and monitoring equipment and troubleshooting suspecting problems:

- LEDs
- Unified Event Manager to monitor links and components
- Unified Network Configurator
- Configuration/Service Software (CSS)
- MOSCAD Network Fault Management (NFM)

In addition, see [3.5.1 Quick Connect RF Coaxial Adapters for GTR 8000 Base Radio Support, page 3-36](#) for testing system performance:

8.2.1 Using Unified Event Manager to Monitor Links and Components

Use Unified Event Manager (UEM) to monitor critical links and components in the system. Monitoring may take place remotely from a central operations center. Two types of monitoring include:

- Real-time monitoring of UEM Topology Maps, which alert you of faults as they occur.
- Evaluation of UEM Active Alarms Window on a regularly scheduled basis.

8.2.1.1 Analyzing Unified Event Manager Active Alarm Window

The Unified Event Manager (UEM) Active Alarms Window is useful for troubleshooting because it captures alarms that may occur intermittently or during off-hours. For example, you can review the Active Alarms Window to correlate reported loss of service with patterns of critical alarms for links and equipment.

When analyzing the Active Alarms Window, look for the following types of patterns:

- Failures sent with time stamps on or about the same time.
- Failures from related equipment:
 - cards in the same device
 - equipment that is part of the same subsystem.

Many devices are capable of sending out events that report both critical and non-critical events. Learn to distinguish between critical and non-critical events.

See the *Unified Event Manager* manual or *UEM Online Help* for further details.

8.2.1.2 Diagnostic Options in UEM

This table summarizes the base radio diagnostic options.


Table 8-2 Base Radio Diagnostic Options in UEM

Option	Description
Restart	Requests that the base radio perform a reset.
Service	Requests that the base radio enters service mode, allowing a technician to make alignment adjustments and run other tests while the base radio is offline.
Enabled	Requests that the base radio enter the enabled mode and handle traffic.

8.2.2 MOSCAD Network Fault Management

If MOSCAD Network Fault Management (NFM) equipment is supported at the site, additional status and alarm information for a device can be viewed through the MOSCAD NFM.

Figure 8-1 MOSCAD Network Fault Management

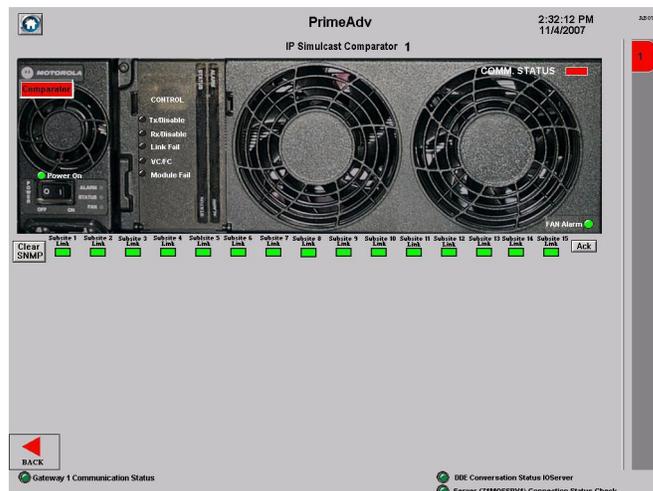

When an alarm condition occurs, the alarm box for one of the modules begins to flash red. Selecting the LED box opens an alarm pop-up window indicating details of the alarm. To view the status of all alarms for a particular module within the device, select the alarm LED box corresponding to the particular module. Alarms can be acknowledged by pressing the **Acknowledge** button on the screen.

See the *MOSCAD Network Fault Management* manual for details.

8.2.3 Using Unified Network Configurator for Troubleshooting

Use the Unified Network Configurator (UNC) to verify configuration data during system commissioning and later when you maintain or expand the system. Use UNC to do the following to the device:

- Verify configuration
- Correct configuration errors

See the *Unified Network Configurator* manual for further details.

8.2.4 Using Configuration/Service Software (CSS) for GTR 8000 Base Radio Troubleshooting

The base radio can be locally or remotely configured or serviced through Configuration/Service Software (CSS). CSS provides access to alarms, status information, and configuration settings for the base radio.

You can use CSS for the following tasks which may be useful when troubleshooting the base radio. See the *CSS Online Help* for specific details and instructions when performing these tasks.

- Enable and disable channels and services.
- View and save a log of base radio alarms.
- Verify the base radio configuration.
- Gather troubleshooting information that can be escalated to Motorola for evaluation.

8.2.4.1 Alarm Log from Internal Diagnostic Tests

The base radio has been designed with internal diagnostic tests that occur on power up and reset. Diagnostic tests are available for the control module and power supply. If a problem occurs during operation, it is reported as an alarm. All alarms are stored in the Alarm Log, accessible with CSS. The alarm log contains the name of the diagnostic test that failed and the time since the last power up.

8.2.4.2 Resetting Passwords and SNMPv3 Passphrases

The password reset mechanism in the CSS application can be enabled/disabled. See “Secure Remote Access Configuration > Device Security Configuration - Security Services (Serial)” in the *CSS Online Help* for information. To obtain the keys for resetting either password or SNMPv3 passphrases for the device, contact Motorola Solutions Customer Support.



NOTE

The default values for the local passwords and SNMPv3 passphrases, as well as the keys for the local password reset procedure, may vary by system release. These are treated as sensitive information and are provided to your organization through secured communication.

Table 8-3 Local Password and SNMPv3 Passphrase Troubleshooting

Scenario	SNMPv3 Passphrase Known	Local Password Known	To Reset SNMPv3 Passphrase	To Reset Local Login Password
User is locked out of local login, but knows SNMPv3 passphrases	✓	✗	See the <i>CSS Online Help's</i> “SNMPv3 User Configuration”.	See the <i>CSS Online Help's</i> “Resetting Device Passwords.”
User knows local login, but not the SNMPv3 passphrases	✗	✓	See the <i>CSS Online Help's</i> “Reset SNMPv3 Configuration (Serial)”.	See the <i>CSS Online Help's</i> “Device Security Configuration – Security Services (Serial)”
User knows both passphrases and local service password	✓	✓	See the <i>CSS Online Help's</i> “SNMPv3 User Configuration”.	See the <i>CSS Online Help's</i> “Device Security Configuration – Security Services (Serial)”
User does not know SNMPv3 passphrase nor service account password	✗	✗	Contact Motorola Solutions Customer Support.	Contact Motorola Solutions Customer Support.

8.3 Site Controller Failure – Impact on GTR 8000 Base Radio for Trunked Operation

If the link fails between the base radio and the site controller, the base radio dekeys and does not handle any MSU traffic. MSUs attempt to operate on another channel at the site. If another channel is not available, the MSUs attempt to register at another site.

For HPD operation, the base radio receives external frequency reference and network time synchronization from the active site controller over the Ethernet link. In the event of loss of the external time and frequency reference source, the base radio continues to maintain its own time and frequency stability to continue operations for a specified amount of time without degradation. After a period of time, operation continues with minimal degradation.

8.4 Conventional Site Controller Failure - Impact on GTR 8000 for Conventional Operation

For IP interfaced conventional base radios, a conventional site controller provides support for dispatch consoles to manage and control the conventional base radios in K1/K2 and M1/M2/M3 type systems, the conventional site controller only provides support for the console to manage and control the conventional base radios when the primary (and optional secondary) zone controllers are not reachable.

If the conventional site controller fails when it is the active call controller in either type system, the dispatch console loses its ability to manage and control the channel resources. However, subscriber radios may still be able to maintain communications using repeat functionality of the base radios or when the base radios are connected to a comparator. The comparators repeat functionality enables wide area repeat for subscribers.

8.5 Using Motorola System Support Center (SSC)

Motorola support centers can help technicians and engineers resolve system problems and ensure that warranty requirements are met. Check your contract for specific warranty information.

Motorola assigns a tracking ticket number that identifies each support call. This allows Motorola to track problems, resolutions, and activities for the call. If possible, communicate the resolution and a status of call so that the Motorola System Support Center (SSC) can note the resolution and close the ticket.

8.5.1 Gathering Information Before Calling Motorola

Before calling the Motorola System Support Center (SSC), log any and all steps taken to troubleshoot the problem and any results of those steps. The Motorola System Support Center (SSC) can use this information to determine the appropriate support actions.

Collect the following information:

- System ID number (such as 2CB5). Each zone in the system has a unique system ID number.
- Location of the system
- Date the system was put into service
- Software and firmware versions
- Symptom or observation of the problem, such as:
 - When did it first appear?
 - Can it be reproduced?
 - Are there any other circumstances contributing to the problem (for example, loss of power)?
- Maintenance action preceding the problem, such as:
 - Upgrade of software or equipment
 - Changes to hardware or software configuration
 - Reload of software from a backup disk or from CD with the version and date

8.5.2 Where to Call for Service

After collecting the required information and writing a detailed problem report, contact the Motorola System Support Center (SSC) to help with the problem:

8.5.2.1 Motorola System Support Center (SSC)

The Motorola System Support Center (SSC) is the primary Motorola contact. Call Motorola System Support Center (SSC):

- Prior to any software reload.
- To confirm troubleshooting results and analysis before removing and replacing a Field Replaceable Unit (FRU) or Field Replaceable Equipment (FRE) to repair the system.

Motorola System Support Center (SSC):

- Phone: (800) 221-7144 for domestic calls and (302) 444-9800 for international calls

- Fax: (847) 725-4073

8.5.3 Use of Subcontractors

The Motorola System Service Subcontractor Assessment program ensures that service people contracted by Motorola meet strict minimum requirements before they can work on any system. For more information on this program, contact the Motorola representative.

9 GTR 8000 Base Radio FRU Procedures

GTR 8000 Base Radios are comprised of numerous field replaceable units (FRUs) and field replaceable parts. If you need to replace a FRU or part, it is essential to obtain the precise FRU Kit Number or Part Number and to review the replacement procedures provided, including all safety precautions and system impact information.

This chapter lists the Field Replaceable Units (FRUs) and Field Replaceable Entities (FREs) and includes replacement procedures applicable to GTR 8000 Base Radio.

9.1 Field Replaceable Units (FRUs) and Parts

When ordering field replaceable units (FRUs), you will need the FRU Kit Number. When ordering field replaceable parts, you will need the Part Number. Contact Motorola System Support Center (SSC) as needed for numbers not provided here (for cables that are internal to a GTR 8000 Base Radio, the part numbers are not listed in this documentation, but you can locate the part number on the cable itself before contacting Motorola Support). See [8.5 Using Motorola System Support Center \(SSC\)](#), page 8-8.



WARNING

To guard against personal injury and/or damage to equipment, switch a trunked base radio to Service Mode when performing service. The GTR 8000 Base Radio periodically keys up to pseudo train its linear transmitter autonomously when it is not assigned by the zone controller. Tx Inhibiting the base radio also prevents the transmitter from keying. Remember to switch the base radio back to Normal Mode when service is complete.

Table 9-1 GTR 8000 Base Radio Field Replaceable Units

Component Type	FRU Kit Number	Replacement Procedure
Transceiver Module (700/800 MHz)	DLN6566A	
Transceiver Module (UHF R1, 380435 MHz)	DLN1395A	
Transceiver Module (UHF R2, 435524 MHz)	DLN1346A	
Transceiver Module (VHF, 136174 MHz)	DLN1376A	
Power Efficiency Transceiver Module (UHF R1, 380435 MHz)	DLN6786A	9.2 Replacing a Radio Transceiver Module , page 9-4
Power Efficiency Transceiver Module (UHF R2, 435524 MHz)	DLN6789A	
Transceiver Module w/OCXO Transceiver Option Card (700/800 MHz)	DLN1430A	

Table 9-1 GTR 8000 Base Radio Field Replaceable Units (cont'd.)

Component Type	FRU Kit Number	Replacement Procedure
Transceiver Module w/OCXO Transceiver Option Card (UHF R1, 380–435 MHz)	DLN1432A	
Transceiver Module w/OCXO Transceiver Option Card (UHF R2, 435–524 MHz)	DLN1433A	
Transceiver Module w/OCXO Transceiver Option Card (VHF 136–174 MHz)	DLN1431A	
Power Efficiency Transceiver Module w/TCXO* Transceiver Option Card (UHF R1, 380–435 MHz)	DLN6787A	
Power Efficiency Transceiver Module w/TCXO* Transceiver Option Card (UHF R2, 435–524 MHz)	DLN6790A	
Fan Module	DLN1338A	9.3 Replacing the Fan Assembly, page 9-10
Power Efficiency Fan Module	DLN6804A	
AC/48V DC Power Supply	DLN6568B (0182516W12) or DLN6781A (0182516W14)	9.4 Replacing a Power Supply, page 9-13
Power Efficiency AC/48V DC Power Supply	DLN6793A	
Power Supply Fan Module	5985167Y02	9.5 Replacing a Power Supply Fan, page 9-15
Mid-Power (Power Amplifier Module) 700/800 MHz	DLN6567A	
Mid-Power (Power Amplifier Module) UHF R1, 380435 MHz	DLN1396A	
Mid-Power (Power Amplifier Module) UHF R2, 435524 MHz	DLN1347A	9.6 Replacing a Power Amplifier, page 9-17
Power Efficiency Power Amplifier Module UHF R1, 380435 MHz	DLN6788A	
Power Efficiency Power Amplifier Module UHF R2, 435524 MHz	DLN6792A	
Mid-Power (Power Amplifier Module) VHF, 136174 MHz	DLN1377A	

* Available only for non-simulcast conventional systems.

Table 9-2 GTR 8000 Base Radio Field Replaceable Parts

Component Type	Part Number	Replacement Procedure
GTR 8000 Base Radio Backplane	0180706H88	9.7 Replacing the GTR 8000 Base Radio Backplane, page 9-21
Preselector 700 MHz	0185171Y02	
Preselector 800 MHz	0185171Y01	
Preselector Mounting Bracket	0785024Y01	
Preselector QMA Cable End	3085664Y01	
Preselector BNC to QMA Cable	3085665Y01	
Preselector Mini UHF N-Bulkhead Cable	3085664Y02	9.8 Replacing a Preselector Filter, page 9-27
Preselector Mini UHF BNC Cable	3085664Y03	
Preselector UHF 380–433 MHz	CFX1075A	
Preselector UHF 435470 MHz	TLE5992A	
Preselector UHF 470524 MHz	TLE5993A	
Preselector VHF 136154 MHz	TFD6511A	
Preselector VHF 150174 MHz	TFD6512A	
Transmit Post Filter 700 MHz	9184680Y01	9.9 Replacing Transmit Filters (700/800 MHz), page 9-28
Transmit Post Filter 800 MHz	9184680Y02	
External Dual Circulator Tray	DLN1317A	9.10 Replacing the Dual Circulator/Isolator Modules, page 9-30
External Dual Circulator Tray UHF 380–435	CLE6203A	
Duplexer 700 MHz	9184718Y01	9.11 Replacing a Duplexer (700/800 MHz), page 9-35
Duplexer 800 MHz	9184718Y02	
Duplexer UHF 380403 MHz	0185417U10	
Duplexer UHF 403435 MHz	0185417U04	
Duplexer UHF 435470 MHz	0185417U05	9.12 Replacing a Duplexer (UHF), page 9-37
Duplexer UHF 470494 MHz	0185417U06	
Duplexer UHF 494512 MHz	0185417U07	
Duplexer VHF 136146 MHz	0185417U01	
Duplexer VHF 144160 MHz	0185417U02	9.13 Replacing a Duplexer (VHF), page 9-39
Duplexer VHF 158174 MHz	0185417U03	
Antenna Relay kit including relay, cable, screws	CLN8636A	9.14 Replacing an Antenna Relay, page 9-40
Antenna Relay	40009272002	
External Speaker Kit	HSN1006A	
Microphone Kit	GMMN4063B	

Table 9-3 Individual Replaceable Parts on External Dual Circulator Tray

Component Type	Part Number	Replacement Procedure
Dual Circulator 700/800 MHz	0185172Y01	
Dual Circulator UHF 380435 MHz	0185416U09	
Dual Circulator UHF 435470 MHz	0185416U05	
Dual Circulator UHF 470524 MHz	0185416U06	
Dual Circulator VHF 136146 MHz	0185416U01	
Dual Circulator VHF 144160 MHz	0185416U02	9.10 Replacing the Dual Circulator/Isolator Modules, page 9-30
Dual Circulator VHF 158174 MHz	0185416U03	
Circulator Load 700/800 MHz	TLN3391A	
Circulator Load UHF/VHF	TLN3391A	
Low Pass/Harmonic Filter 700/800 MHz	9185202U04	
Low Pass/Harmonic Filter UHF	9185856Y01	
Low Pass/Harmonic Filter VHF	9185856Y03	

Table 9-4 GTR 8000 Base Radio Cables


Component Type	Part Number
System Connector Cable – SCSI2 Base Radio to Champ	30009301004
Antenna Relay Control Cable	3084848Y01
Antenna Relay Mini UHF Cable	3085664Y04
Antenna Relay QMA Cable	3085664Y05
Antenna Relay BNC Cable	3013943J08
Antenna Relay 75 CM Cable	3013942M23
Antenna Relay 32 CM Cable	3013942M11
Antenna Relay 25 CM Cable	3013943E08
External Speaker Cable	0185180U01
Cable DC Red/Black 2806mm	3084869Y02
Cable DC Black/Blue 2806mm	3084869Y06
Battery Temp Sensor 3000mm	0184833Y01
Cable Battery Temp Extension 15500mm	3084827Y04

9.2 Replacing a Radio Transceiver Module

Figure 9-2 GTR 8000 Base Radio Modules shows the captive screws that secure the transceiver module to the chassis in the standalone base radio configuration.

Figure 9-1 Transceiver Module

GTR8000_XCVR_wSAC

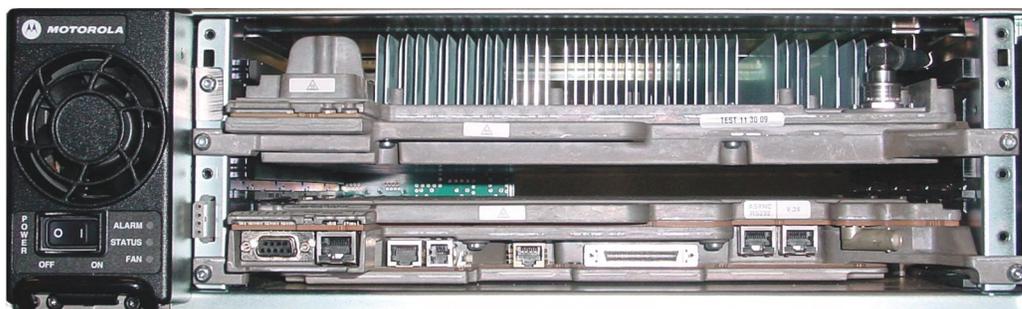Figure 9-2 GTR 8000 Base Radio Modules

GTR8000_XCVR_wSAC_chassis

**NOTE**

If you do not know the IP address for the device, it is available through a serial port connection in the **Tools, Set IP Address** from the menu.

**IMPORTANT**

Before replacing the transceiver, pull configuration and hardware information from the transceiver into the Unified Network Configurator (UNC) by performing a Pull All” procedure from the UNC. For instructions on How to Perform a Pull All” procedure, see the *Unified Network Configurator* manual.

This step may not be possible if communication is severed between the transceiver and the UNC or if the transceiver is within a K1/K2 or non-networked site. If this scenario exists, perform any one of the following:

- Use the last known good configuration files from the UNC
- Extract the configuration files from the transceiver directly

9.2.1 How To Replace a Transceiver Module

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) strap and connect its cable to a verified good ground. Be sure to wear this strap throughout this procedure to prevent ESD damage to any components.

- 2 Locate the transceiver module you need to replace.

- 3 If the transceiver module is not operational, skip to [step 8](#).

- 4 Connect to the base radios transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

- 5 Save the base radio configuration to the laptop PC as follows:
 - a. Select **File** → **Read Configuration From Device** from the menu.
 - b. At the success message, click **OK**.
 - c. Select **File** → **Save As** from the menu. On the Properties Screen enter the IP address of the base radio. Click **OK**.
 - d. On the Save window, select the directory where you want to save the configuration file, type a meaningful name for the file (use .cpl as the extension or do not type an extension). Press ENTER.

Step result: The base radio configuration is saved to the location indicated. The configuration file will be reloaded later to the replacement transceiver.

- 6 For a trunked base radio, disable the channel before replacing the module, so the system does not attribute the loss of channel to a failure. Disable the base radio as follows:

**NOTE**

It is not necessary to turn off the power supply for the transceiver module being replaced, as the modules are designed to be swapped out with the power on.

If you choose to turn off the power, set the rocker switch on the front of the associated power supply to the Off (0) position.

- a. Select **Service** → **Test Measurement Screen** from the menu.
- b. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 7 Disconnect the Ethernet cable from the service port on the transceiver being replaced.

- 8 Remove the fan assembly to gain access to the transceiver module. See [9.3 Replacing the Fan Assembly, page 9-10](#) for instructions on removing the fan assembly.

**IMPORTANT**

Although the transceiver module is designed to be swapped out without shutting the power off, you should minimize the amount of time that the fan assembly is removed, so the circuitry that remains powered on does not overheat and shut down.

- 9 Label and disconnect all cables from the ports on the transceiver.

- 10 Using a T20 bit, loosen the two captive screws on the front of the transceiver module, so that they disengage from the chassis.

- 11 Using the handle, gently pull the transceiver module straight out, along the guides on which it sits.
- 12 Slide in the replacement transceiver module along the guiding rails until it is engaged. A slight push may be needed to engage the module.

**IMPORTANT**

If the transceiver module stops well before it is engaged, it is in an incorrect position. Either it is in the wrong slot or it is rotated 180°. The module has a keying feature that prevents it from going all the way into an incorrect slot, or going into the correct slot but rotated 180. Do not try to force the module.

Step result: LEDs on the transceiver turn on when it is engaged.

- 13 Secure the transceiver module to the chassis with the two captive screws on the front of the module.
- 14 Reconnect all cables to the ports on the transceiver.
- 15 Reinstall the fan assembly. See [9.3 Replacing the Fan Assembly, page 9-10](#).

**NOTE**

If you chose to turn off the power, set the rocker switch on the front of the associated power supply to the On (1) position.

- 16 Connect to the devices DB-9 serial service port using Configuration/Service Software (CSS). See [4.4.2 Connecting Through a Serial Port Link, page 4-4](#).
- 17 Set the IP Address and BR_CM Pairing Number for the device. See [4.4.3.1 Setting the Device IP Address and Pairing Number Using CSS, page 4-7](#).
- 18 Set the Serial Security Services Using CSS. See [4.4.3.3.1 Setting the Serial Security Services Using CSS, page 4-9](#).
- 19 Disconnect the laptop PC from the transceivers DB-9 serial port.
- 20 Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
- 21 Reconfigure the SNMPv3 user credentials. See [4.4.5.3 Changing SNMPv3 Configuration and User Credentials Using CSS, page 4-15](#).
- 22 Set the SWDL transfer mode. See [4.4.5.6 Setting the SWDL Transfer Mode Using CSS, page 4-23](#).
- 23 Reconfigure for SSH. See Chapter 4, "Configuring SSH for RF Site Devices and VPMs Using CSS" in the *Securing Protocols with SSH* manual or see "Device Security Configuration Remote Access/Login Banner (Ethernet)" in the *CSS Online Help*.

- 24 Restore the following Clear Protocols parameters in the Remote Access Configuration tab on the Device Security Configuration screen in CSS. See “Device Security Configuration Remote Access/Login Banner (Ethernet)” in the *CSS Online Help*.
-
- 25 Update/Verify the DNS, Syslog, and RADIUS Service Configuration. See Chapter 7 of the *Authentication Services* manual.
-
- 26 Set the NTP Server Settings. See “NTP Server Settings” in the *CSS Online Help*.
-
- 27 Open the Software Download application.

**CAUTION**

Make sure to load the correct version of the software. There is a possibility of a mismatch in software versions when replacing the transceiver module with an on-hand spare. If a mismatch in software versions occurs, this may cause the transceiver to go into a configuration mode of operation with a reason of ‘Invalid Software Version’. To exit the base radio out of configuration mode, see CSS Procedures > Changing from Configuration to Normal Mode in the CSS Online Help.

- 28 Transfer and install the latest base radio software using Software Download as follows:
- Select **File** → **File Manager** from the menu.
Step result: The **Software Depot File Manager** opens.
 - Select **Component Operations** → **Import Fileset** from the menu.
Step result: The **Import a Fileset Into the Software Depot** dialog box appears.
 - Click **Browse** and search for the **swdlv3.cfg** file on the CD. Click **Open**.
 - Click **Generate** to add the file to the Components In the Software Depot list. Click **OK**.
 - Exit the Software Depot File Manager.
 - From Software Download, select the appropriate ASTRO 25 system Site Type, and the relevant zone and site information, and if applicable, the Subsite. The Subsite ID is only available when the Site ID is between 1-64.
 - Select **Single Device Mode**.
 - Enter the **<IP address>** of the device. Click **Continue**.
 - In the Select an option window, select **Upgrade Software Application**. Click **Continue**.
 - Select either **Site Repeater**, **HPD Base Radio**, **Multisite Base Radio**, or **Conventional Base Radio** for the Application Type.
 - Select **Transfer and Install** for the Operation Type.
 - For Software Component, select a configuration fileset from the drop-down list. If the desired configuration fileset needs to be imported, perform substeps 1 through 5.
 - Select **Start Operation**.
- Step result:** The software is transferred and installed on to the device. This takes several minutes to complete. When completed, the two progress bars on the Transfer and Install window display 100% and a completion message displays in the Transfer message box.
-

-
- 29 Reload the base radio configuration file on to the new base radio, as follows:
- From CSS, select **File** → **Open** from the menu. Locate and open the previously saved configuration file for the base radio.

**NOTE**

If you were not able to back up the base radio configuration from the previous base radio, you can use the configuration from your system build book or use the default base radio configuration file. Specific settings for the base radio must still be configured. See the *CSS Online Help* for GTR 8000 Base Radio for detailed configuration instructions. If the base radio is part of a Power Efficiency Package, make sure the base radio Tx Power Out in the CSS is limited to 50 W.

- Click **OK** on the Properties window.
- Select **File** → **Write Configuration To Device** from the menu. Click **OK**.

Step result: The configuration from the file you selected is loaded into the base radio. Communication with the base radio is not available until the reset is complete.

- 30 For a trunked base radio, enable the base radio as follows:
- Select **Service** → **Test Measurement Screen** from the menu.
 - Click **Change to Normal Mode**.

Step result: The base radio is enabled.

- 31 Disconnect the laptop PC from the transceiver.
-

- 32 Perform a centralized software download and installation.
- Connect the PC Ethernet to the local LAN.
 - Initiate a centralized software download to the site controller to make sure all devices are on the correct software version and the same VLAN.

**NOTE**

For a conventional base radio, a centralized software download is not available.

- 33 Disconnect the PC Ethernet from the local LAN.
-

- 34 On systems with SNMPv3 enabled, enable passphrase information. For procedures to enable passphrases, see the *SNMPv3* manual.
-

- 35 On systems with MAC Port locking, disable the locking and then re-enable the locking with the MAC address of the base radio. The device being replaced may be connected to an Ethernet port on a switch which implements MAC Port locking (HP switch or site controller). If so, the Ethernet switch port will need to be unlocked and relocked to the MAC address of the replacement device. See the *MAC Port Lockdown* manual for instructions on how to disable and enable MAC port locking.

**NOTE**

Following the device restoration, if it was connected to an HP switch port, the HP switch port may have been disabled due to an unexpected MAC address. If so, re-enable the port on the HP switch.

- 36 Replace the transceiver in the UNC. See Chapter 4, “Replacing a Device” in the *Unified Network Configurator* manual.
-
- 37 Discover the base radio in the UEM. See the *Unified Event Manager* manual.
-
- 38 Verify the transceiver module is operating properly:
- The Status LED on the front of the transceiver is green.
 - Proper operation is confirmed using software tools, such as UEM, and the Transmitter Metering Screen in Configuration/Service Software (CSS).
-

9.3 Replacing the Fan Assembly


To prevent overheating, this fan must be in place at all times, except during servicing.

**IMPORTANT**

The fan assembly is designed to be swapped out without shutting the power off. The replacement fan assembly must be in place within a reasonable amount of time, so that the device module does not overheat and shut down.

**WARNING**

When removing a fan module care should be taken to avoid contacting moving fan blades before and after removal with tools, hands, or other objects. If you are removing the fan module to access or replace the modules behind it, it is recommended that you turn off the equipment power and allow the modules to cool before performing any work as the surfaces of the modules can be extremely hot.

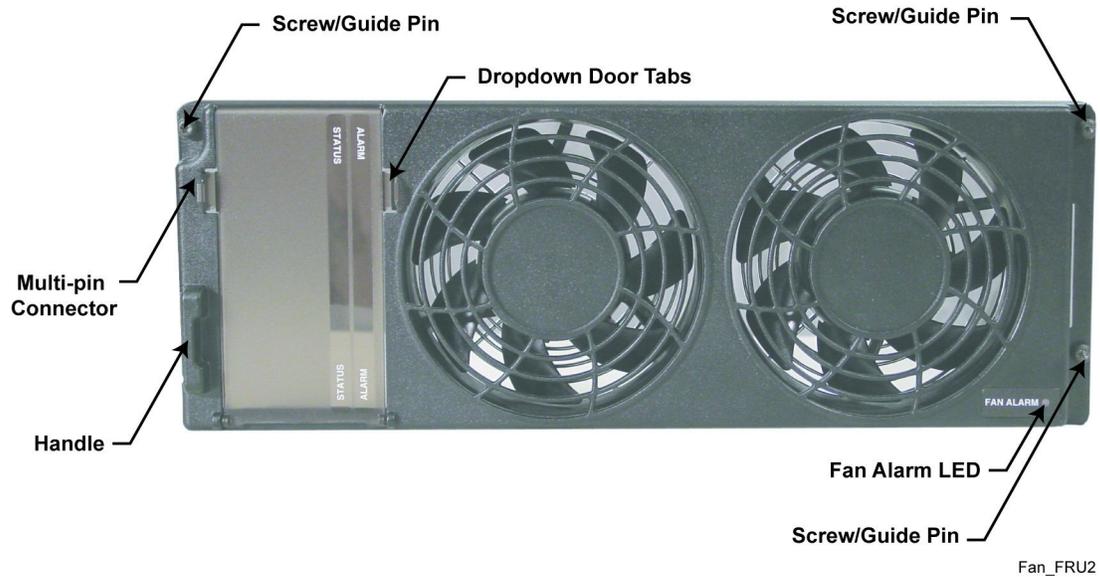Figure 9-3 Fan Assembly

9.3.1 How To Replace the Fan Assembly

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.
- 2 Using a T20 bit, loosen the three captive screws on the front of the fan assembly, so they disengage from the chassis.
- 3 Using the handle on one end and the edge on the other side, gently pull the fan assembly straight out to disengage the connector.

4

**NOTE**

All fan modules are delivered from the factory for dual fan operation. If the base radio/receiver is part of a power efficiency package configuration, the DLN6804A fan module must be used and converted for single fan operation. Also, make sure the Tx Power Out in the CSS is limited to 50 W.

Convert for single fan operation:

- a. Lift the connector harness out of the rubber retainer.
- b. Disconnect the connector harness.
- c. Place each connector end into the individual pockets of the rubber retainer.

**NOTE**

The DLN6804A fan module can also be used in a non power efficiency package configuration. However, the fan module must be configured for dual fan operation.

-
- 5 Using the guide pins and the connector on the back of the new fan assembly, push the fan assembly into place until it feels secure.
-
- 6 Tighten the three captive screws. Torque to 17 ± 2 in-lb.
-
- 7 Verify that the fan assembly is operating properly, and the fan's Alarm LED is off. You can also use software tools, such as Unified Event Manager or CSS to verify the status of the equipment.
-

9.4 Replacing a Power Supply

Figure 9-4 Power Supply



HPD_Power_Supply_FRU.jpg



NOTE

The power supply output is directly mapped to a PA/transceiver combination. Removal of a power supply will result in a loss of the associated transmit channel until the replacement power supply is inserted and turned ON.

It is recommended that you disable the channel before replacing the module, so that the system does not attribute the loss of channel to a failure. You can disable a channel using Unified Event Manager, or the Configuration/Service Software (CSS).



WARNING

The Power Supply module contains dangerous voltages which can cause electrical shock to people or damage to equipment.

9.4.1 How To Replace a Power Supply

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.
- 2 Disable the base radio that is using the power supply module being replaced, so the system does not attribute the loss of channel to a failure.
 - a. Connect to the base radio's transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 3 Push the power rocker switch to Off (0) on the power supply unit.

- 4 Using a T20 bit, loosen the two captive screws on the front of the power supply, so that they disengage from the chassis.

**WARNING**

It is recommend to let the power supply module cool before performing the following step, which exposes surfaces of the module that can be extremely hot.

- 5 Pull on the metal handle to disengage the power supply from the backplane, and remove it completely from the chassis.
- 6 Slide the replacement power supply into place, pushing gently until it seats.
- 7 Tighten the two captive screws on the front of the power supply.
- 8 Turn the power button to On, and verify that the power supply is operating properly.
 - The power supply Status LED is green.
 - The power supply Alarm LED is off.
 - The power supply Fan LED is off.
 - Proper operation is confirmed using software tools, such as Unified Event Manager, and the Power Supply Metering Screen in Configuration/Service Software (CSS).

- 9 Enable the base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.

9.5 Replacing a Power Supply Fan

The power supply fan is a field replaceable unit (FRU).



NOTE

Replacing the power supply fan requires that the entire power supply module be removed. The power supply output is directly mapped to a PA/transceiver combination. Removal of a power supply will result in a loss of the associated transmit channel until the replacement power supply is inserted and turned ON.


It is recommended that you disable the channel before replacing the module, so that the system does not attribute the loss of channel to a failure. You can disable a channel using both the Unified Event Manager or the Configuration/Service Software (CSS).



WARNING

The Power Supply module contains dangerous voltages which can cause electrical shock to people or damage to equipment.

Figure 9-5 Power Supply Fan

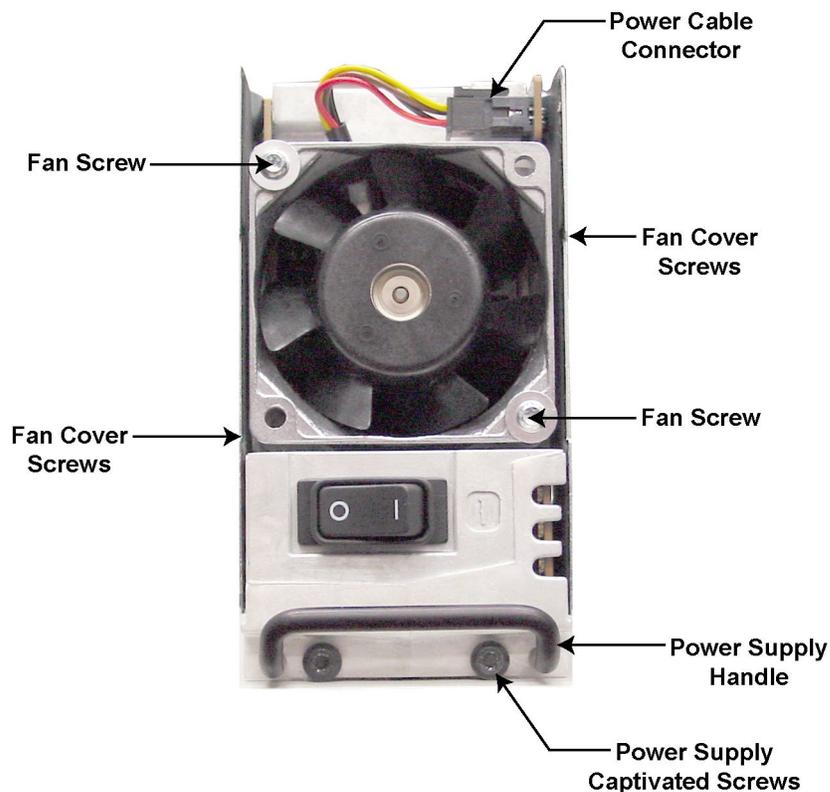

GTR8000_PS_Fan_Front1

9.5.1 How To Replace a Power Supply Fan

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.

- 2 Disable the base radio that is using the power supply fan being replaced, so the system does not attribute the loss of channel to a failure.
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 3 Set the rocker switch on the front of the power supply to Off (0).

- 4 Using a T20 bit, loosen the two captive screws on the front of the power supply module, so that they disengage from the chassis.

**WARNING**

It is recommended that you let the power supply module cool before performing the following step, which exposes surfaces of the module that can be extremely hot.

- 5 Pull on the metal handle to disengage the power supply from the backplane, and remove it completely from the chassis.

- 6 Remove the fan cover from the power supply module
 - a. Using a T15 bit, remove the 4 screws that connect the cover to the sides of the power supply module.
 - b. Slide the cover off (tilting the top edge out and lifting the bottom edge above the power supply handle).

- 7 Disconnect the power cable located above the fan.

- 8 Remove the two screws that secure the fan to the power supply.

- 9 Remove the fan and insert the new fan.

- 10 Secure the fan to the power supply with the two screws.

- 11 Attach the power cable for the fan to the connection on the power supply.

- 12 Replace the fan cover:
 - a. Slide the cover on, tilting the bottom edge in, past the power supply handle.
 - b. Using a T15 bit, insert and tighten the 4 screws that connect the cover to the sides of the power supply module.

- 13 Slide the power supply into place, pushing gently until it seats.

- 14 Tighten the two captive screws on the front of the power supply module.

- 15 Turn the power button to On, and verify that the power supply is operating properly.
 - The power supply Status LED is green.
 - The power supply Alarm LED is off.
 - The power supply Fan LED is off and the fan is operating.
 - Proper operation is confirmed using software tools, such as Unified Event Manager, and the Power Supply Metering Screen in Configuration/Service Software (CSS).

- 16 Enable the base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.

9.6 Replacing a Power Amplifier

Figure 9-7 shows the captive screws that secure the power amplifier module to the chassis in the GTR 8000 Base Radio.

Figure 9-6 Power Amplifier Module


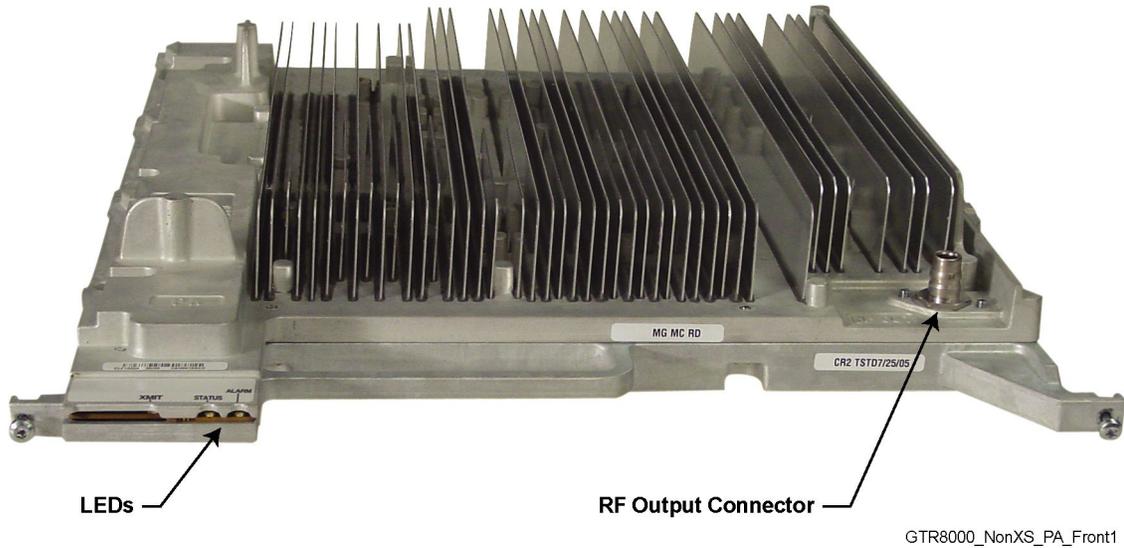


Figure 9-7 Captive Screws

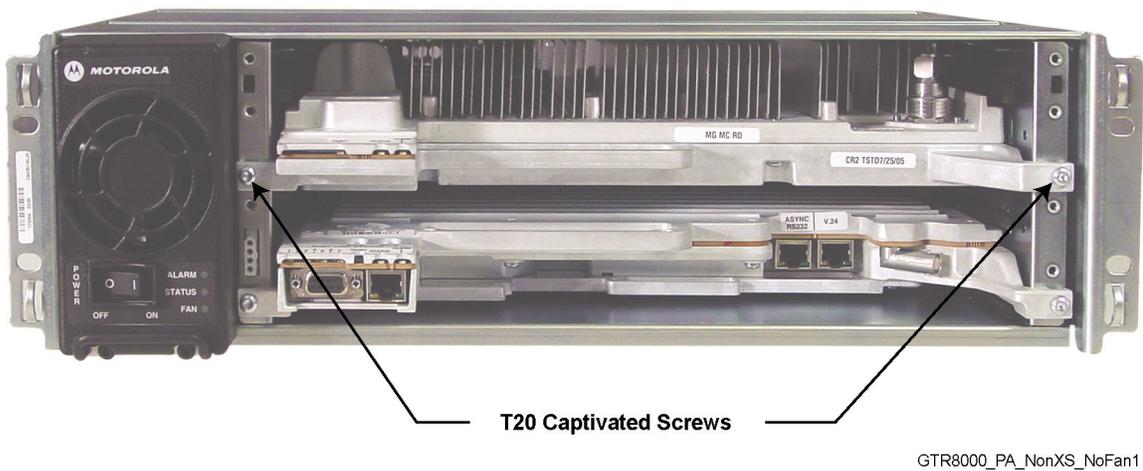

9.6.1 How To Replace a Power Amplifier

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.
- 2 If the base radio is not operational, skip to [step 5](#).

- 3 Disable the base radio associated with the power amplifier module being replaced, so that the system does not attribute the loss of channel to a failure.
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

4



NOTE

It is not necessary to turn off the power supply for the power amplifier module you are replacing, as the power amplifier modules are designed to be swapped out with the power on.

If you choose to turn off the power, set the rocker switch on the front of the associated power supply to the Off (0) position.

- 5 Remove the fan assembly to gain access to the power amplifier module. See [9.3 Replacing the Fan Assembly](#), page 9-10 for instructions on removing the fan assembly.



IMPORTANT

The power amplifier module is designed to be swapped out without shutting the power off. However, you should minimize the amount of time that the fan is removed, so the circuitry that remains powered on does not overheat and shut down.




CAUTION

It is recommended that you let the power amplifier module cool before performing the following step, which exposes surfaces of the module that can be extremely hot.

- 6 Using a T20 bit, loosen the two captive screws on the front of the power amplifier module so that they disengage from the chassis.
-

- 7 Remove the RF output QN connector from the front of the power amplifier module, as follows.
 - a. Pull the power amplifier out of the chassis far enough so that the QN (quick-N) RF output connector is accessible.
 - b. Disconnect the cable from the power amplifier.

Figure 9-8 GTR 8000 Power Amplifier RF Cable (Front)

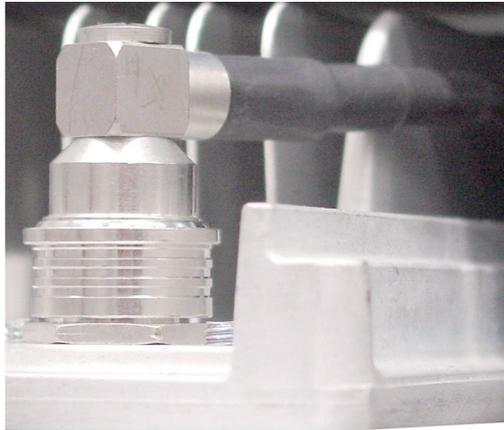

GTR8000_XCVR_RFCable_On

- 8 Using the handle, gently pull the power amplifier module straight out, along the guides on which it sits.
- 9 Reconnect the RF cable to the RF output QN connector on the front of the power amplifier module, as follows:
 - a. While holding the RF cable, slide in the replacement power amplifier module along the guiding rails until the RF cable connector can reach the RF connection on the front of the module.
 - b. Push the RF cables connector on to the module's connector until it snaps securely into place.
- 10 Slide in the replacement power amplifier module until it engages with the backplane. A slight push may be needed to engage the module.



IMPORTANT

If the power amplifier module stops well before it is engaged, it is in an incorrect position. Either it is in the wrong slot or it is rotated 180°.

- 11 Secure the power amplifier module to the chassis with the two captive screws on the front of the module.
- 12 Reinstall the fan unit. See [9.3 Replacing the Fan Assembly, page 9-10](#).



NOTE


If you chose to turn off the power, set the rocker switch on the front of the associated power supply to the On (1) position.

- 13 Verify that the power amplifier is operating properly.
- The power amplifier Status and Transmit LEDs are green.
 - The Alarm LED is off.
 - Proper operation is confirmed using software tools, such as Unified Event Manager, and the Transmitter Metering Screen in Configuration/Service Software (CSS).
-
- 14 Enable the base radio as follows:
- a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.
- Step result:** The base radio is enabled.
-

9.7 Replacing the GTR 8000 Base Radio Backplane

In a GTR 8000 Base Radio, the backplane is the circuit board at the rear of the card cage which connects the power supply, transceiver and power amplifier. [Figure 9-9](#) shows the metal cover that must be removed to access the backplane. See [3.4.5 Connections – Rear \(Integrated Voice and Data\)](#), page 3-23 and [3.4.6 Connections – Rear \(HPD\)](#), page 3-26 for the ports and cables that must be disconnected in order to remove the cover.

Figure 9-9 GTR 8000 Base Radio Showing Connections to Backplane Through Backplane Cover

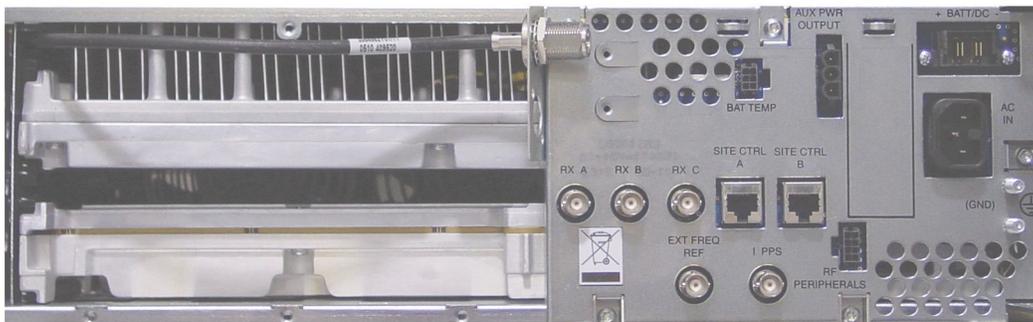

GTR8000_base_radio_rear



NOTE

The procedure assumes the following service access clearances:

- At least 60.96cm (2 ft) access at the rear of the rack, or
- At least 60.96cm (2 ft) access on one side of the rack, and at least 6 inches at the rear of the rack

9.7.1 How To Replace a GTR 8000 Base Radio Backplane

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) strap and connect its cable to a verified good ground. Be sure to wear this strap throughout this procedure to prevent ESD damage to any components.
- 2 If the base radio is not operational, skip to [step 4](#).
- 3 Disable the base radio with the backplane being replace, so the system does not attribute the loss of channel to a failure.
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.
- 4 Push the power rocker switch power supply unit to Off (0).
- 5 Label and disconnect all cables from the base radio backplane.

**NOTE**

There is an RF output cable from the power amplifier which connects through a metal bulkhead to the left of the backplane. This does not need to be disconnected. However, to access the backplane screw behind the metal bulkhead, remove the two screws securing the bulkhead to the inner chassis at the left of the backplane using a T20 bit.

- 6 Label, then disconnect all cables from the front ports on the transceiver.
- 7 Remove the power supply module from the chassis as follows:
 - a. Using a T20 bit, loosen the two captive screws on the front of the power supply, so that they disengage from the chassis.

**WARNING**

It is recommend to let the power supply module cool before performing the following step, which exposes surfaces of the module that can be extremely hot.

- b. Pull on the metal handle to disengage the power supply module from the backplane, and remove it completely from the chassis.
- 8 Remove the fan assembly to gain access to the transceiver and power amplifier modules. See [9.3 Replacing the Fan Assembly, page 9-10](#) for instructions on removing the fan assembly.

- 9 Disengage the transceiver module and the power amplifier from the backplane as follows:
 - a. Using a T20 bit, loosen the two captive screws on the front of each module, so they disengage from the chassis.

**WARNING**

It is recommend to let the power amplifier module cool before performing the following step, which exposes surfaces of the module that can be extremely hot.

- b. Using the handles, gently pull the modules until the modules disengage from the backplane.
-

- 10 Using a T20 bit, remove the screw that secures the tab on the right EMI spring panel. See [Figure 9-11](#).

**NOTE**

Removing the left EMI spring panel is optional.

- 11 Carefully slide the EMI spring panel forward, noting how the panel is affixed onto the power supply guide rail. The panel does not need to be completely removed.
-

- 12 Remove the fan cable from the backplane, from the front of the chassis, with the backplane still secured to the chassis, as follows:
 - a. Follow the fan cable with your hand from its connector at the front of the chassis to its connection to the backplane, through the card cage section from where the power supply module was removed.
 - b. Remove the fan cables multi-pin connector from the backplane.

**SUGGESTION**

Squeeze the top and bottom of the connector and pull the connector straight out from the backplane.

- 13 Remove the five screws, using a T20 bit, that secure the metal backplane cover and the backplane circuit board to the rear of the chassis.
-

- 14 Remove the metal backplane cover and the backplane circuit board.
-

- 15 Place the new backplane circuit board in the same location and orientation as the one removed.
-

16


**IMPORTANT**

Before securing the five screws into the backplane circuit board and backplane cover, all screws should be started first before they are seated and fully secured.

Secure the new backplane circuit board and the backplane cover to the rear of the base radio chassis with the five screws previously removed. Torque to 18 +/- 2 in.-lbs.

- 17 Reinstall the metal bulkhead that holds the RF output cable from the power amplifier, using the two screws previously removed to secure it to the inner chassis at the left of the backplane.
-
- 18 Connect the fan cable to the new backplane, from the front of the chassis, with the backplane secured to the chassis, as follows:
 - a. Locate the port in the new backplane for the fan cables multi-pin connector.
 - b. Follow the fan cable with your hand from its connector at the front of the chassis to the connector at the other end of the cable.
 - c. Push the fan cables multi-pin connector, with the tab up, into the correct location in the backplane.


Figure 9-10 Fan Cable Connector

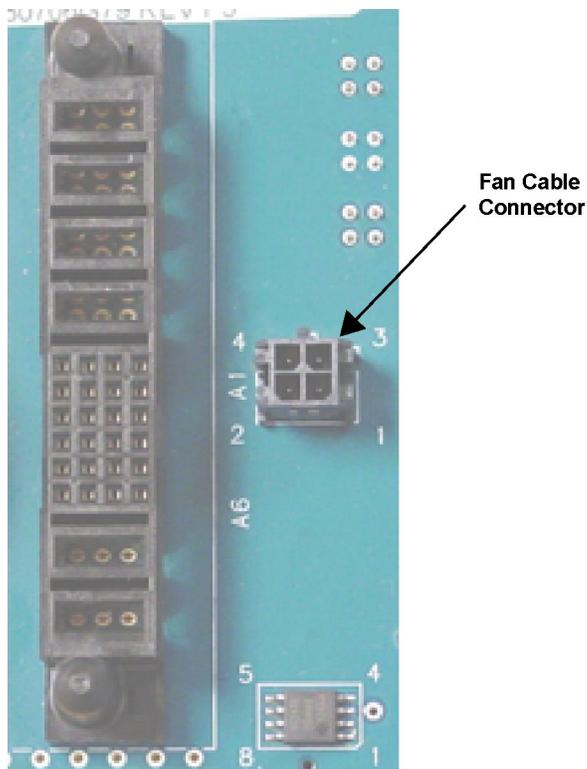

GTR_GCP_Fan_Cable_Connector

- 19 Slide the EMI spring panel back into the cabinet, making sure that the offset tabs on the panel are to the right (inside) of the power supply guide rail, making sure that the panel does not catch on the fan cable.

Figure 9-11 EMI Spring Panel Guide Rail Alignment

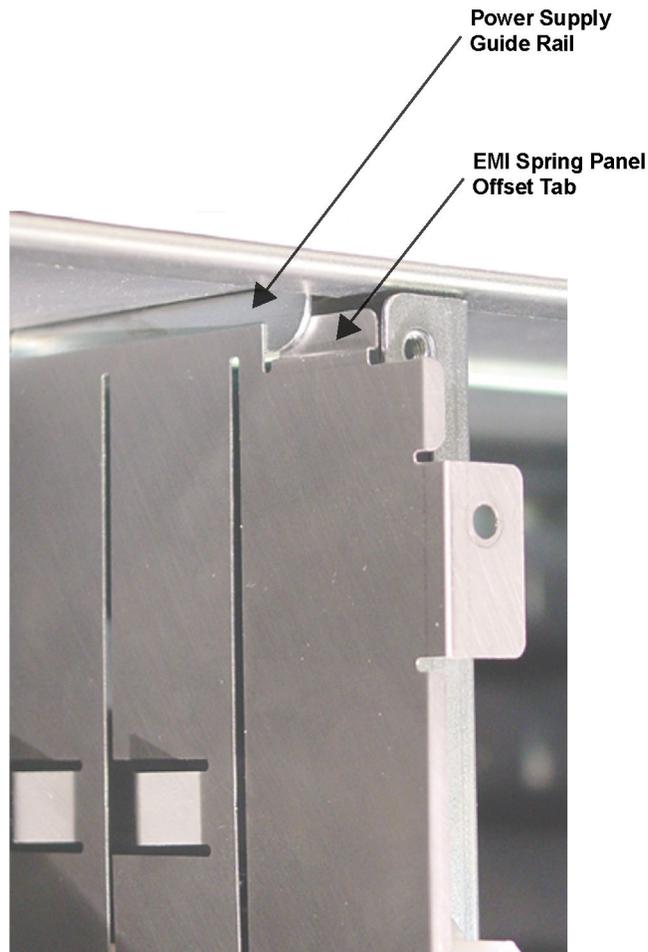

GTR_GCP_EMI_panel_alignment

-
- 20 Reinstall the screw into the EMI spring panel tab.
-
- 21 Slide the transceiver and power amplifier modules into the new backplane. A slight push may be needed to engage the modules.
-
- 22 Reconnect all cables to the front ports on the transceiver, if applicable.
-
- 23 Secure the transceiver and power amplifier modules to the chassis with the two captive screws on the front of each module.
-

24 Reinstall the fan assembly. See [9.3 Replacing the Fan Assembly, page 9-10](#).

25 Slide the power supply into the chassis, pushing gently until it seats in the new backplane.

**NOTE**

If the power supply does not seat properly, remove it and adjust the EMI spring panel properly against the mounting flange.

26 Tighten the two captive screws on the front of the power supply.

27 Reconnect all cables at the rear of the base radio.

28 Set the power supply rocker switch to On (1).

29 Verify that the LEDs indicate the modules you removed and reinstalled are operational.

- The Status LEDs are green.
 - The Alarm LEDs are off.
 - The power supply Fan LED is off.
-

30 In CSS, enable the base radio as follows:

- a. Select **Service** → **Test Measurement Screen** from the menu.
- b. Click **Change to Normal Mode**.

Step result: The channel is enabled.

31 Re-configure the Security Settings into the Backplane. See [4.4.3.3.1 Setting the Serial Security Services Using CSS, page 4-9](#).

32 Verify proper operation using software tools, including:

- Unified Event Manager.
 - Configuration/Service Software (CSS).
-

9.8 Replacing a Preselector Filter

Figure 9-12 Preselector Filter (700/800 MHz)

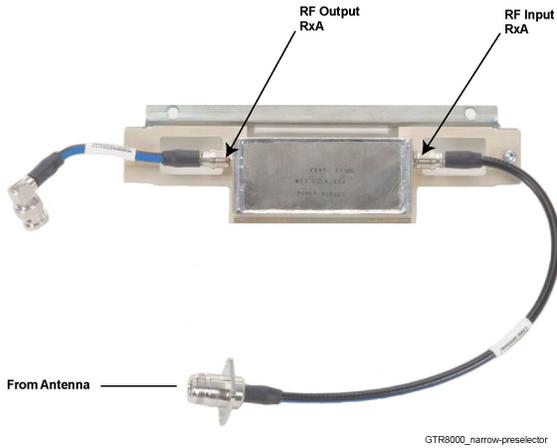


Figure 9-13 Preselector Filter (UHF)


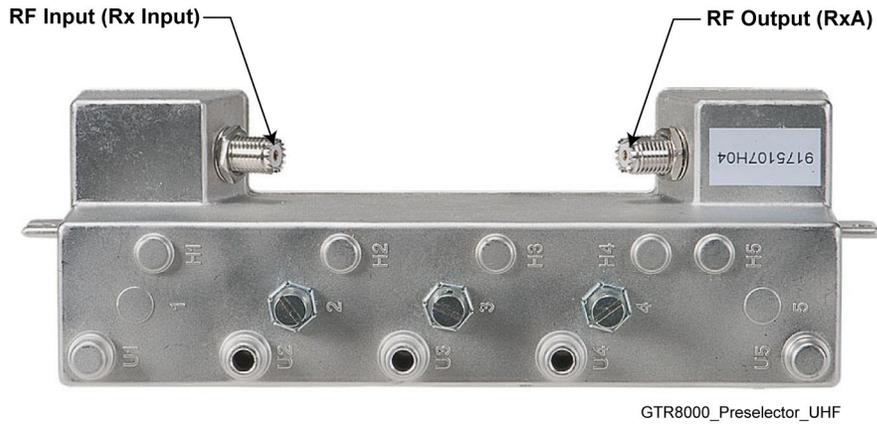


Figure 9-14 Preselector Filter (VHF)

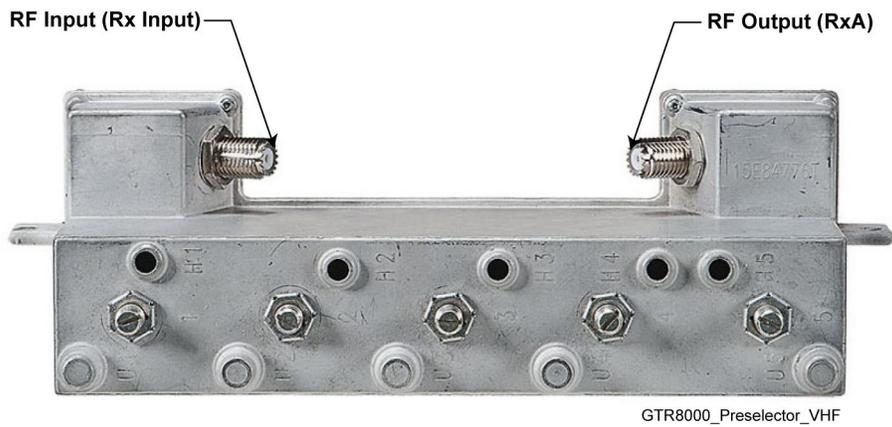

**IMPORTANT**

You can replace a preselector filter without shutting the power down.

9.8.1 How To Replace a Preselector Filter

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.


- 2 Remove the preselector from the base radio, as follows:
 - a. Remove the two screws which secure the preselector to the flange of the base radio using T20 bit.
 - b. Label and disconnect the left and right QMA cables from the front of the preselector.

- 3 Install the preselector to the base radio, as follows:
 - a. Secure the slide rail to the base radio flange using the two screws which were previously removed.
 - b. Reconnect the left and right QMA cables to the preselector.
 - c. Tune the preselector. See [5.8 Tuning a Preselector, page 5-4](#).

- 4 Verify that the system is operating properly using fault management software, including:
 - Unified Event Manager.
 - Transmitter Metering Screen in Configuration/Service Software (CSS).

9.9 Replacing Transmit Filters (700/800 MHz)

[Figure 9-15](#) shows the transmit filter installed on a tray.

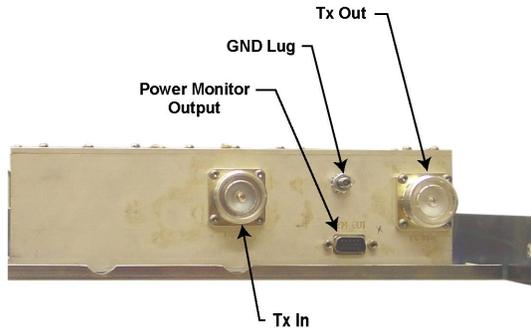Figure 9-15 Transmit Filter (700/800 MHz)

GTR8000_RFDS_XS_TXFilter_Front1

**IMPORTANT**

When using this procedure to replace or remove the transmit filter, the warning applies and you must power down the site before starting the replacement procedure if the entire site is connected to the Transmit filter being removed. Powering down the site causes any affiliated subscribers to relocate to another channel at an adjacent site. It is recommended that you disable the channels before powering down so that the system does not attribute the loss of channel to a failure. You can disable a channel using the Unified Event Manager, or the Configuration/Service Software (CSS).

**WARNING**

Shock hazard. The GTR 8000 Base Radio contains dangerous voltages which can cause severe electrical shock or damage to equipment. Set the rocker switches on the front of the associated power supplies to the off position before servicing this component in the base radio.

9.9.1 How To Replace Transmit Filters (700/800 MHz)

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.
- 2 Disable all base radios at the site that are using the transmit filter module being replaced.
 - a. Connect to each device module's Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 3 Set the rocker switches on the front of the power supplies to the OFF (0) position.

- 4 Remove the transmit filter tray from the rack, as follows:
 - a. Label and disconnect the Tx input, antenna output, and ground cables from the transmit filter.
 - b. Using a T30 bit, remove the two screws which secure the tray to the rack.
 - c. Slide the tray out the front of the rack.

- 5 Remove the transmit filter from the tray, by removing the T20 screws that attach it to the tray.

- 6 Install the new transmit filter in the tray, as follows:
 - a. Place the new transmit filter in the tray, in the same location and orientation as the module that you removed.
 - b. Secure the replacement transmit filter to the tray, using the T20 screws you previously removed.

- 7 Re-install the transmit filter tray in the rack, as follows:
 - a. Slide the tray in the front of the rack.
 - b. Using a T30 bit, secure the tray to the rack with the two screws you previously removed.
 - c. Reconnect the Tx input, Antenna output, and ground cables to the transmit filter.

- 8 Set the rocker switches on the front of the power supplies to the ON (1) position.

- 9 Enable each base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.


9.10 Replacing the Dual Circulator/Isolator Modules

For a GTR 8000 Base Radio, the following RFDS modules are assembled in a tray:


- External Dual Circulator/Isolator
- Circulator Load (a module that is connected directly to the External Dual Circulator module)
- Low Pass/Harmonic Filter

Figure 9-16 and Figure 9-17 show these modules installed on a tray.

Figure 9-16 External Dual Circulator/Isolator Tray (700/800 MHz)

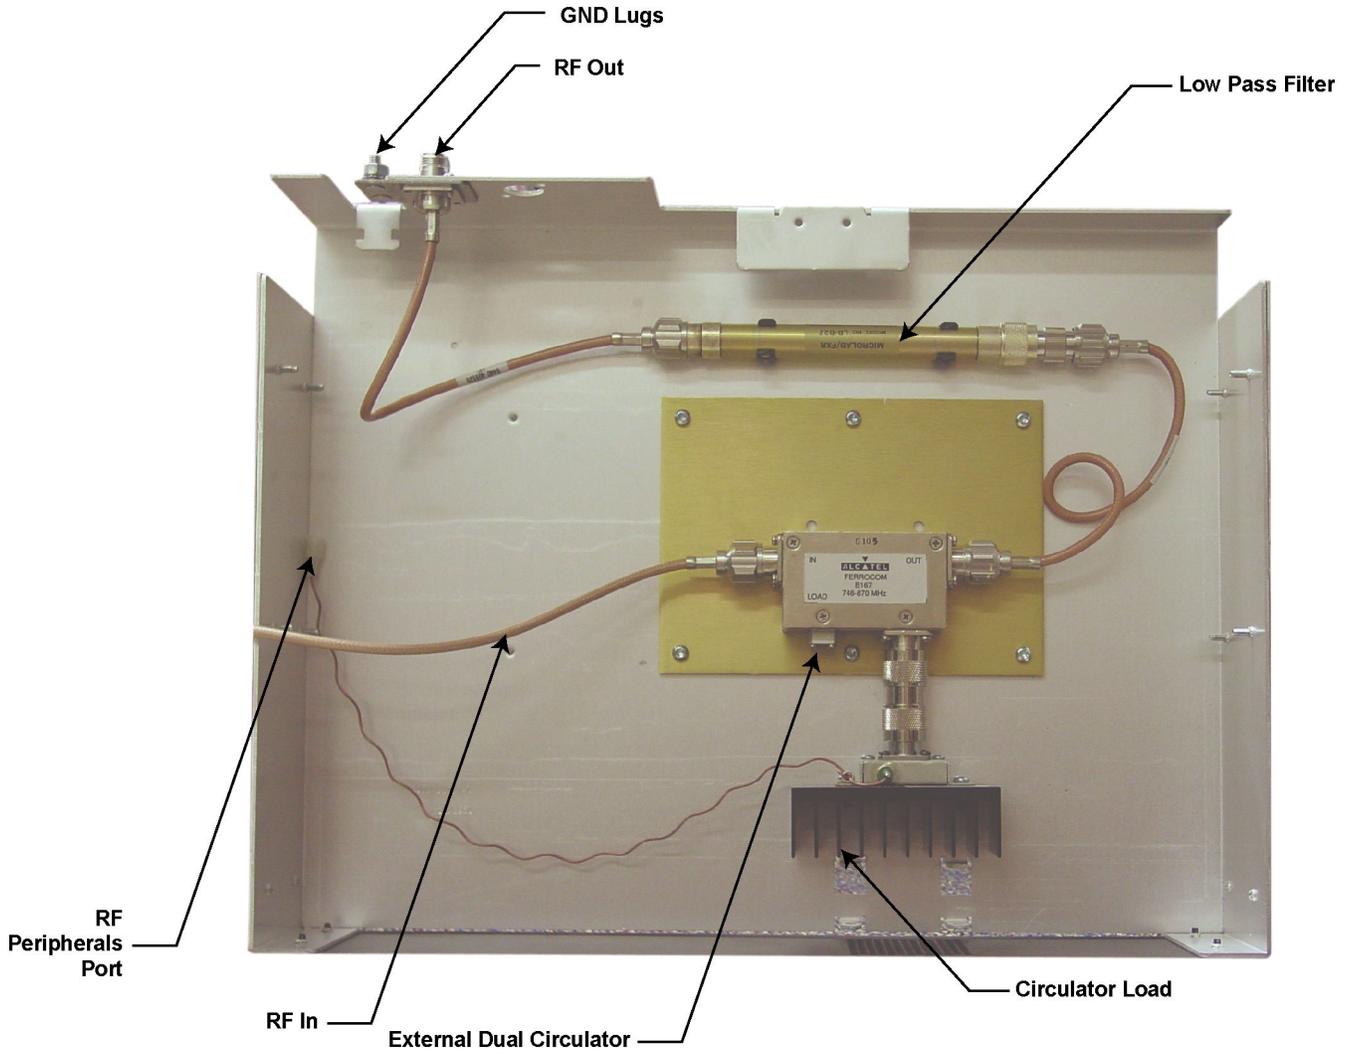

GTR8000_RFDS_NonXS_Isolator_Tray1

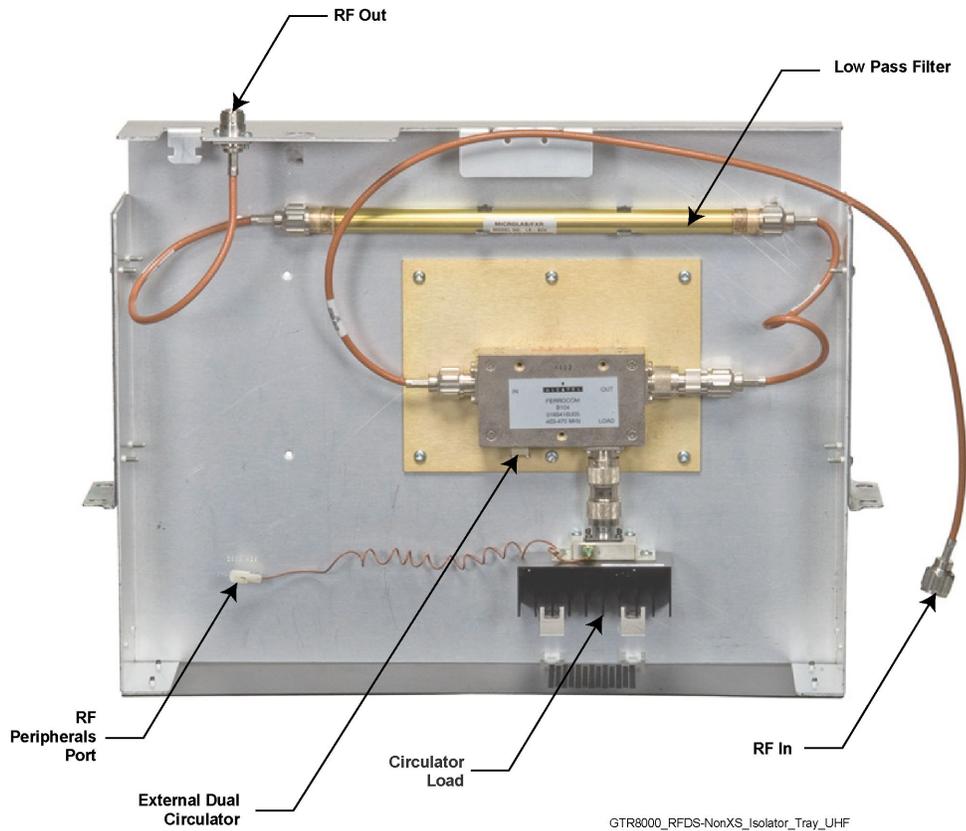Figure 9-17 External Dual Circulator/Isolator Tray (UHF)

These modules can be replaced individually, or if you order them together, you may receive the modules already secured to a tray.

**WARNING**

Shock hazard. The GTR 8000 Base Radio contains dangerous voltages which can cause electrical shock or damage to equipment. Set the power supply switches for the affected equipment to the Off (0) position when servicing this component in the system.

**IMPORTANT**

Powering down the base radio causes any affiliated subscribers to relocate to another channel at the site or another channel at an adjacent site. It is recommended that you disable the base radios before powering down, so that the system does not attribute the loss of channel to a failure. You can disable a base radio using Unified Event Manager or the Configuration/Service Software (CSS).

9.10.1 How To Replace The Dual Circulator/Isolator Modules

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.

- 2 Set the rocker switch on the front of the power supply to the OFF (0) position.

- 3 Disable the base radio as follows:
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 4 Remove the filter tray from the rack, as follows:
 - a. Label and disconnect the RF input, RF output, and ground cables from the tray.
 - b. Disconnect the Circulator Load temperature cable at the inline connector (which disconnects it from the cable leading to the RF Peripherals port on the base radio backplane).
 - c. Using a T30 bit, remove the two screws which secure the tray to the rack.
 - d. Slide the tray out the front of the rack.

5

If...	Then...
You are replacing an individual External Dual Circulator/Isolator module...	<ol style="list-style-type: none"> 1. Label and disconnect the RF input and RF output cables from the External Dual Circulator module. 2. Unscrew the connector that secures the Circulator Load to the External Dual Circulator module. 3. Remove the screws that secure the circulator baseplate to the tray. 4. Remove the circulator module including the circulator load module that extends beyond the baseplate. 5. Place the new External Dual Circulator module in the tray in the same location and orientation as the module you are replacing. 6. Secure the new External Dual Circulator module baseplate to the tray using the screws previously removed. 7. Connect the RF input and RF output cables to the new External Dual Circulator module.

If...	Then...
	<ol style="list-style-type: none"> 8. Connect the Circulator Load to the External Dual Circulator module. 9. Proceed to Step 6 using the existing tray.
You are replacing an individual Circulator Load...	<ol style="list-style-type: none"> 1. Unscrew the connector that secures the Circulator Load to the External Dual Circulator module. 2. Remove the Circulator Load module. 3. Place the new Circulator Load module on the tray in the same position and orientation as the module you removed. 4. Secure the new Circulator Load to the External Dual Circulator module by tightening the connector. 5. Connect the Circulator load cable to the RF Peripherals port on the base radio backplane. 6. Proceed to Step 6 using the existing tray.
You are replacing an individual Low Pass/Harmonic Filter module...	<ol style="list-style-type: none"> 1. Label and disconnect the RF input and RF output cables from the Low Pass/Harmonic Filter module. 2. Pull up firmly to release the Low Pass Filter module from the two semi-circular clips holding it in place. 3. Insert the new Low Pass Filter module into the semi-circular clips using the same orientation as the module you are replacing. 4. Connect the RF input and RF output cables to the new Low Pass/Harmonic Filter module. 5. Proceed to Step 6 using the existing tray.
You are replacing the entire tray including all of its modules.	Proceed to Step 6 using the replacement tray.

-
- 6** Install the tray in the rack:
- a. Slide the tray into the appropriate location through the front of the rack.
 - b. Secure the slide rail to the rack using the two screws which were previously removed.
 - c. Reconnect the RF input, RF output, and ground cables.
 - d. Reconnect the Circulator Load temperature cable at the inline connector (which connects it to the cable leading to the RF Peripherals port on the base radio backplane).
-
- 7** Set the rocker switch on the front of the power supply to the On (1) position.
-


- 8 Enable the base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.
-
- 9 Verify that the base radio is operating properly using fault management software, including:
 - Unified Event Manager
 - Transmitter Metering Screen in Configuration/Service Software (CSS)
-

9.11 Replacing a Duplexer (700/800 MHz)

Figure 9-18 shows the duplexer installed on a tray.

Figure 9-18 Duplexer Module (700/800 MHz)

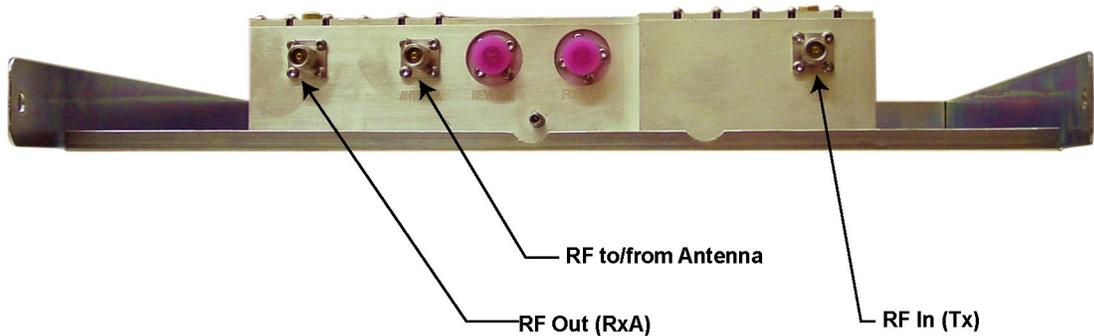

GTR8000_RFDS_NonXS_Duplexer_Rear1



WARNING

Shock hazard. The GTR 8000 Base Radio contains dangerous voltages which can cause electrical shock or damage to equipment. Set the power supply switches for the affected equipment to the Off (0) position when servicing this component in the base radio.



IMPORTANT

Powering down the base radio causes any affiliated subscribers to relocate to another channel at the site or another channel at an adjacent site. It is recommended to disable the base radio before powering down, so that the system does not attribute the loss of channel to a failure. You can disable a base radio using Unified Event Manager or the Configuration/Service Software (CSS).

9.11.1 How To Replace a Duplexer (700/800 MHz)

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.

- 2 Disable the base radio with the duplexer module being replaced, as follows:
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.**Step result:** The base radio is disabled.

- 3 Set the rocker switch on the front of the power supply to the OFF (0) position.

- 4 Remove the duplexer tray from the rack, as follows:
 - a. Label and disconnect the Rx output, Tx input, antenna output, and ground cables from the duplexer.
 - b. Using a T30 bit, remove the two screws which secure the tray to the rack.
 - c. Slide the tray out the front of the rack.

- 5 Remove the duplexer from the tray, by removing the T20 screws that attach it to the tray.

- 6 Install the new duplexer in the tray, as follows:
 - a. Place the new duplexer in the tray, in the same location and orientation as the module that you removed.
 - b. Secure the replacement duplexer to the tray, using the T20 screws you previously removed.


- 7 Re-install the duplexer tray in the rack, as follows:
 - a. Slide the tray in the front of the rack.
 - b. Using a T30 bit, secure the tray to the rack with the two screws you previously removed.
 - c. Reconnect the Rx output, Tx input, Antenna output, and ground cables to the duplexer.

- 8 Set the rocker switch on the front of the power supply to the ON (1) position.

- 9 Enable the base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.**Step result:** The base radio is enabled.

9.12 Replacing a Duplexer (UHF)

Figure 9-19 Duplexer Module (UHF)

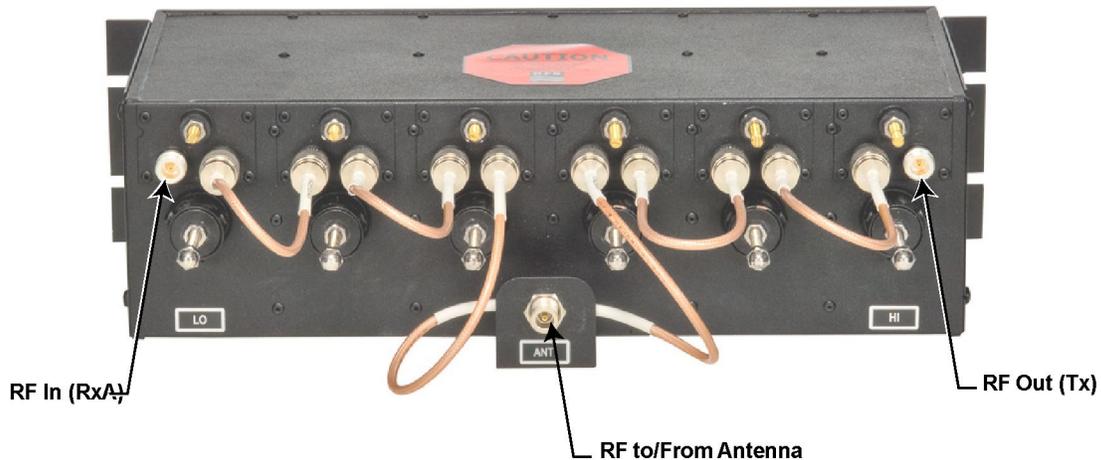

GTR 8000 Duplexer UHF



WARNING

Shock hazard. The GTR 8000 Base Radio contains dangerous voltages which can cause electrical shock or damage to equipment. Set the power supply switches for the affected equipment to the Off (0) position when servicing this component in the base radio.



IMPORTANT

Powering down the base radio causes any affiliated subscribers to relocate to another channel at the site or another channel at an adjacent site. It is recommended to disable the base radio before powering down, so that the system does not attribute the loss of a channel to a failure. You can disable a base radio using Unified Event Manager or the Configuration/Service Software (CSS).

9.12.1 How To Replace a Duplexer (UHF)

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.

- 2 Disable the base radio with the duplexer module being replaced:
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11.
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 3 Set the rocker switch on the front of the power supply to the OFF (0) position.
-

- 4 Remove the duplexer from the base radio, as follows:
 - a. Label and disconnect the Rx output, Tx input, antenna output, and ground cables from the duplexer.
 - b. Remove the four screws which secure the duplexer to the rack using T20 bit.
-

- 5 Install the duplexer to the rack, as follows:
 - a. Secure the duplexer to the rack using the four screws which were previously removed.
 - b. Reconnect the Rx output, Tx input, antenna output, and ground cables from the duplexer.
-


- 6 Set the rocker switch on the front of the power supply to the ON (1) position.
-

- 7 Enable the base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.

9.13 Replacing a Duplexer (VHF)

Figure 9-20 Duplexer Module for IVD (VHF)

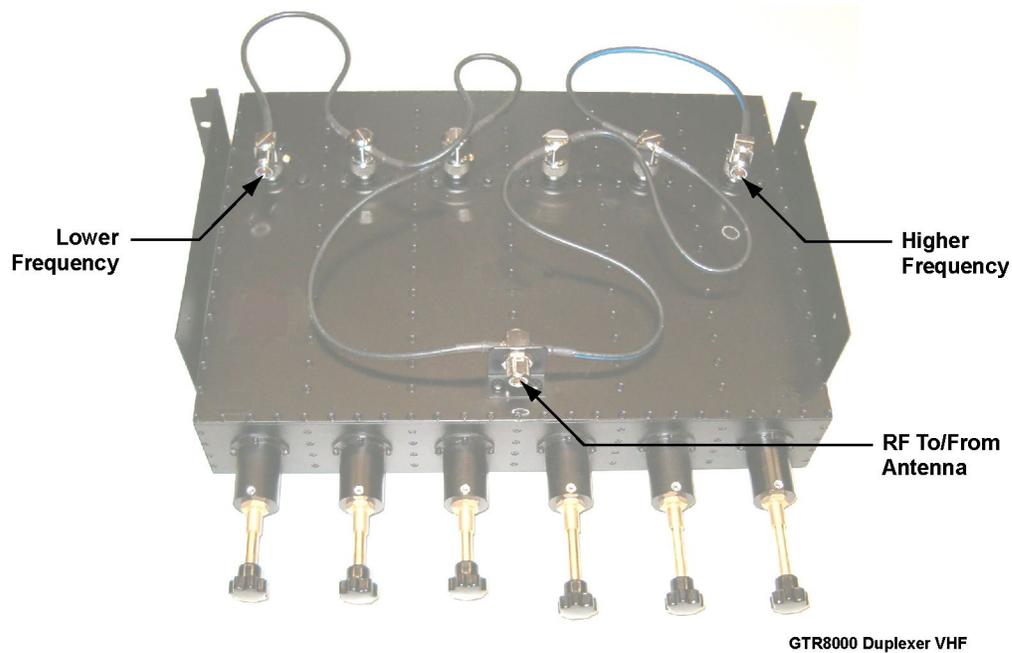

WARNING

Shock hazard. The GTR 8000 Base Radio contains dangerous voltages which can cause electrical shock or damage to equipment. Set the power supply switches for the affected equipment to the Off (0) position when servicing this component in the base radio.



IMPORTANT

Powering down the base radio causes any affiliated subscribers to relocate to another channel at the site or another channel at an adjacent site. It is recommended to disable the base radio before powering down, so the system does not attribute the loss of channel to a failure. You can disable a base radio using Unified Event Manager or the Configuration/Service Software (CSS).

9.13.1 How To Replace a Duplexer (VHF)

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.

- 2 Disable the base radio with the duplexer module being replaced.
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 3 Set the rocker switch on the front of the power supply to the OFF (0) position.

- 4 Remove the duplexer from the base radio, as follows:
 - a. Label and disconnect the Rx output, Tx input, antenna output, and ground cables from the duplexer.
 - b. Remove the four screws which secure the duplexer to the rack using T20 bit.

- 5 Install the duplexer to the rack, as follows:
 - a. Secure the duplexer to the rack using the four screws which were previously removed.
 - b. Reconnect the Rx output, Tx input, antenna output, and ground cables from the duplexer.

- 6 Set the rocker switch on the front of the power supply to the ON (1) position.

- 7 Enable the base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.

9.14 Replacing an Antenna Relay



WARNING

Shock hazard. The GTR 8000 Base Radio contains dangerous voltages which can cause electrical shock or damage to equipment. Set the power supply switches for the affected equipment to the Off (0) position when servicing this component in the base radio.

**IMPORTANT**

Powering down the base radio causes any affiliated subscribers to relocate to another channel at the site or another channel at an adjacent site. It is recommended to disable the base radio before powering down, so the system does not attribute the loss of channel to a failure. You can disable a base radio using Unified Event Manager or the Configuration/Service Software (CSS).

9.14.1 How To Replace an Antenna Relay

Procedure Steps

- 1 Wear an electrostatic discharge (ESD) wrist strap and connect its cable to a verified good ground. This strap must be worn throughout this procedure to prevent ESD damage to any components.

- 2 Disable the base radio as follows:
 - a. Connect to the device modules Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **Service** → **Test Measurement Screen** from the menu.
 - c. Click **Change to Service Mode**.

Step result: The base radio is disabled.

- 3 Set the rocker switch on the front of the power supply to the OFF (0) position.

- 4 Remove the antenna relay from the base radio, as follows:
 - a. Mark all cables and remove. RX (NC) position, TX (NO) position, Antenna (C) connection position, and power connection position.
 - b. Remove the two screws that are holding the antenna relay to the backplane cover using a T15 bit and remove the antenna relay.

- 5 Replace the antenna relay to the base radio, as follows:
 - a. Attach the new antenna relay using the screws previously removed and torque to 15 in./lb.
 - b. Attach all cables and tighten the coax connectors.

- 6 Set the rocker switch on the front of the power supply to the ON (1) position.

- 7 Enable the base radio as follows:
 - a. Select **Service** → **Test Measurement Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.

10 GTR 8000 Base Radio Reference

Reference information for GTR 8000 Base Radios and subsystems includes LED states and specifications for individual GTR 8000 Base Radio RFDS modules.

This chapter contains supplemental reference information relating to GTR 8000 Base Radio.

10.1 LEDs


Many of the LEDs on the GTR 8000 Base Radio devices provide an indication for one or more the following conditions:

- **Lamp Test:** The Lamp Test state is used to verify that the indicators are operational. For Lamp Test, the LEDs stay in this state for only a second or less.
- **Failure:** Indicates a failure that can only be fixed through replacement. If something other than a hardware fault is causing the state, Impaired is noted.
- **Impaired:** The device is not fully operational due to internal or external causes. Some corrective action must be taken to get back to 100% operation.
- **Booting Up:** The device is not in service due to running of diagnostics or initializing.
- **Online:** Indicates that the device is fully operational.

The LEDs for the transceiver and power amplifier modules can be viewed through the door next to the fans, with the door opened or closed.

10.1.1 GTR 8000 Base Radio Transceiver LEDs

Figure 10-1 Transceiver LEDs (viewable through drop-down door)

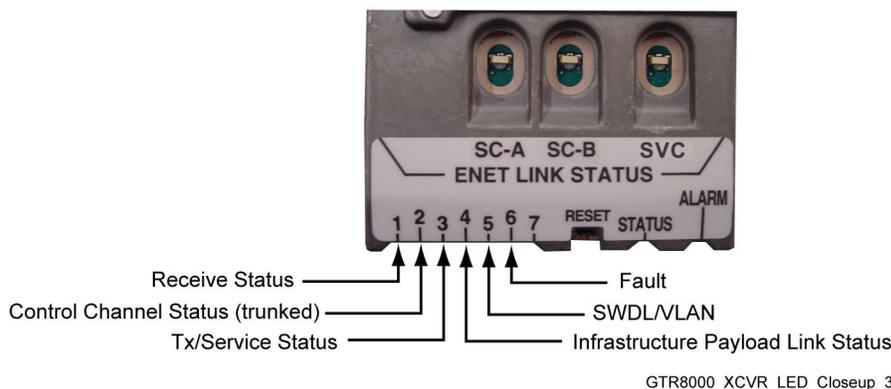

10.1.1.1 Transceiver Status and Alarm LEDs

The Status LED is green, and the Alarm LED is red. These LEDs are either off or on, depending on the condition of the transceiver.

Table 10-1 Transceiver Status and Alarm LEDs

Condition	Green (Status LED)	Red (Alarm LED)
No Power	Off	Off
Lamp Test (During Test)	On	On
Impaired Operation	On	Blinking
Critical Failure	Off	On
Booting Up	Blinking	Off
Operational	On	Off

Note: To get detailed information on current operation and fault status, use the CSS Status Panel screen.

10.1.1.2 Transceiver Ethernet Link Status LEDs

The following LEDs indicate Ethernet link and status connections between the transceiver, LAN, and the front panel service port.

Table 10-2 Transceiver Ethernet Link Status LEDs

LED Name	Indication	LED Status
ENET SC-A (external connection to SITE CTRL A on the rear of the chassis)	Ethernet link inactive (Remote PHY/MAC not detected.)	Off
	Ethernet link established (Remote PHY/MAC detected and auto-negotiation completed.)	Green
	Ethernet link active (Actively transmitting or receiving data.)	Amber (blinking)
ENET SC-B (external connection to SITE CTRL B on the rear of the chassis)	Ethernet link inactive (Remote PHY/MAC not detected.)	Off
	Ethernet link established (Remote PHY/MAC detected and auto-negotiation completed.)	Green
	Ethernet link active (Actively transmitting or receiving data.)	Amber (blinking)
ENET SVC (front panel service port)	Ethernet link inactive (Remote PHY/MAC not detected.)	Off
	Ethernet link established (Remote PHY/MAC detected and auto-negotiation completed.)	Green
	Ethernet link active (Actively transmitting or receiving data.)	Amber (blinking)

10.1.1.3 Transceiver Application-Controlled LEDs

The application-controlled LEDs can be green, red, or amber depending on the conditions.

Table 10-3 Transceiver Application-Controlled LEDs

Condition	LED 1 Receive Status	LED 2 Control Channel Status	LED 3 TX/Service status	LED 4 Infrastructure Payload Link Status
Booting Up*	Green	Green	Green	Green
Lamp Test	Amber	Amber	Amber	Amber
Receiver Inhibited	Amber (blinking)			
Receiver Active	Green			
RF Channel Interference	Red (blinking)			
Monitor Before Data Transmit	Green			
Illegal Carrier	Red (blinking)			
Control Channel (Operating)		Green		
Control Channel (Failsoft)		Green (blinking)		
Service Mode			Amber	
Transmitter Inhibited			Amber (blinking)	
Infrastructure Link Connected (V.24, IP, and 4-wire/V.24)				Green
Partial Infrastructure Link Established (V.24 link established, 4-wire link not established)				Amber
Infrastructure Link Disconnected (V.24, IP, and 4-wire/V-24)				Green (blinking)

* During a normal boot up sequence, LEDs 1 through 4 blink from left to right and from right to left continuously for several seconds.

10.1.1.4 Transceiver Services-Controlled LEDs

For the service-controlled LEDs, the color of all LEDs must be observed in order to interpret the condition of the transceiver.

Table 10-4 Transceiver Services-Controlled LEDs

Condition	LED 5 SWDL/VLAN	LED 6 Fault	LED 7
Lamp Test	Amber	Amber	Amber
Receiver Inhibited		Red	


Table 10-4 Transceiver Services-Controlled LEDs (cont'd.)

Condition	LED 5 SWDL/VLAN	LED 6 Fault	LED 7
Receiver Reference Failure		Red	
Transmitter Inhibited		Red	
SWDL (Software Download transfer in progress)	Green		
Warning		Amber	
Minor Hardware Failure		Amber (blinking)	
Major Hardware Failure		Red (blinking)	
Critical Hardware Failure		Red	
VSWR Fault		Red	

10.1.2 Transceiver Option Card Intercom LED

The Transceiver Option Card has a single Intercom LED that indicates the intercom function between the ON (amber) and OFF states.

Figure 10-2 Transceiver Option Card Intercom LED (viewable behind the fan module)

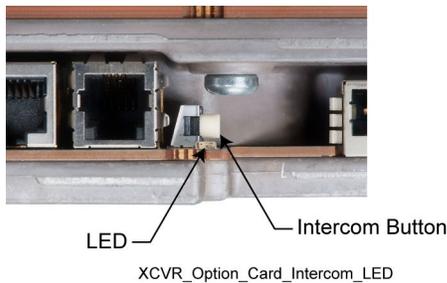

10.1.3 Power Amplifier LEDs

Figure 10-3 Power Amplifier LEDs, viewable through drop-down door



GTR8000_PA_LED_Closeup

The power amplifier LED color must be observed to interpret the power amplifiers condition. For example:


- If the Alarm LED is red and the Transmit and Status LEDs are not lit, the condition is “PA Failure” and the power amplifier module should be replaced.

Table 10-5 Power Amplifier LEDs

Condition	Transmit (XMIT)	Status	Alarm
Power Off	Off	Off	Off
Lamp Test	Amber	Green	Red
Not Transmitting	Off	Green	Off
Transmitting at Full Requested Output Power	Green	Green	Off
Transmitting at Less Than Requested Power	Amber	Green	Red
PA Failure	Red	Off	Red
Receive Only	Off	Off	Off
Transmitter Inhibited	Off	Green	Red (blinking)

10.1.4 Fan Module LED

Figure 10-4 Fan Module-Alarm LED (lower right corner)

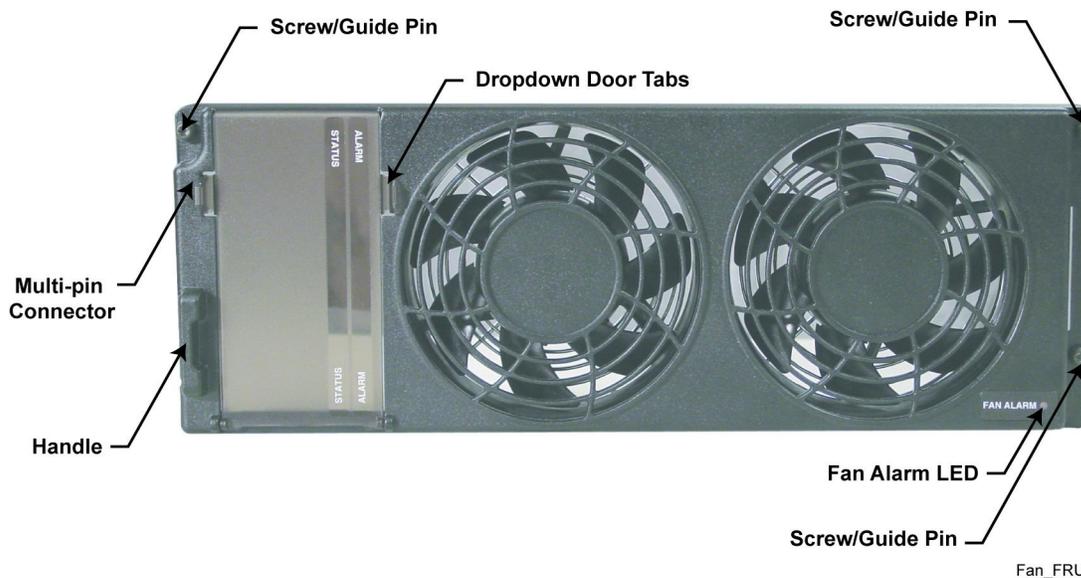

The fan module has one Fan Alarm LED visible on the lower right corner of its front panel. The Alarm is red during Lamp Test (for a second or less), and remains red if there is a fan failure. A fan failure alarm occurs if the built-in speed sensor detects if either fan drops 30% below rated speed. A red Fan Alarm indicates that the fan module must be replaced.



NOTE

The fan operates at full capability for at least seven days after the fan alarm first occurs, allowing normal operation without requiring an immediate service call.

10.1.5 Power Supply LEDs

Figure 10-5 Power Supply Module



HPD_Power_Supply_FRU.jpg

The power supply has three LEDs visible from the front panel. In order to interpret its condition, observe the color of all the power supply's LEDs. For example:

- If the Alarm and Fan LEDs are red and the Status LED is green, the condition is "Lamp Test"
- If the Alarm LED is red and the Fan and Status LEDs are not lit, the condition is "Power Supply Failure"

Table 10-6 Power Supply LEDs

Condition	Fan	Status	Alarm
Power Off	Off	Off	Off
Lamp Test	Red	Green	Red
Online	Off	Green	Off
Impaired	Off	Green	Red (blinking)

Table 10-6 Power Supply LEDs (cont'd.)

Condition	Fan	Status	Alarm
Power Supply Failure	Off	Off	Red
Power Supply Fan Failure	Red	Green	Off

10.2 RFDS Equipment Specifications

This section provides specifications for all the RFDS equipment.



IMPORTANT

Specifications are subject to change without notice.

10.2.1 Transmit Filter Specifications (700/800 MHz)

Table 10-7 Transmit Filter Specifications (700/800 MHz)

	Tx Filter Spec Limit (700/800 MHz)	800 MHz Typical	Notes
Frequency range	762–776 MHz, 851–870 MHz		
Insertion loss	0.7 dB	0.3 dB	
VSWR max.	1.5:1	1.12:1	
Rx selectivity	35 dB	40 dB	
Peak instantaneous power	32000 W		
Passive Intermodulation	–135 dBc		2 x 43 dBm
Input Connector	7/16		
Output Connector	7/16		
Power monitor connector	Dsub-9 Male		
Forward power range	0-500 W		0-5V DC out
Reverse power range	0-500 W		0-5V DC out

10.2.2 Preselector Filter Specifications (700/800 MHz)

Table 10-8 Preselector Filter Specifications (700/800 MHz)

	Preselector Spec Limit (700/800 MHz)	Typical
Frequency range	792–825 MHz	
Insertion loss	1 dB	0.7 dB
VSWR max.	1.5:1	1.3:1
Tx selectivity	15 dB	18 dB
Input Connector	QMA	
Output Connector	QMA	

10.2.3 Preselector Filter Specifications (UHF)

Table 10-9 Preselector Filter Specifications (UHF)

	Preselector Spec Limit (UHF)	Typical
Tuning range	380–433MHz, 435–470 MHz, 470–524 MHz	
Bandwidth	4 MHz	
Insertion loss	2 dB	1.3 dB
VSWR max.	1.9:1	1.5:1
Input Connector	Mini-UHF	
Output Connector	Mini-UHF	

10.2.4 Preselector Filter Specifications (VHF)

Table 10-10 Preselector Filter Specifications (VHF)

	Preselector Spec Limit (VHF)	Typical
Tuning range	136–154 MHz, 150–174 MHz	
Bandwidth	4 MHz	
Insertion loss	1.3 dB	1.1 dB
VSWR max.	1.9:1	
Input Connector	Mini-UHF	
Output Connector	Mini-UHF	

10.2.5 Duplexer Specifications (700/800 MHz)

Table 10-11 Duplexer Specifications (700/800 MHz)

	Duplexer Spec Limit (700/800 MHz)	Typical	Notes
Tx Frequency range	762–776 MHz, 851–870 MHz		
Rx Frequency range	792–806 MHz, 806–825 MHz		
Insertion loss Tx	1 dB	0.5 dB	
Insertion loss Rx	1 dB	0.6 dB	
VSWR max.	1.5:1	1.23:1	
Rx isolation	80 dB	85 dB	
Tx isolation	80 dB	85 dB	
Passive Intermodulation	–120 dBc		2 x 43 dBm
Antenna Connector	QN		
Rx/Tx Output Connector	QN		

10.2.6 Duplexer Specifications (UHF)

Table 10-12 Duplexer Specifications (UHF)

	Duplexer Spec Limit (UHF)	Typical	Notes
Frequency range	380–403 MHz, 403–435 MHz, 435–470 MHz, 470–494 MHz, 494–512 MHz		
Insertion loss Tx*	1.3 dB	1.1 dB	
Insertion loss Rx*	1.3 dB	1.1 dB	
VSWR max.	1.3:1	1.2:1	
Rx isolation*			
<470 MHz	100 dB		R/T 5 MHz
>470 MHz	100 dB		R/T 3 MHz
Tx isolation*			
<470 MHz	100 dB		R/T 5 MHz
>470 MHz	100 dB		R/T 3 MHz
Antenna Connector	N female		
Rx/Tx Output Connector	N Female		

* For <470 MHz R/T can be as low as 3 MHz and for >470 MHz R/T can be a low as 2 MHz; however, insertion loss or isolation specs may not be met.

10.2.7 Duplexer Specifications (VHF)

Table 10-13 Duplexer Specifications (VHF)

	Duplexer Spec Limit (VHF)	Typical	Notes
Frequency range	136–146 MHz, 144–160 MHz, 158–174 MHz		
Insertion loss Tx*	1.3 dB	0.7 dB	
Insertion loss Rx*	1.3 dB	0.7 dB	
VSWR max.	1.5:1	1.2:1	
Rx isolation*	75 dB	80 dB	
Tx isolation*	75 dB	77 dB	

Table 10-13 Duplexer Specifications (VHF) (cont'd.)

	Duplexer Spec Limit (VHF)	Typical	Notes
Minimum Tx-Rx Frequency Spacing	1.5 MHz		
Antenna Connector	N female		
Rx/Tx Output Connector	N Female		

* Minimum Tx-Rx spacing may be as low as 1.0 MHz; however, insertion loss of isolation may not be met.

10.2.8 External Dual Circulator Specifications (700/800 MHz)

Table 10-14 External Dual Circulator Specifications (700/800 MHz)

	External Dual Circulator Spec Limit (700/800 MHz)	Typical
Operating Frequency Range	762–870 MHz	
Insertion Loss	1.6 dB	1.2 dB
Input Return Loss	18 dB	
Reverse Isolation	40 dB	42 dB
Power (continuous)	200 W	
Harmonic Attenuation	60 dB	
Intermodulation (2 tone, 100 W each)	–75 dBc	
Input Connector	RF cable with N male	
Output Connector	N female	

10.2.9 External Dual Circulator Specifications (UHF)

Table 10-15 External Dual Circulator Specifications (UHF)

	External Dual Circulator Spec Limit (UHF)	Typical
Operating Frequency Range	380–435 MHz, 435–470 MHz, 470–524 MHz	
Insertion Loss	1.6 dB	1.2 dB

Table 10-15 External Dual Circulator Specifications (UHF) (cont'd.)

	External Dual Circulator Spec Limit (UHF)	Typical
Input Return Loss	18 dB	24 dB
Reverse Isolation	40 dB	50 dB
Power (continuous)	200 W	
Harmonic Attenuation <10 GHz)	55 dB	
Input Connector	RF cable with N male	
Output Connector	N female	

10.2.10 External Dual Circulator Specifications (VHF)

Table 10-16 External Dual Circulator Specifications (VHF)

	External Dual Circulator Spec Limit (VHF)	Typical
Operating Frequency Range	136–146 MHz, 144–160 MHz, 158–174 MHz	
Insertion Loss	1.6 dB	0.7 dB
Input Return Loss	18 dB	25 dB
Reverse Isolation	40 dB	50 dB
Power (continuous)	200 W	
Harmonic Attenuation <10 GHz)	50 dB	
Input Connector	RF cable with N male	
Output Connector	N female	

10.2.11 Antenna Relay Specifications

Table 10-17 Antenna Relay Specifications

	Antenna Relay Spec Limit	Typical
Operating Frequency Range	DC to 4 GHz @ 20 °C	
Maximum Input Power	300 W @ 1-4 GHz	

Table 10-17 Antenna Relay Specifications (cont'd.)

	Antenna Relay Spec Limit	Typical
Coil Specifications:		
pull-in voltage	21.0 V min.	
drop-out voltage	2.0 V max.	
resistance	430 Ω \pm 10% @ +20 °C	
Contact Specifications:		
type	SPDT	
actuation	Failsafe (break before make)	
pull-in time	20 ms max. @20 °C	
drop-out time and remake NC contacts	20 ms max. @20 °C	
Insertion Loss	0.30 dB max.	
Isolation	70 dB min.	
VSWR Maximum	1.3 : 1	
Temperature Range	-30 °C to +80 °C	
Terminations	Female N-type	
Input and Output Impedance	50 Ohms	

11 GTR 8000 Base Radio Disaster Recovery

This chapter provides references and information that will enable you to recover a GTR 8000 Base Radio in the event of failure.

11.1 Recovery Sequence for GTR 8000 Base Radio

Process Steps

- 1 Replace the GTR 8000 Base Radio transceiver module. See [9.2 Replacing a Radio Transceiver Module, page 9-4](#).

- 2 Perform basic device configuration via the serial port. See [4.4.2 Connecting Through a Serial Port Link, page 4-4](#).
 - a. Set the IP address of the device. See [4.4.3.1 Setting the Device IP Address and Pairing Number Using CSS, page 4-7](#).
 - b. Set the serial security services. See [4.4.3.3.1 Setting the Serial Security Services Using CSS, page 4-9](#).

- 3 Perform basic device configuration via the Ethernet port. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - a. Set the current date and time in CSS. See [4.4.5.2 Setting the Date and Time Using CSS, page 4-15](#).
 - b. Set up the local Password Configuration using the CSS (optional). See [4.4.5.8 Setting Up the Local Password Configuration Using the CSS, page 4-25](#).

- 4 Complete the configuration of the Information Assurance features using CSS, as follows:
 - a. Change the SNMPv3 configuration and user credentials from CSS. See [4.4.5.3 Changing SNMPv3 Configuration and User Credentials Using CSS, page 4-15](#).
 - b. Create, update, or delete an SNMPv3 user. See [4.4.5.3.1 Adding or Modifying an SNMPv3 User Using CSS, page 4-18](#).
 - c. Verify the SNMPv3 credentials. See [4.4.5.3.2 Performing an SNMPv3 Connection Verification Using CSS, page 4-19](#).
 - d. Set the SWDL transfer mode. See [4.4.5.6 Setting the SWDL Transfer Mode Using CSS, page 4-23](#).
 - e. Configure DNS using the CSS. See Chapter 7, “Configuring DNS Using CSS” in the *Authentication Services* manual.
 - f. Configure for SSH. See Chapter 4, “Configuring SSH for RF Site Devices and VPMs Using CSS” in the *Securing Protocols with SSH* manual or see “Device Security Configuration Remote Access/Login Banner (Ethernet)” in the *CSS Online Help*.

**NOTE**

Make sure to Restore the Clear Protocols parameters.

- g. Enable RADIUS Authentication using the CSS. See Chapter 7, “Configuring RADIUS Sources and Parameters Using CSS” in the *Authentication Services* manual.
- h. Enable Centralized Authentication using the CSS. See Chapter 7, “Enabling/Disabling Centralized Authentication Using CSS” in the *Authentication Services* manual.
- i. Set the Local Cache Size for Centralized Authentication using the CSS. See Chapter 7, “Setting the Local Cache Size for Central Authentication Using CSS” in the *Authentication Services* manual.
- j. Enable Centralized Event Logging using the CSS (if required by your organization). See Chapter 6, “How to Enable/Disable Centralized Event Logging on Devices Using CSS” and Chapter 1, “Event Logging Client Configuration” for proper hostnames in the *Centralized Event Logging* manual.
- k. Set the NTP Server Settings. See [4.4.5.7 Setting the NTP Server Settings, page 4-24](#).

- 5 Perform a site software download (SWDL) with the SNMPv3 package (if SNMPv3 is desired) of the device and associated site devices. Refer to one of the following procedures:

- **Trunked GTR 8000 Base Radios:**

- For GTR 8000 Base Radios with PSC 9600 Site Controller: [11.2 Performing a Site Download With PSC 9600 Site Controllers, page 11-3](#).
- For GTR 8000 Base Radios with GCP 8000 Site Controller: [11.3 Performing a Site Download With GCP 8000 Site Controllers, page 11-5](#).

- **Conventional GTR 8000 Base Radios:** See “Downloading Software” in the *Software Download* manual. To perform the software download operation, follow the “Performing Operations on a Single Off-line Device” procedure.

**NOTE**

For a conventional base radio, software download should be done independently choosing SINGLE DEVICE mode.

- 6 Restore Codeplug Archive from backup. Reload the base radio configuration file on the new base radio using CSS, as follows:

- a. Select **File** → **Open** from the menu. Locate and open the previously saved configuration file for the base radio.

**NOTE**

If you were not able to back up the base radio configuration from the previous base radio, you can use the configuration from your system build book or use the default base radio configuration file. Specific settings for the base radio must still be configured. See the *CSS Online Help*.

- b. Click **OK** on the Properties Window.
- c. Select **File** → **Write Configuration To Device** from the menu. Click **OK**.

Step result: The configuration from the file you selected is loaded into the new base radio. Communication with the base radio is not available until the reset is complete.

-
- 7 Enable the base radio using CSS as follows:
 - a. Select **Service** → **Mode Screen** from the menu.
 - b. Click **Change to Normal Mode**.

Step result: The base radio is enabled.

-
- 8 On systems with MAC Port locking, disable the locking and then re-enable the locking with the MAC address of the base radio. The device being replaced may be connected to an Ethernet port on a switch which implements MAC Port locking (HP switch or site controller). If so, the Ethernet switch port will need to be unlocked and relocked to the MAC address of the replacement device. See the *MAC Port Lockdown* manual for instructions on how to disable and enable MAC port locking.



NOTE

Following the device restoration, if it was connected to an HP switch port, the HP switch port may have been disabled due to an unexpected MAC address. If so, re-enable the port on the HP switch.

-
- 9 Replace the base radio in the UNC. See Chapter 4, “Replacing a Device” in the *Unified Network Configurator* manual.
-
- 10 Discover the base radio in the UEM. See the *Unified Event Manager* manual.
-

11.2 Performing a Site Download With PSC 9600 Site Controllers

When and where to use:



NOTE

The following procedure does not apply to a site with a GCP 8000 Site Controller. To perform the download for a site with a GCP 8000 Site Controller, see [11.3 Performing a Site Download With GCP 8000 Site Controllers, page 11-5](#).

Procedure Steps

-
- 1 Transfer and install the latest software, using Software Download (SWDL) with SNMPv3 package (if SNMPv3 is desired) to the site controller and base radios, as follows:
 - a. Connect an Ethernet straight through cable between the Ethernet port on the computer and the Ethernet LAN switch. The laptop IP address must be set to an address on the subnet of the local site, which varies depending on the site and zone numbers. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
-
- 2 Open the CSS application.
-

- 3 Select **Tools** → **Connection Configuration** from the menu.

Step result: The Connection Screen appears.

- 4 Verify that **Ethernet** is selected in the **Connection Type** area.

- 5 Specify the IP address for the device in the Ethernet Settings area. Do the following:

If...	Then...
Know the IP address of the device.	<ol style="list-style-type: none"> 1. Enter the IP address of the device in the Device IP Address field. 2. Continue with step 6.
Do not know the IP address of the device, but know the system identification of the device (the zone, site, and device ID of the device).	<ol style="list-style-type: none"> 1. Click Fetch DNS Entry. 2. Select the desired device type from the Device list box. 3. Enter the proper values in the Zone, Site, and Device ID fields. 4. Click OK. Step result: The DNS information of the device automatically appears in the Device IP Address field. 5. Continue with step 6.

- 6 Click **Connect** to make the connection.

- 7 Select **File** → **Read Configuration From Device** from the menu.

Step result: The parameters download from the device to the computer. When the download is complete, the CSS Main window opens.

- 8 Open the Software Download application.



CAUTION

Make sure to load the correct version of the software. There is a possibility of a mismatch in software versions when replacing the transceiver module with an on-hand spare. If a mismatch in software versions occurs, this may cause the transceiver to go into a configuration mode of operation with a reason of 'Invalid Software Version'. To exit the base radio out of configuration mode, see CSS Procedures > Changing from Configuration to Normal Mode in the CSS Online Help.

- 9 Download and install the necessary software onto the site controllers and base radio as follows:

- a. From Software Download, select **File** → **File Manager** from the menu.

Step result: The **Software Depot File Manager** opens.

- b. Select **Component Operations** → **Import Fileset** from the menu.

Step result: The **Import a Fileset Into the Software Depot** dialog box appears.

- c. Click **Browse** and search for the **swdlv3.cfg** file on the CD. Click **Open**.

- d. Click **Generate** to add the file to the Components In the Software Depot list. Click **OK**.
- e. Exit the Software Depot File Manager.
- f. From Software Download, select the appropriate ASTRO 25 system Site Type.
- g. Select the Zone, Site and if applicable, the Subsite.
- h. Click **Connect**.
- i. Select **Transfer and Install** for the Operations Type.
- j. Select both **Repeater Site Controller** and **Site Repeater** for the Application Type.
- k. Select a Software Component from the drop-down list.
- l. Click **Start Operation** to download and install the software.

**NOTE**

The Software Download client software may display a warning that all device types must be upgraded at the same time and that Site Controller-only or Channel-only installs are prohibited. If that warning is displayed, ensure that you are performing a Site SWDL rather than a single device SWDL.

Step result: The site controllers and the base radios are all loaded with the new software.

11.3 Performing a Site Download With GCP 8000 Site Controllers

Procedure Steps

- 1 Connect an Ethernet straight through cable between the Ethernet port on the computer and the Ethernet service port on the site controller. The laptop IP address must be set to an address on the subnet of the local site, which varies depending on the site and zone numbers. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).

**NOTE**

If 802.1x services are enabled on the site controller, an 802.1x login account to connect to the Ethernet port is needed. An 802.1x account is a centrally managed account. See Chapter 6, “802.1x Service Port Procedures for GCP 8000 Site Controller” in the *802.1x Service Ports on Switches* manual.

- 2 Open the Software Download application.

**CAUTION**

Make sure to load the correct version of the software. There is a possibility of a mismatch in software versions when replacing the transceiver module with an on-hand spare. If a mismatch in software versions occurs, this may cause the transceiver to go into a configuration mode of operation with a reason of ‘Invalid Software Version’. To exit the base radio out of configuration mode, see [CSS Procedures > Changing from Configuration to Normal Mode in the CSS Online Help](#).

3 Download and install the necessary software onto the site controllers and base radio as follows:

- a. Select **File** → **File Manager** from the menu.

Step result: The **Software Depot file Manager** opens.

- b. Select **Component Operations** → **Import Fileset** from the menu.

Step result: The **Import a Fileset Into the Software Depot** dialog box appears.

- c. Click **Browse** and search for the **swdlv3.cfg** file on the CD. Click **Open**.

- d. Click **Generate** to add the file to the Components In the Software Depot list. Click **OK**.

- e. Exit the Software Depot File Manager.

- f. From Software Download, select the ASTRO 25 Site Type: Repeater, HPD, or Simulcast.

- g. Select the Zone, Site, and if applicable, the Subsite. The Subsite ID is only available when the Site ID is between 1-64.

- h. Click **Connect**.

Step result: The system connects to the specified zone and site.

- i. Select **Transfer and Install** for the Operations Type.

- j. Select the Application Type:

- For an HPD site: select both **HPD Site Controller** and **HPD Base Radio**.
- For a Repeater site: select both **Repeater Site Controller** and **Site Repeater**.
- For a trunked Simulcast site: select **Multisite Site Controller** and **Multisite Base Radio**.
- For a Simulcast site with a GPB 8000 Reference Distribution Module: select **Multisite Base Radio**, and **GPB 8000 Reference Distribution Module**

- k. Select a Software Component from the drop-down list.

**NOTE**

Both the site controller and base radio software must be chosen as part of the Site Software Download.

- l. Click **Start Operation** to download and install the software.

Step result: The site devices are all loaded with the new software.

Appendix A: Conventional GTR 8000 Base Radio Option Kits

This appendix covers the option kits that are available for the conventional GTR 8000 Base Radio. Each section provides the necessary information to order, install, and configure each option kit.

A.1 T2-2R, T3-3R, and T4-4R Receiver Mute Option Kits

These option kits add the capability of simplex operation, while expanding the receive capability over two or more separate RF channels through a single antenna. The option kits allow a single GTR 8000 Base Radio to be interfaced with up to three GPW 8000 Receivers. The GTR 8000 Base Radio provides both transmit and receive functionality. The GPW 8000 Receivers are used as additional receive channels.

Four different Receiver Mute option kits are available:

- T2-2R Receiver Mute Option CA01958AA (ADD: 2 GPW 8000 Receiver Hardware Kit - 4-Wire Analog)
- T3-3R Receiver Mute Option CA01959AA (ADD: 3 GPW 8000 Receiver Hardware Kit - 4-Wire Analog)
- T4-4R Receiver Mute Option CA01960AA (ADD: 4 GPW 8000 Receiver Hardware Kit - 4-Wire Analog)
- Tn-nR Receiver Mute Option CA01961AA (ADD: GPW 8000 Receiver Hardware No Splitter Kit - 4-Wire Analog)



NOTE


All FRU, kit, and part numbers for all required components in each kit are listed in the parts list section for each receiver mute kit.

A single standalone T7039A GTR 8000 Base Radio is required for each option kit. The number of GPW 8000 Receivers is determined by the option kit name. For example, a T2-2R option kits requires a GTR 8000 Base Radio and one GPW 8000 Receiver. A T3-3R requires one base radio and two receivers, and so on. The number defines the total number of G-series devices.

A.1.1 T2-2R Receiver Mute Option Kit

The CA01958AA T2-2R Receiver Mute option kit is used with a standalone GTR 8000 Base Radio and one GPW 8000 Receiver. All option kit hardware and cables required are included in [Table A-1 T2-2R Receiver Mute Option Kit Parts List](#).

Figure A-1 T2-2R Receiver Mute Option Kit Wiring Diagram

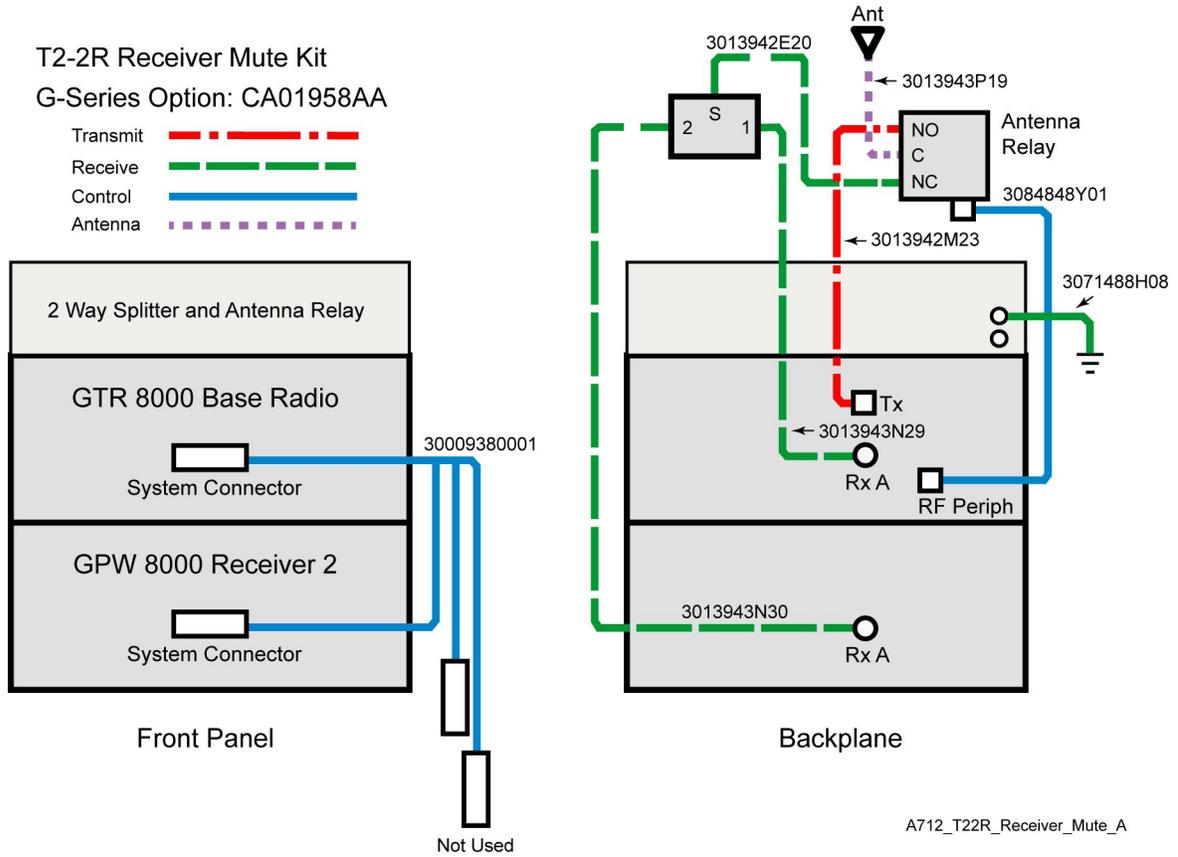

NOTE

See [3.4.7.1 System Connector Ports \(Conventional\)](#), page 3-30 for a detailed description of system connector pinouts.

NOTE

See [Figure A-3 T4-4R Receiver Mute Configuration](#) for an example of a Receiver Mute configuration. However, the T2-2R Receiver Mute configuration only has one GPW 8000 Receiver.

A.1.1.1 T2-2R Receiver Mute Option Kit Parts List


Table A-1 T2-2R Receiver Mute Option Kit Parts List

FRU	Kit	Part Number	Description	Quantity
DLN6795A			T2-2R RECEIVER MUTE	1
	CLN8788A		HARDWARE, T2-2R RECEIVER MUTE	1
0182017V14		SPLITTER, 2 WAY	1	
0285854Y01		NUT, M6-GROUND WIRE TO STUDS ON TRAY	2	
0310909E32		SCRMCH M3X0.5X8 SPLTR MTG	4	
0310909A54		SCREW 3.5X30MM ANT RELAY MTG	2	
0310909E46		SCRMCH M3.5X0.6X8 ANT CONN & SIDE BRKTS	12	
0312016A49		SCREW FRONT PANEL TO CHASSIS (blk)	4	
0312016A54		SCRTPG M6 X 1 X 10 (blk) TRAY TO RACK	4	
07009370001		BRACKET CHASSIS SUPPORT	2	
27009304001		CHASSIS, PERIPHERAL	1	
40009272002		RELAY, COAXIAL 29V	1	
5682347B20		BAG FOR SCREWS	1	
64009317001		PANEL, FRONT	1	
0285504U05		CAGE NUT, M6 FOR CABINET MTG	4	
0310909C91		SCREW M6-GROUND CABLE TO BUS BAR AND TRAY TO CABINET CAGE NUTS	5	
CKN6941A			CABLES, T2-2R RECEIVER MUTE	1
		30009380001	CABLE, SAC	1
		3013942M23	CBL N-N M-M 75 CM	1
		3013942P19	CBL N-N M-F PNL 55 CM	1
		3013943E20	CBL N-BNC M-M 60 CM	1
	3013943N29	CBL BNC-BNC M-M 110 CM	1	
	3013943N30	CBL BNC-BNC M-M 120 CM	1	
	3084848Y01	CABLE RELAY W/TEMP	1	
	3071488H08	CABLE, GROUND TRAY TO BUS BAR	1	
	4210217A04	STRAP TIE .184X7.31 NYL BLK	10	
	5682347B21	BAG, PLASTIC 584 X 431 MM	1	
	SVCWARR12	12 MONTH STANDARD WARRANTY	1	

A.1.2 T3-3R Receiver Mute Option Kit

The CA01959AA T3-3R Receiver Mute option kit is used with a standalone GTR 8000 Base Radio and two GPW 8000 Receivers. All option kit hardware and cables required are included in [Table A-2 T3-3R Receiver Mute Option Kit Parts List](#).

Figure A-2 T3-3R Receiver Mute Option Kit Wiring Diagram

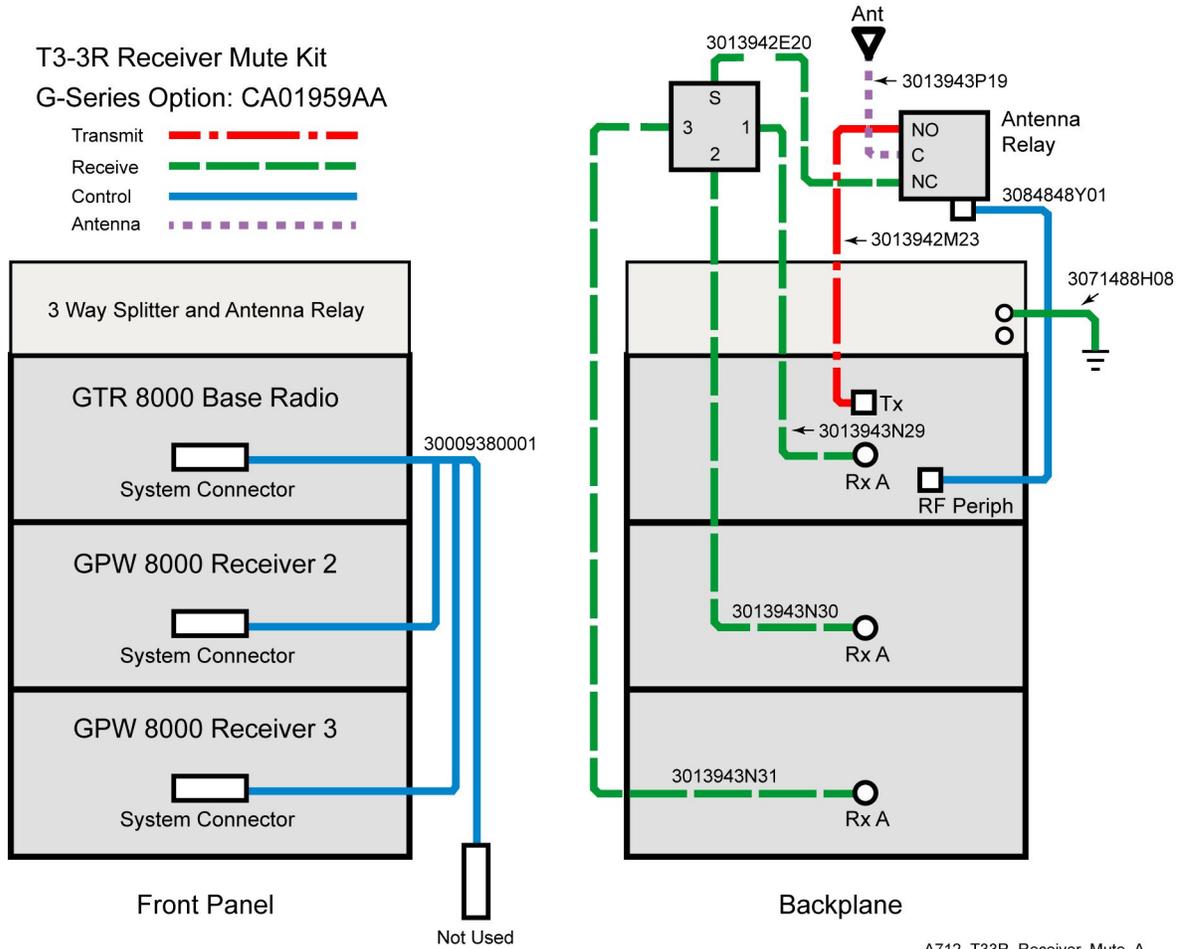

NOTE

See [3.4.7.1 System Connector Ports \(Conventional\)](#), page 3-30 for a detailed description of system connector pinouts.

NOTE

See [Figure A-3 T4-4R Receiver Mute Configuration](#) for an example of a Receiver Mute configuration. However, the T3-3R Receiver Mute configuration only has two GPW 8000 Receivers.

A.1.2.1 T3-3R Receiver Mute Option Kit Parts List


Table A-2 T3-3R Receiver Mute Option Kit Parts List

FRU	Kit	Part Number	Description	Quantity
DLN6796A			T3-3R RECEIVER MUTE	1
	CLN8789A		HARDWARE, T3-3R RECEIVER MUTE	1
		0182017V15	SPLITTER, 3WAY	1
		0285854Y01	NUT, M6-GROUND WIRE TO STUDS ON TRAY	2
		0310909E32	SCRMCH M3X0.5X8 SPLTR MTG	4
		0310909A54	SCREW 3.5X30MM ANT RELAY MTG	2
		0310909E46	SCRMCH M3.5X0.6X8 ANT CONN & SIDE BRKTS	12
		0312016A49	SCREW FRONT PANEL TO CHASSIS (blk)	4
		0312016A54	SCRTPG M6 X 1 X 10 (blk) TRAY TO RACK	4
		07009370001	BRACKET CHASSIS SUPPORT	2
		27009304001	CHASSIS, PERIPHERAL	1
		40009272002	RELAY, COAXIAL 29V	1
		5682347B20	BAG FOR SCREWS	1
		64009317001	PANEL, FRONT	1
		0285504U05	CAGE NUT, M6 FOR CABINET MTG	4
		0310909C91	SCREW M6-GROUND CABLE TO BUS BAR AND TRAY TO CABINET CAGE NUTS	5
	CKN6942A		CABLES, T3-3R RECEIVER MUTE	1
		30009380001	CABLE, SAC	1
		3013942M23	CBL N-N M-M 75 CM	1
		3013942P19	CBL N-N M-F PNL 55 CM	1
		3013943E20	CBL N-BNC M-M 60 CM	1
		3013943N29	CBL BNC-BNC M-M 110 CM	1
		3013943N30	CBL BNC-BNC M-M 120 CM	1
		3013943N31	CBL BNC-BNC M-M 130 CM	1
		3084848Y01	CABLE RELAY W/TEMP	1
		3071488H08	CABLE, GROUND TRAY TO BUS BAR	1
		4210217A04	STRAP TIE .184X7.31 NYL BLK	10
		5682347B21	BAG, PLASTIC 584 X 431 MM	1
		SVCWARR12	12 MONTH STANDARD WARRANTY	1

A.1.3 T4-4R Receiver Mute Option Kit


The CA01960AA T4-4R Receiver Mute option kit is used with a standalone GTR 8000 Base Radio and three GPW 8000 Receiver. All option kit hardware and cables required are included in [Table A-3 T4-4R Receiver Mute Option Kit Parts List](#).

Figure A-3 T4-4R Receiver Mute Configuration

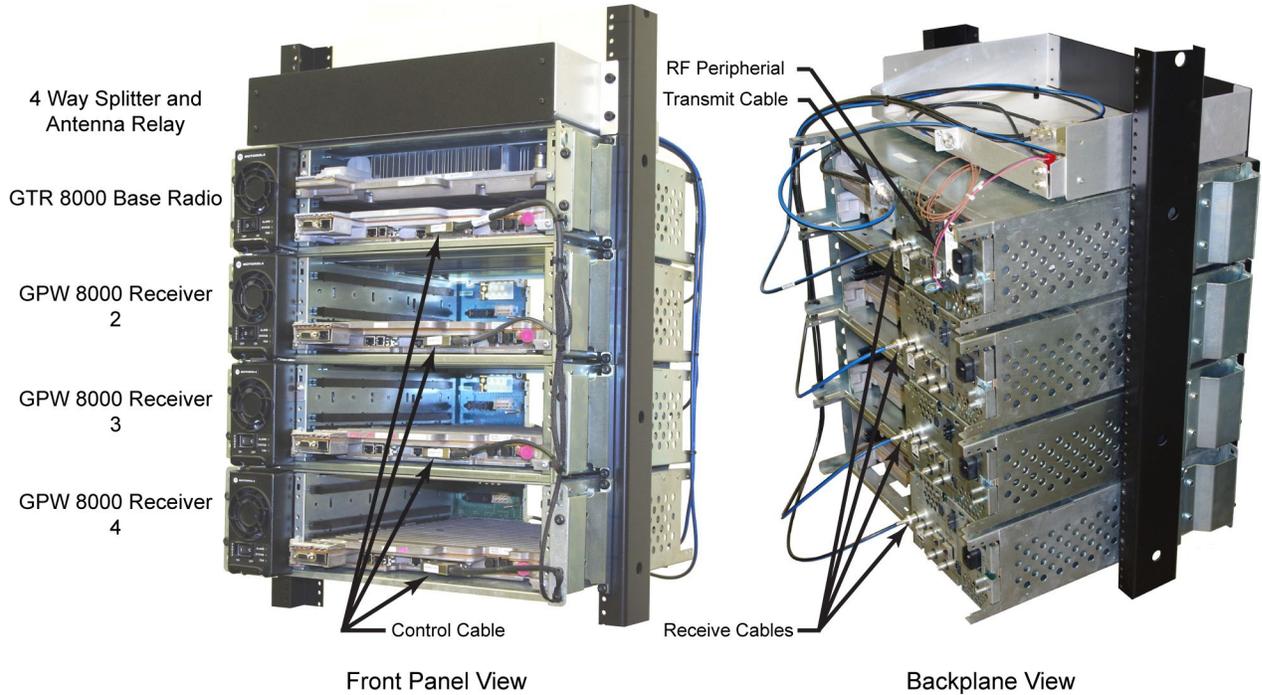

A712_T44R_Receiver_Mute_Config1


Figure A-4 T4-4R Splitter and Antenna Relay Tray

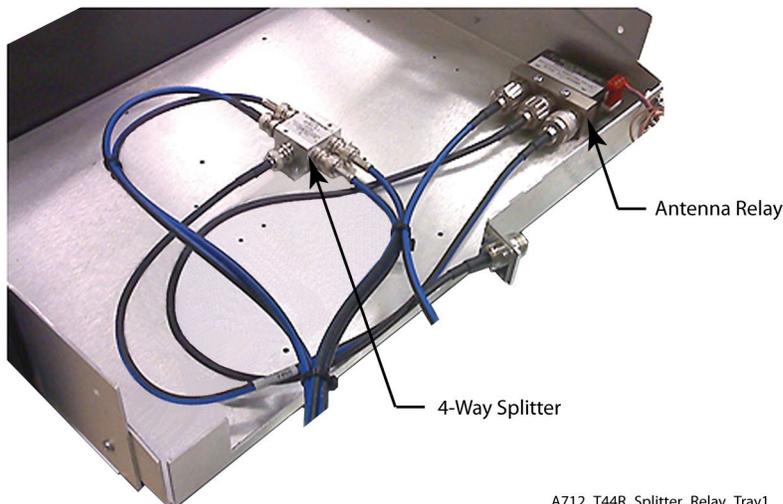

A712_T44R_Splitter_Relay_Tray1

The wiring diagram for the T4-4R Receiver Mute option kit outlines the connections for all cables and provides part numbers for each type.

Figure A-5 T4-4R Receiver Mute Option Kit Wiring Diagram

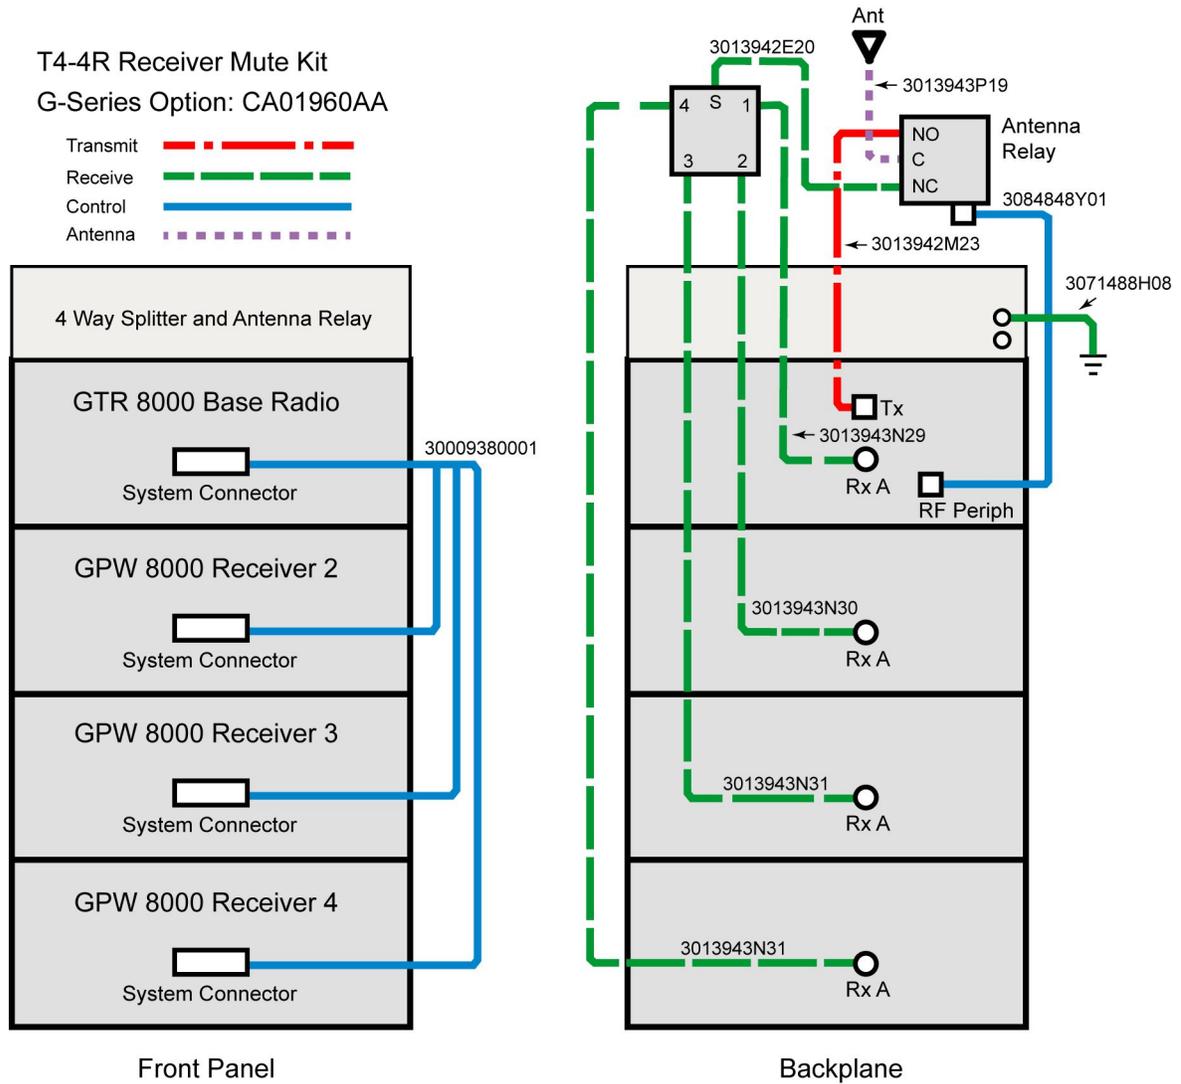

A712_T44R_Receiver_Mute_A



NOTE

See 3.4.7.1 System Connector Ports (Conventional), page 3-30 for a detailed description of system connector pinouts.

A.1.3.1 T4-4R Receiver Mute Option Kit Parts List

Table A-3 T4-4R Receiver Mute Option Kit Parts List

FRU	Kit	Part Number	Description	Quantity
DLN6797A			T4-4R RECEIVER MUTE	1
	CLN8790A		HARDWARE, T4-4R RECEIVER MUTE	1
		0182017V16	SPLITTER, 4WAY	1
		0285854Y01	NUT, M6-GROUND WIRE TO STUDS ON TRAY	2
		0310909E32	SCRMCH M3X0.5X8 SPLTR MTG	4
		0310909A54	SCREW 3.5X30MM ANT RELAY MTG	2
		0310909E46	SCRMCH M3.5X0.6X8 ANT CONN & SIDE BRKTS	12
		0312016A49	SCREW FRONT PANEL TO CHASSIS (blk)	4
		0312016A54	SCRTPG M6 X 1 X 10 (blk) TRAY TO RACK	4
		07009370001	BRACKET CHASSIS SUPPORT	2
		27009304001	CHASSIS, PERIPHERAL	1
		40009272002	RELAY, COAXIAL 29V	1
		5682347B20	BAG FOR SCREWS	1
		64009317001	PANEL, FRONT	1
		0285504U05	CAGE NUT, M6 FOR CABINET MTG	4
		0310909C91	SCREW M6-GROUND CABLE TO BUS BAR AND TRAY TO CABINET CAGE NUTS	5
	CKN6943A		CABLES, T4-4R RECEIVER MUTE	1
		30009380001	CABLE, SAC	1
		3013942M23	CBL N-N M-M 75 CM	1
		3013942P19	CBL N-N M-F PNL 55 CM	1
		3013943E20	CBL N-BNC M-M 60 CM	1
		3013943N29	CBL BNC-BNC M-M 110 CM	1
		3013943N30	CBL BNC-BNC M-M 120 CM	1
		3013943N31	CBL BNC-BNC M-M 130 CM	2
		3084848Y01	CABLE RELAY W/TEMP	1
		3071488H08	CABLE, GROUND TRAY TO BUS BAR	1
		4210217A04	STRAP TIE .184X7.31 NYL BLK	10
		5682347B21	BAG, PLASTIC 584 X 431 MM	1
		SVCWARR12	12 MONTH STANDARD WARRANTY	1

A.1.4 Expected Site Performance for T2-2R, T3-3R, and T4-4R Receiver Mute


Table A-4 Total Transmit and Receive Attenuation for T2-2R, T3-3R, and T4-4R Receiver Mute

Band Type Attenuation	CA01958AA: T2-2R	CA01959AA: T3-3R	CA019860AA: T4-4R
VHF Receive (Rx)	3.7 dB typical 4.0 dB maximum	5.6 dB typical 5.9 dB maximum	7.0 dB typical 7.3 dB maximum
VHF Rx Port to Port Isolation	32 dB typical	27 dB typical	30 dB typical
VHF Transmit (Tx)	0.3 dB typical 0.4 dB maximum	0.3 dB typical 0.4 dB maximum	0.3 dB typical 0.4 dB maximum
UHF Rx	4.2 dB typical 4.4 dB maximum	6.3 dB typical 6.5 dB maximum	7.5 dB typical 7.8 dB maximum
UHF Rx Port to Port Isolation	28 dB typical	21 dB typical	25 dB typical
UHF Tx	0.5 dB typical 0.6 dB maximum	0.5 dB typical 0.6 dB maximum	0.5 dB typical 0.6 dB maximum
800 MHz Rx	5.1 dB typical 5.4 dB maximum	7.2 dB typical 7.5 dB maximum	8.5 dB typical 8.8 dB maximum
800 MHz Rx Port to Port Isolation	28 dB typical	25 dB typical	25 dB typical
800 MHz Tx	0.8 dB typical 1.0 dB maximum	0.8 dB typical 1.0 dB maximum	0.8 dB typical 1.0 dB maximum

A.1.5 Tn-nR Receiver Mute Option Kit

The CA01961AA Tn-nR Receiver Mute option kit is used with a standalone GTR 8000 Base Radio and up to three GPW 8000 Receivers.

Figure A-6 Tn-nR Receiver Mute Option Kit Wiring Diagram

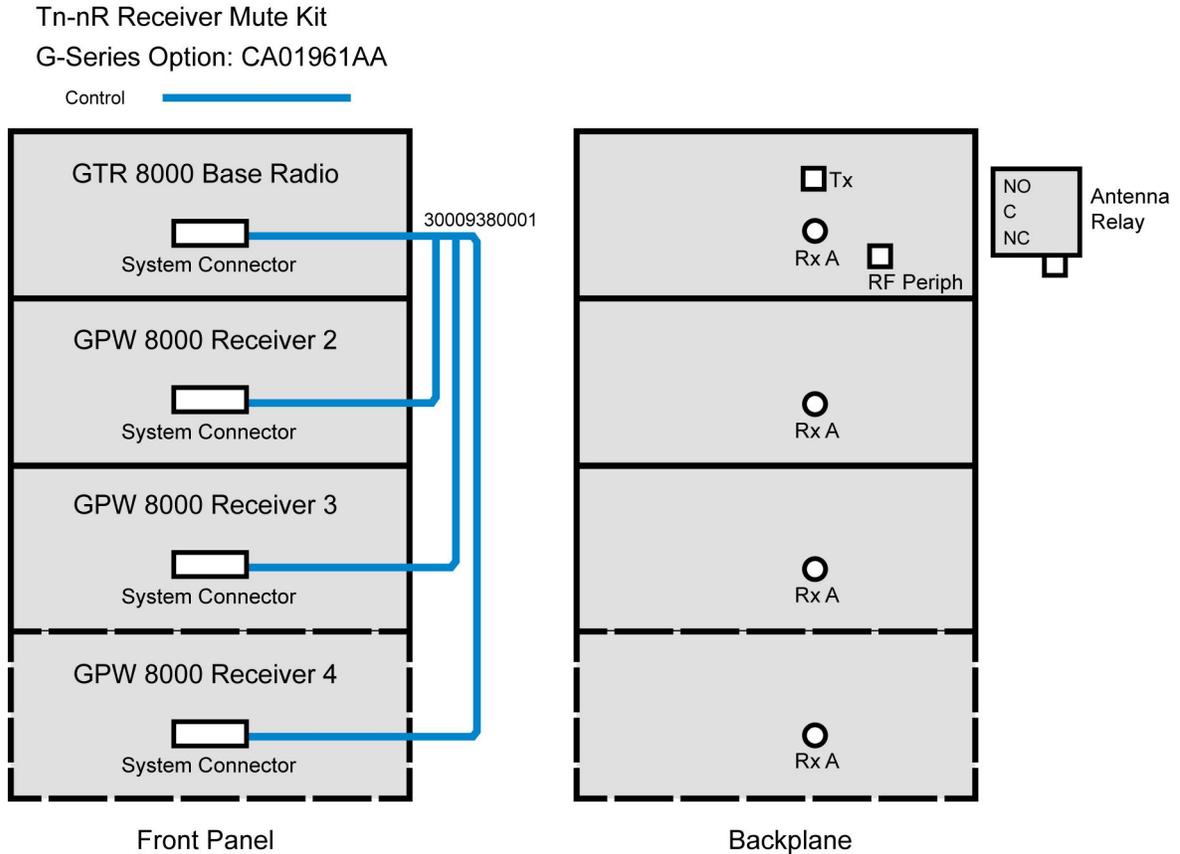

A712_TnnR_Receiver_Mute_A



NOTE

See [3.4.7.1 System Connector Ports \(Conventional\)](#), page 3-30 for a detailed description of system connector pinouts.



NOTE

The antenna relay is mounted on the backplane of the GTR 8000 Base Radio. See [2.3.11 Antenna Relay Module](#), page 2-18 for details. The only cable used with the Tn-nR Receiver Mute option kit is the control cable. All other required option kit hardware is included in [Table A-5 Tn-nR Receiver Mute Option Kit Parts List](#).

A.1.5.1 Tn-nR Receiver Mute Option Kit Parts List

Table A-5 Tn-nR Receiver Mute Option Kit Parts List

FRU	Kit	Part Number	Description	Quantity
DLN6798A			RCVR SOFT NO SPLITTER	1
	CKN6944A		CABLES, RCVR SOFT NO SPLITTER	1
		30009380001	CABLE, SAC	1
		4210217A04	STRAP TIE .184X7.31 NYL BLK	10
		5682347B21	BAG, PLASTIC 584 X 431 MM	1
		SVCWARR12	12 MONTH STANDARD WARRANTY	1

A.1.6 Installing the T2-2R, T3-3R, and T4-4R Receiver Mute Option Kits

Procedure Steps

- 1 Install the standalone GTR 8000 Base Radio and GPW 8000 Receivers according to the processes and procedures in [Chapter 3 GTR 8000 Base Radio Installation](#).



NOTE

See [Figure A-3 T4-4R Receiver Mute Configuration](#) for an example of the GTR 8000 Base Radio and GPW 8000 Receivers installed in a rack. It is recommended that no spaces be left between the devices in a rack or cabinet installation. Leave enough space above the splitter and antenna relay tray to allow room for connecting cables.



WARNING

To guard against personal injury and/or damage to equipment, switch the base radio to **Service Mode** when performing service. Transmit inhibiting the base radio within the **Station Status** screen in the CSS will also prevent the transmitter from keying. Remember to switch the base radio back to **Normal Mode** when service is complete.

- 2 If the base radio and receivers are powered up, ensure that each device is switched to service mode or powered down, as follows:



NOTE

If you choose to turn off the power, set the rocker switch on the front of the associated power supply to the Off (0) position and skip this step.

- a. Connect to the base radio's transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
- b. Using CSS, select **File** → **Read Configuration From Device** from the menu.
- c. Select **Service** → **Test and Measurement Screen** from the menu.
- d. Click **Change to Service Mode**.
- e. Disconnect the Ethernet cable from the base radio's transceiver module Ethernet service port.
- f. Repeat for each device in the configuration.

- 3 Remove the fan module to gain access to the Transceiver Option Card (TOC) on the transceiver module. See [9.3 Replacing the Fan Assembly, page 9-10](#) for details.

- 4 Connect cables to each device according to its relevant wiring diagram.

For a T2-2R Receiver Mute configuration,	See Figure A-1 T2-2R Receiver Mute Option Kit Wiring Diagram for details.
For a T3-3R Receiver Mute configuration,	See Figure A-2 T3-3R Receiver Mute Option Kit Wiring Diagram for details.
For a T4-4R Receiver Mute configuration,	See Figure A-5 T4-4R Receiver Mute Option Kit Wiring Diagram for details.
For a Tn-nR Receiver Mute configuration,	See Figure A-6 Tn-nR Receiver Mute Option Kit Wiring Diagram for details.



NOTE

See [Figure A-3 T4-4R Receiver Mute Configuration](#) for an example of how to route cables.

- 5 Replace the fan modules for the base radio and receivers. See [9.3 Replacing the Fan Assembly, page 9-10](#).



NOTE

If you chose to turn off the power, set the rocker switch on the front of the associated power supply to the On (1) position.

- 6 If the base radio and receivers are in service mode, switch each device to normal mode, as follows:
 - a. Connect to the base radio's transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **File** → **Read Configuration From Device** from the menu.
 - c. Select **Service** → **Test and Measurement Screen** from the menu.
 - d. Click **Change to Normal Mode**.
 - e. Disconnect the Ethernet cable from the base radio's transceiver module Ethernet service port.

- f. Repeat for each device in the configuration.
-

A.1.7 Configuring the T2-2R, T3-3R, and T4-4R Receiver Mute Option Kits

Prerequisites:

Ensure that all required installation procedure have been performed for the base radio and receiver(s) and that the devices have been powered up.

When and where to use:

This procedure is used to configure the WildCard Tables for a Receiver Mute configuration using the Configuration/Service Software (CSS).

Procedure Steps

- 1 If necessary, perform the initial configuration for the base radio and receiver(s). See [4.4.1 Initial Configuration of a Device Using CSS, page 4-3](#) for details.
 - 2 Connect to the Ethernet port on the device. See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#) for details.
 - 3 Select **File** → **Read Configuration From the Device** from the menu.
 - 4 Select **Hardware Configuration** from the navigation pane and set *Station Type [R]* to **Analog Only**.
-



NOTE

When configuring GPW 8000 Receivers, the *Hardware Platform [R]* parameter is set to **GPW 8000 Satellite Receiver**. The Antenna Relay [R] parameter is not configurable for GPW 8000 Receivers.

- 5 Set *Antenna Relay [R]* to **Enabled**.




NOTE

Use the default value of 30 msec for the Antenna Relay Delay. This step is not required for GPW 8000 Receivers.

- 6 Select **WildCard Tables** from the navigation pane and click **Set to Default** to add default WildCard tables.

Figure A-7 CSS - WildCard Tables Example

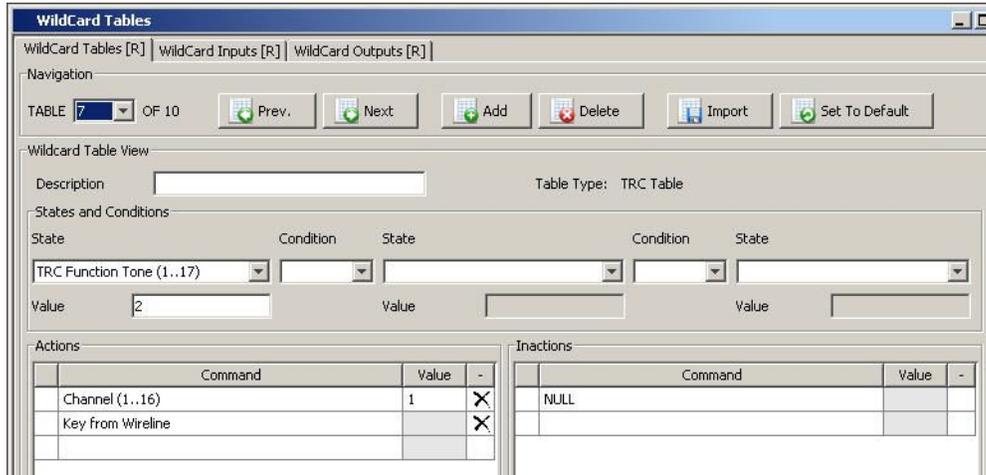

- 7 Click **Yes** to reset the WildCard Tables to their default structure. The following default WildCard Tables are created:



WildCard Table numbers are arbitrary and shown for illustration purposes. The maximum number of WildCard tables is limited by memory size and the number of States and Commands in each table.

WildCard Table	Description	States and Condition		Actions		Inactions	
		State	Value	Command	Value	Command	Value
1	In-cabinet RPT	Input 6	n/a	In-cabinet Repeat ON	n/a	In-Cabinet Repeat OFF	n/a
2	Rx Inhibit	Input 7	n/a	RX INHIBIT	n/a	RX ENABLE	n/a
3	External PTT	Input 5	n/a	Key from Wideband	n/a	Dekey from Wideband	n/a
4	RD STAT-RX ACT	RX Qualifiers Met	n/a	Set Output (1..12)	7	Clear Output (1..12)	7
5	Tx Inhibit	Input 3	n/a	TX INHIBIT	n/a	TX ENABLE	n/a
6		TRC Function Tone (1..17)	1	Monitor	n/a	NULL	n/a
7		TRC Function (1..17)	2	Channel (1..16)	1	NULL	n/a
				Key from Wireline	n/a	n/a	n/a

8		LLGT Detect	n/a	NULL	n/a	Dekey from Wireline	n/a
9	T4 if CH2 Conf	TRC Function (1..17)	3	Channel (1..16)	2	NULL	n/a
				Key from Wireline	n/a	n/a	n/a
10	T5 if CH3 Conf	TRC Function (1..17)	8	Channel (1..16)	3	NULL	n/a
				Key from Wireline	n/a	n/a	n/a



NOTE

Table configurations are selected from the TABLE parameter. See [Figure A-7 CSS - WildCard Tables Example](#) for location of parameter fields.

- For all Receiver Mute Configurations, click **Add** and populate the new WildCard table to mute external receivers:

WildCard Table	Description	States and Condition		Actions		Inactions	
		State	Value	Command	Value	Command	Value
11	Mute Ext RXs	Analog Wireline PTT	n/a	Set Output (1..12)	3	Clear Output (1..12)	3
				Set Output (1..12)	4	Clear Output (1..12)	4
				Set Output (1..12)	5	Clear Output (1..12)	5

- For a T4-4R configuration, click **Add** and populate the new WildCard table to control channel 4, as follows



NOTE

The description field is limited to 14 characters, including spaces.

WildCard Table	Description	States and Condition		Actions		Inactions
		State	Value	Command	Value	Command
12		TRC Function (1..17)	9	Channel (1..16)	4	NULL
				Key from Wireline	n/a	



NOTE

The function tones used in these tables must be correlated with the function tones set in the console.

- 10 Select **File** → **Write Configuration To Device** from the menu.

- 11 Select **Tools** → **Disconnect** from the menu to terminate the connection to the device.

- 12 Repeat steps 1–7 for all GPW 8000 Receiver(s).

**NOTE**

Only the default WildCard tables are required for the GPW 8000 Receiver(s).

- 13 **For GPW 8000 Receivers:**
Edit TABLE 2 and change the *State and Conditions* from **Input 7** to **Input 4**.

- 14 Select **File** → **Write Configuration To Device** from the menu.

- 15 Select **Tools** → **Disconnect** from the menu to terminate the connection to the device.


A.2 T1-2R with Talk-Around Option Kit

The CA01957AA T1-2R with Talk-Around option kit adds the capability of listening to the output transmit (Tx) frequency of the base radio when the base radio is not transmitting. This allows the console operator to listen to any talk-around (direct) operation. A GPW 8000 Receiver is used to monitor the output frequency.

A standalone T7039A GTR 8000 Base Radio is required. One GPW 8000 Receiver must be ordered without this option. This option kit includes one RF (transmit/receive) antenna relay, control cable, RF cables, and mounting hardware. The base radio must be ordered with the appropriate duplexer option.

All option kit hardware and cables required are included in [Table A-6 T1-2R with Talk-Around Option Kit Parts List](#).

Figure A-8 T1-2R Talk-Around Option Kit Wiring Diagram

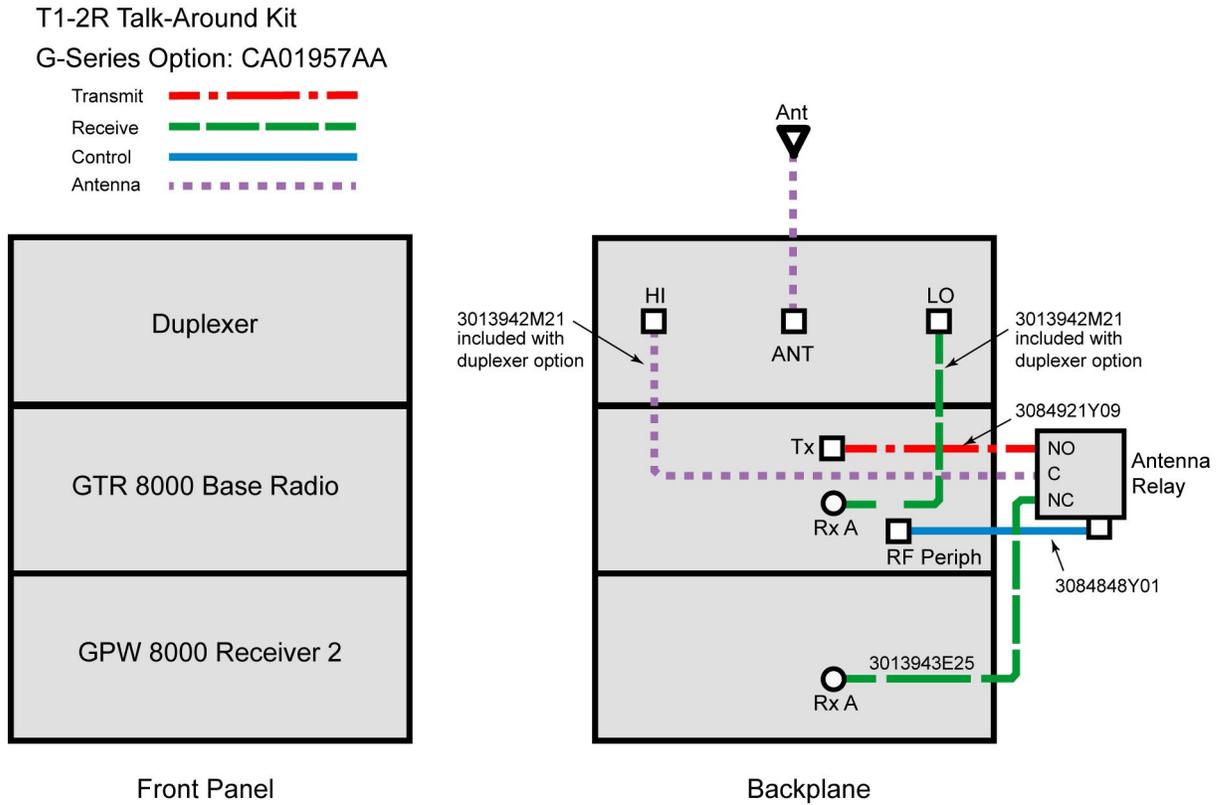

A712_T12R_TalkAround_A



NOTE

See [3.4.7.1 System Connector Ports \(Conventional\)](#), page 3-30 for a detailed description of system connector pinouts.



NOTE

The antenna relay is mounted on the backplane of the GTR 8000 Base Radio. See [2.3.11 Antenna Relay Module](#), page 2-18 for details.

A.2.1 T1-2R with Talk-Around Option Kit Parts List

Table A-6 T1-2R with Talk-Around Option Kit Parts List

FRU	Kit	Part Number	Description	Quantity
DLN6799A			T1-2R W/TALKAROUND	1
	CLN8792A		HARDWARE, T1-2R W/TALKAROUND	1
		0310909A54	SCREW 3.5X30MM ANT RELAY MTG	2
		40009272002	RELAY, COAXIAL 29V	1
		5682347B20	BAG FOR SCREWS	1
	CKN6945A		CABLES, T1-2R W/TALKAROUND	1
		3084921Y09	CBL, ASSY, COAX, 55CM, N-TO-QN	1
		4285026Y01	CLIP,CABLE RETAINER	1
		3013943E25	CBL N-BNC M-M 85CM	1
		3084848Y01	CABLE RELAY W/TEMP	1
		4210217A04	STRAP TIE .184X7.31 NYL BLK	10
		5682347B21	BAG, PLASTIC 584 X 431 MM	1
		SVCWARR12	12 MONTH STANDARD WARRANTY	1

A.2.2 Expected Site Performance for T1-2R with Talk-Around

Table A-7 Total Transmit and Receive Attenuation for T1-2R with Talk-Around

Band Type Attenuation	CA01957AA: T1-2R
VHF Rx 1	0.6 dB typical 0.8 dB maximum
VHF Rx 2	0.9 dB typical 1.1 dB maximum
VHF Tx	0.8 dB typical 1.0 dB maximum
UHF Rx1	0.8 dB typical 1.0 dB maximum
UHF Rx2	1.3 dB typical 1.5 dB maximum
UHF Tx	1.2 dB typical 1.4 dB maximum
800 MHz Rx1	0.9 dB typical 1.1 dB maximum
800 MHz Rx2	1.7 dB typical 1.9 dB maximum
800 MHz Tx	1.5 dB typical 1.7 dB maximum

A.2.3 Installing the T1-2R with Talk-Around Option Kit

Procedure Steps

- 1 Install the standalone GTR 8000 Base Radio, GPW 8000 Receiver according to the processes and procedures in [Chapter 3 GTR 8000 Base Radio Installation](#). Install a duplexer according to the procedures in [Chapter 9 GTR 8000 Base Radio FRU Procedures](#).



WARNING

To guard against personal injury and/or damage to equipment, switch the base radio to Service Mode when performing service. Transmit inhibiting the base radio within the Station Status screen in the CSS will also prevent the transmitter from keying. Remember to switch the base radio back to Normal Mode when service is complete.

- 2 If the base radio and receiver are powered up, ensure that each device is switched to service mode or powered down, as follows:

**NOTE**

If you choose to turn off the power, set the rocker switch on the front of the associated power supply to the Off (0) position and skip this step.

- a. Connect to the base radio's transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **File** → **Read Configuration From Device** from the menu.
 - c. Select **Service** → **Test and Measurement Screen** from the menu.
 - d. Click **Change to Service Mode**.
 - e. Disconnect the Ethernet cable from the base radio's transceiver module Ethernet service port.
 - f. Repeat for each device in the configuration.
-
- 3 Attach the antenna relay to the backplane of the GTR 8000 Base Radio. See [2.3.11 Antenna Relay Module, page 2-18](#) and [9.14 Replacing an Antenna Relay, page 9-40](#) for details.
-
- 4 Remove the fan module to gain access to the Transceiver Option Card (TOC) on the transceiver module. See [9.3 Replacing the Fan Assembly, page 9-10](#) for details.
-
- 5 Connect cables to each device according to [Figure A-8 T1-2R Talk-Around Option Kit Wiring Diagram](#).
-
- 6 Replace the fan modules for the base radio and receivers.

**NOTE**

If you chose to turn off the power, set the rocker switch on the front of the associated power supply to the On (1) position.

-
- 7 If the base radio and receivers are in service mode, switch each device to normal mode, as follows:
 - a. Connect to the base radio's transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **File** → **Read Configuration From Device** from the menu.
 - c. Select **Service** → **Test and Measurement Screen** from the menu.
 - d. Click **Change to Normal Mode**.
 - e. Disconnect the Ethernet cable from the base radio's transceiver module Ethernet service port.
 - f. Repeat for each device in the configuration.
-

A.2.4 Configuring the T1-2R with Talk-Around Option Kit

Prerequisites:

Ensure that all required installation procedure have been performed for the base radio and receiver(s) and that the devices have been powered up.

When and where to use:

This procedure is used to configure the WildCard Tables for a T1-2R with Talk-Around configuration using the Configuration/Service Software (CSS).

Procedure Steps

- 1 If necessary, perform the initial configuration for the base radio. [4.4.1 Initial Configuration of a Device Using CSS, page 4-3](#) for details.
- 2 Connect to the Ethernet port on the base radio. [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#) for details.
- 3 Select **File** → **Read Configuration From the Device** from the menu.
- 4 Select **Hardware Configuration** from the navigation pane and set *Station Type [R]* to **Analog Only**.

**NOTE**

When configuring GPW 8000 Receivers, the *Hardware Platform [R]* parameter is set to **GPW 8000 Satellite Receiver**.

- 5 Set *Antenna Relay [R]* to **Enabled**.

**NOTE**

Use the default value of 30 msec for the Antenna Relay Delay.

- 6 Select **WildCard Tables** from the navigation pane and click **Set to Default** to add default WildCard tables.
- 7 Click **Yes** to reset the WildCard Tables to their default structure. The following default WildCard Tables are created:

**NOTE**

WildCard Table numbers are arbitrary and shown for illustration purposes. The maximum number of WildCard tables is limited by memory size and the number of States and Commands in each table.

WildCard Table	Description	States and Condition		Actions		Inactions	
		State	Value	Command	Value	Command	Value
1	In-cabinet RPT	Input 6	n/a	In-cabinet Repeat ON	n/a	In-Cabinet Repeat OFF	n/a
2	Rx Inhibit	Input 7	n/a	RX INHIBIT	n/a	RX ENABLE	n/a
3	External PTT	Input 5	n/a	Key from Wideband	n/a	Dekey from Wideband	n/a
4	RD STAT-RX ACT	RX Qualifiers Met	n/a	Set Output (1..12)	7	Clear Output (1..12)	7

5	Tx Inhibit	Input 3	n/a	TX INHIBIT	n/a	TX ENABLE	n/a
6		TRC Function Tone (1..17)	1	Monitor	n/a	NULL	n/a
7		TRC Function (1..17)	2	Channel (1..16)	1	NULL	n/a
				Key from Wireline	n/a	n/a	n/a
8		LLGT Detect	n/a	NULL	n/a	Dekey from Wireline	n/a
9	T4 if CH2 Conf	TRC Function (1..17)	3	Channel (1..16)	2	NULL	n/a
				Key from Wireline	n/a	n/a	n/a
10	T5 if CH3 Conf	TRC Function (1..17)	8	Channel (1..16)	3	NULL	n/a
				Key from Wireline	n/a	n/a	n/a

**NOTE**

Table configurations are selected from the TABLE parameter. See [Figure A-7 CSS - WildCard Tables Example](#) for location of parameter fields.

-
- 8** Select **File** → **Write Configuration To Device** from the menu.
-
- 9** Select **Tools** → **Disconnect** from the menu to terminate the connection to the device.
-
- 10** Repeat steps 1–7 for all GPW 8000 Receiver(s).

**NOTE**

Only the default WildCard tables are required for the GPW 8000 Receiver(s).

-
- 11 For GPW 8000 Receivers:**
Edit TABLE 2 and change the *State and Conditions* from **Input 7** to **Input 4**.
-
- 12** Select **File** → **Write Configuration To Device** from the menu.
-
- 13** Select **Tools** → **Disconnect** from the menu to terminate the connection to the device.
-


A.3 T2-2R with Duplexer and Triple Relay Option Kit

The CA01962AA T2-2R with Duplexer and Triple Relay option kit adds the capability to dynamically tune the TX frequency based on the active channel. The GTR 8000 Base Radio is a normal duplexed repeater while the GPW 8000 Receiver monitors the TX frequency. The other channel is for talk-around (transmit and receive). This option is sometimes called the triple relay option. A GPW 8000 Receiver is used to monitor the second frequency.

A standalone T7039A GTR 8000 Base Radio is required for this option kit. One GPW 8000 Receiver must be ordered without this option. This option kit includes 3 RF (transmit/receive) antenna relays, control cables, RF cables, and mounting hardware. The base radio must be ordered with the appropriate duplexer option.

All option kit hardware and cables required are included in [Table A-8 T2-2R with Duplexer and Triple Relay Option Kit Parts List](#).

Figure A-9 T2-2R with Duplexer and Triple Relay Configuration

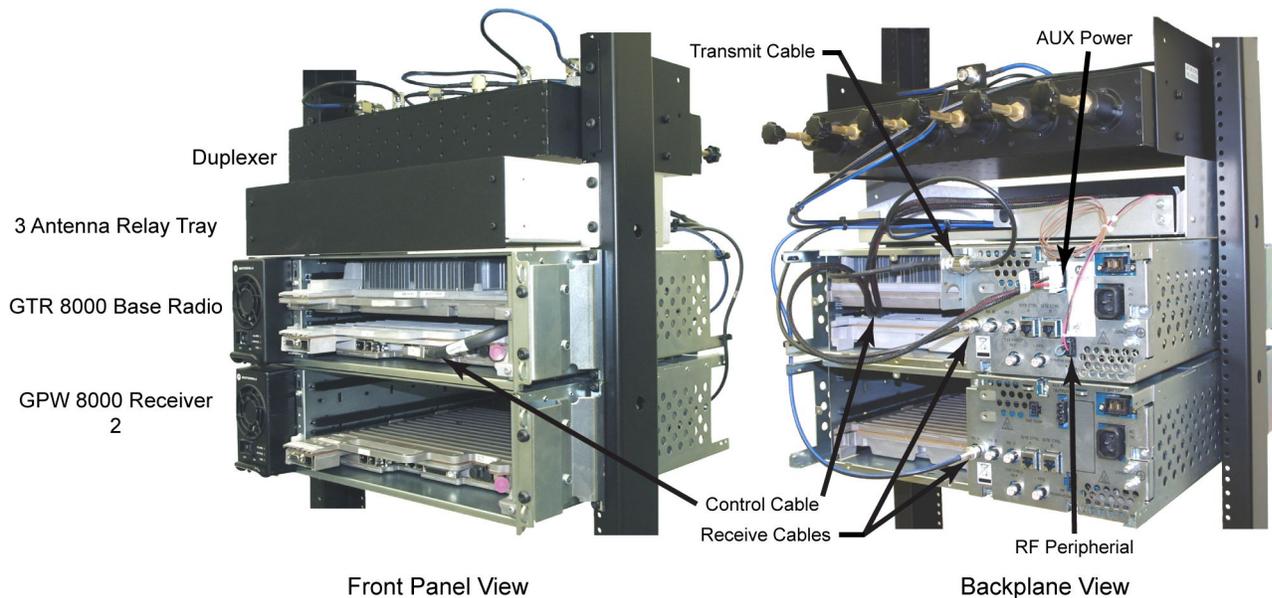

A712_T22R_Duplexer_Config1




NOTE

Base radio and receiver are shown without fan modules for clarity.

The triple antenna relay tray is illustrated below to show the placement of the antenna relays:


Figure A-10 Triple Antenna Relay Tray

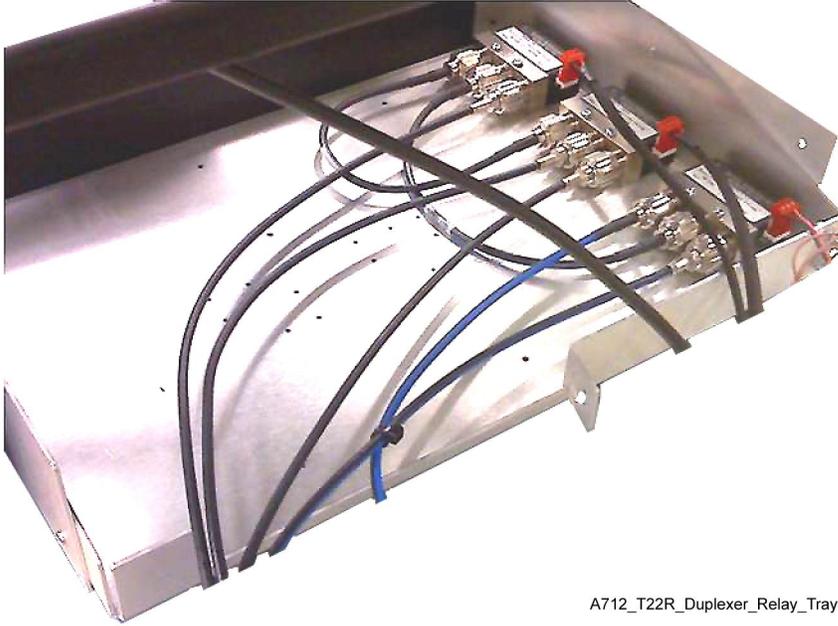

A712_T22R_Duplexer_Relay_Tray

The wiring diagram for the T2-2R with Duplexer and Triple Relay option kit outlines the connections for all cables and provides part numbers for each type.

Figure A-11 T2-2R with Duplexer and Triple Relay Option Kit Wiring Diagram

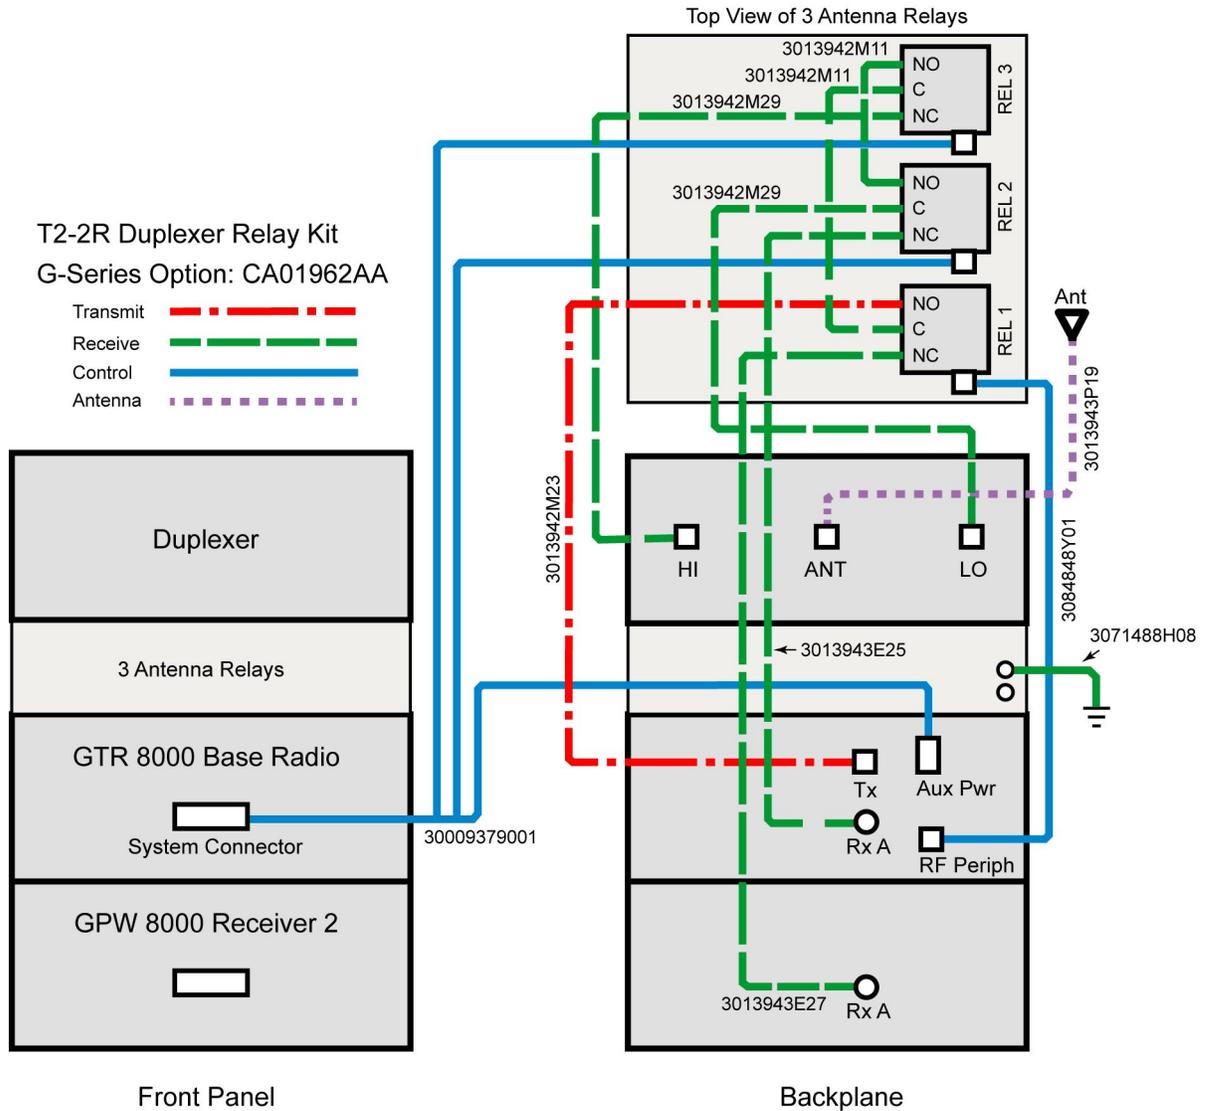

A712_T22R_Duplexer_Relay_A



NOTE

See 3.4.7.1 System Connector Ports (Conventional), page 3-30 for a detailed description of the system connector pinouts.

A.3.1 T2-2R with Duplexer and Triple Relay Option Kit Parts List

Table A-8 T2-2R with Duplexer and Triple Relay Option Kit Parts List

FRU	Kit	Part Number	Description	Quantity
DLN6800A			T2-2R DUPLXR AND TRPL RELAY	1
	CLN8793A		HARDWARE, T2-2R DUPLXR AND TRPL RELAY	1
		0285854Y01	NUT, M6-GROUND WIRE TO STUDS ON TRAY	2
		0310909A54	SCREW 3.5X30MM ANT RELAY MTG	6
		0310909E46	SCRMCH M3.5X0.6X8 ANT CONN & SIDE BRKTS	20
		0312016A49	SCREW FRONT PANEL TO CHASSIS (blk)	4
		0312016A54	SCRTPG M6 X 1 X 10 (blk) TRAY TO RACK	4
		07009370001	BRACKET CHASSIS SUPPORT	2
		27009304001	CHASSIS, PERIPHERAL	1
		40009272002	RELAY, COAXIAL 29V	3
		5682347B20	BAG FOR SCREWS	1
		64009317001	PANEL, FRONT	1
		0285504U05	CAGE NUT, M6 FOR CABINET MTG	4
		0310909C91	SCREW M6-GROUND CABLE TO BUS BAR AND TRAY TO CABINET CAGE NUTS	5
	CKN6946A		CABLES, T2-2R DUPLXR AND TRPL RELAY	1
		30009379001	CABLE, TRIPLE RELAY	1
		3013942M11	CBL N-N M-M 32.5 CM	2
		3013942M23	CBL N-N M-M 75 CM	1
		3013942M29	CBL N-N M-M 110 CM	2
		3013942P19	CBL N-N M-F PNL 55 CM	1
		3013943E25	CBL N-BNC M-M 85 CM	1
		3013943E27	CBL N-BNC M-M 95 CM	1
		3084848Y01	CABLE RELAY W/TEMP	1
		3071488H08	CABLE, GROUND TRAY TO BUS BAR	1
		4210217A04	STRAP TIE .184X7.31 NYL BLK	10
		5682347B21	BAG, PLASTIC 584 X 431 MM	1
		SVCWARR12	12 MONTH STANDARD WARRANTY	1

A.3.2 Expected Site Performance for T2-2R with Duplexer and Triple Relay

Table A-9 Total Transmit and Receive Attenuation for T2-2R with Duplexer and Triple Relay

Band Type Attenuation	CA01962AA: T2-2R
VHF Rx 1	1.0 dB typical 1.2 dB maximum
VHF Rx 2	1.2 dB typical 1.5 dB maximum
VHF Tx	1.4 dB typical 1.7 dB maximum
UHF Rx1	1.6 dB typical 1.8 dB maximum
UHF Rx2	1.9 dB typical 2.1 dB maximum
UHF Tx	2.0 dB typical 2.4 dB maximum
800 MHz Rx1	2.2 dB typical 2.5 dB maximum
800 MHz Rx2	2.6 dB typical 2.9 dB maximum
800 MHz Tx	2.9 dB typical 3.3 dB maximum

A.3.3 Installing the T2-2R with Duplexer and Triple Relay Option Kit

Procedure Steps

- 1 Install the standalone GTR 8000 Base Radio, GPW 8000 Receiver according to the processes and procedures in [Chapter 3 GTR 8000 Base Radio Installation](#). Install a duplexer according to the procedures in [Chapter 9 GTR 8000 Base Radio FRU Procedures](#).



WARNING

To guard against personal injury and/or damage to equipment, switch the base radio to **Service Mode** when performing service. Transmit inhibiting the base radio within the **Station Status** screen in the CSS will also prevent the transmitter from keying. Remember to switch the base radio back to **Normal Mode** when service is complete.

- 2 If the base radio and receiver are powered up, ensure that each device is switched to service mode or powered down, as follows:

**NOTE**

If you choose to turn off the power, set the rocker switch on the front of the associated power supply to the Off (0) position and skip this step.

- a. Connect to the base radio's transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **File** → **Read Configuration From Device** from the menu.
 - c. Select **Service** → **Test and Measurement Screen** from the menu.
 - d. Click **Change to Service Mode**.
 - e. Disconnect the Ethernet cable from the base radio's transceiver module Ethernet service port.
 - f. Repeat for each device in the configuration.
-
- 3 Remove the fan module to gain access to the Transceiver Option Card (TOC) on the transceiver module. [9.3 Replacing the Fan Assembly, page 9-10](#) for details.
-
- 4 Connect cables to each device according to [Figure A-11 T2-2R with Duplexer and Triple Relay Option Kit Wiring Diagram](#).
-
- 5 Replace the fan modules for the base radio and receivers.

**NOTE**

If you chose to turn off the power, set the rocker switch on the front of the associated power supply to the On (1) position.

-
- 6 If the base radio and receivers are in service mode, switch each device to normal mode, as follows:
 - a. Connect to the base radio's transceiver module Ethernet service port using Configuration/Service Software (CSS). See [4.4.4 Connecting Through an Ethernet Port Link, page 4-11](#).
 - b. Select **File** → **Read Configuration From Device** from the menu.
 - c. Select **Service** → **Test and Measurement Screen** from the menu.
 - d. Click **Change to Normal Mode**.
 - e. Disconnect the Ethernet cable from the base radio's transceiver module Ethernet service port.
 - f. Repeat for each device in the configuration.
-

A.3.4 Configuring the T2-2R with Duplexer and Triple Relay Option Kit

Prerequisites:

Ensure that all required installation procedure have been performed for the base radio and receiver(s) and that the devices have been powered up.

When and where to use:

This procedure is used to configure a T2-2R with Duplexer and Triple Relay configuration using the Configuration/Service Software (CSS).

Procedure Steps

- 1 If necessary, perform the initial configuration for the base radio and receivers. See [4.4.1 Initial Configuration of a Device Using CSS](#), page 4-3 for details.
- 2 Connect to the Ethernet port on the device. See [4.4.4 Connecting Through an Ethernet Port Link](#), page 4-11 for details.
- 3 Select **File** → **Read Configuration From the Device** from the menu.
- 4 Select **Hardware Configuration** from the navigation pane and set *Station Type [R]* to **Analog Only**.

**NOTE**

When configuring GPW 8000 Receivers, the *Hardware Platform [R]* parameter is set to **GPW 8000 Satellite Receiver**. The Antenna Relay [R] parameter is not configurable for GPW 8000 Receivers.

- 5 Set *Antenna Relay [R]* to **Enabled**.
- 6 Set *Antenna Relay Delay* to **80 msec**.

**NOTE**

The 80 msec antenna relay delay is required to allow sufficient time for all antenna relays to propagate the transmission signal from the GTR 8000 Base Radio. This step is not required for GPW 8000 Receivers.

- 7 Select **WildCard Tables** from the navigation pane and click **Set to Default** to add default WildCard tables.
- 8 Click **Yes** to reset the WildCard Tables to their default structure. The following default WildCard Tables are created:

**NOTE**

WildCard Table numbers are arbitrary and shown for illustration purposes. The maximum number of WildCard tables is limited by memory size and the number of States and Commands in each table.

WildCard Table	Description	States and Condition		Actions		Inactions	
		State	Value	Command	Value	Command	Value
1	In-cabinet RPT	Input 6	n/a	In-cabinet Repeat ON	n/a	In-Cabinet Repeat OFF	n/a
2	Rx Inhibit	Input 7	n/a	RX INHIBIT	n/a	RX ENABLE	n/a

3	External PTT	Input 5	n/a	Key from Wideband	n/a	Dekey from Wideband	n/a
4	RD STAT-RX ACT	RX Qualifiers Met	n/a	Set Output (1..12)	7	Clear Output (1..12)	7
5	Tx Inhibit	Input 3	n/a	TX INHIBIT	n/a	TX ENABLE	n/a
6		TRC Function Tone (1..17)	1	Monitor	n/a	NULL	n/a
7		TRC Function (1..17)	2	Channel (1..16)	1	NULL	n/a
				Key from Wireline	n/a	n/a	n/a
8		LLGT Detect	n/a	NULL	n/a	Dekey from Wireline	n/a
9	T4 if CH2 Conf	TRC Function (1..17)	3	Channel (1..16)	2	NULL	n/a
				Key from Wireline	n/a	n/a	n/a
10	T5 if CH3 Conf	TRC Function (1..17)	8	Channel (1..16)	3	NULL	n/a
				Key from Wireline	n/a	n/a	n/a



NOTE

Table configurations are selected from the TABLE parameter. See [Figure A-7 CSS - WildCard Tables Example](#) for location of parameter fields.

- Click **Add** and populate the new WildCard table, as follows:

Wild-Card Table	Description	States and Condition				Actions		Inactions	
		State	Value	Condition	State	Command	Value	Command	Value
11	Keyed on Channel	Current Channel (1..16)	2	AND	Station Keyed	WAIT (10..1000 msec)	80	Channel (1..16)	1
						Set Output (1..12)	7	WAIT (10..1000 msec)	80
								Clear Output (1..12)	7

10 Click **Add** and populate the new WildCard table, as follows:

WildCard Table	Description	States and Condition				Actions		Inactions
		State	Value	Condition	State	Command	Value	Command
12	Dekeyed on Ch	Current Channel (1..16)	2	AND NOT	Station Keyed	Set Output (1..12)	7	NULL

11 Click **Add** and populate the new WildCard table, as follows:

WildCard Table	Description	States and Condition				Actions		Inactions
		State	Value	Condition	State	Command	Value	Command
13	Dekeyed on Ch	Current Channel (1..16)	1	AND NOT	Station Keyed	Clear Output (1..12)	7	NULL

12 Select **File** → **Write Configuration To Device** from the menu.

13 Select **Tools** → **Disconnect** from the menu to terminate the connection to the device.

14 Repeat steps 1–8 for all GPW 8000 Receiver(s).



NOTE

Only the default WildCard tables are required for the GPW 8000 Receiver(s).

15 **For GPW 8000 Receivers:**

Edit TABLE 2 and change the *State and Conditions* from **Input 7** to **Input 4**.

16 Select **File** → **Write Configuration To Device** from the menu.

17 Select **Tools** → **Disconnect** from the menu to terminate the connection to the device.

Appendix B: Analog Simulcast Cable Assembly

The analog simulcast cable assembly combines and translates the pinouts of the GTR 8000 Base Radio wireline and system connector to a T57 Telco connector. This cable assembly is combined with a panel bracket. It can be mounted on a rack or cabinet. The assembled cable and panel is aligned with the backplane of the GTR 8000 Base Radio. All required components, assembly, and installations are provided in this section.

B.1 Analog Simulcast Cable Kit Parts List

This section contains all the parts required to assembly and install the analog simulcast cable assembly in a rack or cabinet configuration.

Table B-1 Analog Simulcast Cable Kit Parts List


FRU	Kit	Item	Part Number	Description	Quantity
DLN6821A				GTR ANALOG 4W E&M W/SIMULCAST KIT	1
	CBN6270A			PKG KIT ANLG SIMULCAST CBL ASSY	1
			5675232H04	CARTON, OUTER BOX	1
			5682347B19	BAG PLASTIC	1
			5682347B20	BAG PLASTIC	2
			5682347B21	BAG, PLASTIC 584 X 431 MM	2
	CKN6950A			CABLE, ANALOG SIMULCAST	1
		A	30009398002	ANALOG SIMULCAST CABLE	1
		B	07009381001	BRACKET-SIMULCAST CABLE MOUNT	1
		C	4285940Y01	STRAIN RELIEF W VELCRO STRAP	1
		D	0310943J10	SCREW,METRIC,M3X0.5,8M-M,STAR,PAN,STEEL,ZINC-PLATED,THREAD FORMING	2
		E	0785716Y02	EXTENDER, OPEN RACK	2
		F	0312016A54	SCREW,METRIC,M6X1,10M-M,STAR,PAN,STEEL,ZINC-PLATED,THREAD FORMING	4
		G	0310909E60	SCREW,THREAD ROLLING,M4X.7,8MM,STAR,PAN,STEEL	4
		H	0285504U05	NUT - METRIC,CAGE,M6,STEEL	4
		I	0310909C91	SCREW,MACHINE,M6,13MM,STAR,PAN,STEEL	5

B.2 Assembling the Analog Simulcast Cable and Panel

Procedure Steps

- 1 Use this figure to identify the items used throughout this procedure. See [B.1 Analog Simulcast Cable Kit Parts List](#), page B-1 for the part numbers of the items called out in this procedure.

Figure B-1 Analog Simulcast Cable and Panel Assembly

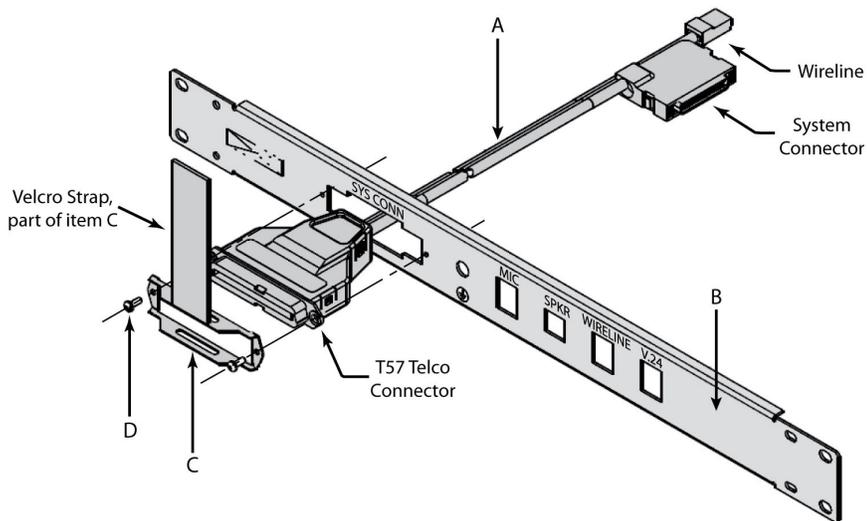

A712_Analog_Simulcast_Cable_Assembly_A

- 2 Insert the cable assembly (item A) through the system connector opening in the panel (item B).



NOTE

The T57 Telco connector may be positioned with the d-shape keying feature either up or down. When using a right-angle mating connector, verify the orientation needed for proper cable routing before securing to the panel bracket.


- 3 Position the strain relief (item C) over the T57 Telco connector.
- 4 Using the 2 metric M3 screws (item D), fasten the strain relief through the T57 Telco connector and secure it to the panel using a Tx10 bit driver. Torque to 17 in-lbs.

B.3 Installing the Analog Simulcast Cable in an Open Rack Configuration

Procedure Steps

- 1 Use this figure to identify the items used throughout this procedure. See [B.1 Analog Simulcast Cable Kit Parts List, page B-1](#) for the part numbers of the items called out in this procedure.

Figure B-2 Analog Simulcast Cable in an Open Rack Configuration

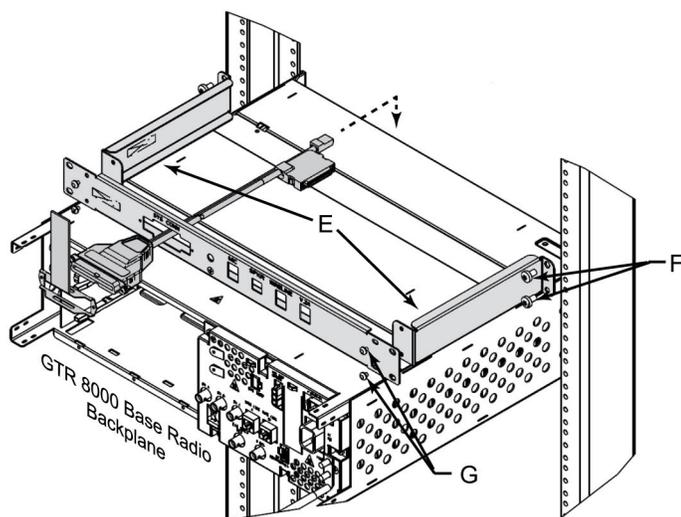

A712_Analog_Simulcast_Cable_Assembly_Rack_A

- 2 Secure each extender bracket (item E) to the tapped holes on the rack using two M6 (item F) screws using a Tx30 bit driver. Torque to 55 in-lbs.




NOTE

The extender brackets should be mounted one rack unit above or below the GTR 8000 Base Radio. Installation is dependent on existing devices on the rack.

- 3 Secure the assembled Analog Simulcast panel (using the inner hole patterns) to the extender brackets using four M4 (item G) screws using a Tx20 bit driver. Torque to 17 in-lbs.


Figure B-3 Analog Simulcast Assembly in Rack – GTR 8000 Base Radio Backplane

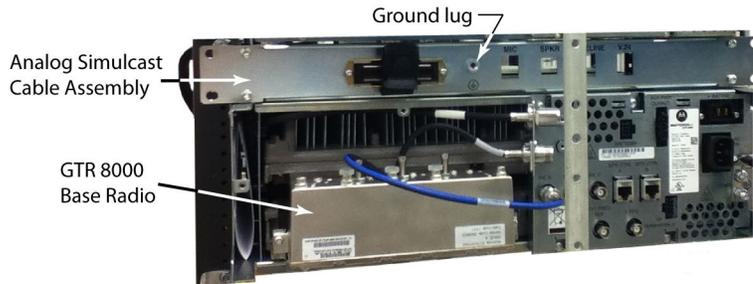

A712_Analog_SimCable_Rack_Mount1

- 4 Connect an approved ground cable to the ground lug on the Analog Simulcast panel using an M6 (item I) star screw using a Tx30 bit driver. Torque to 55 in-lbs.
- 5 Remove the fan module to gain access to the Transceiver Option Card (TOC) on the transceiver module. [9.3 Replacing the Fan Assembly, page 9-10](#) for details.
- 6 Route the Analog Simulcast Cable over the GTR 8000 Base Radio if the panel was mounted over the base radio.

Figure B-4 Connected Analog Simulcast Cable – GTR 8000 Base Radio Front View

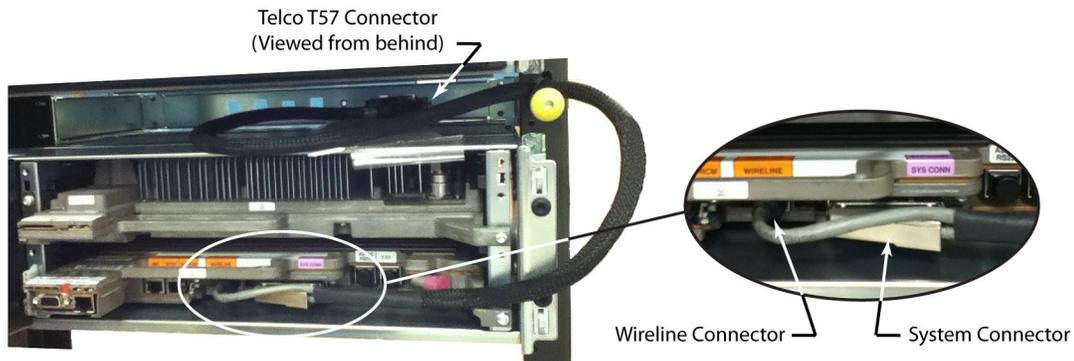

A712_Analog_Simulcast_Cable_Conn_Front1

- 7 Connect the 50 pin connector to the system connector on the TOC.
- 8 Connect the RJ45 wireline connector to the wireline port on the TOC.
- 9 Replace the fan module on the base radio so that the Analog Simulcast Cable hangs out through the right-side of the fan module.
- 10 Secure the remaining Analog Simulcast Cable to the rack using cable ties.

Figure B-5 Analog Simulcast Cable – GTR 8000 Base Radio with Fan Modules




A712_Analog_Simulcast_Cable_Conn_Fan

B.4 Installing the Analog Simulcast Cable in a Cabinet Configuration

Procedure Steps

- 1 Use this figure to identify the items used throughout this procedure. See [B.1 Analog Simulcast Cable Kit Parts List, page B-1](#) for the part numbers of the items called out in this procedure.

Figure B-6 Analog Simulcast Cable in a Cabinet Configuration

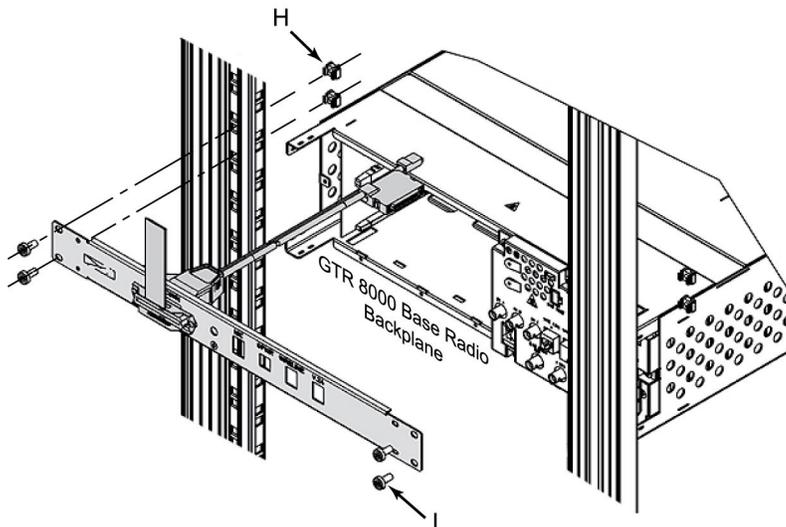

A712_Analog_Simulcast_Cable_Assembly_Cabinet_A

- 2 Insert four cage nuts (item H) into cabinet rail opening.

**NOTE**

The cage nuts should be mounted one rack unit above or below the GTR 8000 Base Radio. Installation is dependent on existing devices on the rack.

- 3 Secure the assembled Analog Simulcast panel (using the outer hole patterns) to the cage nuts using four M6 (item I) star screws using a Tx30 bit driver. Torque to 55 in-lbs.

**NOTE**

See [Figure B-3 Analog Simulcast Assembly in Rack – GTR 8000 Base Radio Backplane](#) for an example.

- 4 Connect an approved ground cable to the ground on the Analog Simulcast panel using an M6 (item I) star screw using a Tx30 bit driver. Torque to 55 in-lbs.

- 5 Remove the fan module to gain access to the Transceiver Option Card (TOC) on the transceiver module. See [9.3 Replacing the Fan Assembly, page 9-10](#) for details.

- 6 Route the Analog Simulcast Cable over the GTR 8000 Base Radio if the panel was mounted over the base radio.

**NOTE**

See [Figure B-4 Connected Analog Simulcast Cable – GTR 8000 Base Radio Front View](#) for an example.

- 7 Connect the 50 pin connector to the system connector on the TOC.

- 8 Connect the RJ45 wireline connector to the wireline port on the TOC.

- 9 Replace the fan module on the base radio so that the Analog Simulcast Cable hangs out through the right-side of the fan module.


**NOTE**

See [Figure B-5 Analog Simulcast Cable – GTR 8000 Base Radio with Fan Modules](#) for an example.

- 10 Secure the remaining Analog Simulcast Cable to the rack using cable ties.

B.5 Analog Simulcast Cable Pin Assignment

This section contains the pin assignment for the analog simulcast cable. It defines the connections from the T57 Telco connector to the system connector and wireline connector on the Transceiver Option Card of the GTR 8000 Base Radio.

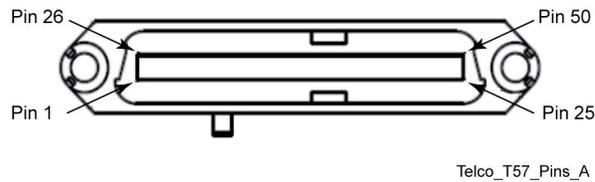Figure B-7 Telco T57 Female Connector on the Analog Simulcast Cable**NOTE**

For the system connector pin-outs, see [3.4.7.1 System Connector Ports \(Conventional\)](#), page 3-30. For the wireline connector, see [3.4.7.2 Wireline Port Pin-Outs](#), page 3-33.

Table B-2 Analog Simulcast Cable Pin Assignment

T57	Sys Conn	Wireline	Signal	Type	Function	Note
1	n/a	5	Line 1 +	I	Customer 4-Wire Line Input (Line 1+)	Analog Signal
2	n/a	1	Line 2 +	I/O	Customer 2-Wire Line Input/Output (Line 2+)	Analog Signal
7	34	n/a	GND	I	GND	
9	25	n/a	Gen TX -	I	Gen TX Data-	Analog Signal - 600 Ohm Balanced
10	49	n/a	PL +	I	PL (+) In	Analog Signal - 600 Ohm Balanced
13	27	n/a	Aux In 3	I	Tx Inhibit	Pull To Ground To Activate
15	28	n/a	Aux In 5	I	External PTT	Pull To Ground To Activate
16	3	n/a	Aux In 6	I	In-Cabinet Repeat	Pull To Ground To Activate
17	29	n/a	Aux In 7	I	Rx Inhibit	Pull To Ground To Activate
18	39	n/a	AUX Out Relay 7 N.O.	O	RD STAT - Receiver Active	Form Relay A Closed When Active
24	32	n/a	Aux In 11 +	I		Opto-Isolated In - Current flow to Activate
26	n/a	4	Line 1 -	I	Customer 4-Wire Line Input (Line 1-)	Analog Signal
27	n/a	2	Line 2 -	I/O	Customer 2-Wire Line Input/Output (Line 2-)	Analog Signal
32	43	n/a	GND		GND	

Table B-2 Analog Simulcast Cable Pin Assignment (cont'd.)

T57	Sys Conn	Wireline	Signal	Type	Function	Note
34	50	n/a	Gen TX +	I	Gen TX Data+	Analog Signal - 600 Ohm Balanced
35	24	n/a	PL -	I	PL (-) In	Analog Signal - 600 Ohm Balanced
38	37	n/a	Aux Out 3	O		Low Impedance to Ground When Active
40	38	n/a	Aux Out 5	O		Low Impedance to Ground When Active
43	14	n/a	Aux Out Relay 7 Com	O	RD STAT - Receiver Active	Form Relay A Closed When Active
49	7	n/a	Aux In 11 -	I		Opto-Isolated In - Current flow to Activate